Chapter 2 WEAPONS Sheet 1

MASTER SERVICING LIST CANBERRA 2,3,4,6,7,15,17,18,19 & 22

Sched	Item	Operation	Frequency	Marks	<u> </u>					Y			
dent No			#	Applicable	B/F	T/R	A/F	P	М	MJ	\vdash	Crit	Str Ir
EMERGEN	ICY EQUIPMENT - 08		•										
	Nose Fuselage												
020801	Pistol. (If fitted).	Ensure unloaded.	B/F,T/R, A/F	All	х	Х	Х						
		Clean. (If fired).	A/F	All			Х						
•		Examine. (If fired).	A/F	A11			Х						
		Lubricate. (If fired).	A/F	A11			Х						
		Leave in loading position with safety catch set to 'SAFE'.	B/F,T/R, A/F	A11	Х	Х	х						
		See CRL.		All									
020802	Pistol mounting. (If fitted).	Clean. (If pistol fired).	A/F	A11			Х						
		Examine. (If pistol fired).	A/F	All			Х						
		Imbricate. (If pistol fired).	A/F	A11			Х						
		See CRL.		A11									
G20 8 03	Pistol mounting seal operating mechanism.	Ensure functions correctly.	B/F,A/F	All	х		х						
020804	Signal cartridges.	Examine.	A/F	All			х						
c20805	Pyrotechnic stowage.	Examine.	250	A11					Х	Х			
		Replenish as necessary.	T/R,A/F	All		Х	Х						
020806	Charges HEECS.	See CRL.		A ll									
020807 -	Detonator electric No.109.	See CRL.		All									i
EO 577	(68)								ontin	ued o	verles	a f	

Sched	Item	Operation	Frequency	Marks				Servi					
Ident No	neal)	Operation	<u> </u>	Applicable	B/F	T/R	A/F	Р	М	WI	<u> </u>	Crit	Str Int
020808	Canony and Hatch Detonators electric No.108. (66 off).	See CRL.		All						i			
020809	Port and Starboard Wing Tips Wing tip tank or container detonators. (6 off). (If fitted).	See CRL.		All									
020810	Port and Starboard Mainplane Pylons Ejector release unit. (If fitted).	Remove safety plugs.	B/F	18	Х								
	(II IItted).	'No Volts' test.	B/F	18	Х								,
		Connect.	B/F	18	Х								
		Disconnect.	A/F	18			χ						
ļ		Fit safety plugs.	Á/F	18			Х						
		See CRL.		18									
020811	Ejector release unit cartridges.	See CRL.		18									
								·			·	·	
FO577	(684)							_	Conti	nued			
E 0577	(68 a)		<u></u>						Conti	nued			_

Chapter 2 WEAPONS Sheet 2 MASTER SERVICING LIST CANBERRA 2,3,4,6,7,15,17,18,19 & 22

Sched Ident No	Item	Operation	Frequency	Marks .	D / F	T/8	A 45	Р	м	MJ		Crit	
			<u> </u>	Applicable	B/F	17R	A/F	- <u> -</u>	<u> </u>	MJ		GFIU	Str Ir
	OTECTION SYSTEM - +O			_		İ		l			,		ĺ
	Port and Starboard Undercarriage Compartments												
024001	Cartridges EOFE 2 pin No.1 Mk 3.	See CRL.		All									
024002	Fire extinguisher bottle Type 12A.	Ensure indicator not protruding. (Propulsion).	в/г	6,7,15,22	Х								
	Type (Es.	See CRL.		6,7,15,22									
024003	Cartridges EOFE 3 pin No. 1 Mk 3.	See CRL.		2,3,4,6,7,15, 18,19,22									
024004	Fire extinguisher bottle Type 14A.	Ensure indicator not protruding. (Propulsion).	B/F	All	Х								
	Type ITA:	See CRL.		A11									
	Rear Fuselage												
024005	Cartridge FOFE 2 pin No.1 Mk 3.	See CRL.		All									
024006	Fire extinguisher bottle Type 12A.	Ensure indicator not protruding. (Propulsion).	B/F	All	Х								
	Type IZM.	See CRL.		A11									
	Special Radio Equipment Compartment	* * * * * * * * * * * * * * * * * * * *											
024007	Cartridge EOFE 2 pin No.1 Mk 3. (2 off).	See CRL.		17									
024008	Fire extinguisher bottle Type 60A. (2 off).	See CRL.	·	17									
E 0577 ((60)								Conti	nued o			

Sched	14	Operation	Frequency	Marks				Servi					
ident No	ltem	Operation		Applicable	B/F	T/R	A/F	Р	М	MJ		Crit	Str Int
•]]	j		ŀ]]]		
			1			l			1	ł			
			.			┣			├		 		
EXPLOSI	ON SUPPRESSION - 41		[]						l				
	No.6 Fuel Tank								ļ]		
024101	Detonator electric No.116. (12 off).	See CRL.		3,7,22									
024102	Explosion suppression columns. (4 off).	See CRL.		3,7,22								:	
				1					Ì				
EJECTIO	n seats - 89												
1	Crew Compartments				i								
028901	Ejection seat. (Pilots).	See CRL.		2,3,6,7,15 17,18,19,22					[
028902	Ejection seat. (Pupils).	See CRL.		4									
028903	Ejection seat. (Instructors).	See CRL.		4				,					
028904	Ejection seat. (Navigators). (Pre Mod single lever).	See CRL.		6									
028905	Ejection seat. (Navigators). (Post Mod single lever).	See CRL.		2,3,4,7,15, 17,18,19,22									
ò28906	Ejection seat. (Bomb Aimers).	See CRL.		2,15									
E 0577 (:	604)								Cont	inued			ᅱ
EUD// (ンプルノ		lt .						JULIE	LIIUGU			

Chapter 2 WEAPONS Sheet 3 AL 6

MASTER SERVICING LIST CANBERRA 2,3,4,6,7,15,17,18,19 & 22

Sched	Item	Operation	Frequency	Marks	<u> </u>								
Ident No	N GTAGO		#	Applicable	B/F	T/R	A/F	Р	M	Wl		Crit	Str Int
028907	N SEATS - 89 Contd Ejection seat. (AEOs). (Pre Mod single lever).	See CRL.		6									
028908	Ejection seat. (AEOs). (Post Mod single lever).	See CRL.		17									
028909	Ejection seat. (Passengers).	See CRL.		18									
028910	Ejection seat cartridges.	See CRL.		All									
028911	Cartridge control column snatch unit. (Pilots/Pupils seat only).	See CRL.		All									
028912	Firing cables.	Ensure connected correctly.	B/F	All	Х								
	•	Ensure routed OVER drogue lifting lines. (Ejection Seat Type 2CA/1 Mk2 and 2CA/2 Mk3 and 4).	в/F	A).1	Х								
028913	Scissors shackle tie.	Ensure intact.	B/F	A11	Х								-
028914	Drogue container flap pin safety tie.	Ensure intact.	В/F	All	Х								
028915	Articulated link. (Pilots seat only).	Ensure connected correctly and not under tension.	B/F	2,3,6,7,15, 17,18,19,22	Х								
028916	Face screen and ejection gun safety pin. (Type 3CT seats only).	Ensure gap between legs is not excessive and pin is held firmly in position. (Introduced by SI/Ejection Seat/29).	B/F,T/R, A/F	Ĺţ	Х	X	Х					j	
028917	Torque shaft assembly quadrant. (Type 3CT seats only).	Ensure firing cables attached correctly.	B/F,T/R	<i>1</i> ₄	Х	Х							
SMS/77	/282/13							Co	ontinu	led ov	erlea:	f	\neg

Sched	Item	Operation	Frequency	Marks				Servi	cing				
Ident No	ren	Operation		Applicable	B/F	T/R	A/F	Р	М	MJ		Crit	Str Int
028918	Torque shaft assembly links. (Type 3CT seats only).	Ensure attached to ejection gun firing unit scar.	E, ,T/R	4	х	Х							
028919	Torque shaft canopy jettison firing unit	Ensure attached to canopy jettison unit sear.	F 1/R	4	Х	Х							
	adjusting rod. (Type 3CT seats only).	Ensure locked.	B.₩,T/R	4	Х	Х							
028920	Drogue gun piston.	Ensure attached securely to drogue withdrawal line shackle.	³ / F	All	Х								
028921	Drogue gun static rod.	Ensure attached to anchorage bracket.	Ь, ,A/F	A11	Х		Х						
028922	Drogue gun release plunger.	Ensure cocked correctly. (Introduced by SI/Ejection Seat/37).	Fary dogue of ing	All.	Out	of I	Phase	(SP6	52)				
028923	Mic/Tel lead.	Ensure connected correctly.	/F	All	Х	<u> </u>			<u> </u>				
028924	Barostatic time release unit.	Examine.	3/F	All	Х								
028925	Barostatic time release unit static rod.	Ensure attached to anchorage bracket.	B/F,A/F	All	Х		Х						
028926	Go-forward mechanism.	Operate.	B/F,A/F	A11	х		х						
028927	Go-forward mechanism cables.	Examine and particularly for fraying.	B, F, T/R, A/F	All	Х	х	Х						
028928	Leg restraint snubbing units.	Operate.	B/F,T/R	All	Х	Х							
028929	Leg restraint lines.	Examine.	B/F	All	Х								
	•	Ensure secure to static brackets.	B/F	A11	Х								
028930	Leg restraint lines taper plugs.	Servicing deleted by AL 6.											
SMS/77	/282/13A							lΓ	Conti	nued		<u></u>	

PF 18

Chapter 2 WEAPONS Sheet 4 AL 7

MASTER SERVICING LIST CANBERRA 2,3,4,6,7,15,17,18,19 & 22

Sched	ltem	Operation	Frequency	Marks									
Ident No		Operation		Applicable	B/F	T/R	A/F	Р	М	ΜJ	С	rit	Str Inf
	N SEATS - 89 Contd										- 1		
028931	Emergency oxygen bottle manual release cable.	Ensure attached to anchor hook.	B/F	All	Х	<u> </u>		<u> </u>	<u> </u>				ļ
		Ensure swivel joint secure.	B/F	A11	Х								
		Ensure anchor hook locked with wire.	B/F	All	х								
028932	Emergency oxygen bottle tell-tale wire.	Ensure intact.	B/F,T/R, A/F	A11	Х	Х	Х						
028933	Emergency oxygen bottle rubber tubing.	Extend and ensure internal thread not broken.	A/F	All			Х						
		Extend spring and examine particularly for cracking adjacent to quick release connexion.	A/F	A11			Х						
028934	Emergency oxygen upper rubber tubing sealing washer.	Ensure present.	B/F,T/R, A/F	All	Х	х	Х						
028935	Low pressure oxygen flexible tubing.	Examine and particularly for undue tension with seat fully raised ensuring minimum of slack.	A/F	All			Х						
028936	Seat raising mechanism.	Operate.	B/F,A/F	All	Х		х						
028937	Sun blind assembly (If fitted). (Pilots seat).	Examine.	B/F	2,3,6,7,15,17, 18,19,22	Х	- 1	·						
028938	Control column snatch unit firing unit assembly.	See CRL.		All									
028939	Hatch Jettison Mechanism Cocking indication marks.	Ensure coinciding.	B/F,T/R, A/F	2,3,4,7,15,17, 18,19,22	х	х	х						
SMS/7	7/453/12				<u></u>	<u> </u>	<u></u>	$\coprod \Gamma$	Conti	nued o	verle	af	

Sched	Item	Operation	Frequency	Marks				Servi	cing				
Ident No	nem	Operation	(Weeks)	Applicable	B/F	T/R	A/F	Р	М	ΜJ			Str Int
028940	Restrictor safety pin.	Ensure fitted to breech time delay unit.	B/F,T/R A/F	2,3,4,7,15 17,18,19,22	Х	х	х			<u> </u>			
028941	Restrictor safety pin withdrawal cable.	Ensure attached to restrictor safety pin and connected to escape hatch.	B/F	2,3,4,7,15, 17,18,19,22	Х								
028942	Jettison mechanism cam follower arm outer roller.	Examine for freedom of rotation.	500	2,3,4,7,15, 17,18,19,22					X (2)	Х			
BOMB/FL	ARE GEAR SYSTEM - 91												
	Bomb Compartment			Ì	ļ						Í	ł	
029101	Bomb beam. (Forward).	Examine.	B/F,T/R A/F	2,4,6 15,18,19	Х	х	Х				l	ļ	ļ
1 [See CRL.		2,4,6 15,18,19									
029102	Bomb beam. (Rear).	Examine.	B/F,T/R A/F	2,4,6,15,18,19	Х	Х	Х						
		See CRL.		2,4,6,15,18,19									
029103	Bomb beam suspension holes. (Aircraft).	Examine and particularly for elongation.	32 Weeks	2,4,6,15,18,19	Out	of P	hase						
029104	Flare Compartment Flare beam.	Examine.	B/F,T/R A/F	3,7,22	Х	х	Х						
]		See CRL.		3,7,22									
029105	Flare beam suspension holes. (Aircraft).	Examine and particularly for elongation.	32 Weeks	3,7,22	Out	of P	hase						
029106	Release Unit, Manual No 3 11A/4715	See CRL.	32 Weeks	3,7,22	Out	of P	hase	(Spe	cial	Check)			
029107	Housing Release Unit No 3 Mk 1 11A/4486602	See CRL.	32 Weeks	3,7,22	Out	of P	nase	(Spe	cial	Check)			
CIME /DO	7453/12A							│ │ │		Contin	ulod.	L	
/// رهام	TUDITOR		<u> </u>			<u> </u>				Contin	uea		

PF 18

Chapter 2 WEAPONS Sheet 5 AL 6

MASTER SERVICING LIST CANBERRA 2,3,4,6,7,15,17,18,19 & 22

Sched	ltem	Operation	Frequency	Marks						,		
ldent No	· · · · · · · · · · · · · · · · · · ·	Operation		Applicable	B/F	T/R	A/F	Р	М	ΜJ	Cri	it Strint
GRAVITY	WINDOW SYSTEM - 98											
	Port and Starboard Containers											
029801	Dispenser assembly.	Ensure secure.	B∕F,T∕R	17	Х	Х						
		Load. (As detailed).	B/F,T/R	17	Х	Х						
						1						
DISCHAR	GER No.4 MK1 SYSTEM - 99											-
029901	Armament Safety Break Fanel Armament safety break.	Servicing deleted by AL 6.										
	Port and Starboard Containers											
029902	Reaction plates. (3 off).	See CRL.	[] 	17								
029903	Arming levers. (3 off).	Servicing deleted by AL 6.										
			·	<u> </u>								
02990 -	Cartridge-holding	Servicing deleted by AL 6.										
			·			L						
;						ļ	ļ					
SMS/77/	/282/14	- And the state of			1			_		<u> </u>		