

**CHAPTER 5**

**ALIGNING GEAR**

**RESTRICTED**



## Chapter 5    ALIGHTING GEAR

## ◀ Main and nose undercarriages

1. The types and part numbers of the main and nose undercarriage units are detailed in the 'Leading Particulars' of the manual (A.P. 101B-0400-series) appropriate to the mark of aircraft.

## Alighting gear repair

2. Repair instructions and information for fits and clearances of the undercarriage units are detailed in:-

A.P. 1803P, Vol. 2 - Main undercarriage  
unit

A.P. 1803E, Vol. 2 - Nose undercarriage  
unit ▶

## Attachment points

3. Information on fits, clearances and wear limits for the main and nose undercarriage attachment points is given in Chapters 2 and 3 respectively of this Volume.

