

CONTROLS
ENGINE CONTROLS IN NOSE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA1.47.5	CONTROLS, ENGINE IN NOSE FUSELAGE ASSEMBLY	1	—	CB1/1
EA1.47.245	Spares for: CLAMP, grommet retaining, at pressure bulkhead	4	L40	CB1/2
A25/3C	Attaching parts for EA1.47.245: Bolt, 2BA, hex. head	2	—	CB1/3
AGS2001C1/66	Nut, stiff, 2BA	2	—	CB1/4
EA1.47.357	CLEAT, engine control support frame 4	2	L40	CB1/5
A25/7C	Attaching parts for EA1.47.357: Bolt, 2BA, hex. head	3	—	CB1/6
AGS2001C1/66	Nut, stiff, 2BA	3	—	CB1/7
SIMMONDS CORSEY SP15/7	CLIP, rigid engine control rods at frames 5, 6, 7, 8 and 10 (in pairs)	28	—	CB1/8
A25/7C	Attaching parts for SP15/7: Bolt, 2BA, hex. head at frames 5, 6, 7 and 8	2	—	CB1/9
A25/9C	Bolt, 2BA, hex. head at frame 10	2	—	CB1/10
AGS2001C1/66	Nut, stiff, 2BA	2	—	CB1/11
SIMMONDS CORSEY SP15/10	CLIP, rigid engine control rods at frame 3 (in pairs)	8	—	CB1/2
A25/10E	Attaching parts for SP15/10: Bolt, 1/4" BSF, hex. head	2	—	CB1/13
AGS2001E1/66	Nut, stiff, 1/4" BSF	2	—	CB1/14
EA1.47.251	CONTROL, engine fuel shut-off cock, L.H. (Simmonds Corsey No.7)	1	—	CB1/15
EA1.47.253	CONTROL, engine throttle, L.H. (Simmonds Corsey No.7)	1	—	CB1/16
EA1.47.255	CONTROL, engine fuel shut-off cock, R.H. (Simmonds Corsey No.7)	1	—	CB1/17
EA1.47.257	CONTROL, engine throttle, R.H. (Simmonds Corsey No.7)	1	—	CB1/18
AGS899/4	Attaching parts for EA1.47.251, EA1.47.253, EA1.47.255 and EA1.47.257: Collar, shackle pin	1	—	CB1/20
SP4YD9	Pin, shackle	1	—	CB1/21
SP90C7	Pin, split, 1/16" dia	1	—	CB1/22
Z11809	GROMMET, at pressure bulkhead	4	—	CB1/23
EA1.47.127	MOUNTING, THROTTLE BOX, ASSEMBLY	—	—	CB2/1
EA3.47.149	Spares for: BOX, THROTTLE, ASSEMBLY	1	—	CB2/2
EA1.47.165	Spares for: BRACKET, micro switch, mounting	1	L72	CB2/3
A25/8B	Attaching parts for EA1.47.165: Bolt, 4BA, hex. head	4	—	CB2/4
AGS2001B1	Nut, stiff, 4BA	4	—	CB2/5
SP15B	Washer, 4BA, plain	4	—	CB2/6

CONTROLS

ENGINE CONTROLS IN NOSE FUSELAGE

R

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EB7.81.1589	.	.	.	.	BRACKET, cable clip assembly		1	L72	CB2/7
A25/1B	.	.	.	.	Attaching parts for EB7.81.1589:		2	—	CB2/8
AGS2001B1	.	.	.	.	Bolt, 4BA, hex. head		2	—	CB2/9
EA1.47.173	.	.	.	.	Nut, stiff, 4BA				
EA1.47.293	.	.	.	.	BUSH, tapped, shut-off cock lever locking		1	DTD126A	CB2/11
EA3.81.2645	.	.	.	.	BUSH, tapped, throttle lever locking		1	DTD126A	CB2/12
EA1.47.137	.	.	.	.	CABLE ASSEMBLY, N76A		—	—	
AS3180/11B	.	.	.	.	CASTING, throttle box		1	Mag. Alloy	CB2/13
A25/1B	.	.	.	.	CLIP, cable		1	—	CB2/15
	.	.	.	.	Attaching parts for AS3180/11B:				
	.	.	.	.	Bolt, 4BA, hex. head		1	—	CB2/16
EA1.47.157	.	.	.	.	KNOB, throttle lever, locking		1	L40	CB2/18
EA1.47.159	.	.	.	.	KNOB, shut-off cock lever, locking		1	L40	CB2/19
EA3.81.1971	.	.	.	.	KNOB, shut-off cock lever, L.H. red		1	DTD683	CB2/20
	.	.	.	.	Attaching parts for EA3.81.1971:				
A33B16	.	.	.	.	Screw, 4BA, csk. head		1	—	CB2/21
A33C20	.	.	.	.	Screw, 2BA, csk. head		1	—	CB2/22
EA3.81.1972	.	.	.	.	KNOB, shut-off cock lever, R.H. green		1	DTD683	CB2/23
	.	.	.	.	Attaching parts for EA3.81.1972:				
A33B16	.	.	.	.	Screw, 4BA, csk. head		1	—	CB2/24
A33C20	.	.	.	.	Screw, 2BA, csk. head		1	—	CB2/25
AS1908C	.	.	.	.	KNOB, throttle control, lever L.H. red		1	—	CB2/26
	.	.	.	.	Attaching parts for AS1908C:				
A27CT	.	.	.	.	Nut, 2BA, thin		1	—	CB2/27
A33C28	.	.	.	.	Screw, 2BA, csk. head		1	—	CB2/28
AS1908B	.	.	.	.	KNOB, throttle control lever R.H. green		1	—	CB2/10
	.	.	.	.	Attaching parts for AS1908B:				
A27CT	.	.	.	.	Nut, 2BA, thin		1	—	CB2/14
A33C28	.	.	.	.	Screw, 2BA, csk. head		1	—	CB2/17

AP101B-0402-3A

Page CB.3

CONTROLS
ENGINE CONTROLS IN NOSE FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.47.77	. . .	LEVER, throttle L.H. assembly (Pre Mod.5028)	1	—	CB2/29
EA3.47.137	. . .	LEVER, throttle L.H. assembly (Mod.5028)	1	—	
EA3.47.99	. . .	LEVER, shut-off cock control L.H. (Pre Mod.5028)	1	—	CB2/30
EA3.47.139	. . .	LEVER, shut-off cock control L.H. (Mod.5028)	1	—	
EA3.47.100	. . .	LEVER, shut-off cock control R.H. (Pre Mod.5028)	1	—	CB2/31
EA3.47.140	. . .	LEVER, shut-off cock control R.H. (Mod.5028)	1	—	
EA3.47.78	. . .	LEVER, throttle, R.H. (Pre Mod.5028)	1	L72	CB2/32
EA3.47.138	. . .	LEVER, throttle R.H. (Mod.5028)	1	—	
A27CP	. . .	NUT, 2BA, plain, for lever stop screw	8	—	CB2/33
A27NP	. . .	NUT, ½" BSF	1	—	CB2/33A
EA1.47.295	. . .	PIN, special, shut-off cock control lever clamp	1	L40	CB2/34
EA1.47.297	. . .	PIN, special, throttle control lever clamp	1	L40	CB2/35
SP90E8	. . .	PIN, split, 3/32" dia	1	—	CB2/35A
EA1.47.303	. . .	PLATE, guard	1	—	CB2/36
		Attaching parts for EA1.47.303:			
A32B8	. . .	Screw, 4BA, round head	6	—	CB2/37
A32B16	. . .	Screw, 4BA, round head	3	—	CB2/38
SP47B	. . .	Washer, 4BA, spring	9	—	CB2/39
EA3.47.91	. . .	PLATE, reaction, shut-off cock	1	—	CB2/41
EA3.47.93	. . .	PLATE, reaction, shut-off cock	1	—	CB2/42
EA3.47.87	. . .	PLATE, reaction, throttle control	1	—	CB2/40
EA3.47.101	. . .	PLATE, reaction, throttle control	1	—	CB2/43
		Attaching parts for EA3.47.87 and EA3.47.101:			
A25/1B	. . .	Bolt, 4BA	1	—	CB2/43A
AGS2001B1	. . .	Nut, 4BA	1	—	CB2/43B
SP15B	. . .	Washer	1	—	CB2/43C
EA3.47.145	. . .	PLATE, tapped link locking	1	—	CB2/44
		Attaching parts for EA3.47.145:			
AS1242/4B	. . .	Bolt, 4BA, csk. head	2	—	CB2/45
AGS2001B1	. . .	Nut, stiff, 4BA	2	—	CB2/46
SP15B	. . .	Washer, 4BA, plain	2	—	CB2/47
EA3.81.1997	. . .	PLATE, push switch protection	2	—	CB2/49
		Attaching parts for EA3.81.1997:			
A44Z10	. . .	Screw, 8BA, round head	3	—	CB2/50
A32C28	. . .	SCREW, stop, for levers	6	—	CB2/51
A32C40	. . .	SCREW, stop, for levers	2	—	CB2/52
EA3.47.85	. . .	SHIM, at throttle, levers	2	—	CB2/53
EA3.47.103	. . .	SHIM, at shut-off cock levers	2	—	CB2/54
EA3.81.1995	. . .	SLEEVE, at relight switches	2	—	CB2/55
R MS5752	. . .	SWITCH, micro (Mod.5262)	1	—	CB2/56
		Attaching parts for MS5752:—			
A25/8B	. . .	Bolt, 4BA, hex. head	2	—	CB2/57
AGS2001B1	. . .	Nut, stiff, 4BA	2	—	CB2/58
SP15B	. . .	Washer, 4BA, plain	2	—	CB2/59

CONTROLS
ENGINE CONTROLS IN NOSE FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
DOWTY C5162Y		SWITCH, push, type A	2	—	CB2/60
		Attaching parts for C5162Y:			
A43Z12		Screw, 8BA, cheese head	2	—	CB2/61
EA3.47.83		TUBE, bearing, at throttle levers	1	—	CB2/64
EA3.47.81		WASHER, special friction, at throttle levers	2	—	CB2/65
EA3.47.89		WASHER, special friction, at shut-off cock levers	2	—	CB2/66
SP15N		WASHER	1	—	CB2/66A
		Attaching parts for EA3.47.149:			
A25/2C		Bolt, 2BA, hex. head	3	—	CB2/67
AS1246/2C		Bolt, 2BA, round head	2	—	CB2/68
AS2922/2.1/2C		Bolt, 2BA, round head	6	—	CB2/69
AS2922/3C		Bolt, 2BA, round head	5	—	CB2/70
AGS2001C1/66		Nut, stiff, 2BA	5	—	CB2/71
EB6.47.5		PACKING, for rigid edge at frame 10	2	—	CB1/53
EB6.47.7		PACKING, for rigid clip at frame 10	2	—	CB1/54
EA1.47.217		SUPPORT, ENGINE CONTROL RODS, FRAME 12, ASSEMBLY	1	—	CB1/55
		Spares for:			
SP15/7		CLIP, rigid (Simmonds Corsey)	4	—	CB1/56

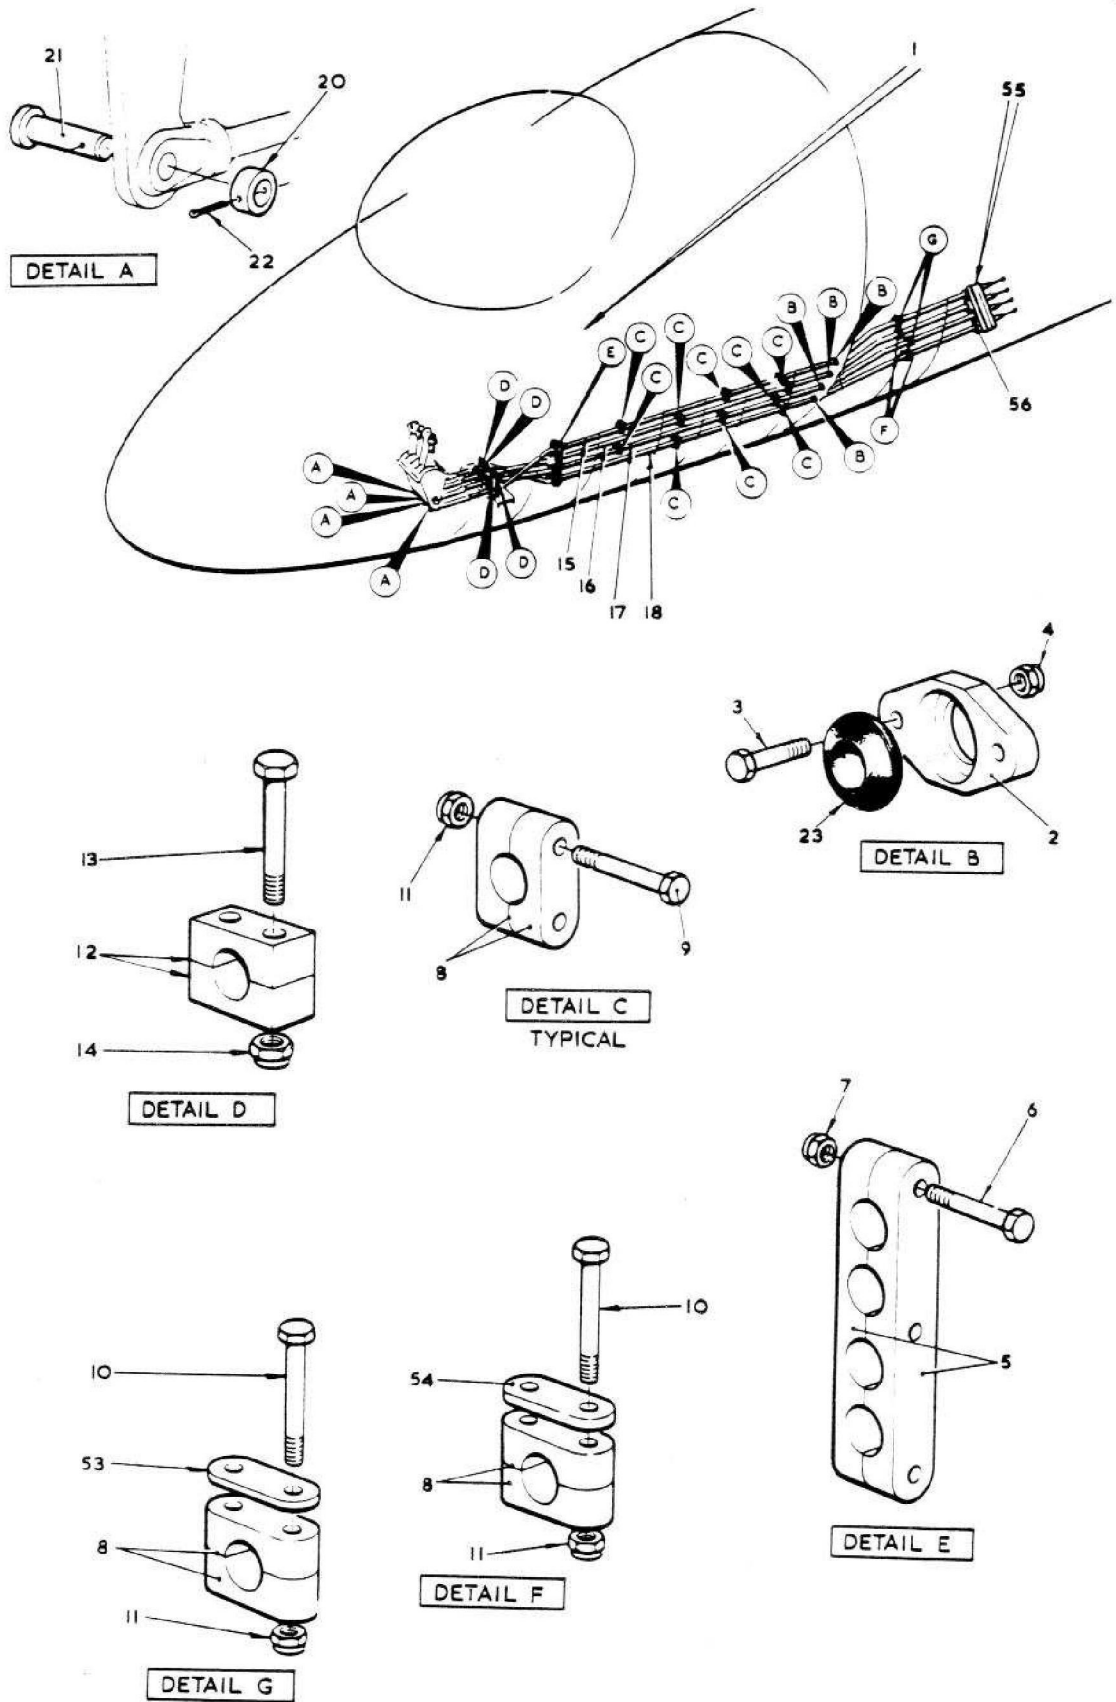


FIG.1 ENGINE CONTROLS IN NOSE FUSELAGE

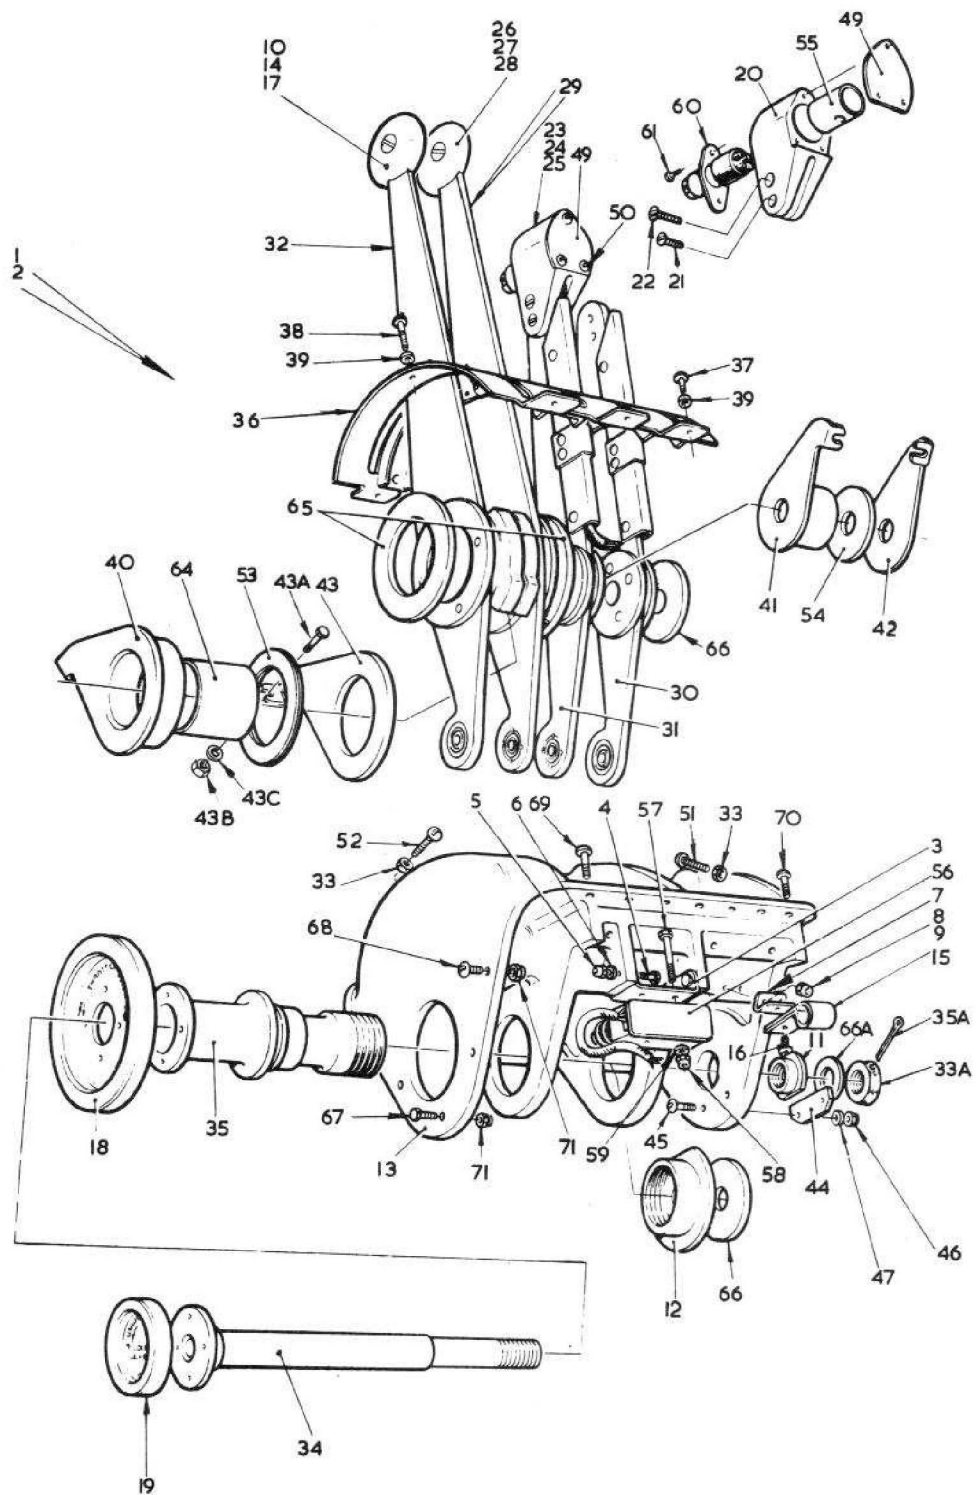


FIG 2 ENGINE CONTROLS IN NOSE FUSELAGE

CODE R

SECT CB