CONTROLS

Page DF.1

FLAP OPERATING MECHANISM, PORT

EA1.20.701 EA1.20.711 A25/10G SP15G EA1.20.885 EA3.20.3991 A25/8G EA1.20.3129 A25/1B AS1900B EA3.20.1011	FLAP OPERATING MECHANISM, PORT, ASSEMBLY Spares for: BRACKET, flap operating, jack unit support Attaching parts for EA1.20.711: Bolt, 5/16" BSF Washer BRACKET, mounting, flap operating jack unit (Pre Mod.4781) BRACKET, mounting, flap operating jack unit (Mod.4781) Attaching parts for EA1.20.885 & EA3.20.3991: Bolt, 5/16" BSF BRACKET, mounting, Desynn transmitter Attaching parts for EA1.20.3129: Bolt, 48A	2 2 2 2 4 4	L65 - - DTD683 S97	DF1/17 DF1/25 DF1/20 DF1/19 DF1/23
A25/10G SP15G EA1.20.885 EA3.20.3991 A25/8G EA1.20.3129 A25/1B AS1900B	BRACKET, flap operating, jack unit support Attaching parts for EA1.20.711: Bolt, 5/16" BSF Washer BRACKET, mounting, flap operating jack unit (Pre Mod.4781) BRACKET, mounting, flap operating jack unit (Mod.4781) Attaching parts for EA1.20.885 & EA3.20.3991: Bolt, 5/16" BSF BRACKET, mounting, Desynn transmitter Attaching parts for EA1.20.3129:	2 2 4 4 1	_ _ DTD683	DF1/20 DF1/19
SP15G EA1.20.885 EA3.20.3991 A25/8G EA1.20.3129 A25/1B AS1900B	Bolt, 5/16" BSF Washer BRACKET, mounting, flap operating jack unit (Pre Mod.4781) BRACKET, mounting, flap operating jack unit (Mod.4781) Attaching parts for EA1.20.885 & EA3.20.3991: Bolt, 5/16" BSF BRACKET, mounting, Desynn transmitter Attaching parts for EA1.20.3129:	4 4 1		DF1/19
EA1.20.885 EA3.20.3991 A25/8G EA1.20.3129 A25/1B AS1900B	BRACKET, mounting, flap operating jack unit (Pre Mod.4781) BRACKET, mounting, flap operating jack unit (Mod.4781) Attaching parts for EA1.20.885 & EA3.20.3991: Bolt, 5/16" BSF BRACKET, mounting, Desynn transmitter Attaching parts for EA1.20.3129:	4 4 1		Contract to the Contract of
A25/8G EA1.20.3129 A25/1B AS1900B	BRACKET, mounting, flap operating jack unit (Mod.4781) Attaching parts for EA1.20.885 & EA3.20.3991: Bolt, 5/16" BSF BRACKET, mounting, Desynn transmitter Attaching parts for EA1.20.3129:	1	S97	
EA1.20.3129 A25/1B AS1900B	Bolt, 5/16" BSF BRACKET, mounting, Desynn transmitter Attaching parts for EA1.20.3129:	2.00	1	
A25/1B AS1900B	Attaching parts for EA1.20.3129;	102	_	DF1/24
AS1900B	Bolt 48A	1	L72	DF2/17
		6	-	DF2/15
	CLIP, cable LINK, CONNECTING, FLAP TO OPERATING MECHANISM, ASSEMBLY Spares for:	1 4	=	DF2/15A DF1/1
EA3.20.1009	BEARING	2	=	DF1/1A
EA3.20.1007	BUSH	2	**	DF1/1B
EA3.20.1013	. HOUSING, bearing	1	-	DF1/1C
EA3.20.1015 EA1.20.797	. HOUSING, bearing . PLATE, locking Attaching parts for EA1.20.797:	1	L72	DF1/1D DF1/10
A25/9B	Boit, 4BA	2	-	DF1/9
AGS2001B1 SP15B	Nut, stiff, 4BA Washer	2 2	-	DF1/8 DF1/7
EA1.20.795	SCREW, adjusting	1	S11	DF1/6
EA1.20.791	WASHER	2	L65 or L72	DF1/11
SP21 EA1.20.683	NIPPLE, lubricating PLATE, cover, at rib 3A, for assembly of flap jack unit (Pre Mod.738)	1	DTD320	DF1/22A DF2/22A
EA3.20.2289	 PLATE, cover, at rib 3A, for assembly of flap jack unit (Mod.738) 	1	L72	DF2/22
	Attaching parts for EA1.20.683 or EA3.20.2289:			DES /50
A61/1C	Bolt, 2BA	6	_	DF2/20 DF2/23
AGS2001C3 SP15C	. Nut, stiff. 2BA . Washer	6	=	DF2/23 DF2/21
EA1.20.10777	 PLATE, cover at rib 3A, for assembly of flap jack unit Attaching parts for EA1.20.10777: 	1	L72	DF2/13
A61/1C	. Bolt, 2BA	6	-	DF2/7
AGS2001C3 SP15C	. Nut, stiff, 2BA . Washer	6	-	DF2/9 DF2/8
EA1.20.10778	PLATE, cover at rib 3A, for assembly of flap jack unit Attaching parts for EA1.20.10778:	1	L72	DF2/31
A61/1C	. Boit, 2BA	6	-	DF2/29
AGS2001C3 SP15C	Nut, stiff, 2BA Washer	6	_	DF2/32 DF2/30

Page DF.2

CONTROLS

AP101B-0402-3A

FLAP OPERATING MECHANISM, PORT

A61/1C . AGS2001C3 . SP15C .	PLATE, cover at ribs 3, 4 & 5, for assembly of flap jacks unit Attaching parts for EA1.20.10779:	5550	The state of the s	
A61/1C . AGS2001C3 . SP15C .	Attaching parts for EAT /U 107/91	2	L72	DF1/5
AGS2001C3 . SP15C .		7		DE 1/2
SP15C .	Bolt, 2BA Nut, stiff, 2BA	7	_	DF1/2 DF1/4
	Washer	7	-	DF1/3
EA1.20.10780	PLATE, cover at ribs 3, 4 & 5, for assembly of flap jack unit Attaching parts for EA1.20.10780:	1	L72	DF1/18
	Bolt, 2BA	7	-	DF1/14
	Nut, stiff, 2BA	7	-	DF1/16
SP15C .	Washer	7	-	DF1/15
EA1.20.813 .	ROD, PUSH, OUTBOARD FLAP CONTROL, BETWEEN HINGE AND OPERATING JACK, ASSEMBLY Spares for:	1	-	DF2/28
A1.20.839 .	, BUSH	1	DTD197	DF2/25
A1.20.827 .	. EYE-END	1	L65	DF2/24
A1.20.825 .	FORK-END Attaching parts for EA1.20.827 and EA1.20.825:	1	L65	DF2/36
EEAS37/15A .	Nipple	6	S96	DF2/35
	. Spoke	3	S96	DF2/34
SP21 .	. NIPPLE, lubricating	1		DF2/39
	. PIN, special	1	S11	DF2/37
SP90G6 .	. PIN, split, 1/8" dia	1	-	DF2/37A
A1.20.807	PLATE, locking Attaching parts for EA1.20.807:	1	L72	DF2/33
A33B8 .	. Screw, 4BA	2	-	DF2/33A
EA1.20.833	. TUBE	1	_	DF2/33B
	. WASHER, red fibre, for lubricating nipple Attaching parts for EA1.20.813:	1	B\$\$216	DF2/38
EA1,20.803	Pin, special	1	S11	DF1/22
SP90G6 .	Pin, split, 1/8" dia	1		DF1/21
EA1,20.815 .	ROD, PUSH, INBOARD AND OUTBOARD FLAP CONTROL, BETWEEN HINGE AND OPERATING JACK, ASSEMBLY	2	-	DF1/12
EA1.20.839	Spares for: . BUSH	1	DTD197	DF1/12A
	. EYE-END	1	L65	DF1/12B
	. FORK-END	1	L65	DF1/12C
A1.20.020	Attaching parts for EA1.20.827 and EA1.20.825:			//
EAS37/15A .	. Nipple	6	S96	DF1/12D
EAS38/2A	. Spoke	3	S96	DF1/12E
SP21 .	. NIPPLE, lubricating	1	_	DF1/12F
	. Pin, special	ı î	S11	DF1/12G
	. PIN, split, 1/8" dia	1	-	DF1/12H
	. PLATE, locking	1	L72	DF1/12J
A33B8 .	Attaching parts for EA1.20.807: Screw, 4BA	2	_	DF1/12K
317				
	. TUBE . WASHER, red fibre, for lubricating nipple Attaching parts for EA1.20.815:	1	B\$\$216	DF1/12L DF1/12M
EA1,20,803	Pin, special	1	S11	DF1/22
	Pin, split, 1/8" dia	1	-	DF1/21
379000	riii, spirit, 170 dia			51 1/21

R

CONTROLS

Page DF.3

FLAP OPERATING MECHANISM, PORT

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.
EA1.20.819	. ROD, PUSH, INBOARD FLAP CONTROL BETWEEN HINGE AND OPERATING JACK CONNECTING ARM, ASSEMBLY	1	-	DF1/13
EA1.20.839	Spares for: BUSH	1	DTD197	DF1/13A
EA1.20.827	EYE-END	1	L65	DF1/13B
EA1.20.825	FORK-END	1	L65	DF1/13C
	Attaching parts for EA1,20,827 and EA1,20,825:	6	200	DE4/40D
EEAS37/15A EEAS38/2A	. Nipple . Spoke	3	S96 S96	DF1/13D DF1/13E
SP21	NIPPLE, lubricating	1	_	DF1/13F
EA1,20,805	. PIN, special	i	S11	DF1/13G
SP90G6	PIN, split, 1/8" dia	1	_	DF1/13H
EA1.20.807	PLATE, locking	1	L72	DF1/13J
A33B8	Attaching parts for EA1.20.807: . Screw, 4BA	2	_	DF1/13K
EA1.20.893	. TUBE	1	-	DF1/13L
EEAS5	WASHER, red fibre, for lubricating nipple	i	BSS216	DF1/13M
E 4 4 20 202	Attaching parts for EA1.20.819:	1	S11	DF1/22
EA1,20.803 SP90G6	Pin, special Pin, split, 1/8" dia	1	-	DF1/21
EA1.20.3133	. ROD, CONNECTING, FLAP INDICATOR MECHANISM, ASSEMBLY Consisting of:	1	-	DF2/1
AG\$899/2	Collar	2	-	DF2/4
EA1.20.881	FORK-END	1	L1	DF2/3
EA1.20.883	FORK-END, L.H. thread	1	L1	DF2/11
A27CT	NUT, thin, 2BA	1 1		DF2/2 DF2/12
A27CTL SP4Y/B4	. NUT, thin, 2BA . PIN, shackle	2	_	DF2/12 DF2/6
SP4 Y / B4 SP90C7	. PIN, split, 1/16" dia	2	922	DF2/5
EA1.20.3157	ROD, adjusting	1	DTD683	DF2/10
135FL	TRANSMITTER, desynn Attaching parts for 6A/2134:	1	-	DF2/14
A61/2C	Bolt, 2BA	4	_	DF2/16
AGS2001C3	. Nut, stiff, 2BA	4	-	DF2/19
SP15C	. Washer	4	-	DF2/18
EEAS5	. WASHER, red fibre, for lubricating nipple	4	-	DF1/22B
			60	
	31/2		1	ı

R

News

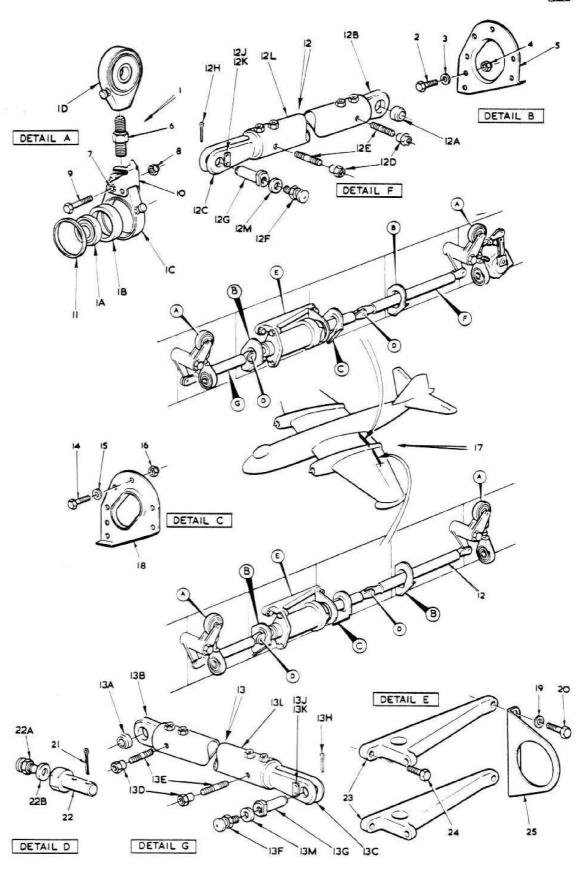


FIG.I FLAP OPERATING MECHANISM, PORT

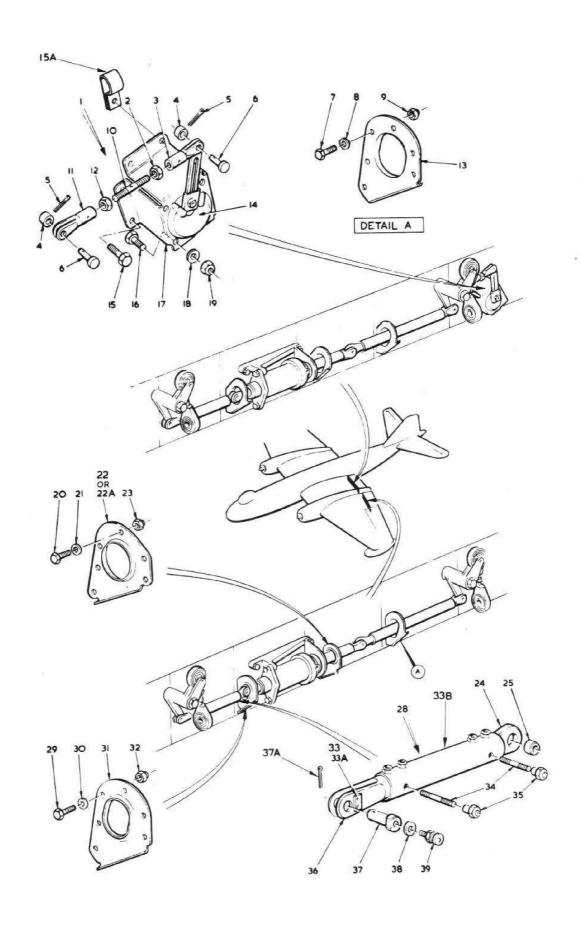


FIG.2 FLAP OPERATING MECHANISM PORT