

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA3.81.7	ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE, ASSEMBLY	—	—	
EA3.81.297	Spares for: BOX, JUNCTION, No.1 INSTALLATION	—	—	EA1/1
A25/1B	Spares for: BOLT, 4BA, earthing connection	1	—	EA1/2
EA3.81.6269	BOX, JUNCTION, No.1, ASSEMBLY (ALT. R60/118 — MOD.5097) (For aircraft not embodying Mod.272, and embodying Mod.3883)	1	—	EA1/3
EA3.81.5891	BOX, JUNCTION, No.1, ASSEMBLY (MOD.3883) (For aircraft embodying Mod.272) Spares for:	1	—	
703-1-00249	BLOCK, terminal, 20 way Attaching parts for 703-1-00249:	2	—	EA1/4
A43B24	Screw, cheese head, 4BA	2	—	EA1/5
EA1.81.583	BOX, junction, 40 way	1	—	EA1/6
EA1.81.597A	COVER, ASSEMBLY	1	—	EA1/7
EEAS117/1	Spares for: SCREW, round head, 4BA	6	—	EA1/8
EEAS28/2CU	WASHER, 4BA	12	DTD124A	EA1/9
EEAS42	WASHER, leather	6	—	EA1/10
508-4-11290-004	GASKET	2	—	EA1/11
508-4-11290-005	GASKET	2	—	EA1/12
Z22634	GROMMET	1	—	EA1/13
703-2-00257	LINK, connecting, 8 way	1	—	EA1/14
EA1.81.461	PLATE, blanking	1	—	EA1/15
EA1.81.463	PLATE, blanking Attaching parts for EA1.81.461 and EA1.81.463:	2	—	EA1/16
A27AP	Nut, plain, 6BA	4	—	EA1/17
A32A32	Screw, round head, 6BA	4	—	EA1/18
SP47A	Washer, spring, 6BA	4	—	EA1/19
508-1-06413	PLUG, size 'D', for aircraft not embodying Mod.272 (Pre Mod.3377 for aircraft embodying Mod.272)	1	—	EA1/20
508-1-06413	PLUG, size 'D' (Mod.3377) (For aircraft embodying Mod.272)	1	—	
508-2-11232-002	SLEEVE, cable, 4-7 amp	QR	—	
SIEG-OREL	SLEEVE, ¼" long	QR	—	
SL2/3	SLEEVE, yellow, ¼" long (Mod.3883) (For aircraft embodying Mod.272)	QR	—	
EEAS146A1	SLEEVE, yellow, 3/8" long	QR	—	
EEAS146B	SLEEVE, ¼" long, yellow	QR	—	
EEAS146/6	TAG, QR, 4 amp	QR	—	
703-2-00315-020	TAG, QR, 7 amp	QR	—	
703-2-00316-020	TAG, QR, 19 amp	QR	—	
703-2-00317-020	THIMBLE, 4 amp	QR	—	
703-2-00339-020	THIMBLE, 7 amp	QR	—	
703-2-00340-020	THIMBLE, 19 amp	QR	—	
703-2-00341-020	Attaching parts for EA3.81.6269 and EA3.81.5891:			
A25/1C	Bolt, 2BA	4	—	EA1/21
AGS2001C1/66	Nut, stiff, 2BA	4	—	EA1/22
SP15C	Washer, 2BA	4	—	EA1/23

ELECTRICAL

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
AGS2001B1	. . . NUT, stiff, 4BA, earthing connection	1	—	EA1/24
EEAS28/2EP	. . . WASHER, earthing connection	2	—	EA1/25
EA3.81.300	. . . BOX, JUNCTION, No.2, INSTALLATION	—	—	EA1/26
	Spares for:			
A61/1B	. . . BOLT, 4BA, earthing connection (Pre Mod.5097)	1	—	EA1/27
EA3.81.303/1	. . . BOX, JUNCTION, No.2, ASSEMBLY (PRE MOD.5194)	1	—	EA1/28
EA3.81.7211	. . . BOX, JUNCTION, No.2, INSTALLATION (MOD.5194)	—	—	
	Spares for:			
703-1-00249	. . . BLOCK, terminal, 20 way	1	—	EA1/29
	Attaching parts for 703-1-00249:			
A43B24	. . . Screw, cheese head, 4BA	2	—	EA1/30
EA1.81.589	. . . BOX, junction, 20 way	1	—	EA1/31
508-4-11290-004	. . . GASKET	1	—	EA1/32
EA1.81.598E	. . . LID, ASSEMBLY	1	—	EA1/33
	Spares for:			
EEAS117/1	. . . SCREW, cover	4	—	EA1/34
EEAS28/2CU	. . . WASHER	8	DTD124	EA1/35
EEAS42	. . . WASHER, leather	4	—	EA1/36
703-2-00251	. . . LINK, 2 way	3	—	EA1/37
703-2-00253	. . . LINK, 4 way	1	—	EA1/38
EA1.81.464	. . . PLATE, adaptor	1	—	EA1/39
	Attaching parts for EA1.81.464:			
A27AP	. . . Nut, 4BA	4	—	EA1/40
A32A12	. . . Screw, 4BA	4	—	EA1/41
SP47A	. . . Washer, spring	4	—	EA1/42
EEAS146B	. . . SLEEVE	QR	—	
	Attaching parts for EA3.81.303/1:			
A25/1C	. . . Bolt, 2BA	4	—	EA1/43
AGS2001C1/66	. . . Nut, stiff, 2BA	4	—	EA1/44
SP15C	. . . Washer, 2BA	4	—	EA1/45
EA3.81.309	. . . BRACKET	2	—	EA1/46
EA3.81.311	. . . BRACKET	2	—	EA1/47
AGS2002B3	. . . NUT, stiff, 4BA, earthing connection (Pre Mod.5097)	1	—	EA1/48
EEAS28/2EPH	. . . WASHER, earthing connection (Pre Mod.5097)	2	—	EA1/49
EA3.81.298	. . . BOX, JUNCTION, No.3, INSTALLATION	—	—	EA1/50
	Spares for:			
EA1.81.437	. . . ANGLE, support	1	—	EA1/51
EA1.81.438	. . . ANGLE, support	1	—	EA1/52
A25/1B	. . . BOLT, 4BA, earthing connection	1	—	EA1/53
EA3.81.305/1	. . . BOX, JUNCTION, No.3, ASSEMBLY	1	—	EA1/54
	Spares for:			
703-1-00249	. . . BLOCK, terminal	2	—	EA1/55
	Attaching parts for 703-1-00249:			
A43B24	. . . Screw, cheese head, 2BA	2	—	EA1/56
EA1.81.583	. . . BOX, junction, 40 way	1	—	EA1/57
EA1.81.597B	. . . COVER, ASSEMBLY	1	—	EA1/58
	Spares for:			
EEAS117/1	. . . SCREW, round head, 4BA	6	—	EA1/59
EEAS28/2CU	. . . WASHER, 4BA	12	DTD124A	EA1/60
EEAS42	. . . WASHER, leather	6	—	EA1/61

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
508-4-11290-004	. . .	GASKET	2	—	EA1/62
508-4-11290-005	. . .	GASKET	2	—	EA1/63
703-2-00251	. . .	LINK, 2 way	1	—	EA1/64
703-2-00257	. . .	LINK, 8 way	1	—	EA1/65
EA1.81.461	. . .	PLATE, blanking	1	—	EA1/66
EA1.81.463	. . .	PLATE, blanking	2	—	EA1/67
		Attaching parts for EA1.81.461 and EA1.81.463:—			
A27AP	. . .	Nut, plain 6BA	4	—	EA1/68
A32A32	. . .	Screw, round head 6BA	4	—	EA1/69
SP47A	. . .	Washer, 6BA	4	—	EA1/70
508-1-06413	. . .	PLUG, size 'D' (Mod 3377)	1	—	EA1/71
SIEG-OREL					
SL2/3	. . .	SLEEVE, $\frac{3}{4}$ " long	QR	—	
EEAS146B	. . .	SLEEVE, $\frac{3}{8}$ " long	QR	—	
508-2-11232-002	. . .	SLEEVE	QR	—	
703-2-00315-020	. . .	TAG, QR, 4 amp	QR	—	
703-2-00316-020	. . .	TAG, QR, 7 amp	QR	—	
703-2-00317-020	. . .	TAG, QR, 19 amp	QR	—	
703-2-00339-020	. . .	THIMBLE, 4 amp	QR	—	
703-2-00340-020	. . .	THIMBLE, 7 amp	QR	—	
703-2-00341-020	. . .	THIMBLE, 19 amp	QR	—	
		Attaching parts for EA3.81.305/1:—			
A25/7C	. . .	Bolt, 2BA	4	—	EA1/72
AGS2001C1/66	. . .	Nut, stiff, 2BA	4	—	EA1/73
AS2811/5/075	. . .	Tube, distance	4	—	
SP13C	. . .	Washer, 2BA	4	—	EA1/74
AGS2001B1	. . .	NUT, stiff, 4BA earthing connection	1	—	EA1/75
EEAS28/2EP	. . .	WASHER, earthing connection	2	—	EA1/76
EA3.81.299	. . .	BOX, JUNCTION, No. 5 INSTALLATION (PRE-MOD 5081)	—	—	EA2/1
		Spares for:—			
A61/1B	. . .	BOLT, 4BA, earthing connection (Pre-Mod 5097)	1	—	EA2/2
EA1.81.444	. . .	BOX, JUNCTION, No. 5, ASSEMBLY	1	—	EA2/3
		Spares for:—			
703-1-00249	. . .	BLOCK, terminal 20 way	1	—	EA2/4
		Attaching parts for 703-1-00249:—			
A31B24	. . .	Screw, cheese head, 4BA	2	—	EA2/5
EA1.81.589	. . .	BOX, junction, 20 way	1	—	EA2/6
508-4-11290-004	. . .	GASKET, plug moulding	1	—	EA2/7
EA1.81.598B	. . .	LID, ASSEMBLY	1	—	EA2/8
		Spares for:—			
EA9.81.4357	. . .	SCREW, cover	4	—	EA2/9
EEAS28/2CU	. . .	WASHER	8	DTD124	EA2/10
EEAS42	. . .	WASHER, leather	4	—	EA2/11
703-2-00252	. . .	LINK, 3 way	2	—	EA2/12
EA1.81.464	. . .	PLATE, adaptor	1	—	EA2/13
		Attaching parts for EA1.81.464:—			
A27AP	. . .	Nut, 6BA	4	—	EA2/14
A32A12	. . .	Screw, 6BA	4	—	EA2/15
SP47A	. . .	Washer, spring	4	—	EA2/16
EEAS116B	. . .	SLEEVE, $\frac{3}{8}$ " long, yellow	QR	—	
		Attaching parts for EA1.81.444:—			
A61/1C	. . .	Bolt, 2BA	4	—	EA2/17
AGS2002C3	. . .	Nut, stiff, 2BA	4	—	EA2/18
SP15C	. . .	Washer	4	—	EA2/19

ELECTRICAL

AP101B-0402-3A

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA3.81.309	. . BRACKET	2	—	EA2/20
EA3.81.311	. . BRACKET	2	—	EA2/21
AGS2002B3	. . NUT, stiff, 4BA, earthing connection (Pre—Mod 5097)	1	—	EA2/22
EEAS28/2EPH	. . WASHER, earthing connection (Pre—Mod 5097)	1	—	EA2/23
40924	. . CLEATING, bomb door, port (SRIM3577—Mod 4937)	1	—	
AS1900B	. . CLIP, cable fixing Attaching parts for AS1900B:—	1	—	EA8/1
AGS2001B1	. . Nut, stiff, 4BA	1	—	EA8/2
A31B16	. . Screw, 4BA	1	—	EA8/3
AS3180/6B	. . CLIP, cable fixing (SRIM3577—Mod 4937)	28	—	
AS3180/7B	. . CLIP, cable fixing (SRIM3577—Mod 4937)	5	—	
AS3180/10B	. . CLIP, cable fixing (SRIM3577—Mod 4937) Attaching parts for AS3180/6B, AS3180/7B and AS3180/10B:—	7	—	
AGS2001B1	. . Nut, stiff, 4BA	1	—	
A31B20	. . Screw, 4BA	1	—	
SP15B	. . Washer	1	—	
EA3.81.399	. . EQUIPMENT, ELECTRICAL, REAR BOMB BAY BULKHEAD, ASSEMBLY (PRE—MOD 5204)	—	—	
EA3.81.8177	. . EQUIPMENT, ELECTRICAL, REAR BOMB BAY BULKHEAD, ASSEMBLY (MOD 5204) Spares for:—	—	—	
508/1/41037	. . CAP, protective (Mod 5204)	2	—	EA3/1
AS1901A	. . CLIP, cable (Pre—Mod 1425)	3	—	
AS3180/5B	. . CLIP, cable (Pre—Mod 5081) Attaching parts for AS3180/5B:—	2	—	
AGS2001B1	. . Nut, stiff, 4BA	1	—	
A31B12	. . Screw, 4BA	1	—	
14055	. . FAIRLEAD, assembly (SRIM3867—Mod 5204)	1	—	EA3/2
14163	. . FAIRLEAD, assembly (SRIM3867—Mod 5204) Attaching parts for 14055 and 14163:—	1	—	
AGS2001B1	. . Nut, stiff, 4BA	QR	—	EA3/3
A31B20	. . Screw	QR	—	EA3/4
SP15B	. . Washer, 4BA	QR	—	EA3/5
CSP5A14AC	. . GROMMET, blank (Mod 5204)	2	Neoprene	EA3/6
EB6.81.433	. . PLATE, blanking Attaching parts for EB6.81.433:—	1	—	EA3/7
AGS2001A1	. . Nut, stiff, 6BA	4	—	EA3/8
A31A10	. . Screw	4	—	EA3/9
EA3.81.8175	. . PLATE, blanking (Mod 5204) Attaching parts for EA3.81.8175:—	1	—	EA3/10
AGS2001B1	. . Nut, stiff, 4BA	4	—	EA3/11
A31B14	. . Screw, 4BA	4	—	EA3/12
SP15B	. . Washer	4	—	EA3/13
15374	. . PLATE, doubler (SRIM3867—Mod 5204)	1	—	EA3/14
508-1-40161-320	. . PLUG/SOCKET, Mk. 4 3 way (Mod 420)	1	—	EA3/15
508-1-40175-325	. . PLUG/SOCKET, Mk. 4 18 way (Mod 420)	1	—	EA3/16
508-1-06462	. . PLUG, bulkhead, size A (Pre—Mod 1425)	1	—	
508-1-06463	. . PLUG, bulkhead, size A (Mod 3377)	1	—	EA3/17
508-1-06465	. . PLUG, bulkhead, size Z (Mod 3377)	1	—	EA3/18
508-1-06454	. . PLUG, bulkhead, size C (Mod 3377)	1	—	EA3/19
508-1-06482	. . PLUG, bulkhead, size D (Mod 3377)	1	—	EA3/20
508-1-06443	. . PLUG, bulkhead, size 2 (Mod 3377)	1	—	EA3/21
10H/19425	. . PLUG, type 744 Attaching parts for Ref. 10H/19425:—	1	—	EA3/22
AGS2001B1	. . Nut, stiff, 4BA	4	—	
A31B20	. . Screw, 4BA	4	—	EA3/23

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
		1 2 3 4 5 6				
Z560042	†	SOCKET, double ended	2	—	—	EA3/24
3416	EEAS132/7	STRAP, webbing, cable c/w buckle	4	—	C	EA3/25
28D/9128739	AS1248/1/2B	Attaching parts for EEAS132/7:—				
28M/1278189	AGS2001B1	Bolt, 4BA	QR	—	C	EA3/26
3420	EEAS73	Nut, stiff, 4BA	QR	—	C	EA3/27
28S/9995376	A32B20	Plate, clamp	QR	—	C	EA3/28
4910	EEAS28/18DR	Screw, 4BA	QR	—	C	EA3/29
		Washer	QR	—	C	EA3/30
	EA3.80.2857	FATIGUE METER INSTALLATION (MOD 2326—S.O.O.)	—	—	—	
		Spares for:—				
	EA3.81.2975	BOX, junction assembly, JB7	1	—	—	
36299	EA9.80.1383	BRACKET, fatigue meter mounting	1	—	C	
		Attaching parts for EA9.80.1383:—				
28D/9133012	A25/3C	Bolt, 2BA	3	—	C	
28M/1012015	AGS2001C1/66	Nut, stiff, 2BA	3	—	C	
28W/9419402	SP13C	Washer	3	—	C	
41536	EA3.81.2979	CABLE, ASSEMBLY, 1M	—	—	—	
31529	EA9.80.1387	CHANNEL, fatigue meter mounting	1	—	C	
		Attaching parts for EA9.80.1387:—				
28D/9133011	A25/2C	Bolt, 2BA	4	—	C	
28W/9419402	SP13C	Washer	4	—	C	
28E/1201809	AS3810/6B	CLIP, cable fixing	5	—	C	
		Attaching parts for AS3810/6B:—				
28D/1010658	A25/1B	Bolt, 4BA	QR	—	C	
28D/1011011	A25/8B	Bolt, 4BA	QR	—	C	
28M/1278189	AGS2001B1	Nut, stiff, 4BA	QR	—	C	
	AS2810/4/650	Tube, distance	QR	—	C	
28W/9419465	SP13B	Washer	QR	—	C	
6A/5029	†	METER, fatigue, RAE type 3C (Pre—Mod 3245)	1	—	—	
6A/4664238	†	METER, fatigue, RAE type 13 (Mod 3245)	1	—	—	
36300	EA9.80.1389	PACKING	2	—	C	
	EA3.81.35	LOOMS, CABLE, ASSEMBLY (PRE—MOD 5204)	—	—	—	
	EA3.81.8035	LOOMS, CABLE, ASSEMBLY (MOD 5204)	—	—	—	
		Spares for:—				
	EA1.81.774/1	CABLE, ASSEMBLY, battery link	2	—	—	
7146	EA3.81.774/1	CABLE, ASSEMBLY, bomb release cocking indicator (Pre—Mods 5081 and 5204)	1	—	—	
	EA3.81.7297	CABLE, ASSEMBLY, BT2, from distribution box front fuselage and JB2 to target towing release unit (Mod 5194)	1	—	—	
41573	EA3.81.2359/2	CABLE, ASSEMBLY, C1, from distribution box front fuselage to JB1	1	—	—	
41563	EA3.81.703/2	CABLE, ASSEMBLY, C2, from pressure bulkhead to JB2 (Pre—Mods 5081 and 5204)	1	—	—	
41553	EA3.81.706/2	CABLE, ASSEMBLY, C2A, from pressure bulkhead to JB2	1	—	—	
	EA3.81.707/2	CABLE, ASSEMBLY, C3, from distribution box front fuselage to JB4 (Pre—Mod 411)	1	—	—	
41574	EA3.81.2361/2	CABLE, ASSEMBLY, C3, from distribution box front fuselage to JB4 (Mod 411)	1	—	—	

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
		1 2 3 4 5 6				
41564	EA3.81.708/2	CABLE, ASSEMBLY, C5, from pressure bulkhead to JB5 (Pre—Mods 5081 and 5204)	1	—	—	
41560	EA1.81.735/2	CABLE, ASSEMBLY, C6, from distribution box front fuselage to bomb bay bulkhead	1	—	—	
44138	EA1.81.758/2	CABLE, ASSEMBLY, C7, from distribution box front fuselage to JB7, port wing (Pre—Mod 1001)	1	—	—	
1438935	EA3.81.2553/2	CABLE, ASSEMBLY, C7, from distribution box front fuselage to JB7, port wing (Mod 1001)	1	—	—	
	EA1.81.757/2	CABLE, ASSEMBLY, C7X, from pressure bulkhead to JB7, port wing (Pre—Mod 1001)	1	—	—	
1438936	EA3.81.2555/2	CABLE, ASSEMBLY, C7X, from pressure bulkhead to JB7, port wing (Mod 1001)	1	—	—	
41557	EA1.81.704/2	CABLE, ASSEMBLY, C8, from front transport joint plug to JB8, starboard wing	1	—	—	
41558	EA1.81.705/2	CABLE, ASSEMBLY, C8X, from front transport joint plug to JB8, starboard wing	1	—	—	
41562	EA1.81.759/2	CABLE, ASSEMBLY, C9, from pressure bulkhead to port wing break	1	—	—	
41559	EA1.81.713/2	CABLE, ASSEMBLY, C10, from pressure bulkhead to starboard wing break	1	—	—	
41561	EA1.81.736/2	CABLE, ASSEMBLY, C21, from front transport joint to plug at bomb bay bulkhead (Pre—Mods 5081 and 5204)	1	—	—	
41548	EA1.81.756/2	CABLE, ASSEMBLY, C31, from distribution box front fuselage to No. 1 generator suppressor	1	—	—	
41545	EA1.81.701/2	CABLE, ASSEMBLY, C32, from distribution box front fuselage to No. 2 generator suppressor	1	—	—	
41554	EA1.81.738/2	CABLE, ASSEMBLY, C33, from front transport joint to plug at bomb bay bulkhead	1	—	—	
	EA3.81.6679	CABLE, ASSEMBLY, C504, from distribution box front fuselage to rear fuselage (Mod 4859)	1	—	—	
7714	EB7.81.1119	CABLE, ASSEMBLY, E1, from JB1 to earth (Pre—Mod 5097)	1	—	—	
	EA3.81.6189	CABLE, ASSEMBLY, E1, from JB1 to earth (Alt. R60/65—Mod 5097)	1	—	—	
7717	EB6.81.491	CABLE, ASSEMBLY, E2, from JB2 to earth (Pre—Mod 5097)	1	—	—	
	EA3.81.6191	CABLE, ASSEMBLY, E2, from JB2 to earth (Alt. R60/65—Mod 5097)	1	—	—	
7715	EB7.81.1121	CABLE, ASSEMBLY, E3, from JB3 to earth (Pre—Mod 5097)	1	—	—	
	EA3.81.6193	CABLE, ASSEMBLY, E3, from JB3 to earth (Alt. R60/65—Mod 5097)	1	—	—	
7716	EB7.81.1125	CABLE, ASSEMBLY, E5, from JB5 to earth (Pre—Mod 5097)	1	—	—	
	EA3.81.6195	CABLE, ASSEMBLY, E5, from JB5 to earth (Alt. R60/65—Mod 5097) (Pre—Mod 5204)	1	—	—	
41546	EA1.81.711/2	CABLE, ASSEMBLY, T21, from bomb bay bulkhead to camera socket (Pre—Mods 5081 and 5204)	1	—	—	
	EA1.81.709/1	CABLE, ASSEMBLY, 1A, 1B and 1C, all from JB1 to identification lights, 1A to red, 1B to green, 1C to amber	1	—	—	
41491	EA3.81.710/2	CABLE, ASSEMBLY, 1D, from JB1 to undercarriage actuator valve	1	—	—	

AP101B-0402-3A

ELECTRICAL

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA3.81.712/2	.	.	CABLE, ASSEMBLY, 1F, from JB1 to dive brake actuator valve (Pre Mod.272) (Alt.R60/118)				1	—	
EA3.81.2427/2	.	.	CABLE, ASSEMBLY, 1F, from JB1 to dive brake actuator valve (Mod.272)				1	—	
EA3.81.714/1	.	.	CABLE, ASSEMBLY, 1G, from JB1 to flap position transmitter, port wing				1	—	
EA3.81.715/1	.	.	CABLE, ASSEMBLY, 1H, from JB1 to No.1 fuel tank terminal board (Pre Mod.411)				1	—	
EA3.81.2363	.	.	CABLE, ASSEMBLY, 1H, from JB1 to No.1 fuel tank terminal board (Mod.411)				1	—	
EA3.81.716/1	.	.	CABLE, ASSEMBLY, 1H1, from No.1 fuel tank terminal board to fuel pump suppressor, port (Pre Mod.411)				1	—	
EA3.81.2365	.	.	CABLE, ASSEMBLY, 1H1, from No.1 fuel tank terminal board to fuel pump suppressor, port (Mod.411)				1	—	
EA3.81.717/2	.	.	CABLE, ASSEMBLY, 1H2, from No.1 fuel tank suppressor to fuel pump, port (Pre Mod.411)				1	—	
EA3.81.2367/2	.	.	CABLE, ASSEMBLY, 1H2, from No.1 fuel tank suppressor to fuel pump, port (Mod.411)				1	—	
EA3.81.718/2	.	.	CABLE, ASSEMBLY, 1H3, from No.1 fuel tank terminal board to fuel cock, port				1	—	
EA3.81.719/1	.	.	CABLE, ASSEMBLY, 1J, from JB1 to No.2 fuel tank terminal board, port (Pre Mod.411)				1	—	
EA3.81.2369	.	.	CABLE, ASSEMBLY, 1J, from JB1 to No.2 fuel tank terminal board, port (Mod.411)				1	—	
EA3.81.720/1	.	.	CABLE, ASSEMBLY, 1J1, from No.2 fuel tank terminal board to fuel pump suppressor, port (Pre Mod.411)				1	—	
EA3.81.2371	.	.	CABLE, ASSEMBLY, 1J1, from No.2 fuel tank terminal board to fuel pump suppressor, port (Mod.411)				1	—	
EA3.81.721/2	.	.	CABLE, ASSEMBLY, 1J2, from No.2 fuel tank suppressor to fuel pump, port (Pre Mod.411)				1	—	
EA3.81.2373/2	.	.	CABLE, ASSEMBLY, 1J2, from No.2 fuel tank suppressor to fuel pump, port (Mod.411)				1	—	
EA3.81.722/2	.	.	CABLE, ASSEMBLY, 1J3, from No.2 fuel tank terminal board to fuel cock, port				1	—	
EA3.81.723/1	.	.	CABLE, ASSEMBLY, 1K, from JB1 to No.3 fuel tank terminal board, port (Pre Mod.411)				1	—	
EA3.81.2375	.	.	CABLE, ASSEMBLY, 1K, from JB1 to No.3 fuel tank terminal board, port (Mod.411)				1	—	
EA3.81.724/1	.	.	CABLE, ASSEMBLY, 1K1, from No.3 fuel tank terminal board to fuel pump suppressor, port (Pre Mod.411)				1	—	
EA3.81.2377	.	.	CABLE, ASSEMBLY, 1K1, from No.3 fuel tank terminal board to fuel pump suppressor, port (Mod.411)				1	—	
EA3.81.725/2	.	.	CABLE, ASSEMBLY, 1K2, from No.3 fuel tank suppressor to fuel pump, port (Pre Mod.411)				1	—	
EA3.81.2379/2	.	.	CABLE, ASSEMBLY, 1K2, from No.3 fuel tank suppressor to fuel pump, port (Mod.411)				1	—	
EA3.81.726/2	.	.	CABLE, ASSEMBLY, 1K3, from No.3 fuel tank terminal board to fuel cock, port				1	—	

R

ELECTRICAL

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA3.81.2429/2	.	.	CABLE, ASSEMBLY, 1L, from JB1 to solenoid valve				1	—	
EA3.81.5899	.	.	CABLE, ASSEMBLY, 1M, from distribution box front fuselage to fatigue meter in centre fuselage (Pre Mod.4922)				1	—	
EA3.81.3271	.	.	CABLE, ASSEMBLY, 1M, from distribution box front fuselage to fatigue meter in starboard wing (Mod.4922)				1	—	
EA3.81.727/1	.	.	CABLE, ASSEMBLY, 2C and 2D, from JB2 to port and starboard bomb door micro switches				1	—	
EA3.81.1841/2	.	.	CABLE, ASSEMBLY, 2F, from JB2 to release supply forward bomb beam (Pre Mods.5081 and 5204)				1	—	
EA3.81.1939	.	.	CABLE, ASSEMBLY, 2G, 2J and 2K, from JB2, 2G to cocking indicator terminal board, 2J to nose fusing unit, 2K to tail fusing unit (Pre Mods.5081 and 5204)				1	—	
EA1.81.1941	.	.	CABLE, ASSEMBLY, 2G1, from cocking indicator terminal board to cocking indicator cable earth connection (Pre Mods.5081 and 5204)				1	—	
EA3.81.1889/2	.	.	CABLE, ASSEMBLY, 2H, from JB2 to release supply rear bomb beam (Pre Mods.5081 and 5204)				1	—	
EA3.81.2769/2	.	.	CABLE, ASSEMBLY, 3A, 3B and 3C, from JB3, 3A to vent valve heater, 3B to fire extinguisher bottle and 3C to flame switches (Pre Mod.2614)				1	—	
EA4.81.2105	.	.	CABLE, ASSEMBLY, 3A and 3B, from JB3, 3A to vent valve heater and 3B to fire extinguisher bottle (Mod.2614)				1	—	
EA3.81.732/2	.	.	CABLE, ASSEMBLY, 3B1, from JB3 to bomb bay bulkhead (Pre Mods.1425 and 5204)				1	—	
EA3.81.733/1	.	.	CABLE, ASSEMBLY, SC1, interconnecting between flame switches (Pre Mods.2614 and 5204)				1	—	
EA3.81.734/1	.	.	CABLE, ASSEMBLY, 3D, from JB3 to bomb door actuator terminal board				1	—	
EA3.81.739/2	.	.	CABLE, ASSEMBLY, 3D1, from terminal board to bomb door actuator valve				1	—	
EA3.81.740/2	.	.	CABLE, ASSEMBLY, 3F, from JB3 to flap valve actuator				1	—	
EA3.81.2381	.	.	CABLE, ASSEMBLY, 3H, from JB3 to No.1 fuel tank terminal board, starboard				1	—	
EA3.81.742/1	.	.	CABLE, ASSEMBLY, 3H1, from No.1 fuel tank terminal board to fuel pump suppressor, starboard (Pre Mod.411)				1	—	
EA3.81.2383	.	.	CABLE, ASSEMBLY, 3H1, from No.1 fuel tank terminal board to fuel pump suppressor, starboard (Mod.411)				1	—	
EA3.81.743/2	.	.	CABLE, ASSEMBLY, 3H2, from No.1 fuel tank suppressor to fuel pump starboard (Pre Mod.411)				1	—	
EA3.81.2385/2	.	.	CABLE, ASSEMBLY, 3H2, from No.1 fuel tank suppressor to fuel pump, starboard (Mod.411)				1	—	

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description					No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5 6			
EA3.81.744/2	.	.			CABLE, ASSEMBLY, 3H3, from No. 1 fuel tank terminal board to fuel cock, starboard (Pre-Mod 411)	1	—	
EA3.81.2541/2	.	.			CABLE, ASSEMBLY, 3H3, from No. 1 fuel tank terminal board to fuel cock, starboard (Mod 411)	1	—	
EA3.81.745/1	.	.			CABLE, ASSEMBLY, 3J, from JB3 to No. 2 fuel tank terminal board, starboard (Pre-Mod 411)	1	—	
EA3.81.2387	.	.			CABLE, ASSEMBLY, 3J, from JB3 to No. 2 fuel tank terminal board, starboard (Mod 411)	1	—	
EA3.81.746/1	.	.			CABLE, ASSEMBLY, 3J1, from No. 2 fuel tank terminal board to fuel pump suppressor, starboard (Pre-Mod 411)	1	—	
EA3.81.2389	.	.			CABLE, ASSEMBLY, 3J1, from No. 2 fuel tank terminal board to fuel pump suppressor, starboard (Mod 411)	1	—	
EA3.81.747/2	.	.			CABLE, ASSEMBLY, 3J2, from No. 2 fuel tank suppressor to fuel pump, starboard (Pre-Mod 411)	1	—	
EA3.81.2391/2	.	.			CABLE, ASSEMBLY, 3J2, from No. 2 fuel tank suppressor to fuel pump, starboard (Mod 411)	1	—	
EA3.81.748/2	.	.			CABLE, ASSEMBLY, 3J3, from No. 2 fuel tank terminal board to fuel cock, starboard	1	—	
EA3.81.749/1	.	.			CABLE, ASSEMBLY, 3K, from JB3 to No. 3 fuel tank terminal board, starboard (Pre-Mod 411)	1	—	
EA3.81.2393	.	.			CABLE, ASSEMBLY, 3K, from JB3 to No. 3 fuel tank terminal board, starboard (Mod 411)	1	—	
EA3.81.750/1	.	.			CABLE, ASSEMBLY, 3K1, from No. 3 fuel tank terminal board to fuel pump suppressor, starboard (Pre-Mod 411)	1	—	
EA3.81.2395	.	.			CABLE, ASSEMBLY, 3K1, from No. 3 fuel tank terminal board to fuel pump suppressor, starboard (Mod 411)	1	—	
EA3.81.751/2	.	.			CABLE, ASSEMBLY, 3K2, from No. 3 fuel tank suppressor to fuel pump, starboard (Pre-Mod 411)	1	—	
EA3.81.2397/2	.	.			CABLE, ASSEMBLY, 3K2, from No. 3 fuel tank suppressor to fuel pump, starboard (Mod 411)	1	—	
EA3.81.752/2	.	.			CABLE, ASSEMBLY, 3K3, from No. 3 fuel tank terminal board to fuel cock starboard	1	—	
EA3.81.753/1	.	.			CABLE, ASSEMBLY, 3L, from JB3 to fuel contents transformer, No. 1 fuel tank	1	—	
EA3.81.754/1	.	.			CABLE, ASSEMBLY, 3M, from JB3 to fuel contents transformer, No. 2 fuel tank	1	—	
EA3.81.755/1	.	.			CABLE, ASSEMBLY, 3N from JB3 to fuel contents transformer, No. 3 fuel tank	1	—	
EA3.81.760/1	.	.			CABLE, ASSEMBLY, 3P, from JB3 to flame switch (Pre-Mods 2614 and 5204)	1	—	
EA3.81.762/1	.	.			CABLE, ASSEMBLY, 5B, from JB5 to bomb door terminal board (Pre-Mods 5081 and 5204)	1	—	

ELECTRICAL

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA3.81.763/1	. . . CABLE, ASSEMBLY, 5C and 5D, from JB5 to bomb door micro switches (Pre-Mods 5081 and 5204)	1	—	
EA3.81.1839/2	. . . CABLE, ASSEMBLY, 5F, from JB5 to forward bomb jettison beam (Pre-Mods 5081 and 5204)	1	—	
EA3.81.1943	. . . CABLE, ASSEMBLY, 5G, from JB5 to heavy bomb release unit (Pre-Mods 5081 and 5204)	1	—	
EA3.81.1891/2	. . . CABLE, ASSEMBLY, 5H, from JB5 to rear bomb jettison beam (Pre-Mods 5081 and 5204)	1	—	
SMITHS				
WAYMOUTH				
CA14	. . . CONNECTOR	3	—	
CA26	. . . CONNECTOR	3	—	
Z22634	. . . GROMMET, dummy	9	—	
14A/862	. . . LEAD, camera No. 4 (Pre-Mods 5081 and 5204)	1	—	
EA3.81.45	. . . LOOMS, CABLE, INSTRUMENT ASSEMBLY Spares for:—	—	—	
EA3.81.932	. . . CABLE, ASSEMBLY, DIC-DIB, from pressure bulkhead to wing root, starboard (Pre-Mod 420)	1	—	
EA3.81.936	. . . CABLE, ASSEMBLY, DIC-DIB, from pressure bulkhead to wing root, starboard (Mod 420)	1	—	
EA3.81.938	. . . CABLE, ASSEMBLY, AUI-AUIA, from pressure bulkhead to air mileage unit, port wing	1	—	
EA3.81.941	. . . CABLE, ASSEMBLY, AU2-AU2A, from pressure bulkhead to air mileage unit, port wing	1	—	
EA3.81.969	. . . CABLE, ASSEMBLY, AU3-E11, from air mileage unit to earth, port wing (Pre-Mod 5097)	1	—	
EA3.81.6185	. . . CABLE, ASSEMBLY, AU3-E11, from air mileage unit to earth, port wing (Alt. R60/65—Mod 5097)	1	—	
31934	. . . RECLEATING BOMB BAY CABLE LOOMS (SRIM3577—MOD 4937)	—	—	
22114	. . . RECLEATING CABLES NEAR BOMB DOOR (SRIM3577—MOD 4937)	—	—	
EEAS132/9	. . . STRAP, cable, c/w buckle	2	Webbing Comm	EA8/4
	Attaching parts for EEAS132/9:—			
AS1248/3B	. . . Bolt, 4BA	1	—	EA8/5
AGS2001B1	. . . Nut, stiff, 4BA	1	—	EA8/6
EEAS73	. . . Plate, clamp	1	—	EA8/7

ELECTRICAL

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA1.81.222	. SUPPORT AND ROLLERS ACCUMULATOR TRAY, ASSEMBLY Spares for:—	1	—	EA4/1
EA1.81.223	. . BEAM, support outer L.H.	1	—	EA4/2
EA1.81.224	. . BEAM, support outer R.H. Attaching parts for EA1.81.223 and EA1.81.224:—	1	—	EA4/3
A25/5C	. . Bolt, 2BA	3	—	EA4/4
AGS2001C1/66	. . Nut, stiff, 2BA	3	—	EA4/5
EA1.81.222P	. . Tube, distance	3	—	EA4/6
EA1.81.225	. . BEAM, support inner Attaching parts for EA1.81.225:—	1	—	EA4/7
A25/5C	. . Bolt, 2BA	2	—	EA4/8
A27CP	. . Nut, plain, 2BA	2	—	EA4/9
EA1.81.222B	. . Packing	1	—	EA4/10
SP47C	. . Washer, spring	2	—	EA4/11
EA1.81.226	. . PLATE, attachment	1	—	EA4/12
EA1.81.228	. . ROLLER, ASSEMBLY Attaching parts for EA1.81.228:—	6	—	EA4/13
A25/2C	. . Bolt, 2BA	4	—	EA4/14
A27CP	. . Nut, plain, 2BA	4	—	EA4/15
SP47C	. . Washer	4	—	EA4/16
EA1.81.227	. . STOP, CHANNEL MOUNTING Spares for:—	1	—	EA4/17
EA3.81.2183	. . . PIN, locking	2	—	EA4/18
EA3.81.7313	. STOWAGE INSTALLATION (MOD 5194) Spares for:—	—	—	—
EA3.81.7315	. . PLATE, mounting Attaching parts for EA3.81.7315:—	1	—	EA8/13
AGS2001B1	. . Nut, stiff, 4BA	4	—	EA8/14
A25B28	. . Screw, 4BA	4	—	EA8/15
AS2807/4/04	. . Tube, distance	4	—	EA8/16
SP15B	. . Washer	4	—	EA8/17
CZ48995	. . PLUG, fixed	1	—	—
or				
508-1-07063-220	. . PLUG, fixed	1	—	EA8/18
EA3.81.7191	. TEST POINT PLUG BREAK, FRAME 30 Spares for:—	—	—	EA8/8
A25/1A	. . BOLT, 6BA	12	—	EA8/9
416125/10	. . CAP, protective	2	—	EA8/10
AGS2001A1	. . NUT, stiff, 6BA	12	—	EA8/11
SP124A	. . WASHER	12	—	EA8/12
EA1.81.232	. TRAY, ACCUMULATOR, ASSEMBLY Spares for:—	1	—	EA4/19
EA1.81.233	. . ANGLE (Pre—Mod 616)	1	—	—
EA3.81.2177	. . ANGLE, assembly, L.H. (Mod 616)	1	—	EA4/20
EA1.81.234	. . ANGLE (Pre—Mod 616)	1	—	—
EA3.81.2178	. . ANGLE, assembly, R.H. (Mod 616) Attaching parts for EA1.81.233 and EA1.81.234:—	1	—	EA4/21
AS1882/10C	. . Bolt, 2BA	2	—	EA4/22
A27CP	. . Nut, stiff, 2BA	2	—	EA4/23
SP47C	. . Washer, 2BA	2	—	EA4/24

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA1.81.232E	. . . BUFFER, rubber, $\frac{1}{2}$ " o/d x 0.85" long	2	Shore 55	EA4/25
EA1.81.236	. . . FERRULE	8	—	EA4/26
AS1242/3C	Attaching parts for EA1.81.236:—			
A27CP	. . . Bolt, 2BA	2	—	EA4/27
SP47C	. . . Nut, plain	2	—	EA4/28
EA1.81.273	. . . Washer	2	—	EA4/29
EA1.81.274	. . . Washer, packing	1	L72	EA4/30
	. . . Washer, packing	1	L72	EA4/31
EA1.81.235	. . . NUT, wing, accumulator fixing	8	—	EA4/32
EA3.81.417	. . . WIRING, FRAME 12-13, PORT, ASSEMBLY	—	—	
	Spares for:—			
EA1.81.266	. . . BRACKET, cable	1	—	EA5/1
EEAS132/12	. . . STRAP, cable c/w buckle 12" long	2	Webbing Comm	EA5/2
	Attaching parts for EEAS132/12:—			
AS1248/1B	. . . Bolt, 4BA	1	—	EA5/3
AGS2001B1	. . . Nut, stiff, 4BA	1	—	EA5/4
EEAS73	. . . Plate, clamp	1	—	EA5/5
EA3.81.418	. . . WIRING, FRAME 12-13, STARBOARD	—	—	
	Spares for:—			
EA1.81.266	. . . BRACKET, cable	1	—	EA5/6
EA1.81.251	. . . GUIDE, cable strap	3	—	EA5/7
EEAS132/12	. . . STRAP, cable c/w buckle 12" long	3	Webbing Comm	EA5/8
	Attaching parts for EEAS132/12:—			
AS1248/1B	. . . Bolt, 4BA	1	—	EA5/9
AGS2001B1	. . . Nut, stiff, 4BA	1	—	EA5/10
EEAS73	. . . Plate, clamp	1	—	EA5/11
EA3.81.1263	. . . WIRING, FRAME 13-14, ASSEMBLY	—	—	
	Spares for:—			
EA3.81.1279	. . . BOLT, cocking indicator cable fixing	1	—	EA5/12
EA1.81.451	. . . BRACKET, micro switch	1	—	EA5/13
EA1.81.452	. . . BRACKET, micro switch	1	—	EA5/14
AS491/20	. . . CLIP, cable fixing	2	—	EA5/15
	Attaching parts for AS491/20:—			
A25/1B	. . . Bolt, 4BA	1	—	EA5/16
AGS2001B1	. . . Nut, stiff, 4BA	1	—	EA5/17
EEAS28/2EPH	. . . Washer	1	—	EA5/18
AS491/25	. . . CLIP, cable fixing	5	—	EA5/19
AS491/28	. . . CLIP, cable fixing	2	—	EA5/20
AS491/30	. . . CLIP, cable fixing	1	—	EA5/21
AS491/35	. . . CLIP, cable fixing	1	—	EA5/22
AS491/45	. . . CLIP, cable fixing	4	—	EA5/23
AS1900E	. . . CLIP, cable fixing	8	—	EA5/24
AS1901C	. . . CLIP, cable fixing	—	—	
	Attaching parts for AS491/25, AS491/28, AS491/30, AS491/35, AS491/45, AS1900E and AS1901C:—			
AGS2001B1	. . . Nut, stiff, 4BA	1	—	EA5/25
A31B12	. . . Screw, 4BA	1	—	EA5/26
AGS2001B1	. . . NUT, cocking indicator cable fixing	1	—	EA5/27
EEAS132/15	. . . STRAP, cable c/w buckle 15" long	1	Webbing Comm	EA5/28

AP101B-0402-3A

ELECTRICAL

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
R BZ38H	. . SWITCH, micro type 1A Attaching parts for BZ38H:	4	—	EA5/29
A25/17B	. . Bolt, 4BA	2	—	EA5/30
A27BP	. . Nut, plain, 4BA	2	—	EA5/31
EA1.81.460	. . Washer, plate	1	—	EA5/32
SP15B	. . Washer, 4BA	2	—	EA5/33
SP47B	. . Washer, spring, 4BA	2	—	EA5/34
EA3.81.405	. . WIRING, FRAME 15 TO FRAME 16, ASSEMBLY Spares for:	1	—	
R TYPE B No.1	. . BLOCK, terminal, type B, 3 way Attaching parts for TYPE B No.1:	1	—	EA6/1
A27AP	. . Nut, 6BA	2	—	EA6/2
A33A32	. . Screw, 6BA	2	—	EA6/3
SP47A	. . Washer, spring, 6BA	2	—	EA6/4
AS491/20	. . CLIP, cable fixing Attaching parts for AS491/20:	3	—	EA6/5
A25/1B	. . Bolt, 4BA	QR	—	EA6/6
A27BP	. . Nut, 4BA	QR	—	EA6/7
6R¼	. . Screw, P.K., ¼" long	QR	—	EA6/8
SP47B	. . Washer, spring	QR	—	EA6/9
AS491/15	. . CLIP, cable fixing	3	—	EA6/10
AS491/25	. . CLIP, cable fixing	1	—	EA6/11
AS491/60	. . CLIP, cable fixing	1	—	EA6/12
R AS4525/3	. . CLIP, cable fixing Attaching parts for AS491/15, AS491/25, AS491/60 and AS4525/3:	3	—	EA6/13
A25/1B	. . Bolt, 4BA	1	—	EA6/14
A27BP	. . Nut, 4BA	1	—	EA6/15
SP47B	. . Washer, spring	1	—	EA6/16
EEAS132/7	. . STRAP, cable c/w buckle, 7" long, port	1	Webbing Comm	EA6/17
EEAS132/15	. . STRAP, cable c/w buckle, 15" long, starboard Attaching parts for EEAS132/7 and EEAS132/15:	1	Webbing Comm	EA6/18
AS1248/3B	. . Bolt, 4BA	1	—	EA6/19
AGS2001B1	. . Nut, 4BA	1	—	EA6/20
EEAS73	. . Plate, clamp	1	—	EA6/21
EA3.81.401	. . WIRING, FRAME 16 TO FRAME 17, ASSEMBLY Spares for:	1	—	
EA3.81.431	. . BRACKET	8	—	EA6/22
AS491/28	. . CLIP, cable fixing	12	—	EA6/23
AS491/45	. . CLIP, cable fixing	4	—	EA6/24
AS491/47	. . CLIP, cable fixing Attaching parts for AS491/28, AS491/45 and AS491/47:	1	—	EA6/25
AGS2001B1	. . Nut, stiff, 4BA	QR	—	EA6/26
A31B12	. . Screw, 4BA	QR	—	EA6/27
A31B16	. . Screw, 4BA	QR	—	EA6/28

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA1.75.65	. .	GROMMET	1	Tufnol	EA6/29
	. .	Attaching parts for EA1.75.65:			
A31C20	. .	Screw, 2BA	2	—	EA6/30
A31C24	. .	Screw, 2BA	1	—	EA6/31
A27CP	. .	Nut, 2BA	3	—	EA6/32
SP47C	. .	Washer, spring	3	—	EA6/33
EEAS132/7	. .	STRAP, cable, c/w buckle, 7" long, port	1	Webbing Comm	EA6/34
EEAS132/15	. .	STRAP, cable, c/w buckle, 15" long, starboard	1	Webbing Comm	EA6/35
	. .	Attaching parts for EEAS132/7 and EEAS132/15:			
AS1248/3B	. .	Bolt, 4BA	1	—	EA6/36
AGS2001B1	. .	Nut, 4BA	1	—	EA6/37
EEAS73	. .	Plate, clamp	1	—	EA6/38
EA3.81.389	. .	WIRING, FRAME 17 TO FRAME 18, ASSEMBLY	1	—	
	. .	Spares for:			
AS491/30	. .	CLIP, cable fixing	1	—	EA6/39
AS491/35	. .	CLIP, cable fixing	1	—	EA6/40
AS1900C	. .	CLIP, cable fixing	3	—	EA6/41
AS1901E	. .	CLIP, cable fixing	6	—	EA6/42
	. .	Attaching parts for AS491/30, AS491/35, AS1900C and AS1901E:			
A25/8B	. .	Bolt, 4BA	QR	—	EA6/43
AGS2001B1	. .	Nut, stiff, 4BA	QR	—	EA6/44
A31B12	. .	Screw, 4BA	QR	—	EA6/45
A31B20	. .	Screw, 4BA	QR	—	EA6/46
EA3.81.539	. .	FAIRLEAD, port (Pre Mod.5204)	1	—	EA6/47
EC2.81.9073	. .	FAIRLEAD, port (Mod.5204)	1	—	
EA3.81.540	. .	FAIRLEAD, starboard (Pre Mod.5204)	1	—	EA6/48
EC2.81.9074	. .	FAIRLEAD, starboard (Mod.5204)	1	—	
EA3.81.541	. .	FAIRLEAD, port (Pre Mod.5204)	1	—	EA6/49
EC2.81.1785	. .	FAIRLEAD, port (Mod.5204)	1	—	
EA3.81.542	. .	FAIRLEAD, starboard (Pre Mod.5204)	1	—	EA6/50
EC2.81.1786	. .	FAIRLEAD, starboard (Mod.5204)	1	—	
	. .	Attaching parts for EA3.81.539, EC2.81.9073, EA3.81.540 and EC2.81.9074, EA3.81.541, EC2.81.1785, EA3.81.542 and EC2.81.1786:			
A27CP	. .	Nut, 2BA	3	—	EA6/51
A31C20	. .	Screw, 2BA	3	—	EA6/52
SP47C	. .	Washer, spring, 2BA	3	—	EA6/53
SP15C	. .	Washer, 2BA	3	—	EA6/54
EEAS132/12	. .	STRAP, cable, c/w buckle, 12" long	1	Webbing Comm	EA6/55
	. .	Attaching parts for EEAS132/12:			
AS1248/3B	. .	Bolt, 4BA	1	—	EA6/56
AGS2001B1	. .	Nut, 4BA	1	—	EA6/57
EEAS73	. .	Plate, clamp	1	—	EA6/58

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	EA3.81.1265	WIRING, FRAME 19 TO FRAME 20, ASSEMBLY	1	—	—	
5X/3276	703-1-00226	Spares for:— BLOCK, terminal, 2 way, type G	2	—	C	EA7/1
28M/1278189	AGS2001B1	Attaching parts for 703-1-00226:— Nut, 4BA	2	—	C	EA7/2
5X/9450403	703-2-00267	Pillar, fixing	2	—	C	EA7/3
	SMITHS WAYMOUTH JLA103/61	BOX, connecting, cable	1	—	B	EA7/4
28D/9436920	A25/1C	Attaching parts for JLA103/61:— Bolt, 2BA	2	—	C	EA7/5
28M/9433473	AGS2002C1	Nut, 2BA	2	—	C	EA7/6
7725	EEAS133	BRACKET, clip	2	—	C	EA7/7
22597	AS491/21	CLIP, cable fixing	2	—	C	EA7/8
21341	AS491/24	CLIP, cable fixing	1	—	C	EA7/9
22598	AS491/28	CLIP, cable fixing	2	—	C	EA7/10
24756	AS491/30	CLIP, cable fixing	3	—	C	EA7/11
28E/9436819	AS3180/3B	CLIP, cable fixing	4	—	C	EA7/12
28E/9436947	AS3180/4B	CLIP, cable fixing	3	—	C	EA7/13
28E/1201807	AS3180/5B	CLIP, cable fixing	1	—	C	EA7/14
28E/1201809	AS3180/6B	CLIP, cable fixing	2	—	C	EA7/15
28E/1006377	AS3180/12B	CLIP, cable fixing	2	—	C	EA7/16
28E/9138333	AS3180/14B	CLIP, cable fixing	1	—	C	EA7/17
		Attaching parts for AS491/21, AS491/24, AS491/28, AS491/30, AS3180/3B, AS3180/4B, AS3180/5B, AS3180/6B, AS3180/12B and AS3180/14B:—				
28M/1278189	AGS2001B1	Nut, stiff, 4BA	QR	—	C	EA7/18
28S/9419435	A31B12	Screw, 4BA	QR	—	C	EA7/19
28S/1200034	A31B16	Screw, 4BA	QR	—	C	EA7/20
5X/3272	703-1-00262	COVER, block terminal	2	—	B	EA7/21
3417	EEAS132/9	STRAP, cable c/w buckle, 9" long, port	1	Webbing Comm	C	EA7/22
3418	EEAS132/12	STRAP, cable c/w buckle, 12" long, starboard	1	Webbing Comm	C	EA7/23
		Attaching parts for EEAS132/9 and EEAS132/12:—				
28D/1218384	AS1248/1B	Bolt, 4BA	1	—	C	EA7/24
28M/1278189	AGS2001B1	Nut, 4BA	1	—	C	EA7/25
3420	EEAS73	Plate, clamp, starboard	1	—	C	EA7/26
7735	EB6.81.745	Plate, clamp, port	1	—	C	EA7/27
	EA3.81.415	WIRING, FRAME 20 TO FRAME 21, ASSEMBLY	1	—	—	
		Spares for:—				
5K/4329594	AS1901B	CLIP, cable fixing	4	—	C	EA7/28
		Attaching parts for AS1901B:—				
28S/1011011	A25/8B	Bolt, 4BA	QR	—	C	EA7/29
28M/1278189	AGS2001B1	Nut, stiff, 4BA	QR	—	C	EA7/30
28S/9419435	A31B12	Screw, 4BA	QR	—	C	EA7/31
	AS2180/4/075	Tube, distance	QR	—	C	EA7/32

ELECTRICAL

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
3416	EEAS132/7	STRAP, cable, c/w buckle, 7" long	1	Webbing Comm	C	EA7/33
3417	EEAS132/9	STRAP, cable, c/w buckle, 9" long	1	Webbing Comm	C	EA7/34
28D/1218385	AS1248/2B	Attaching parts for EEAS132/7 and EEAS132/9:— Bolt, 4BA	1	—	C	EA7/35
28M/1278189	AGS2001B1	Nut, 4BA	1	—	C	EA7/36
3420	EEAS73	Plate, clamp	1	—	C	EA7/37
	EA3.81.393	WIRING, FRAME 21 TO FRAME 22, ASSEMBLY Spares for:—	1	—	—	
7731	EA3.81.1715	BRACKET Attaching parts for EA1.81.1715:—	1	—	C	EA7/38
28D/1010658	A25/1B	Bolt, 4BA	1	—	C	EA7/39
28W/9410642	SP47B	Washer, spring	1	—	C	EA7/40
7725	EEAS133	BRACKET	4	—	C	EA7/41
6438	AS491/17	CLIP, cable fixing	1	—	C	EA7/42
6870	AS491/35	CLIP, cable fixing	2	—	C	EA7/43
	AS491/45	CLIP, cable fixing	2	—	C	EA7/44
5K/9329588	AS1900F	CLIP, cable fixing	1	—	C	EA7/45
	AS1900H	CLIP, cable fixing	7	—	C	EA7/46
5K/4329594	AS1901B	CLIP, cable fixing Attaching parts for AS491/17, AS491/35, AS491/45, AS1900F, AS1900H and AS1901B:—	4	—	C	
28D/1010658	A25/1B	Bolt, 4BA	QR	—	C	EA7/47
28M/1278189	AGS2001B1	Nut, stiff, 4BA	QR	—	C	EA7/48
28S/1200034	A31B16	Screw, 4BA	QR	—	C	EA7/49
7724	EEAS28/2EPH	Washer	QR	—	C	EA7/50
10H/9209080	508-1-40169-320	PLUG, socket, bulkhead, Mk. 4	1	—	B	EA7/51
5X/4500214	508-1-06452	PLUG, bulkhead, size C (Mod 3377)	2	—	B	EA7/52
5X/4491469	508-2-11335	SHELL, plug, size C	1	—	C	EA7/53
5X/4491471	508-2-11331	SHELL, plug, size Z	1	—	C	EA7/54
28M/1987493	AGS2001A1	Attaching parts for 508-2-11335 and 508-2-11331:— Nut, 6BA	4	—	C	EA7/55
28S/9995376	A31A30	Screw, 6BA	4	—	C	EA7/56
3417	EEAS132/9	STRAP, cable, c/w buckle, 9" long	2	Webbing Comm	C	EA7/57
28D/1218385	AS1248/2B	Attaching parts for EEAS132/9:— Bolt, 4BA	QR	—	C	EA7/58
	AS1885/3B	Bolt, 4BA	QR	—	C	EA7/59
28M/1278189	AGS2001B1	Nut, 4BA	1	—	C	EA7/60
3420	EEAS73	Plate, clamp	1	—	C	EA7/61
	EA3.81.1267	WIRING, FRAME 24 TO FRAME 25, ASSEMBLY Spares for:—	1	—	—	
6A/4339124	SMITHS WAYMOUTH JY86	BOX, connection cable Attaching parts for JY86:—	1	—	B	EA7/62
28D/9453970	A25/15C	Bolt, 2BA	2	—	C	EA7/63
28M/1012015	AGS2001C1/66	Nut, stiff, 2BA	2	—	C	EA7/64
	AS2811/5/089	Tube, distance	2	—	C	EA7/65
28W/9419402	SP13C	Washer	2	—	C	EA7/66

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA3.81.1807	. . BRACKET, plug	1	—	EA7/67
AS3180/4B	. . CLIP, cable fixing	3	—	EA7/68
AS3180/5B	. . CLIP, cable fixing	4	—	EA7/69
AS3180/6B	. . CLIP, cable fixing	2	—	EA7/70
	Attaching parts for AS3180/4B, AS3180/5B and AS3180/6B:—			
A25/1B	. . Bolt, 4BA	QR	—	EA7/71
A27BP	. . Nut, 4BA	QR	—	EA7/72
AGS2001B1	. . Nut, stiff, 4BA	QR	—	EA7/73
A31B12	. . Screw, 4BA	QR	—	EA7/74
A31B16	. . Screw, 4BA	QR	—	EA7/75
SP47B	. . Washer, spring	QR	—	EA7/76
EA9.81.2105	. . COVER, protective assembly	1	—	EA7/77
A54CT	. . NUT, locking 2BA, earthing connection	2	—	EA7/78
AGS2001C4	. . NUT, stiff, 2BA, earthing connection	1	—	EA7/79
A31C32	. . SCREW, 2BA, earthing connection	1	—	EA7/80
EEAS132/12	. . STRAP, cable c/w buckle, 12" long	2	Webbing Comm	EA7/81
	Attaching parts for EEAS132/12:—			
AS1248/2B	. . Bolt, 4BA	1	—	EA7/82
AGS2001B1	. . Nut, stiff, 4BA	1	—	EA7/83
EEAS73	. . Plate, clamp	1	—	EA7/84
SP22C	. . WASHER, earthing connection	1	—	EA7/85
EEAS28/4DPH	. . WASHER, earthing connection	1	—	EA7/86
EA3.81.397	. WIRING TO FLAP TRANSMITTER, ASSEMBLY	1	—	EA8/19
	Spares for:—			
AS3180/3B	. . CLIP, cable fixing	1	—	EA8/20
AS3180/5B	. . CLIP, cable fixing	6	—	EA8/21
	Attaching parts for AS3180/5B:—			
AGS2001B1	. . Nut, stiff, 4BA	QR	—	EA8/22
A31B12	. . Screw, 4BA	QR	—	EA8/23
A31B16	. . Screw, 4BA	QR	—	EA8/24
EA9.81.4069	. . FAIRLEAD, half	2	—	EA8/25
	Attaching parts for EA9.81.4069:—			
A31B16	. . Screw, cheese head 4BA	3	—	EA8/26
AGS2001B1	. . Nut, stiff	3	—	EA8/27
EEAS132/9	. . STRAP, cable c/w buckle, 9" long	2	Webbing Comm	EA8/28
	Attaching parts for EEAS132/9:—			
AS1248/3B	. . Bolt, 4BA	1	—	EA8/29
AGS2001B1	. . Nut, stiff, 4BA	1	—	EA8/30
EEAS73	. . Plate, clamp	1	—	EA8/31
EA3.81.403	. WIRING TO IDENTIFICATION LIGHT AND FLAME SWITCH, FRAMES 12 TO 13	—	—	
	Spares for:—			
10359	. . BLOCK, terminal, dummy type J	1	—	EA9/1
	Attaching parts for 10359:—			
A25/4C	. . Bolt, 2BA	2	—	EA9/2
AGS2002C1	. . Nut, stiff 2BA	2	—	EA9/3
SP13C	. . Washer, 2BA	2	—	EA9/4

ELECTRICAL

AP101B-0402-3A

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
AS491/17	. . CLIP, cable fixing	8	—	EA9/5
AS1901A	. . CLIP, cable fixing	1	—	EA9/6
AS1901C	. . CLIP, cable fixing	1	—	EA9/7
	Attaching parts for AS491/17, AS1901A and AS1901C:—			
A25/1B	. . Bolt, 4BA	1	—	EA9/8
A27BP	. . Nut, 4BA	1	—	EA9/9
SP47B	. . Washer, spring	1	—	EA9/10
5L/9952604	. . FILAMENT, 24V, 80W	1	—	EA9/11
E & I 4503	. . LAMP, identification downward, type C	3	—	EA9/12
	Attaching parts for E & I 4503:—			
A25/2C	. . Bolt, 2BA	3	—	EA9/13
EL27492 AMBER	. . LAMP, front, amber	1	—	EA9/14
EL27492 GREEN	. . LAMP, front, green	1	—	EA9/15
EL27492 RED	. . LAMP, front, red	1	—	EA9/16
EEAS132/7	. . STRAP, cable c/w buckle, 7" long	2	Webbing Comm	EA9/17
	Attaching parts for EEAS132/7:—			
AS1248/1B	. . Bolt, 4BA	1	—	EA9/18
AGS2001B1	. . Nut, stiff, 4BA	1	—	EA9/19
EEAS73	. . Plate, clamp	1	—	EA9/20
EEAS132/12	. . STRAP, cable c/w buckle	1	Webbing Comm	EA9/21
EA3.81.387	. WIRING, No. 1 FUEL TANK TRANSMITTER, ASSEMBLY Spares for:—	—	—	
SMITHS WAYMOUTH JLA103/60	. . BOX, connection cable	1	—	EA9/22
	Attaching parts for JLA103/60:—			
A25/4C	. . Bolt, 2BA	2	—	EA9/23
AGS2002C1	. . Nut, stiff, 2BA	2	—	EA9/24
AS2809/4/030	. . Tube, distance	2	—	EA9/25
EEAS133	. . BRACKET	1	—	EA9/26
AS3180/3B	. . CLIP, cable fixing	1	—	EA9/27
	Attaching parts for AS3180/3B:—			
AGS2001B1	. . Nut, stiff, 4BA	1	—	EA9/28
A31B12	. . Screw, 4BA	1	—	EA9/29
EA1.81.407	. WIRING AND SUPPRESSOR, FRAME 14 TO FRAME 15, ASSEMBLY (PRE-MOD 411)	—	—	
EA3.81.2529	. WIRING AND SUPPRESSOR, FRAME 14 TO FRAME 15, ASSEMBLY (MOD 411) Spares for:—	—	—	EA9/30
E & I 7049	. . BLOCK, terminal, type B, No. 1	2	—	EA9/31
	Attaching parts for E & I 7049			
A27AP	. . Nut, plain, 6BA	2	—	EA9/32
A33A32	. . Screw, csk. head 6BA	2	—	EA9/33
SP47A	. . Washer, spring, 6BA	2	—	EA9/34

AP101B-0402-3A

Page EA.19

ELECTRICAL

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
AS491/17	.	.	.	.	.	CLIP, cable fixing	6	—	EA9/35
AS491/20	.	.	.	.	.	CLIP, cable fixing (Pre—Mod 411)	5	—	
AS491/20	.	.	.	.	.	CLIP, cable fixing (Mod 411)	2	—	EA9/36
AS491/21	.	.	.	.	.	CLIP, cable fixing (Pre—Mod 411)	4	—	
AS491/23	.	.	.	.	.	CLIP, cable fixing (Mod 411)	4	—	EA9/37
AS491/24	.	.	.	.	.	CLIP, cable fixing (Mod 411)	5	—	EA9/38
AS491/55	.	.	.	.	.	CLIP, cable fixing (Pre—Mod 411)	1	—	
AS491/65	.	.	.	.	.	CLIP, cable fixing	1	—	EA9/39
	Attaching parts for AS491/17, AS491/20, AS491/21, AS491/23, AS491/24, AS491/55 and AS491/65:—								
A25/1B	.	.	.	.	.	Bolt, 4BA	QR	—	EA9/40
A27BP	.	.	.	.	.	Nut, 4BA	QR	—	EA9/41
AGS2001B1	.	.	.	.	.	Nut, stiff, 4BA	QR	—	EA9/42
6R ^{1/4}	.	.	.	.	.	Screw, P.K., ¹ / ₄ " long	QR	—	EA9/43
A31B12	.	.	.	.	.	Screw, 4BA	QR	—	EA9/44
SP47B	.	.	.	.	.	Washer, spring	QR	—	EA9/45
EEAS132/7	.	.	.	.	.	STRAP, cable, c/w buckle 7" long, port	1	Webbing Comm	EA9/46
EEAS132/15	.	.	.	.	.	STRAP, cable c/w buckle 15" long, starboard	1	Webbing Comm	EA9/47
	Attaching parts for EEAS132/7 and EEAS132/15:—								
AS1248/3B	.	.	.	.	.	Bolt, 4BA	1	—	EA9/48
AGS2001B1	.	.	.	.	.	Nut, stiff, 4BA	1	—	EA9/49
EEAS73	.	.	.	.	.	Plate, clamp	1	—	EA9/50
R EL26326	.	.	.	.	.	SUPPRESSOR, type B No. 4 (Pre—Mod 411)	2	—	
R EL26317	.	.	.	.	.	SUPPRESSOR, type O No. 2 (Mod 411)	2	—	EA9/51
	Attaching parts for EL26326 or EL26317:—								
A25/2B	.	.	.	.	.	Bolt, 4BA	4	—	EA9/52
A27BP	.	.	.	.	.	Nut, plain 4BA	4	—	EA9/53
SP47B	.	.	.	.	.	Washer, spring 4BA	4	—	EA9/54
EA3.81.2531	.	.	.	.	.	WIRING AND SUPPRESSORS, FRAME 18 TO FRAME 19, ASSEMBLY (PRE—MOD 411)	—	—	
EA3.81.2531	.	.	.	.	.	WIRING AND SUPPRESSORS FRAME 18 TO FRAME 19, ASSEMBLY (MOD 411) Spares for:—	—	—	
R E&I 7049	.	.	.	.	.	BLOCK, terminal type B No. 1 Attaching parts for E&I 7049	2	—	EA10/1
A27AP	.	.	.	.	.	Nut, plain 6BA	2	—	EA10/2
A33A20	.	.	.	.	.	Screw, csk. head 6BA	2	—	EA10/3
SP47A	.	.	.	.	.	Washer, spring 6BA	2	—	EA10/4
SP15A	.	.	.	.	.	Washer, 6BA	1	—	EA10/5
SP16A	.	.	.	.	.	Washer, 6BA	1	—	EA10/6
AS491/21	.	.	.	.	.	CLIP, cable fixing (Pre—Mod 411)	2	—	
AS491/30	.	.	.	.	.	CLIP, cable fixing (Pre—Mod 411)	1	—	
AS1900B	.	.	.	.	.	CLIP, cable fixing (Pre—Mod 411)	3	—	
AS1900C	.	.	.	.	.	CLIP, cable fixing (Pre—Mod 411)	2	—	
AS1900E	.	.	.	.	.	CLIP, cable fixing (Pre—Mod 411)	3	—	
AS1901B	.	.	.	.	.	CLIP, cable fixing (Pre—Mod 411)	2	—	
AS1901C	.	.	.	.	.	CLIP, cable fixing (Pre—Mod 411)	4	—	
AS1901D	.	.	.	.	.	CLIP, cable fixing (Mod 411)	2	—	EA10/7
AS3180/4B	.	.	.	.	.	CLIP, cable fixing (Mod 411)	4	—	EA10/8
AS3180/5B	.	.	.	.	.	CLIP, cable fixing (Mod 411)	2	—	EA10/9
AS3180/8B	.	.	.	.	.	CLIP, cable fixing (Mod 411)	1	—	EA10/10
AS3180/9B	.	.	.	.	.	CLIP, cable fixing (Mod 411)	3	—	EA10/11

ELECTRICAL

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
AS3180/10B	. . CLIP, cable fixing (Mod 411)	2	—	EA10/12
AS3180/17B	. . CLIP, cable fixing (Mod 411)	2	—	EA10/13
	Attaching parts for AS491/21, AS491/30, AS1900B, AS1900C, AS1900E, AS1901B, AS1901C, AS1901D, AS3180/4B, AS3180/5B, AS3180/8B, AS3180/9B, AS3180/10B and AS3180/17B:—			
A25/1B	. . Bolt, 4BA	QR	—	EA10/14
A27BP	. . Nut, 4BA	QR	—	EA10/15
AGS2001B1	. . Nut, stiff, 4BA	QR	—	EA10/16
A31B12	. . Screw, 4BA	QR	—	EA10/17
SP47B	. . Washer, spring	QR	—	EA10/17A
508-2-11335	. . SHELL, plug C size	1	—	EA10/18
508-2-11331	. . SHELL, plug C size	1	—	EA10/18A
	Attaching parts for 508-2-11335 and 508-2-11331:—			
A27AP	. . Nut, stiff, 6BA	4	—	EA10/19
A31A16	. . Screw, cheese head 6BA	4	—	EA10/20
SP47A	. . Washer, spring, 6BA	4	—	EA10/21
EEAS132/9	. . STRAP, cable c/w buckle, 9" long, port	1	Webbing Comm	EA10/22
EEAS132/12	. . STRAP, cable c/w, 12" long, starboard	1	Webbing Comm	EA10/23
	Attaching parts for EEAS132/9 and EEAS132/12:—			
AS1248/2B	. . Bolt, 4BA	1	—	EA10/24
AGS2001B1	. . Nut, stiff, 4BA	1	—	EA10/25
EEAS73	. . Plate, clamp (Pre—Mod 411)	2	—	EA10/26
EEAS73	. . Plate, clamp, port (Mod 411)	1	—	EA10/26
EB6.81.745	. . Plate, clamp, starboard (Mod 411)	1	—	EA10/27
R EL26326	. . SUPPRESSOR, type B, No. 4 (Pre—Mod 411)	2	—	
R EL26317	. . SUPPRESSOR, type O, No. 2 (Mod 411)	2	—	EA10/28
	Attaching parts for EL26326 or EL26317:—			
A25/4B	. . Bolt, 4BA (Mod 411)	4	—	EA10/29
A27BP	. . Nut, plain 4BA	4	—	EA10/30
R AS2806/4/02	. . Piece, distane (Mod 411)	4	T35	
A31B20	. . Screw, 4BA (Pre—Mod 411)	4	—	
SP47B	. . Washer, spring 4BA	4	—	EA10/31
EA3.81.2533	. WIRING AND SUPPRESSORS FRAME 23 TO FRAME 24, ASSEMBLY (MOD 411) Spares for:—	—	—	
R E&I 7049	. . BLOCK, terminal, type B, No. 1	2	—	EA10/32
R	Attaching parts for E&I 7049			
A27AP	. . Nut, plain 6BA	2	—	EA10/33
A33A20	. . Screw, csk. head 6BA	2	—	EA10/34
SP47A	. . Washer, spring, 6BA	2	—	EA10/35
AS491/17	. . CLIP, cable fixing (Pre—Mod 411)	12	—	
AS491/23	. . CLIP, cable fixing (Pre—Mod 411)	4	—	
AS491/30	. . CLIP, cable fixing (Pre—Mod 411)	1	—	
AS1901A	. . CLIP, cable fixing (Pre—Mod 411)	5	—	
AS1901D	. . CLIP, cable fixing (Mod 411)	2	—	EA10/36
AS3180/4B	. . CLIP, cable fixing (Mod 411)	6	—	EA10/37
AS3180/5B	. . CLIP, cable fixing (Mod 411)	4	—	EA10/38
AS3180/9B	. . CLIP, cable fixing (Mod 411)	4	—	EA10/39

AP101B-0402-3A

ELECTRICAL

Page EA.21

ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
AS3180/11B	.	.	CLIP, cable fixing (Mod 411) Attaching parts for AS491/17, AS491/23, AS491/30, AS1901A, AS1901D, AS3180/4B, AS3180/5B, AS3180/9B and AS3180/11B:—				1	—	EA10/40
A25/1B	.	.	Bolt, 4BA				QR	—	EA10/41
A27BP	.	.	Nut, 4BA				QR	—	EA10/42
AGS2001B1	.	.	Nut, stiff, 4BA				QR	—	EA10/43
A31B12	.	.	Screw, 4BA				QR	—	EA10/44
A31B16	.	.	Screw, 4BA (Mod 411)				QR	—	EA10/45
SP47B	.	.	Washer, spring				QR	—	EA10/46
EEAS132/9	.	.	STRAP, cable c/w buckle (Pre—Mod 411)				1	Webbing Comm	
EEAS132/12	.	.	STRAP, cable c/w buckle, 12" long (Mod 411)				1	Webbing Comm	EA10/47
			Attaching parts for EEAS132/12 and EEAS132/9:—						
AS1885/3B	.	.	Bolt, 4BA (Pre—Mod 411)				1	—	
AS1248/2B	.	.	Bolt, 4BA (Mod 411)				1	—	EA10/48
AGS2001B1	.	.	Nut, stiff, 4BA				1	—	EA10/49
EEAS73	.	.	Plate, clamp				1	—	EA10/50
EL26326	.	.	SUPPRESSOR, type B, No. 4 (Pre—Mod 411)				2	—	
EL26317	.	.	SUPPRESSOR, type O, No. 2 (Mod 411)				2	—	EA10/51
			Attaching parts for EL26326 or EL26317:—						
A25/2B	.	.	Bolt, 4BA				4	—	EA10/52
A27BP	.	.	Nut, plain, 4BA				4	—	EA10/53
SP47B	.	.	Washer, spring 4BA				4	—	EA10/54

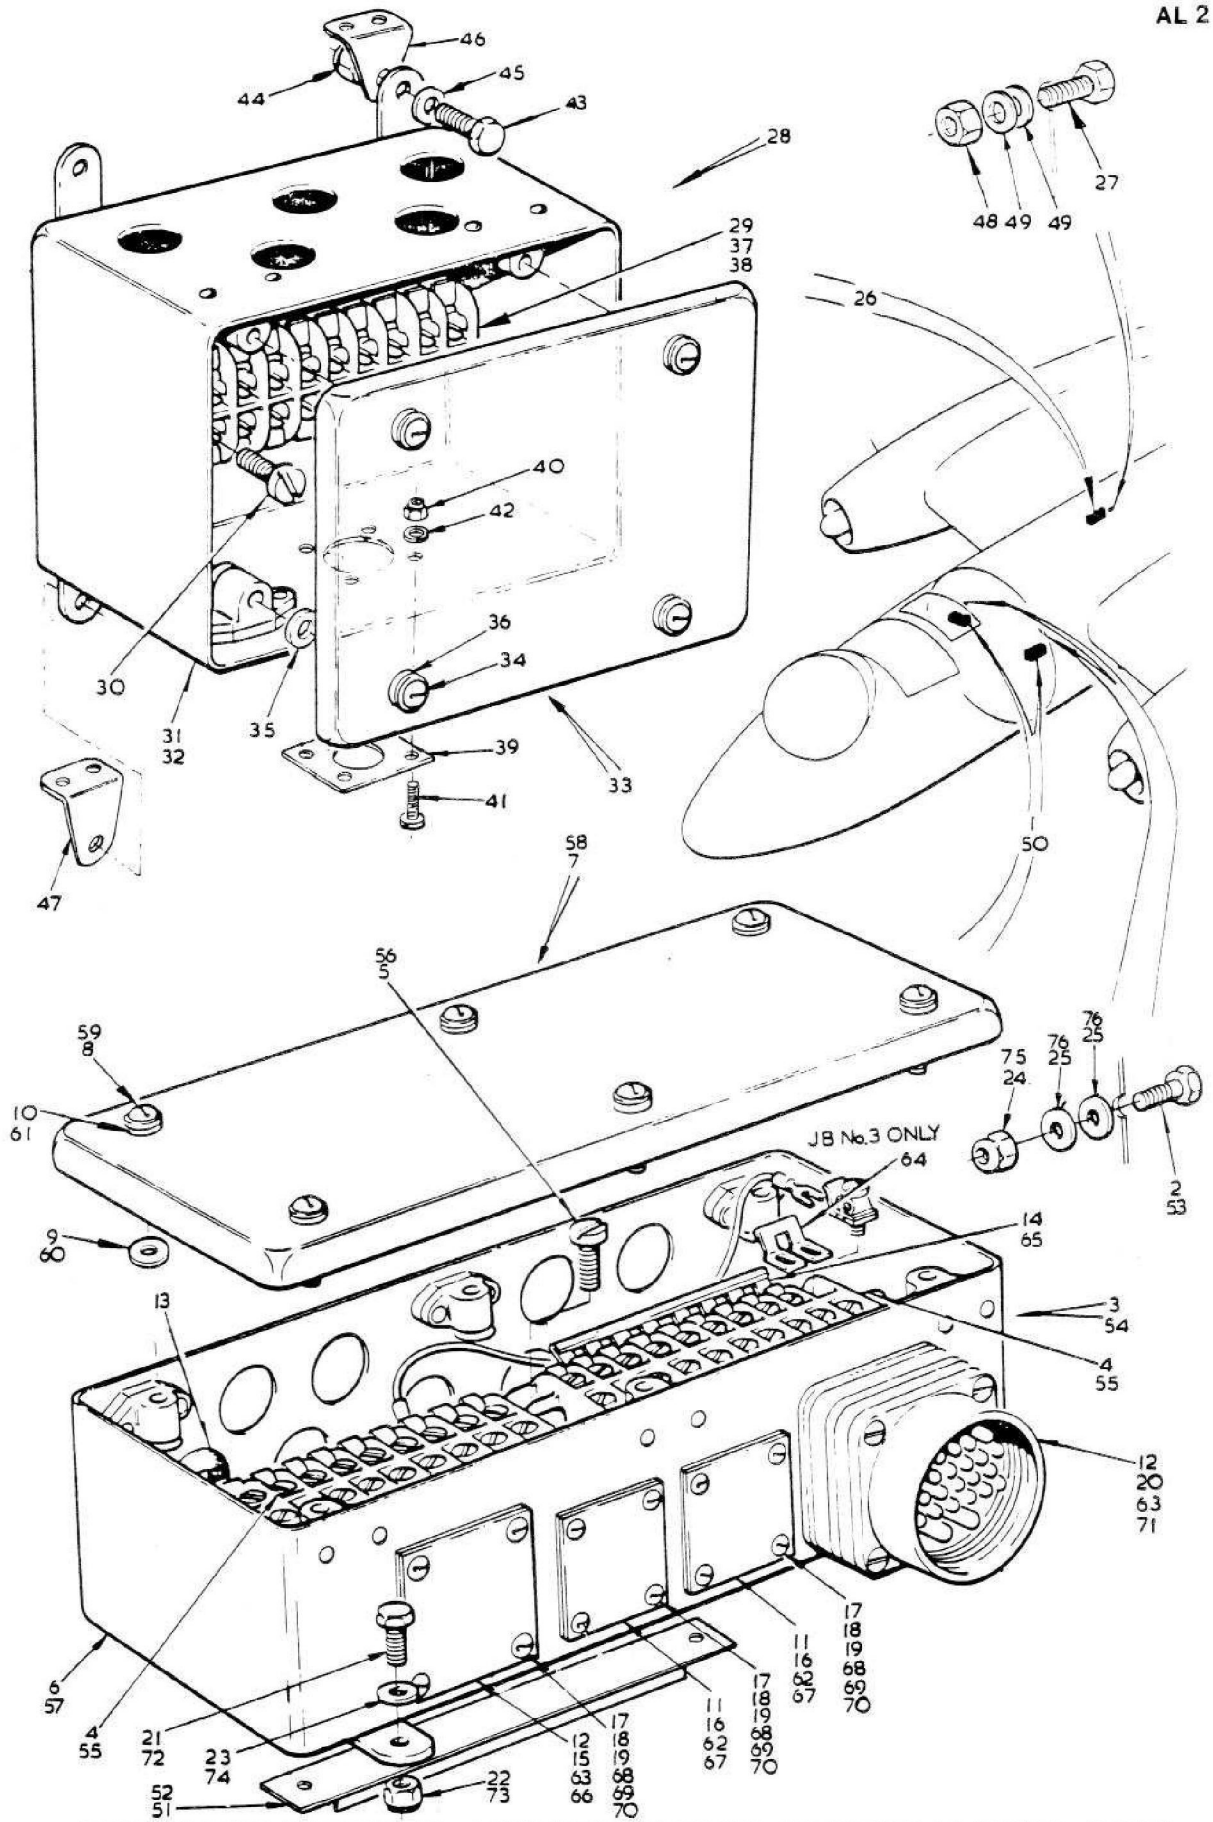


FIG. 1 ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

CODE R

SECT. EA

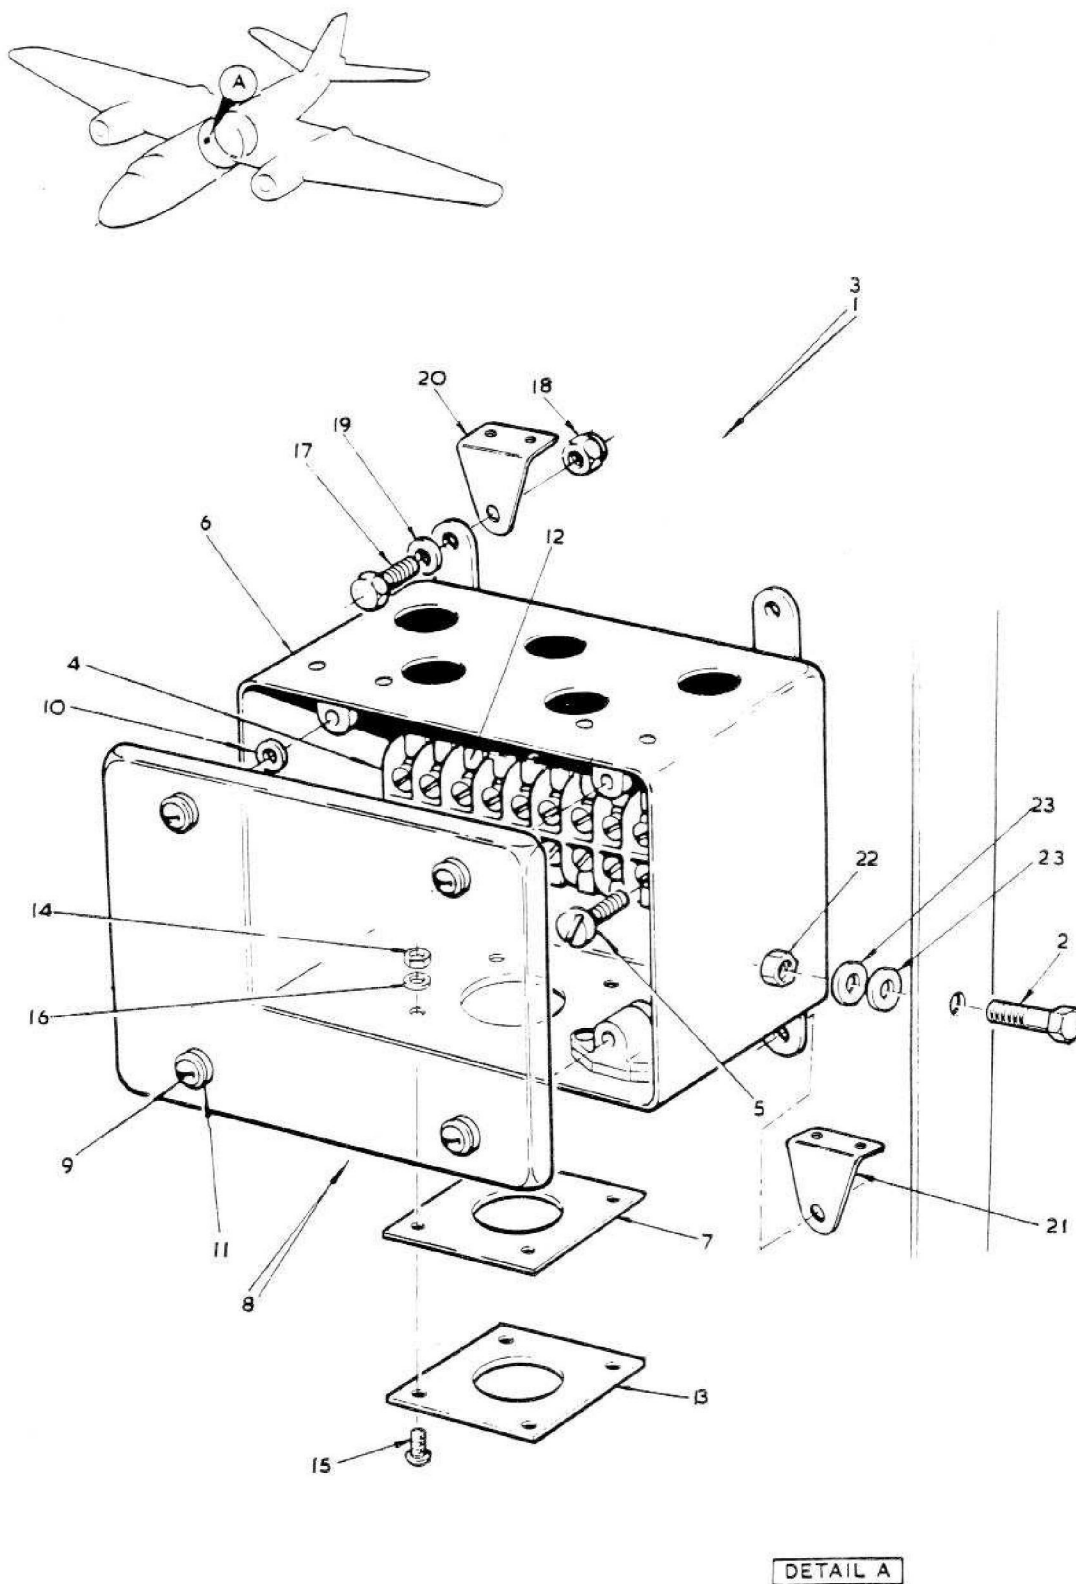


FIG. 2 ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

CODE R

SECT. EA

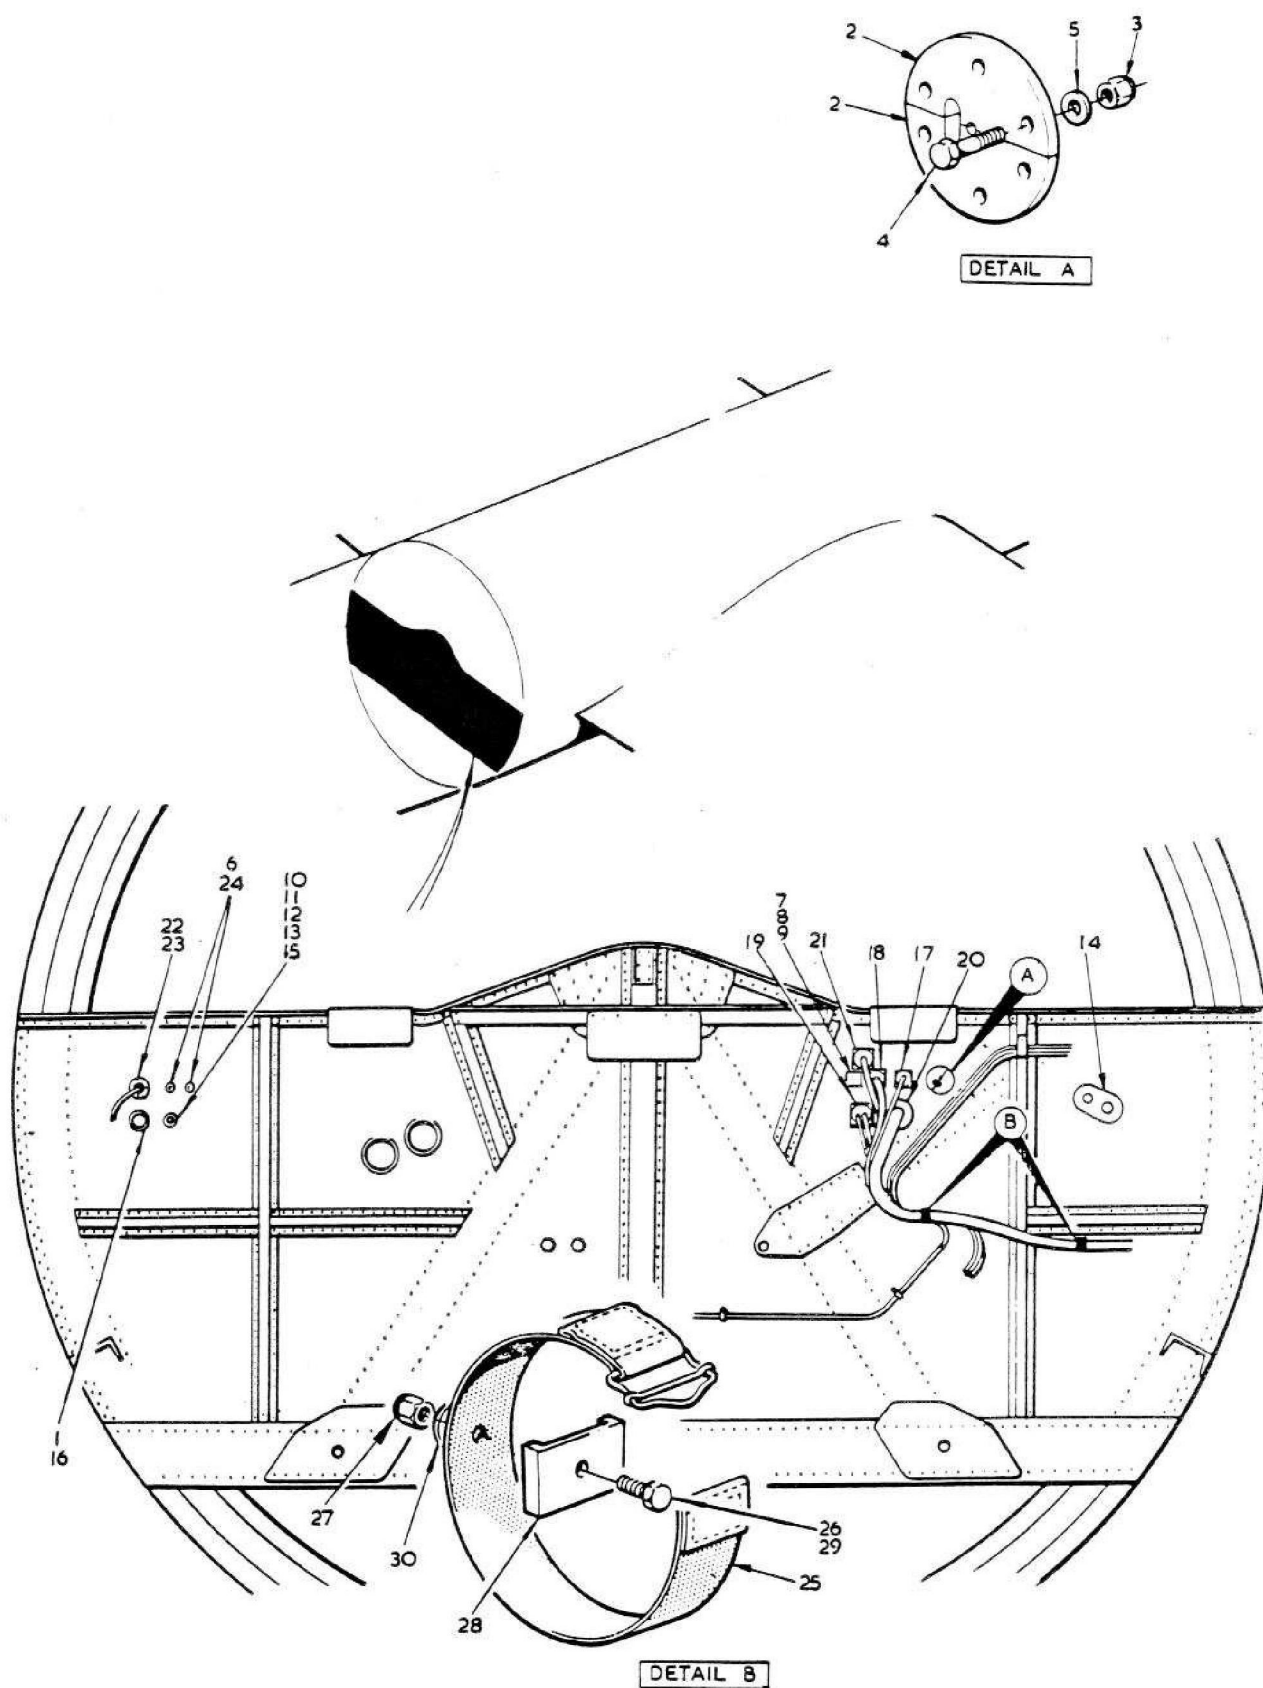


FIG. 3 ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

CODE R

SECT. EA

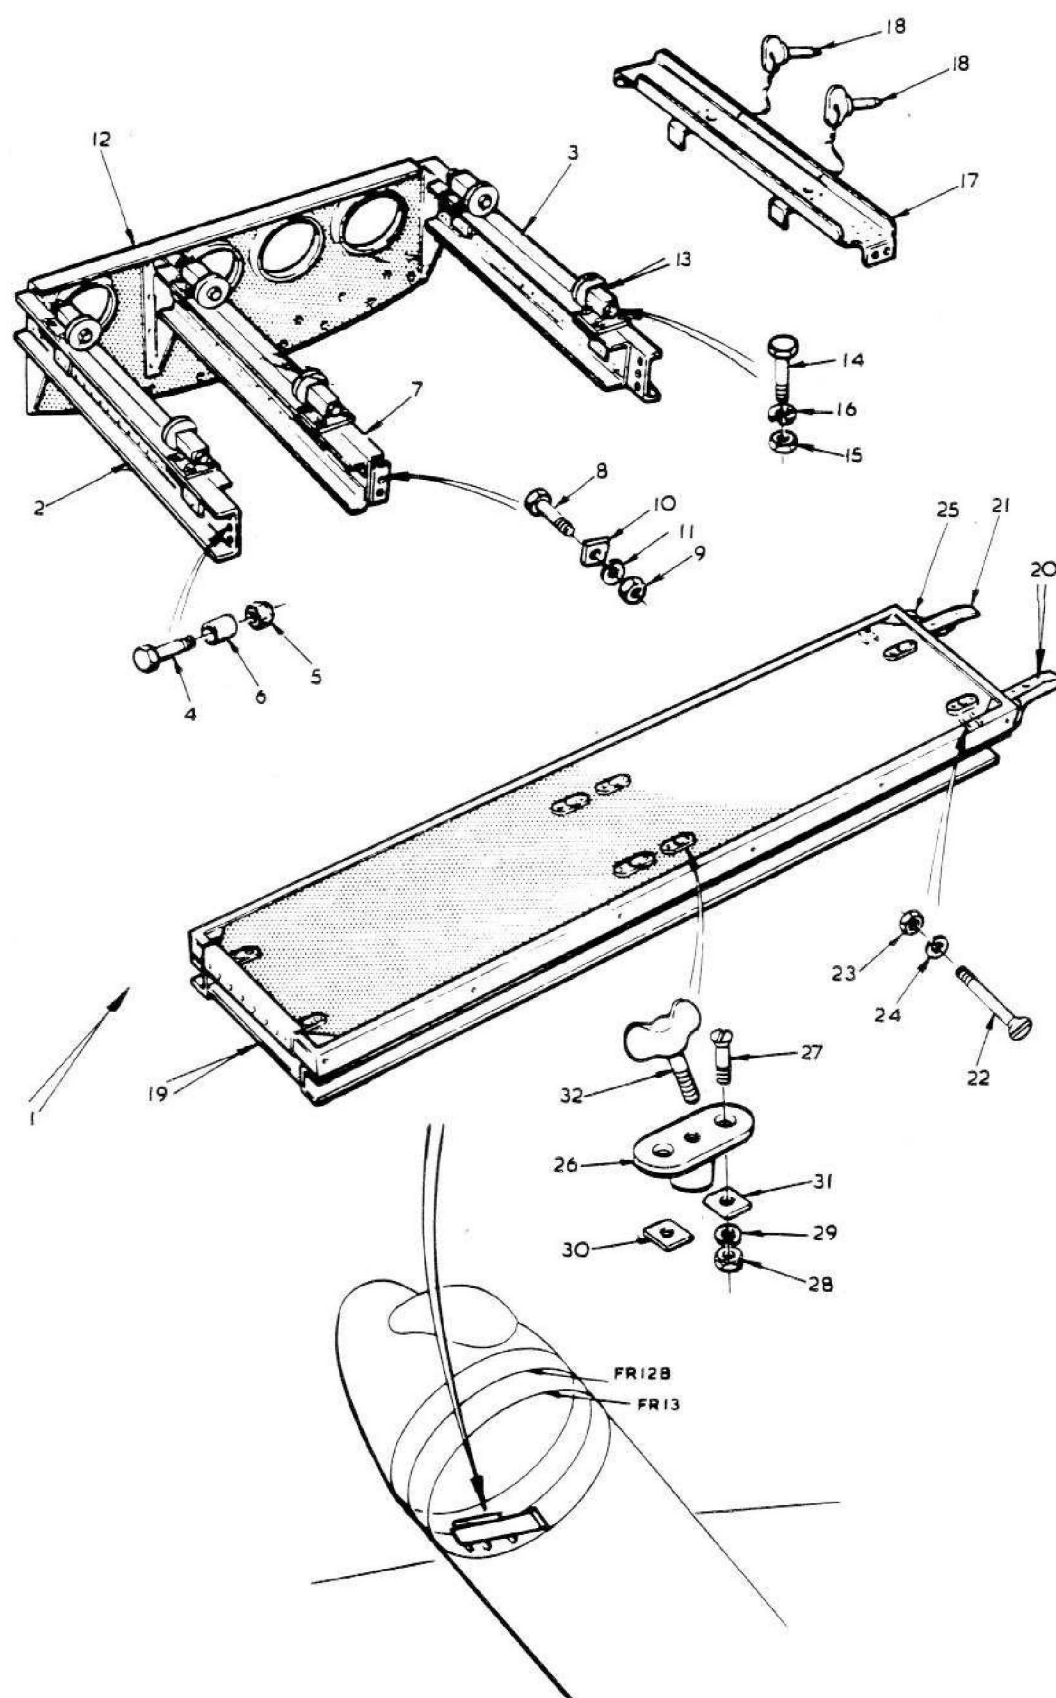


FIG. 4 ELECTRICAL EQUIPMENT IN CENTRE SECTION

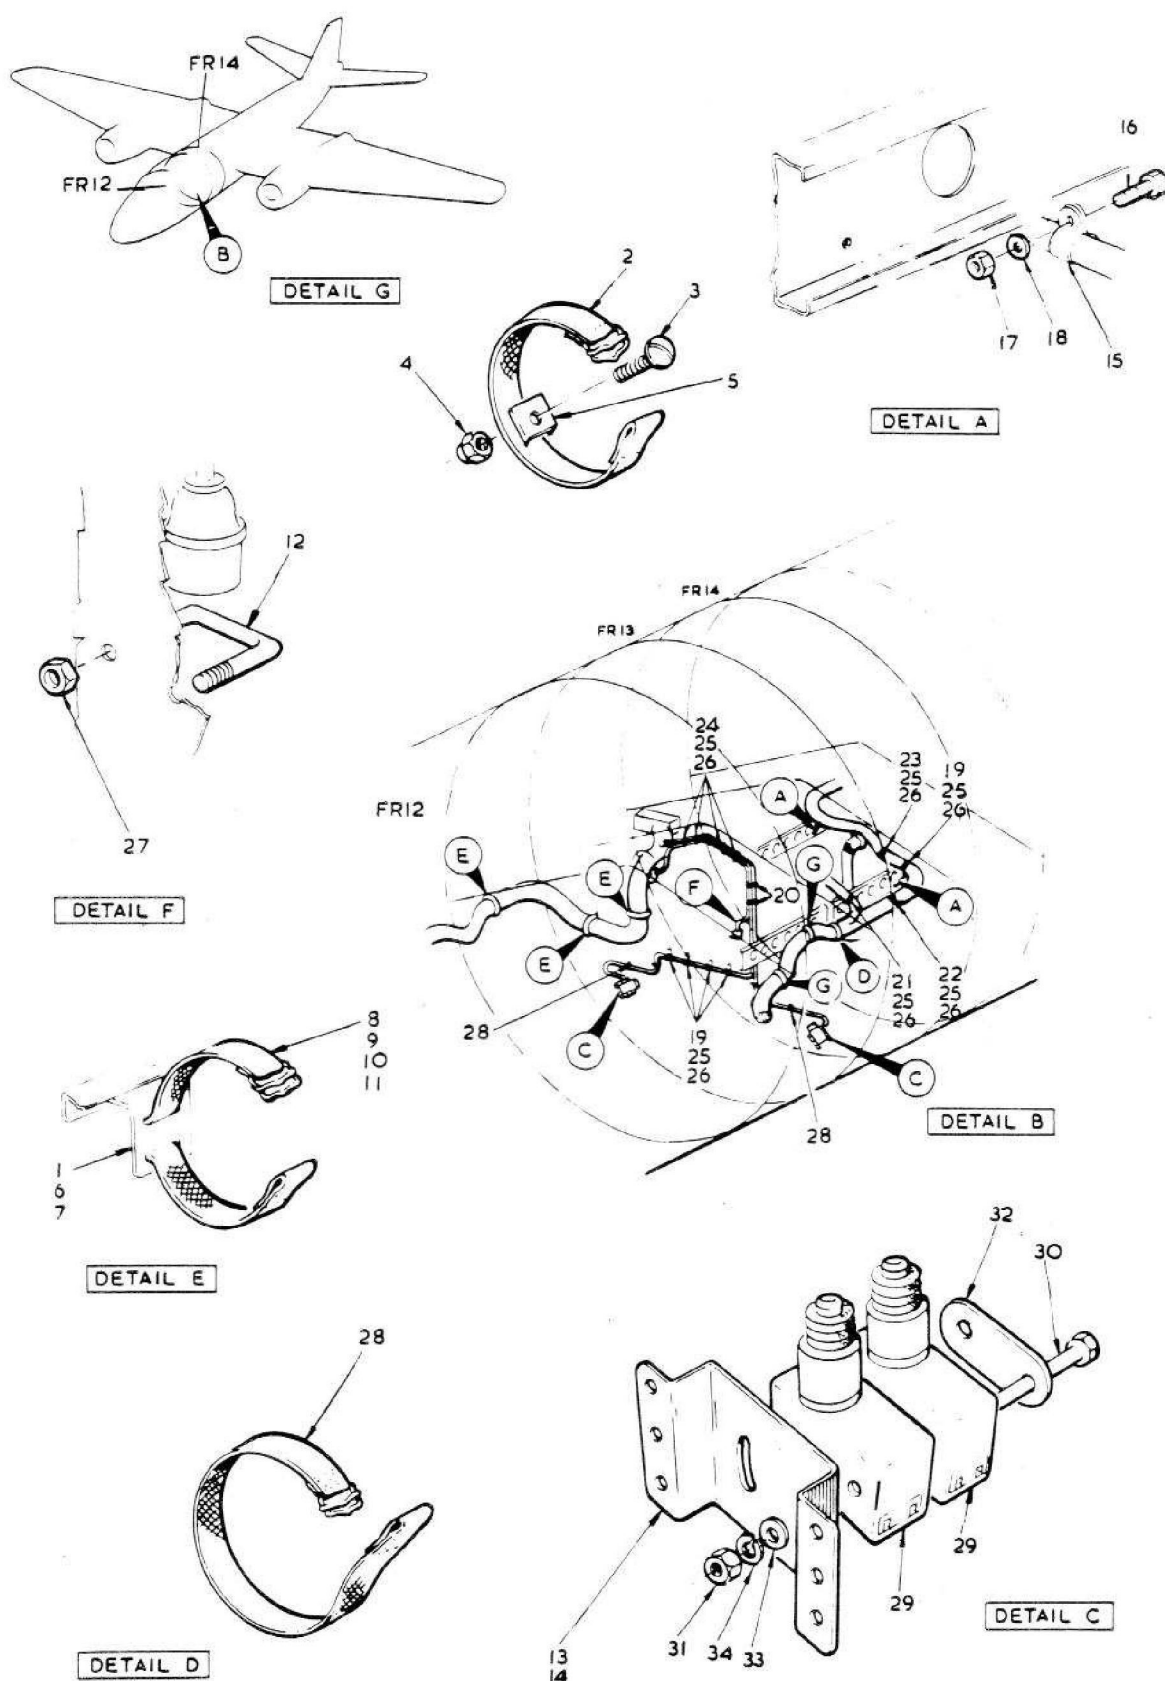


FIG. 5 ELECTRICAL EQUIPMENT IN CENTRE SECTION

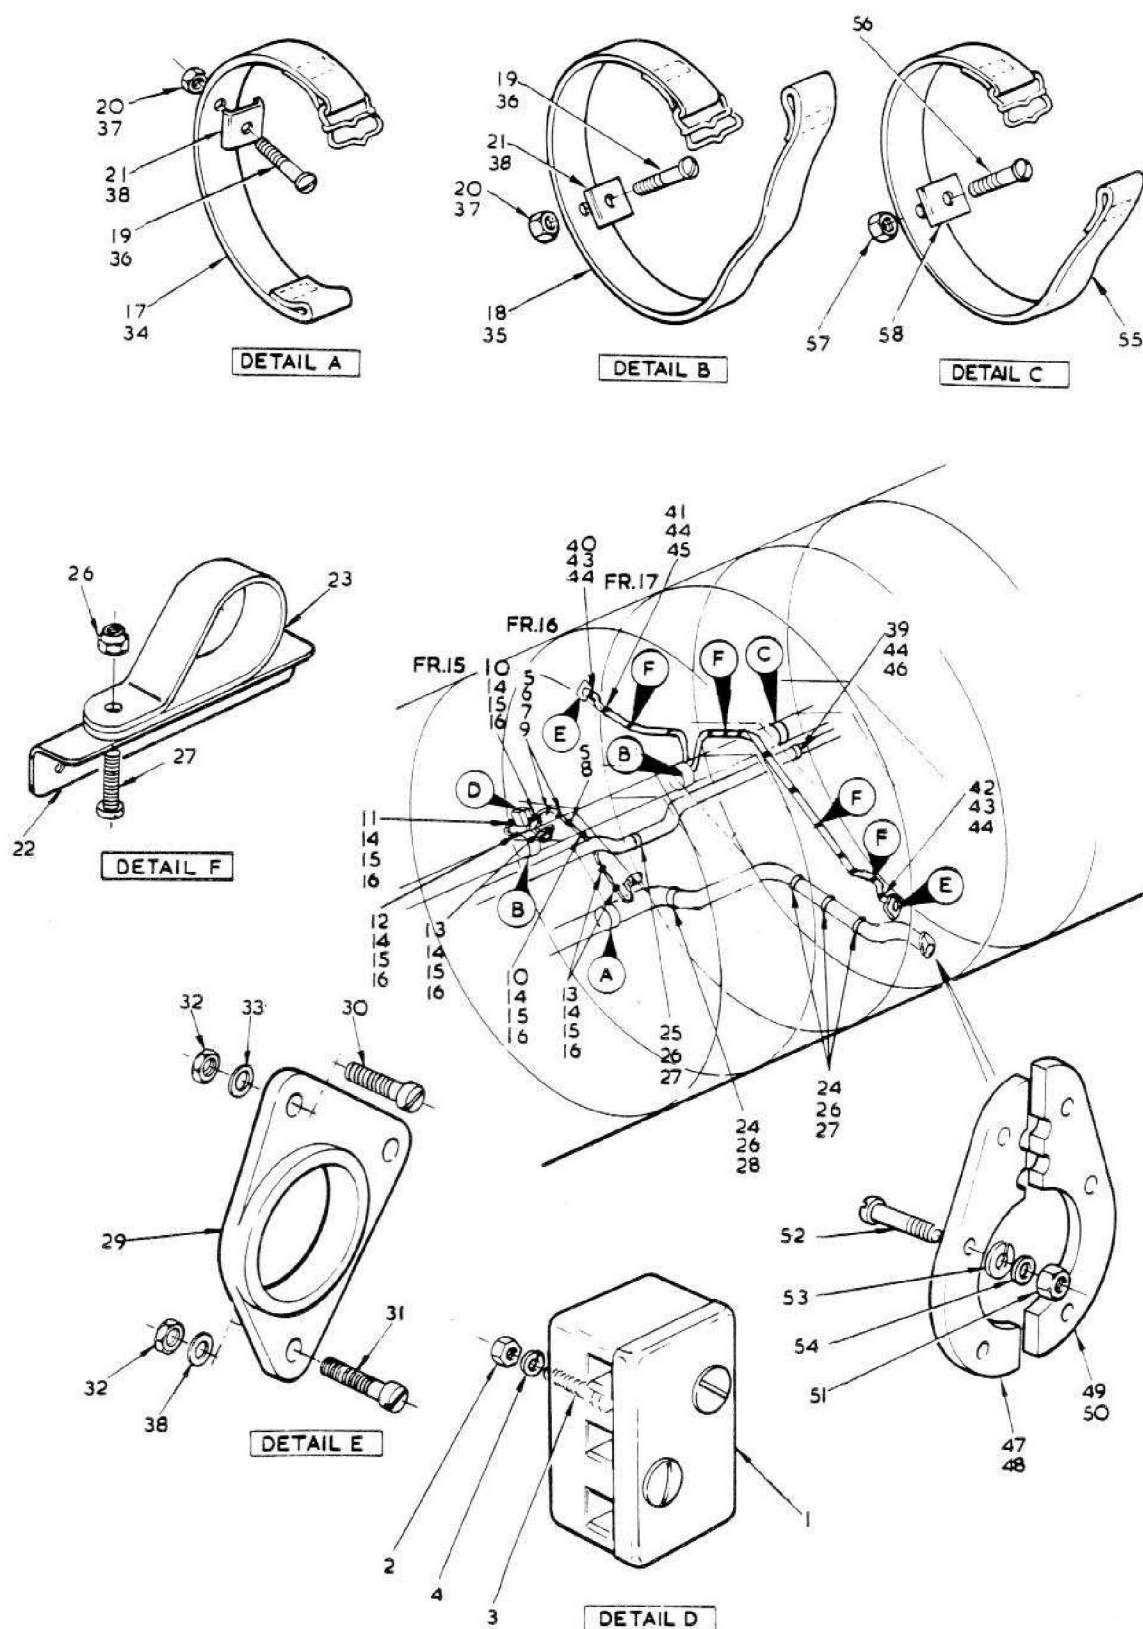


FIG. 6 ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

CODE R

SECT. EA

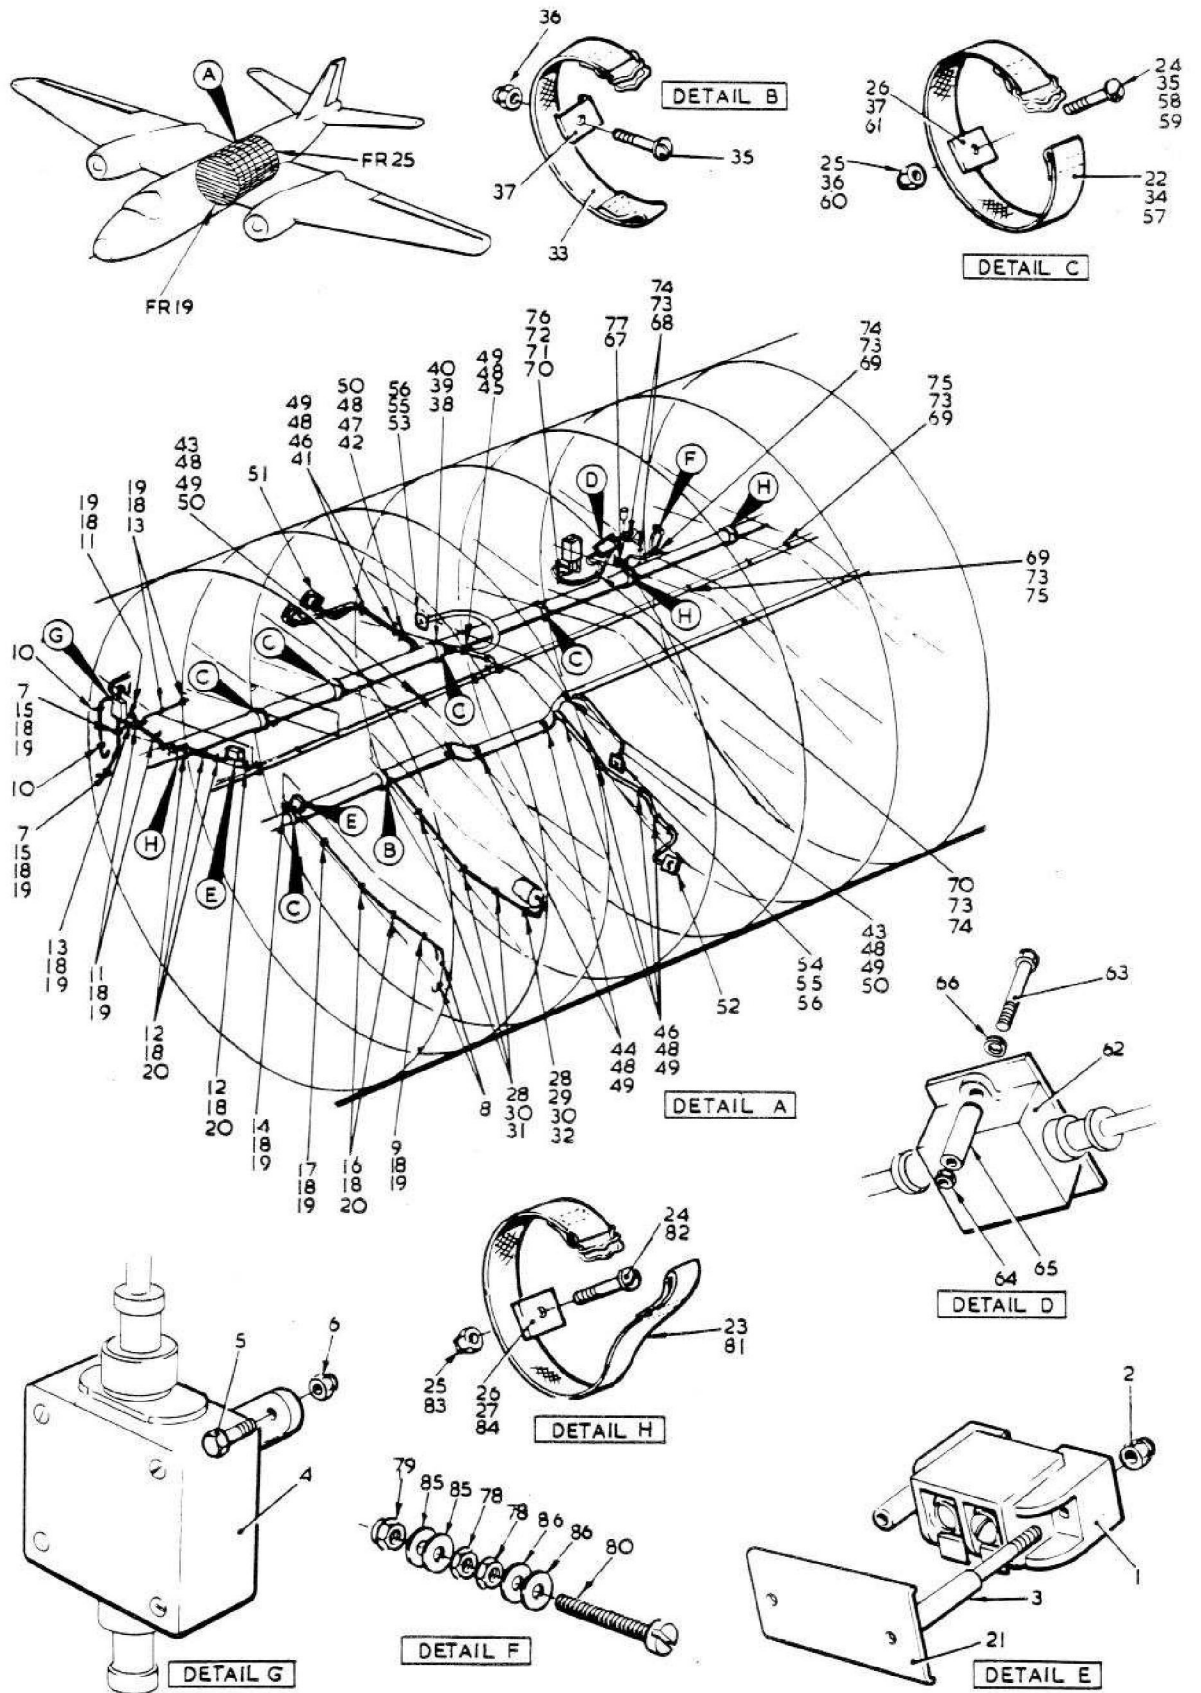


FIG. 7 ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

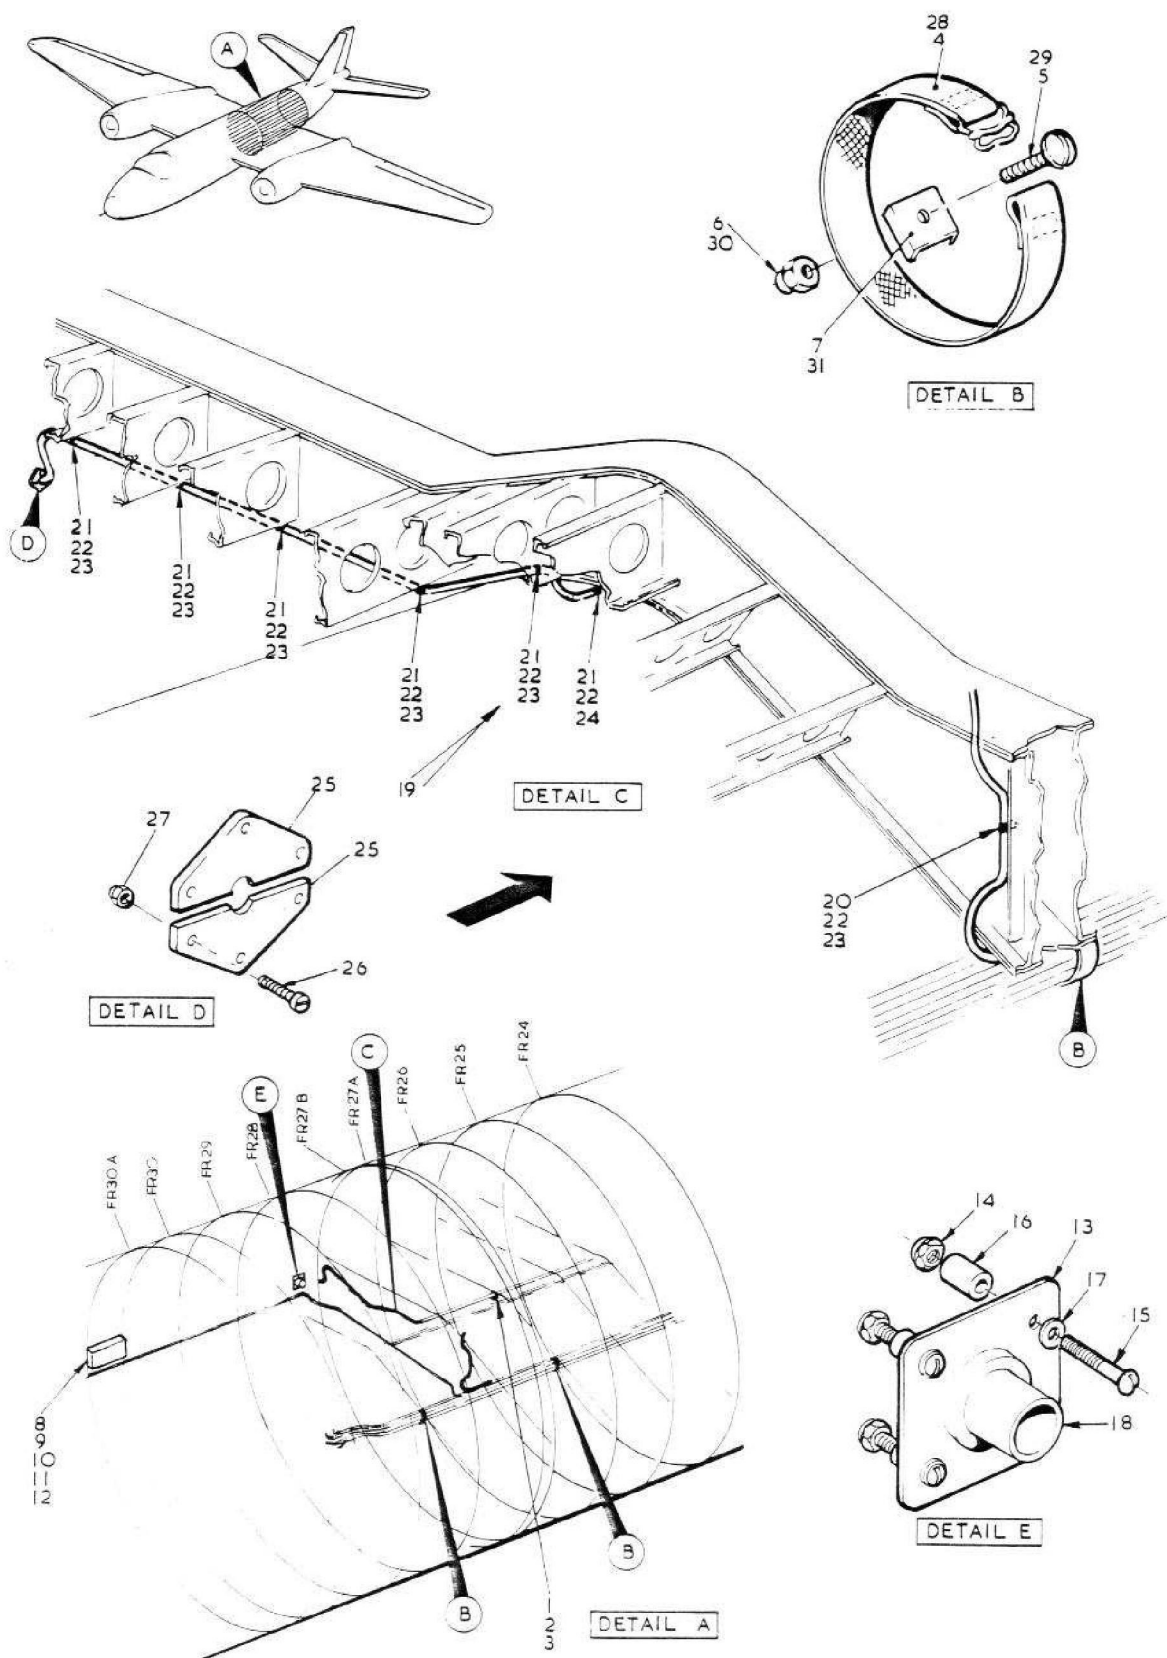


FIG. 8 ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

CODE R

SECT. EA

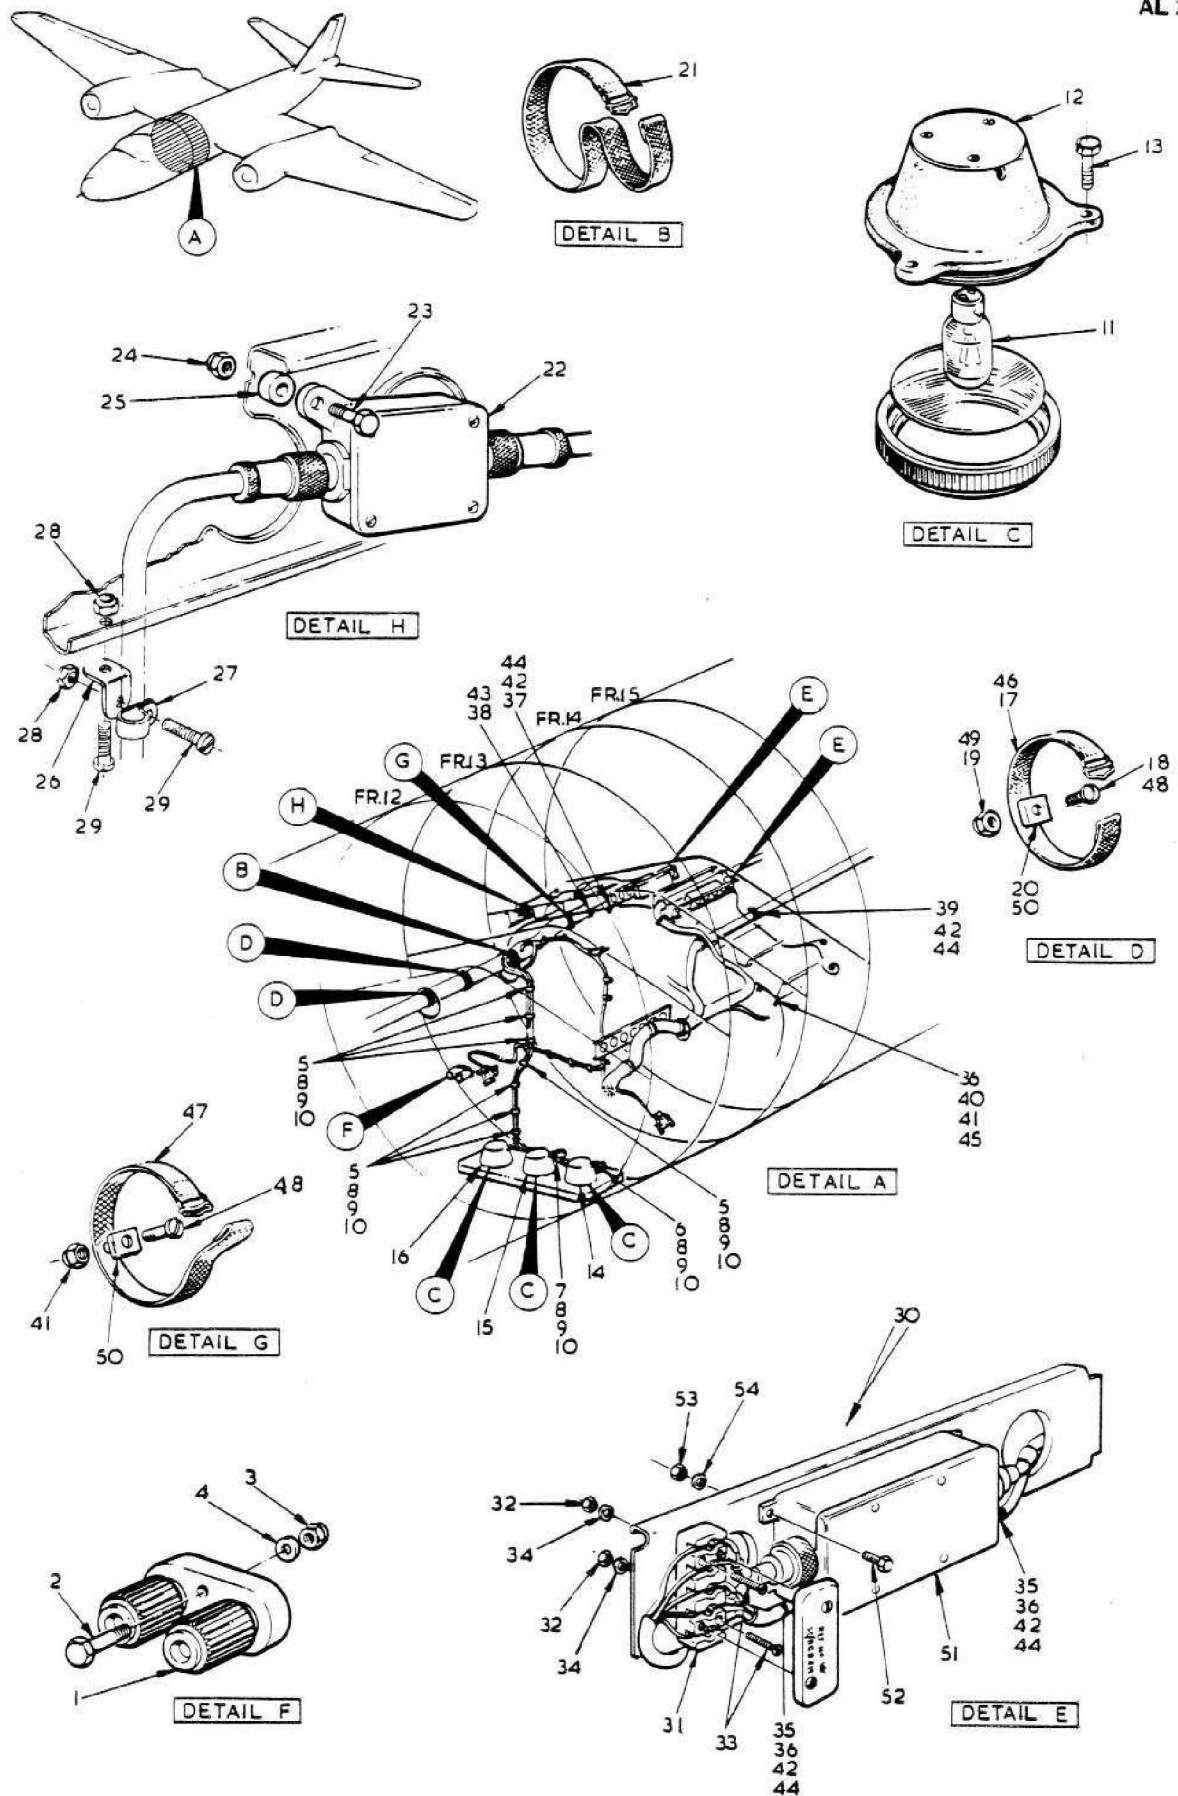


FIG. 9 ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

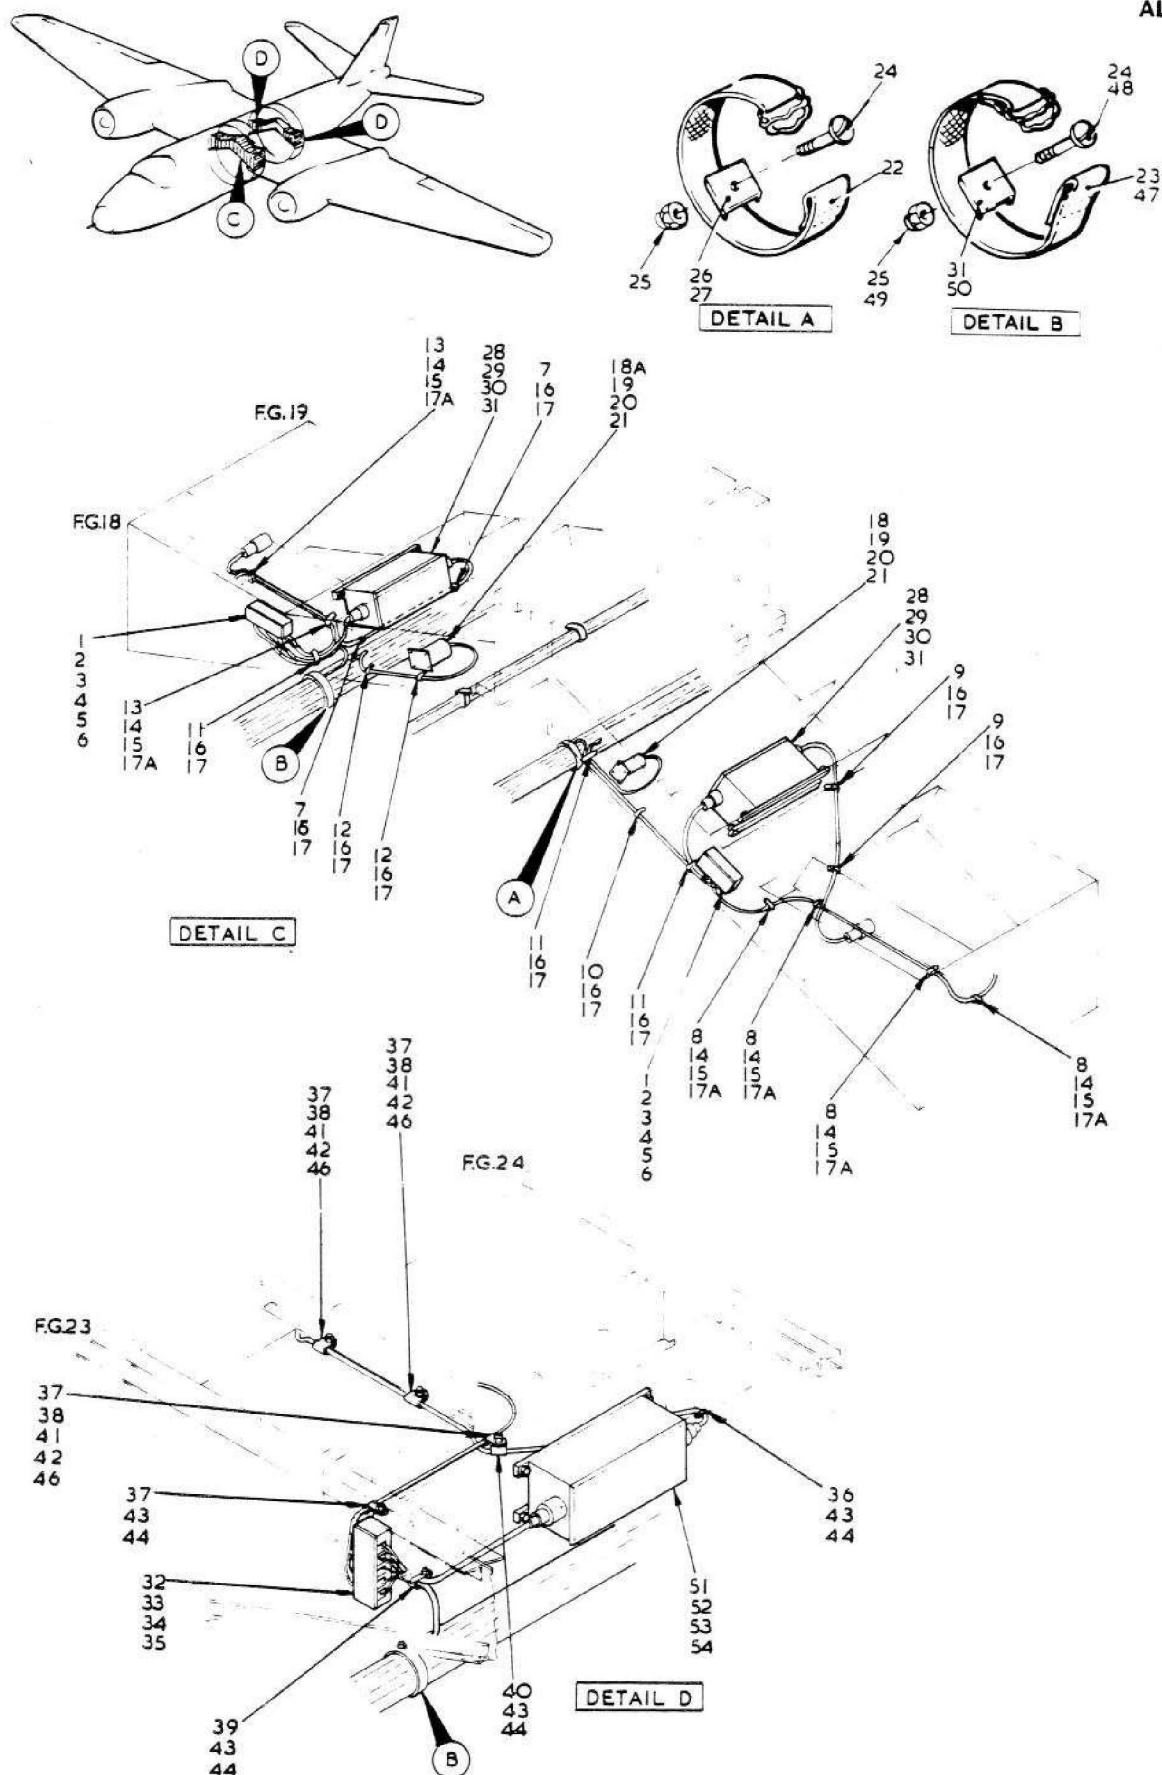


FIG. 10 ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

CODE R

SECT. EA