

AP101B-0402-3A

POWER INSTALLATION
COWLING, ENGINE PORT

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1	2	3	4	5
EA1.50.395	COWLING, ENGINE, PORT, ASSEMBLY	—	—	PA1/1
	Spares for:			
EA1.50.103	CLIP, toggle hook spring	2	L72	PA1/2
EA1.50.105	CLIP, toggle hook spring	2	L72	PA1/3
	Attaching parts for EA1.50.103 and EA1.50.105:			
AS1246/1B	Bolt, round head 4BA	1	—	PA1/4
AGS2001B1	Nut, stiff 4BA	1	—	PA1/5
SP13/B	Washer	1	—	PA1/6
EA3.00.121	COWL, FRONT, ASSEMBLY (Ref. drg EA1.50.249)	1	—	PA2/1
	Spares for:			
EA1.50.869	BAFFLE	1	—	PA2/7
EA1.50.1753	DUCT, air compressor, bleed valve	1	—	PA2/8
	Attaching parts for EA1.50.1753:			
EEAS1/1½C	Screw, csk. head 2BA	14	S96	PA2/9
EA1.50.843	INTAKE, AIR, ASSEMBLY	1	—	PA2/2
	Spares for:			
EA1.50.1673	PLATE, louvre	2	DTD166B	PA2/4
	Attaching parts for EA1.50.1673:			
AS2920/1B	Bolt, 4BA	6	—	PA2/3
EA1.50.1597	SCREEN, perforated	38	—	PA2/5
EA1.50.1823	SLEEVE, exhaust	1	—	PA2/6
EA1.50.1761	PANEL, access for adjustment of accelerator and bleed valve control	3	—	PA2/10
EA1.50.1779	PANEL, access, for bleed valve adjustment	1	—	PA2/11
	Attaching parts for EA1.50.1779:			
EEAS1/1C	Screw, csk. head 2BA	8	S96	PA2/12
EA1.50.1805	PANEL, access, P.V. ram	1	L72	PA2/13
	Attaching parts for EA1.50.1805:			
AS1242/1C	Bolt, csk. head 2BA	8	—	PA2/14
EA1.50.1807	PANEL, access P.V. ram	1	L72	PA2/15
	Attaching parts for EA1.50.1807:			
AS1242/1C	Bolt, csk. head 2BA	8	—	PA2/16
	Attaching parts for EA3.00.121:			
EA1.50.1051	Screw, special	41	S11	PA1/7
EA3.00.131	COWL, BOTTOM, REAR (LESS U/C COWL DOOR) (PRE MOD.2545) (Ref. drg EA1.50.841)	1	—	
EA3.50.23	COWL, BOTTOM, REAR (LESS U/C COWL DOOR) ASSEMBLY (MOD.2545-S.O.O.)	1	—	PA3/1
	Spares for:			
EA1.50.65	BRACKET, forward hinge	1	DTD683	PA3/2
	Attaching parts for EA1.50.56:			
A25/20C	Bolt, 2BA	4	—	PA3/3
A27CT	Nut, thin 2BA	4	—	PA3/4
SP15C	Washer, 2BA	4	—	PA3/5

POWER INSTALLATION
COWLING, ENGINE PORT

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA1.50.67	. .	BRACKET, aft hinge	1	DTD683	PA3/6
A25/20C	. .	Attaching parts for EA1.50.67:			
A25/21C	. .	Bolt, 2BA	2	—	PA3/7
A27CT	. .	Bolt, 2BA	2	—	PA3/8
SP15C	. .	Nut, thin 2BA	4	—	PA3/9
SP16C	. .	Washer	2	—	PA3/10
	. .	Washer	2	—	PA3/11
EA1.50.427	. .	COWL, BOTTOM, REAR, ASSEMBLY (PRE MOD.2545)	—	—	
EA3.50.25	. .	COWL, BOTTOM, REAR, ASSEMBLY (MOD.2545-S.O.O.)	—	—	PA3/12
		Spares for:			
EA1.50.872	. . .	DUCT, outboard	1	—	PA3/12A
EA1.50.1591	. . .	DUCT, inboard	1	—	PA3/12B
		Attaching parts for EA1.50.872 and EA1.50.1591:			
A25/1B	. . .	Bolt, 4BA	5	—	PA3/12C
A27BP	. . .	Nut, 4BA	5	—	PA3/12D
SP15B	. . .	Washer	5	—	PA3/12E
EA1.50.975	. . .	FUNNEL, assembly, air ducts	2	—	PA3/12F
EA1.50.1523	. . .	OUTLET, drain	1	—	PA3/12G
EA1.50.1601	. . .	PLATE, retaining engine oil sump drain outlet	1	—	PA3/13
EA6.50.991	. . .	SPRING, drain outlet (Mod.2670)	1	—	PA3/14
EA1.50.981	. . .	SPRING, air duct outlet funnel	2	—	PA3/14A
EA1.50.317	. .	DOOR, access in bottom rear cowl	1	—	PA3/15
EA1.50.319	. .	DOOR, u/c cowl	1	—	PA3/16
		Attaching parts for EA1.50.319:			
AGS899/6	. .	Collar	2	—	PA3/17
SP4Z/F10	. .	Pin, shackle	1	—	PA3/18
SP4Z/F18	. .	Pin, shackle	1	—	PA3/19
SP90C7	. .	Pin, split 1/16" dia	2	—	PA3/20
EA1.50.365	. .	Washer	2	—	PA3/21
DZUS					
FJ5/60DS	. .	FASTENER	4	—	PA3/22
DZUS					
FJ5/70DS	. .	FASTENER	4	—	PA3/23
DZUS					
FJ5/80DS	. .	FASTENER	2	—	PA3/24

POWER INSTALLATION
COWLING, ENGINE PORT

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
633	EA1.50.281	. . . FASTENER, TOGGLE, ASSEMBLY Spares for:—	2	—	C	PA3/25
16312	EA1.50.95	. . . HANDLE, TOGGLE, FASTENER, ASSEMBLY Spares for:—	1	—	C/MR	PA3/26
19837	EA1.50.33	 BUSH	2	—	—	PA3/26A
	EA1.50.25	 HANDLE, toggle	1	—	—	PA3/26B
	EA1.50.27	 LINK	1	—	—	PA3/26C
		Attaching parts for EA1.50.27:—				
28P/1040788	SP90C8	 Pin, split 1/16" dia	1	—	C	PA3/26D
24861	EA1.50.39	 Tube	1	—	C	PA3/26E
	TERRY					
29H/4658471	169/1	 RING, split	1	—	C	PA3/27
635	EA1.50.49	 SPRING, 19 SWG	1	Spring Steel	C	PA3/28
		Attaching parts for EA1.50.49:—				
18192	EA1.50.51	 Pin	1	—	C	PA3/28A
28P/1016032	SP4Y/H16	 PIN	1	—	C	PA3/28B
28P/1221260	SP90E6	 PIN, split, 3/32" dia	1	—	C	PA3/28C
		Attaching parts for EA1.50.95:—				
16313	EA1.50.155	 Pin, stud special	2	S11	C	PA3/29
28P/9527619	SP90C7	 Pin, split 1/16" dia	2	—	C	PA3/30
16315	EA1.50.170	 HOUSING, toggle	1	—	—	PA3/30B
634	EA1.50.282	. . . FASTENER, TOGGLE, ASSEMBLY Spares for:—	2	—	C	PA3/31
16312	EA1.50.95	. . . HANDLE, TOGGLE FASTENER, ASSEMBLY Spares for:—	1	—	C/MR	PA3/26
19837	EA1.50.33	 BUSH	2	—	—	PA3/26A
	EA1.50.25	 HANDLE, toggle	1	—	—	PA3/26B
	EA1.50.27	 LINK	1	—	—	PA3/26C
		Attaching parts for EA1.50.27:—				
28P/1040788	SP90C8	 Pin, split	1	—	C	PA3/26D
24861	EA1.50.39	 Tube	1	—	C	PA3/26E
	TERRY					
29H/4658471	169/1	 RING, split	1	—	C	PA3/27
635	EA1.50.49	 SPRING, 19 SWG	1	Spring Steel	C	PA3/28
		Attaching parts for EA1.50.49:—				
18192	EA1.50.51	 Pin	1	—	C	PA3/28A
28P/1016032	SP4Y/H16	 PIN	1	—	C	PA3/28B
28P/1221260	SP90E6	 PIN, split	1	—	C	PA3/28C
		Attaching parts for EA1.50.95:—				
16313	EA1.50.155	 Pin, stud, special	2	S11	C	PA3/29
28P/9527619	SP90C7	 Pin, split	2	—	C	PA3/30
16315	EA1.50.170	 HOUSING, toggle	1	—	—	PA3/30A

POWER INSTALLATION
COWLING, ENGINE PORT

Ref. No.	Part No.	Description	No. off	Mati. Spec.	Cl. of Equip M.R. L.M.	Plate No.
		1 2 3 4 5 6				
636	EA1.50.283	. . . FASTENER, TOGGLE, ASSEMBLY	1	—	C	PA3/32
7133	EA1.50.97	. . . HANDLE, TOGGLE, FASTENER, ASSEMBLY	1	—	C/MR	PA3/33
		. . . Spares for:—				
	EA1.50.31	 BUSH	2	—	—	PA3/33A
	EA1.50.41	 HANDLE, toggle	1	—	—	PA3/33B
	EA1.50.43	 LINK	1	—	—	PA3/33C
28P/1040788		 Attaching parts for EA1.50.43:—				
	SP90C8	 Pin, split 1/16" dia	1	—	C	PA3/33D
	EA1.50.47	 Tube	1	—	C	PA3/33E
29H/4658471 635	TERRY 169/1	 RING, split	1	—	C	PA3/34
	EA1.50.49	 SPRING, 19 SWG	1	Spring Steel	C	PA3/35
		 Attaching parts for EA1.50.49:—				
6148	EA1.50.99	 Pin	1	—	C	PA3/35A
28P/1016032 28P/19233	SP4Y/H16	 PIN	1	—	C	PA3/35B
	SP90E6	 PIN, split, 3/32" dia	1	—	C	PA3/35C
17661 28P/1220716		 Attaching parts for EA1.50.97:—				
	EA1.50.157	 Pin, stud special	2	S11	C	PA3/36
	SP90E4	 Pin, split, 3/32" dia	2	—	C	PA3/37
16316 637	EA1.50.171	. . . HOUSING, toggle	1	—	—	PA3/37A
	EA1.50.284	. . . FASTENER, TOGGLE, ASSEMBLY	1	—	C	PA3/38
7133	EA1.50.97	. . . HANDLE, TOGGLE, FASTENER, ASSEMBLY	1	—	C/MR	PA3/33
		. . . Spares for:—				
	EA1.50.31	 BUSH	2	—	—	PA3/33A
	EA1.50.41	 HANDLE, toggle	1	—	—	PA3/33B
	EA1.50.43	 LINK	1	—	—	PA3/33C
28P/1040788		 Attaching parts for EA1.50.43:—				
	SP90C8	 Pin, split, 1/16" dia	1	—	C	PA3/33D
	EA1.50.47	 Tube	1	—	C	PA3/33E
29H/4100 635	TERRY 169/1	 RING, split	1	—	C	PA3/34
	EA1.50.49	 SPRING, 19 SWG	1	Spring Steel	C	PA3/35
		 Attaching parts for EA1.50.49:—				
6148	EA1.50.99	 Pin	1	—	C	PA3/35A
28P/1016032 28P/1221260	SP4Y/H16	 PIN	1	—	C	PA3/35B
	SP90E6	 PIN, split, 3/32" dia	1	—	C	PA3/35C
17661 28P/1220716		 Attaching parts for EA1.50.97:—				
	EA1.50.157	 Pin, stud special	2	S11	C	PA3/36
	SP90E4	 Pin, split, 3/32" dia	2	—	C	PA3/37
17662	EA1.50.172	. . . HOUSING, toggle	1	—	—	PA3/37B

AP101B-0402-3A

POWER INSTALLATION
COWLING, ENGINE PORT

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
R EA1.50.161	. . . PANEL, toggle fastener housing	6	—	PA3/39
EA1.50.1639	. . . ROD, TENSION, FOR U/C COWL DOOR AND CABLE CHECK, ASSEMBLY (Pre Mod.5178)	1	—	PA3/40
EA3.50.43	. . . ROD, TENSION, FOR U/C COWL DOOR AND CABLE CHECK, ASSEMBLY (Mod.5178) Consisting of:	1	—	
A25/3C	. . . BOLT, 2BA			PA3/41
R EA1.50.1641	. . . CABLE, check (Pre Mod.5178)	1	—	PA3/42
R EA3.50.39	. . . CABLE, check (Mod.5178)	1	—	
SP3Y413	. . . FORK-END	1	—	PA3/43
SP3Y413 L	. . . FORK-END	1	—	PA3/44
A14CB	. . . NUT, 2BA	1	—	PA3/45
A14CBL	. . . NUT, 2BA	1	—	PA3/46
A27CP	. . . NUT, 2BA	1	—	PA3/47
SP8Y2	. . . ROD, tension	1	—	PA3/48
EA3.50.45	. . . SPACER (Mod.5178)	1	—	
SP13C	. . . WASHER	1	—	PA3/49
DZUS				
S5/325	. . . SPRING	6	—	PA3/50
EA1.50.1793	. . . WASHER, cup Attaching parts for EA3.50.23:	10	DTD124A	PA3/51
EEAS1/1½C	. . . Screw, csk. head, 2BA	10	S96	PA1/8
EA1.50.845	. . . COWL, TOP, REAR, ASSEMBLY Spares for:	1	L46	PA3/52
EA1.50.315	. . . DOOR, access, igniter plug	2	—	PA3/54
EA1.50.281	. . . FASTENER, TOGGLE, ASSEMBLY Spares for:	2	—	PA3/25
EA1.50.95	. . . HANDLE, TOGGLE FASTENER, ASSEMBLY Spares for:	1	—	PA3/26
EA1.50.33	. . . BUSH	2	—	PA3/26A
EA1.50.25	. . . HANDLE, toggle	1	—	PA3/26B
EA1.50.27	. . . LINK Attaching parts for EA1.50.27:	1	—	PA3/26C
SP90C8	. . . Pin, split 1/16" dia	1	—	PA3/26D
EA1.50.39	. . . Tube	1	—	PA3/26E
TERRY				
169/1	. . . RING, split	1	—	PA3/27
EA1.50.49	. . . SPRING, 19 SWG	1	Spring Steel	PA3/28
EA1.50.51	Attaching parts for EA1.50.49: . . . Pin	1	—	PA3/28A
SP4Y/H16	. . . PIN	1	—	PA3/28B
SP90E6	. . . PIN, split, 3/32" dia Attaching parts for EA1.50.95:	1	—	PA3/28C
EA1.50.155	. . . Pin, stud special	2	S11	PA3/29
SP90C7	. . . Pin, split, 1/16" dia	2	—	PA3/30

POWER INSTALLATION
COWLING, ENGINE PORT

AP101B-0402-3A

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA1.50.282	. . .	FASTENER, TOGGLE, ASSEMBLY	2	—	PA3/31
EA1.50.95	. . .	Spares for: HANDLE, TOGGLE FASTENER, ASSEMBLY	1	—	PA3/26
EA1.50.33		BUSH	2	—	PA3/26A
EA1.50.25		HANDLE, toggle	1	—	PA3/26B
EA1.50.27		LINK	1	—	PA3/26C
SP90C8		Attaching parts for EA1.50.27: Pin, split, 1/16" dia	1	—	PA3/26D
EA1.50.39		Tube	1	—	PA3/26E
TERRY 169/1		RING, split	1	—	PA3/27
EA1.50.49		SPRING, 19 SWG	1	Spring Steel	PA3/28
EA1.50.51		Attaching parts for EA1.50.49: Pin	1	—	PA3/28A
SP4Y/H16		PIN	1	—	PA3/28B
SP90/E6		PIN, split 3/32" dia	1	—	PA3/28C
EA1.50.155		Attaching parts for EA1.50.95: Pin, stud special	2	S11	PA3/29
SP90C7		Pin, split, 1/16" dia	2	—	PA3/30
EA1.50.283	. . .	FASTENER, TOGGLE, ASSEMBLY	2	—	PA3/32
EA1.50.97	. . .	Spares for: HANDLE, TOGGLE FASTENER, ASSEMBLY	1	—	PA3/33
EA1.50.31		BUSH	2	—	PA3/33A
EA1.50.41		HANDLE, toggle	1	—	PA3/33B
EA1.50.43		LINK	1	—	PA3/33C
SP90C8		Attaching parts for EA1.50.43: Pin, split 1/16" dia	1	—	PA3/33D
EA1.50.47		Tube	1	—	PA3/33E
TERRY 169/1		RING, split 1" dia	1	—	PA3/34
EA1.50.49		SPRING, 19 SWG	1	Spring Steel	PA3/35
EA1.50.99		Attaching parts for EA1.50.49: Pin	1	—	PA3/35A
SP4Y/H16		PIN	1	—	PA3/35B
SP90E6		PIN, split 3/32" dia	1	—	PA3/35C
EA1.50.157		Attaching parts for EA1.50.97: Pin, stud, special	2	S11	PA3/36
SP90E4		Pin, split 3/32" dia	2	—	PA3/37

POWER INSTALLATION
COWLING, ENGINE PORT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
		1 2 3 4 5 6				
637	EA1.50.284	FASTENER, TOGGLE, ASSEMBLY	2	—	C	PA3/38
7133	EA1.50.97	Spares for:— HANDLE, TOGGLE, FASTENER, ASSEMBLY	1	—	C/MR	PA3/33
	EA1.50.31	BUSH	2	—	—	PA3/33A
	EA1.50.41	HANDLE, toggle	1	—	—	PA3/33B
	EA1.50.43	LINK	1	—	—	PA3/33C
		Attaching parts for EA1.50.43:—				
28P/1040788 21023	SP90C8	Pin, split 1/16" dia	1	—	C	PA3/33D
	EA1.50.47	Tube	1	—	C	PA3/33E
29H/4658471 635	TERRY					
	169/1	RING, split, 1" dia	1	—	C	PA3/34
	EA1.50.49	SPRING, 19 SWG	1	Spring Steel	C	PA3/35
6148	EA1.50.99	Attaching parts for EA1.50.49:— Pin	1	—	C	PA3/35A
28P/1016032 28P/1221260	SP4Y/H16	PIN	1	—	C	PA3/35B
	SP90E6	PIN, split 3/32" dia	1	—	C	PA3/35C
17661 28P/1220716	EA1.50.157	Attaching parts for EA1.50.97:— Pin, stud special	2	S11	C	PA3/36
	SP90E4	Pin, split 3/32" dia	2	—	C	PA3/37
28FP/4062396	DZUS					
	FJ5/60DS	FASTENER	4	—	C	PA3/55
28FP/4062398	DZUS					
	FJ5/70DS	FASTENER	4	—	C	PA3/56
28FP/4062400 628	DZUS					
	FJ5/80DS	FASTENER	2	—	C	PA3/57
	EA1.50.161	PANEL, toggle fastener housing	8	—	C	PA3/53
28FP/341 6503 640	DZUS					
	S3/325	SPRING	8	—	C	PA3/58
	EA1.50.1793	WASHER cup	10	DTD124A	C	PA3/59
28P/4706207 28P/9710567	EA1.50.109	FORK-END, fitting toggle fastener	2	S11	C	PA1/9
		Attaching parts for EA1.50.109:— Pin, shackle	1	—	C	PA1/10
	SP4Y/D6 SP90C4	Pin, split 1/16" dia	1	—	C	PA1/10A
642	EA1.50.135	FORK-END fitting, toggle fastener	6	DTD683	C	PA1/11
		Attaching parts for EA1.50.135:— Pin, shackle	1	—	C	PA1/12
	28P/4706207 28P/9710567	Pin, split 1/16" dia	1	—	C	PA1/12A
643	EA1.50.137	FORK-END, fitting toggle fastener	8	DTD683	C	PA1/13
		Attaching parts for EA1.50.137:— Pin, shackle	1	—	C	PA1/14
	28P/9016037 28P/1220716	Pin, split 3/32" dia	1	—	C	PA1/14A

POWER INSTALLATION
COWLING, ENGINE, PORT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
		1 2 3 4 5 6				
644	EA1.50.391	· FORK-END, fitting, toggle fastener	1	DTD683	C	PA1/15
28P/9483204	SP4Y/D10	· Attaching parts for EA1.50.391:—	1	—	C	PA1/16
28P/1021104	SP90C3	· Pin, shackle	1	—	C	PA1/16A
		· Pin, split 1/16" dia	1	—	C	PA1/16A
645	EA1.50.29	· HOOK, cowl toggle fastener	8	S11	C	PA1/17
646	EA1.50.45	· HOOK, cowl toggle fastener	10	S11	C	PA1/18
28M/1007403	A27ET	· NUT, locking	18	—	C	PA1/18A
3040	EA1.50.13	· PANEL, ENGINE SERVICE, ASSEMBLY	1	—	A	PA2/17
		Spares for:—				
636	EA1.50.283	· FASTENER TOGGLE, ASSEMBLY	2	—	C	PA2/19
		Spares for:—				
7133	EA1.50.97	· HANDLE, TOGGLE FASTENER, ASSEMBLY	1	—	C/MR	PA2/20
		Spares for:—				
	EA1.50.31	· BUSH	2	—	—	PA2/21
	EA1.50.41	· HANDLE, toggle	1	—	—	PA2/22
	EA1.50.43	· LINK	1	—	—	PA2/23
		Attaching parts for EA1.50.43:—				
28P/1040788	SP90C8	· Pin, split 1/16" dia	1	—	C	PA2/24
21023	EA1.50.47	· Tube	1	—	C	PA2/25
	TERRY					
29H/4658471	169/1	· RING, split 1" dia	1	—	C	PA2/26
635	EA1.50.49	· SPRING, 19 SWG	1	Spring Steel	C	PA2/27
		Attaching parts for EA1.50.49:—				
6148	EA1.50.99	· Pin	1	—	C	PA2/28
28P/1016032	SP4Y/H16	· PIN	1	—	C	PA2/29
28P/1221260	SP90E6	· PIN, stud 3/32" dia	1	—	C	PA2/30
		Attaching parts for EA1.50.97:—				
17661	EA1.50.157	· Pin, stud, special	2	S11	C	PA2/31
28P/1220716	SP90E4	· Pin, split 3/32" dia	2	—	C	PA2/32
16316	EA1.50.171	· HOUSING, toggle	1	—	—	PA2/33
637	EA1.50.284	· FASTENER, TOGGLE, ASSEMBLY	2	—	C	PA2/35
		Spares for:—				
7133	EA1.50.97	· HANDLE, TOGGLE, FASTENER, ASSEMBLY	1	—	C/MR	PA2/20
		Spares for:—				
	EA1.50.31	· BUSH	2	—	—	PA2/21
	EA1.50.41	· HANDLE, toggle	1	—	—	PA2/22
	EA1.50.43	· LINK	1	—	—	PA2/23
		Attaching parts for EA1.50.43:—				
28P/1040788	SP90C8	· Pin, split 1/16" dia	1	—	C	PA2/24
21023	EA1.50.47	· Tube	1	—	C	PA2/25

POWER INSTALLATION
COWLING, ENGINE, PORT

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
TERRY									
169/1						RING, split, 1" dia	1	—	PA2/26
EA1.50.49						SPRING, 19 SWG	1	Spring Steel	PA2/27
						Attaching parts for EA1.50.49:—			
EA1.50.99						Pin	1	—	PA2/28
SP4Y/H16						PIN	1	—	PA2/29
SP90E6						PIN, split, 3/32" dia	1	—	PA2/30
						Attaching parts for EA1.50.97:—			
EA1.50.157						Pin, stud, special	2	S11	PA2/31
SP90E4						Pin, split, 3/32" dia	2	—	PA2/32
EA1.50.172						HOUSING, toggle	1	—	PA2/34
EA1.50.161						PANEL, toggle fastener housing	4	—	PA2/18
EA1.50.291						PANEL, SERVICE, ASSEMBLY	8	—	PA2/36
						Spares for:—			
EA6.50.283						DUCT, ventilating	2	—	PA2/37
EA1.50.293						FRAME, 2A, engine, assembly	1	—	
						Spares for:—			
EE.11/2						EXTRUSION (SAS 4769)	QR	—	PA2/45
						Attaching parts for EE.11/2:—			
EC.1099						Adhesive (SAS 4769)	QR	—	
EB7.50.37						OUTLET, WHEELCASE BREATHER, ASSEMBLY	1	—	PA2/38
						Spares for:—			
EB7.50.41						RING, sealing	1	Bestobell	PA2/39
EA1.50.393						PIN, turbine starter, exhaust pipe locating	2	DTD126	PA2/40
EA3.50.13						PIPE, engine starter, exhaust (Pre—Mod 2347)	2	—	
EA3.50.21						PIPE, engine starter, exhaust (Mod 2347)	2	—	PA2/41
EA1.50.111						ROD-END, fitting, toggle fastener	1	DTD683	PA1/19
						Attaching parts for EA1.50.111:—			
SP4Y/D15						Pin, shackle	1	—	PA1/20
EA1.50.119						ROD, toggle fastener	4	S11	PA1/21
EA1.50.121						ROD, toggle fastener	1	S11	PA1/22
EA1.50.123						ROD, toggle fastener	1	S11	PA1/23
EA1.50.125						ROD, toggle fastener	2	S11	PA1/24
EA1.50.129						ROD, toggle fastener	4	S96	PA1/25
EA1.50.131						ROD, toggle fastener	2	S96	PA1/26
EA1.50.133						ROD, toggle fastener	2	S96	PA1/27
EEAS1/8E						SCREW, csk. head, 1/4" BSF	2	S96	PA1/28
EA1.50.101						SPRING, toggle hook tension	4	Spring Steel	PA1/29

AP101B-0402-3A

Page PB.1

POWER INSTALLATION
COWLING, ENGINE, STARBOARD

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA1.50.396	COWLING, ENGINE, STARBOARD, ASSEMBLY	—	—	PB1/30
	Spares for:			
EA1.50.103	CLIP, toggle hook spring	2	L72	PB1/2
EA1.50.105	CLIP, toggle hook spring	2	L72	PB1/3
	Attaching parts for EA1.50.103 and EA1.50.105:			
AS1246/1B	Bolt, round head, 4BA	1	—	PB1/4
AGS2001B1	Nut, stiff, 4BA	1	—	PB1/5
SP13B	Washer	1	—	PB1/6
EA3.00.122	COWL, FRONT, ASSEMBLY (Ref. Drg EA1.50.250)	1	—	PB2/42
	Spares for:			
EA1.50.869	BAFFLE	1	—	PB2/7
EA1.50.1753	DUCT, air compressor bleed valve	1	—	PB2/8
	Attaching parts for EA1.50.1753:			
EEAS1/1½C	Screw, csk. head, 2BA	14	S96	PB2/9
EA1.50.843	INTAKE, AIR, ASSEMBLY	1	—	PB2/2
	Spares for:			
EA1.50.1673	PLATE, louvre	2	DTD166B	PB2/4
	Attaching parts for EA1.50.1673:			
AS2920/1B	Bolt, 4BA	6	—	PB2/3
EA1.50.1597	SCREEN, perforated	38	ALUM	PB2/5
EA1.50.1823	SLEEVE, exhaust	1	—	PB2/6
EA1.50.1761	PANEL, access for adjustment of accelerator and bleed valve control	3	—	PB2/10
EA1.50.1779	PANEL, access for bleed valve adjustment	1	—	PB2/11
	Attaching parts for EA1.50.1779:			
EEAS1/1C	Screw, csk. head, 2BA	8	S96	PB2/12
EA1.50.1805	PANEL, access, P.V. ram	1	L72	PB2/13
	Attaching parts for EA1.50.1805:			
AS1242/1C	Bolt, csk. head, 2BA	8	—	PB2/14
EA1.50.1807	PANEL, access, P.V. ram	1	L72	PB2/15
	Attaching parts for EA1.50.1807:			
AS1242/1C	Bolt, csk. head, 2BA	8	—	PB2/16
	Attaching parts for EA3.00.122:			
EA1.50.1051	Screw, special	41	S11	PB1/7
EA3.00.132	COWL, BOTTOM REAR (LESS U/C COWL DOOR) (PRE MOD.2545) (Ref. Drg EA1.50.842)	1	—	
EA3.50.24	COWL, BOTTOM, REAR (LESS U/C COWL DOOR) ASSEMBLY (MOD.2545-S.O.O.)	1	—	PB3/60
	Spares for:			
EA1.50.66	BRACKET, forward hinge	1	DTD683	PB3/61
	Attaching parts for EA1.50.66:			
A25/20C	Bolt, 2BA	4	—	PB3/3
A27CT	Nut, thin, 2BA	4	—	PB3/4
SP15C	Washer	4	—	PB3/5

R

POWER INSTALLATION
COWLING, ENGINE, STARBOARD

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA1.50.68	. . . BRACKET, aft hinge Attaching parts for EA1.50.68:	1	DTD683	PB3/62
A25/20C	. . . Bolt, 2BA	2	—	PB3/7
A25/21C	. . . Bolt, 2BA	2	—	PB3/8
A27CT	. . . Nut, thin, 2BA	4	—	PB3/9
SP15/C	. . . Washer	2	—	PB3/10
SP16/C	. . . Washer	2	—	PB3/11
EA1.50.428	. . . COWL, BOTTOM REAR ASSEMBLY (PRE MOD.2545)	—	—	
EA3.50.26	. . . COWL, BOTTOM, REAR, ASSEMBLY (MOD.2545-S.O.O.) Spares for:	—	—	PB3/63
EA1.50.871	. . . DUCT, outboard	1	—	PB3/63A
EA1.50.1592	. . . DUCT, inboard Attaching parts for EA1.50.871 and EA1.50.1592:	1	—	PB3/63B
A25/1B	. . . Bolt, 4BA	5	—	PB3/12C
A27BP	. . . Nut, 4BA	5	—	PB3/12D
SP15B	. . . Washer	5	—	PB3/12E
EA1.50.975	. . . FUNNEL, assembly, air ducts	2	—	PB3/12F
EA1.50.1523	. . . OUTLET, drain	1	—	PB3/12G
EA1.50.1601	. . . PLATE, retaining, oil sump drain outlet	1	—	PB3/13
EA1.50.1603	. . . SPRING, drain outlet (Pre Mod.2670)	1	—	
EA6.50.991	. . . SPRING, drain outlet (Mod.2670)	1	—	PB3/14
EA1.50.981	. . . SPRING, air duct outlet funnel	2	—	PB3/14A
EA1.50.318	. . . DOOR, access in bottom rear cowl	1	—	PB3/64
EA1.50.320	. . . DOOR, u/c cowl Attaching parts for EA1.50.320:	1	—	PB3/65
AGS899/6	. . . Collar	2	—	PB3/17
SP4Z/F10	. . . Pin, shackle	1	—	PB3/18
SP4Z/F18	. . . Pin, shackle	1	—	PB3/19
SP90C7	. . . Pin, split, 1/16" dia	2	—	PB3/20
EA1.50.365	. . . Washer	2	L46	PB3/21
DZUS				
FJ5/60DS	. . . FASTENER	4	—	PB3/22
DZUS				
FJ5/70DS	. . . FASTENER	4	—	PB3/23
DZUS				
FJ5/80DS	. . . FASTENER	2	—	PB3/24

POWER INSTALLATION
COWLING, ENGINE, STARBOARD

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
		1	2	3	4	5	6				
633	EA1.50.281	. . .	. . .	. . .	. . .	. . .	. . .	2	—	C	PB3/25
		. . .	. . .	. . .	. . .	. . .	. . .				
16312	EA1.50.95	. . .	. . .	. . .	. . .	. . .	. . .	1	—	C/MR	PB3/26
		. . .	. . .	. . .	. . .	. . .	. . .				
19837	EA1.50.33	. . .	. . .	. . .	. . .	. . .	. . .	2	—	—	PB3/26A
	EA1.50.25	. . .	. . .	. . .	. . .	. . .	. . .	1	—	—	PB3/26B
	EA1.50.27	. . .	. . .	. . .	. . .	. . .	. . .	1	—	—	PB3/26C
		. . .	. . .	. . .	. . .	. . .	. . .				
28P/1040788	SP90C8	. . .	. . .	. . .	. . .	. . .	. . .	1	—	C	PB3/26D
24861	EA1.50.39	. . .	. . .	. . .	. . .	. . .	. . .	1	—	C	PB3/26E
		. . .	. . .	. . .	. . .	. . .	. . .				
	TERRY	. . .	. . .	. . .	. . .	. . .	. . .				
29H/4658471	169/1	. . .	. . .	. . .	. . .	. . .	. . .	1	—	C	PB3/27
635	EA1.50.49	. . .	. . .	. . .	. . .	. . .	. . .	1	Spring Steel	C	PB3/28
		. . .	. . .	. . .	. . .	. . .	. . .				
18192	EA1.50.51	. . .	. . .	. . .	. . .	. . .	. . .	1	—	C	PB3/28A
		. . .	. . .	. . .	. . .	. . .	. . .				
28P/1016032	SP4Y/H16	. . .	. . .	. . .	. . .	. . .	. . .	1	—	C	PB3/28B
28P/1221260	SP90E6	. . .	. . .	. . .	. . .	. . .	. . .	1	—	C	PB3/28C
		. . .	. . .	. . .	. . .	. . .	. . .				
16313	EA1.50.155	. . .	. . .	. . .	. . .	. . .	. . .	2	S11	C	PB3/29
28P/9527619	SP90C7	. . .	. . .	. . .	. . .	. . .	. . .	2	—	C	PB3/30
		. . .	. . .	. . .	. . .	. . .	. . .				
16314	EA1.50.169	. . .	. . .	. . .	. . .	. . .	. . .	1	—	—	PB3/30A
634	EA1.50.282	. . .	. . .	. . .	. . .	. . .	. . .	2	—	C	PB3/31
		. . .	. . .	. . .	. . .	. . .	. . .				
16312	EA1.50.95	. . .	. . .	. . .	. . .	. . .	. . .	1	—	C/MR	PB3/26
		. . .	. . .	. . .	. . .	. . .	. . .				
19837	EA1.50.33	. . .	. . .	. . .	. . .	. . .	. . .	2	—	—	PB3/26A
	EA1.50.25	. . .	. . .	. . .	. . .	. . .	. . .	1	—	—	PB3/26B
	EA1.50.27	. . .	. . .	. . .	. . .	. . .	. . .	1	—	—	PB3/26C
		. . .	. . .	. . .	. . .	. . .	. . .				
28P/1040788	SP90C8	. . .	. . .	. . .	. . .	. . .	. . .	1	—	C	PB3/26D
24861	EA1.50.39	. . .	. . .	. . .	. . .	. . .	. . .	1	—	C	PB3/26E
		. . .	. . .	. . .	. . .	. . .	. . .				
	TERRY	. . .	. . .	. . .	. . .	. . .	. . .				
29H/4658471	169/1	. . .	. . .	. . .	. . .	. . .	. . .	1	—	C	PB3/27
635	EA1.50.49	. . .	. . .	. . .	. . .	. . .	. . .	1	Spring Steel	C	PB3/28
		. . .	. . .	. . .	. . .	. . .	. . .				
18192	EA1.50.51	. . .	. . .	. . .	. . .	. . .	. . .	1	—	C	PB3/28A
		. . .	. . .	. . .	. . .	. . .	. . .				
28P/1016032	SP4Y/H16	. . .	. . .	. . .	. . .	. . .	. . .	1	—	C	PB3/28B
28P/1221260	SP90E6	. . .	. . .	. . .	. . .	. . .	. . .	1	—	C	PB3/28C
		. . .	. . .	. . .	. . .	. . .	. . .				
16313	EA1.50.155	. . .	. . .	. . .	. . .	. . .	. . .	2	S11	C	PB3/29
28P/9527619	SP90C7	. . .	. . .	. . .	. . .	. . .	. . .	2	—	C	PB3/30
		. . .	. . .	. . .	. . .	. . .	. . .				
	EA1.50.170	. . .	. . .	. . .	. . .	. . .	. . .	1	—	—	PB3/30B
		. . .	. . .	. . .	. . .	. . .	. . .				

POWER INSTALLATION
COWLING, ENGINE, STARBOARD

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
636	EA1.50.283	FASTENER, TOGGLE, ASSEMBLY Spares for:—	1	—	C	PB3/32
7133	EA1.50.97	HANDLE, TOGGLE, FASTENER Spares for:—	1	—	C/MR	PB3/33
	EA1.50.31	BUSH	2	—	—	PB3/33A
	EA1.50.41	HANDLE, toggle	1	—	—	PB3/33B
	EA1.50.43	LINK	1	—	—	PB3/33C
		Attaching parts for EA1.50.43:—				
28P/1040788	SP90C8	Pin, split, 1/16" dia	1	—	C	PB3/33D
21023	EA1.50.47	Tube	1	—	C	PB3/33E
	TERRY					
29H/4658471	169/1	RING, split	1	—	C	PB3/34
635	EA1.50.49	SPRING, 19 SWG	1	Spring Steel	C	PB3/35
		Attaching parts for EA1.50.49:—				
6148	EA1.50.99	Pin	1	—	C	PB3/35A
28P/1016032	SP4Y/H16	PIN	1	—	C	PB3/35B
28P/1221260	SP90E6	PIN, split, 3/32" dia	1	—	C	PB3/35C
		Attaching parts for EA1.50.97:—				
17661	EA1.50.157	Pin, stud, special	2	S11	C	PB3/36
28P/1220716	SP90E4	Pin, split, 3/32" dia	2	—	C	PB3/37
16316	EA1.50.171	HOUSING, toggle	1	—	—	PB3/37A
637	EA1.50.284	FASTENER, TOGGLE, ASSEMBLY Spares for:—	1	—	C	PB3/38
7133	EA1.50.97	HANDLE, TOGGLE FASTENER, ASSEMBLY Spares for:—	1	—	C/MR	PB3/33
	EA1.50.31	BUSH	2	—	—	PB3/33A
	EA1.50.41	HANDLE, toggle	1	—	—	PB3/33B
	EA1.50.43	LINK	1	—	—	PB3/33C
		Attaching parts for EA1.50.43:—				
28P/1040788	SP90C8	Pin, split, 1/16" dia	1	—	C	PB3/33D
21023	EA1.50.47	Tube	1	—	C	PB3/33E
	TERRY					
29H/4658471	169/1	RING, split	1	—	C	PB3/34
635	EA1.50.49	SPRING, 19 SWG	1	Spring Steel	C	PB3/35
		Attaching parts for EA1.50.49:—				
6148	EA1.50.99	Pin	1	—	C	PB3/35A
28P/1016032	SP4Y/H16	PIN	1	—	C	PB3/35B
28P/1221260	SP90E6	PIN, split, 3/32" dia	1	—	C	PB3/35C
		Attaching parts for EA1.50.97:—				
17661	EA1.50.157	Pin, stud, special	2	S11	C	PB3/36
28P/1220716	SP90E4	Pin, split, 3/32" dia	2	—	C	PB3/37
17662	EA1.50.172	HOUSING, toggle	1	—	—	PB3/37B

AP101B-0402-3A

Page PB.5

POWER INSTALLATION
COWLING, ENGINE, STARBOARD

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
R EA1.50.161	. . . PANEL, toggle fastener housing	6	—	PB3/39
EA1.50.1639	. . . ROD, TENSION, FOR U/C COWL DOOR & CABLE CHECK ASSEMBLY (Pre Mod.5178)	1	—	PB3/40
R EA3.50.43	. . . ROD, TENSION, FOR U/C COWL DOOR AND CABLE CHECK ASSEMBLY (Mod.5178) Consisting of:	1	—	
A25/3C	. . . BOLT, 2BA	1	—	PB3/41
R EA1.50.1641	. . . CABLE, check (Pre Mod.5178)	1	—	PB3/42
EA3.50.39	. . . CABLE, check (Mod.5178)	1	—	
SP3/413	. . . FORK, END	1	—	PB3/43
SP3/413L	. . . FORK, END	1	—	PB3/44
A14CB	. . . NUT, 2BA	1	—	PB3/45
A14CBL	. . . NUT, 2BA	1	—	PB3/46
A27CP	. . . NUT, 2BA	1	—	PB3/47
SP8Y2	. . . ROD, tension	1	—	PB3/48
R EA3.50.45	. . . SPACER (Mod.5178)	1	—	
SP13C	. . . WASHER	1	—	PB3/49
DZUS				
S5/325	. . . SPRING	6	—	PB3/50
EA1.50.1793	. . . WASHER, cup Attaching parts for EA3.50.24:	10	DTD124A	PB3/51
EEAS1/1½C	. . . Screw, csk. head, 2BA	10	S96	PB1/8
EA1.50.846	. . . COWL, TOP REAR, ASSEMBLY Spares for:	1	—	PB3/66
EA1.50.315	. . . DOOR, access igniter plug	2	—	PB3/54
EA1.50.281	. . . FASTENER, TOGGLE, ASSEMBLY Spares for:	2	—	PB3/25
EA1.50.95	. . . HANDLE, TOGGLE, FASTENER, ASSEMBLY Spares for:	1	—	PB3/26
EA1.50.33	. . . BUSH	2	—	PB3/26A
EA1.50.25	. . . HANDLE, toggle	1	—	PB3/26B
EA1.50.27	. . . LINK Attaching parts for EA1.50.27:	1	—	PB3/26C
SP90C8	. . . Pin, split, 1/16" dia	1	—	PB3/26D
EA1.50.39	. . . Tube	1	—	PB3/26E
TERRY				
169/1	. . . RING, split	1	—	PB3/27
EA1.50.49	. . . SPRING, 19 SWG Attaching parts for EA1.50.49:	1	Spring Steel	PB3/28
EA1.50.51	. . . Pin	1	—	PB3/28A
SP4Y/H16	. . . PIN	1	—	PB3/28B
SP90E6	. . . PIN, split, 3/32" dia Attaching pins for EA1.50.95:	1	—	PB3/28C
EA1.50.155	. . . Pin, stud, special	2	S11	PB3/29
SP90C7	. . . Pin, split, 1/16" dia	2	—	PB3/30
EA1.50.161	. . . HOUSING, fastener, toggle	8	—	PB3/53

POWER INSTALLATION
COWLING, ENGINE, STARBOARD

Part Number	Description	No. Off	Matl. Spec.	Plate No.	
1	2	3	4	5	6
EA1.50.282	. . . FASTENER, TOGGLE, ASSEMBLY Spares for:	2	—	PB3/31	
EA1.50.95	 HANDLE, TOGGLE, FASTENER, ASSEMBLY Spares for:	1	—	PB3/26	
EA1.50.33	 BUSH	2	—	PB3/26A	
EA1.50.25	 HANDLE, toggle	1	—	PB3/26B	
EA1.50.27	 LINK Attaching parts for EA1.50.27:	1	—	PB3/26C	
SP90C8	 Pin, split, 1/16" dia	1	—	PB3/26D	
EA1.50.39	 Tube	1	—	PB3/26E	
TERRY 169/1	 RING, split	1	—	PB3/27	
EA1.50.49	 SPRING, 19 SWG Attaching parts for EA1.50.49:	1	Spring Steel	PB3/28	
EA1.50.51	 Pin	1	—	PB3/28A	
SP4Y/H16	 PIN	1	—	PB3/28B	
SP90E6	 PIN, split, 3/32" dia Attaching parts for EA1.50.95:	1	—	PB3/28C	
EA1.50.155	 Pin, stud, special	2	S11	PB3/29	
SP90C7	 Pin, split, 1/16" dia	2	—	PB3/30	
EA1.50.283	. . . FASTENER, TOGGLE, ASSEMBLY Spares for:	2	—	PB3/32	
EA1.50.97	 HANDLE, TOGGLE, FASTENER, ASSEMBLY Spares for:	1	—	PB3/33	
EA1.50.31	 BUSH	2	—	PB3/33A	
EA1.50.41	 HANDLE	1	—	PB3/33B	
EA1.50.43	 LINK Attaching parts for EA1.50.43:	1	—	PB3/33C	
SP90C8	 Pin, split, 1/16" dia	1	—	PB3/33D	
EA1.50.47	 Tube	1	—	PB3/33E	
TERRY 169/1	 RING, split, 1" dia	1	—	PB3/34	
EA1.50.49	 SPRING, 19 SWG Attaching parts for EA1.50.49:	1	Spring Steel	PB3/35	
EA1.50.99	 Pin	1	—	PB3/35A	
SP4Y/H16	 PIN	1	—	PB3/35B	
SP90E6	 PIN, split, 3/32" dia Attaching parts for EA1.50.97:	1	—	PB3/35C	
EA1.50.157	 Pin, stud, special	2	S11	PB3/36	
SP90E4	 Pin, split, 3/32" dia	2	—	PB3/37	

COWLING, ENGINE, STARBOARD

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
637	EA1.50.284	FASTENER, TOGGLE, ASSEMBLY Spares for:—	2	—	C	PB3/38
7133	EA1.50.97	HANDLE, TOGGLE FASTENER, ASSEMBLY Spares for:—	1	—	C/MR	PB3/33
	EA1.50.31	BUSH	2	—	—	PB3/33A
	EA1.50.41	HANDLE, toggle	1	—	—	PB3/33B
	EA1.50.43	LINK	1	—	—	PB3/33C
		Attaching parts for EA1.50.43:—				
28P/1040788	SP90C8	Pin, split, 1/16" dia	1	—	C	PB3/33D
21023	EA1.50.47	Tube	1	—	C	PB3/33E
	TERRY					
29H/4658471	169/1	RING, split, 1" dia	1	—	C	PB3/34
635	EA1.50.49	SPRING, 19 SWG	1	Spring Steel	C	PB3/35
		Attaching parts for EA1.50.49:—				
6148	EA1.50.99	Pin	1	—	C	PB3/35A
28P/1016032	SP4Y/H16	PIN	1	—	C	PB3/35B
28P/1221260	SP90E6	PIN, split, 3/32" dia	1	—	C	PB3/35C
		Attaching parts for EA1.50.97:—				
17661	EA1.50.157	Pin, stud, special	2	S11	C	PB3/36
28P/1220716	SP90E4	Pin, split, 3/32" dia	2	—	C	PB3/37
	DZUS					
28FP/4062396	FJ5/60DS	FASTENER	4	—	C	PB3/55
	DZUS					
28FP/4062398	FJ5/70DS	FASTENER	4	—	C	PB3/56
	DZUS					
28FP/4062400	FJ5/80DS	FASTENER	2	—	C	PB3/57
	DZUS					
28FP/341	S5/325	SPRING	8	—	C	PB3/58
6503	EA1.50.1793	WASHER, cup	10	DTD124/A	C	PB3/59
640	EA1.50.109	FORK-END, fitting, toggle fastener Attaching parts for EA1.50.109:—	2	S11	C	PB1/9
28P/4706207	SP4Y/D6	Pin, shackle	1	—	C	PB1/10
28P/9710567	SP90C4	Pin, split, 1/16" dia	1	—	C	PB1/10A
642	EA1.50.135	FORK-END, fitting, toggle fastener Attaching parts for EA1.50.135:—	6	DTD683	C	PB1/11
28P/4706207	SP4Y/D6	Pin, shackle	1	—	C	PB1/12
28P/9710567	SP90C4	Pin, split, 1/16" dia	1	—	C	PB1/12A
643	EA1.50.137	FORK-END, fitting, toggle fastener Attaching parts for EA1.50.137:—	8	DTD683	C	PB1/13
28P/9016037	SP4Y/F10	Pin, shackle	1	—	C	PB1/14
28P/1220716	SP90E4	Pin, split, 3/32" dia	1	—	C	PB1/14A

POWER INSTALLATION
COWLING, ENGINE, STARBOARD

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
644	EA1.50.391	FORK-END, fitting, toggle fastener	1	DTD683	C	PB1/15
28P/9483204	SP4Y/D10	Attaching parts for EA1.50.391:—	1	—	C	PB1/16
28P/1021104	SP90C3	Pin, shackle	1	—	C	PB1/16A
		Pin, split, 1/16" dia	1	—	C	PB1/16A
645	EA1.50.29	HOOK, cowl, toggle fastener	8	S11	C	PB1/17
646	EA1.50.45	HOOK, cowl, toggle fastener	10	S11	C	PB1/18
28M/1007403	A27ET	NUT, locking	18	—	C	PB1/18A
3041	EA1.50.14	PANEL, ENGINE SERVICE, ASSEMBLY	1	—	A	PB2/43
		Spares for:—				
636	EA1.50.283	FASTENER, TOGGLE, ASSEMBLY	2	—	C	PB2/19
		Spares for:—				
7133	EA1.50.97	HANDLE, TOGGLE FASTENER, ASSEMBLY	1	—	C/MR	PB2/20
		Spares for:—				
	EA1.50.31	BUSH	2	—	—	PB2/21
	EA1.50.41	HANDLE, toggle	1	—	—	PB2/22
	EA1.50.43	LINK	1	—	—	PB2/23
		Attaching parts for EA1.50.43:—				
28P/1040788	SP90C8	Pin, split, 1/16" dia	1	—	C	PB2/24
21023	EA1.50.47	Tube	1	—	C	PB2/25
	TERRY					
29H/4658471	169/1	RING, split, 1" dia	1	—	C	PB2/26
635	EA1.50.49	SPRING, 19 SWG	1	Spring Steel	C	PB2/27
		Attaching parts for EA1.50.49:—				
6148	EA1.50.99	Pin	1	—	C	PB2/28
28P/1016032	SP4Y/H16	PIN	1	—	C	PB2/29
28P/1221260	SP90E6	PIN, split, 3/32" dia	1	—	C	PB2/30
		Attaching parts for EA1.50.97:—				
17661	EA1.50.157	Pin, stud, special	2	S11	C	PB2/31
28P/1220716	SP90E4	Pin, split, 3/32" dia	2	—	C	PB2/32
16316	EA1.50.171	HOUSING, toggle	1	—	—	PB2/33
637	EA1.50.284	FASTENER, TOGGLE, ASSEMBLY	2	—	C	PB2/35
		Spares for:—				
7133	EA1.50.97	HANDLE, TOGGLE FASTENER, ASSEMBLY	1	—	C/MR	PB2/20
		Spares for:—				
	EA1.50.31	BUSH	2	—	—	PB2/21
	EA1.50.41	HANDLE, toggle	1	—	—	PB2/22
	EA1.50.43	LINK	1	—	—	PB2/23
		Attaching parts for EA1.50.43:—				
28P/1040788	SP90C8	Pin, split, 1/16" dia	1	—	C	PB2/24
21023	EA1.50.47	Tube	1	—	C	PB2/25

AP101B-0402-3A

Page PB.9

POWER INSTALLATION
COWLING, ENGINE, STARBOARD

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
TERRY					
169/1		RING, split, 1" dia	1	—	PB2/26
EA1.50.49		SPRING, 19 SWG	1	Spring Steel	PB2/27
		Attaching parts for EA1.50.49:—			
EA1.50.99		Pin	1	—	PB2/28
SP4Y/H16		PIN	1	—	PB2/29
SP90E6		PIN, split, 3/32" dia	1	—	PB2/30
		Attaching parts for EA1.50.97:—			
EA1.50.157		Pin, stud, special	2	S11	PB2/31
SP90E4		Pin, split, 3/32" dia	2	—	PB2/32
EA1.50.172		HOUSING, toggle	1	—	PB2/34
EA1.50.161		HOUSING, fastener, toggle	4	—	PB2/18
EA1.50.292		PANEL, SERVICE, ASSEMBLY	—	—	PB2/44
		Spares for:—			
EA6.50.283		DUCT, ventilating	2	—	PB2/37
EA1.50.294		FRAME, 2A, engine, assembly	1	—	
		Spares for:—			
R EE.11/2		EXTRUSION (SAS 4769)	QR	—	PB2/45
		Attaching parts for EE.11/2:—			
R EC.1099		Adhesive (SAS 4769)	QR	—	
EB7.50.37		OUTLET, WHEELCASE BREATHER, ASSEMBLY	1	—	PB2/38
		Spares for:—			
EB7.50.41		RING, sealing	1	Bestobell	PB2/39
EA1.50.393		PIN, turbine starter, exhaust pipe locating	2	DTD126	PB2/40
EA3.50.13		PIPE, engine starter, exhaust (Pre-Mod 2347)	2	—	
EA3.50.21		PIPE, engine starter, exhaust (Mod 2347)	2	—	PB2/41
EA1.50.111		ROD-END, fitting, toggle fastener	1	DTD683	PB1/19
		Attaching parts for EA1.50.111:—			
SP4Y/D15		Pin, shackle	1	—	PB1/20
EA1.50.119		ROD, toggle fastener	4	S11	PB1/21
EA1.50.121		ROD, toggle fastener	1	S11	PB1/22
EA1.50.123		ROD, toggle fastener	1	S11	PB1/23
EA1.50.125		ROD, toggle fastener	2	S11	PB1/24
EA1.50.129		ROD, toggle fastener	4	S96	PB1/25
EA1.50.131		ROD, toggle fastener	2	S96	PB1/26
EA1.50.133		ROD, toggle fastener	2	S96	PB1/27
EEAS.1/8E		SCREW, csk. head. 1/4" BSF	2	S96	PB1/28
EA1.50.101		SPRING, toggle hook tension	4	Spring Steel	PB1/29

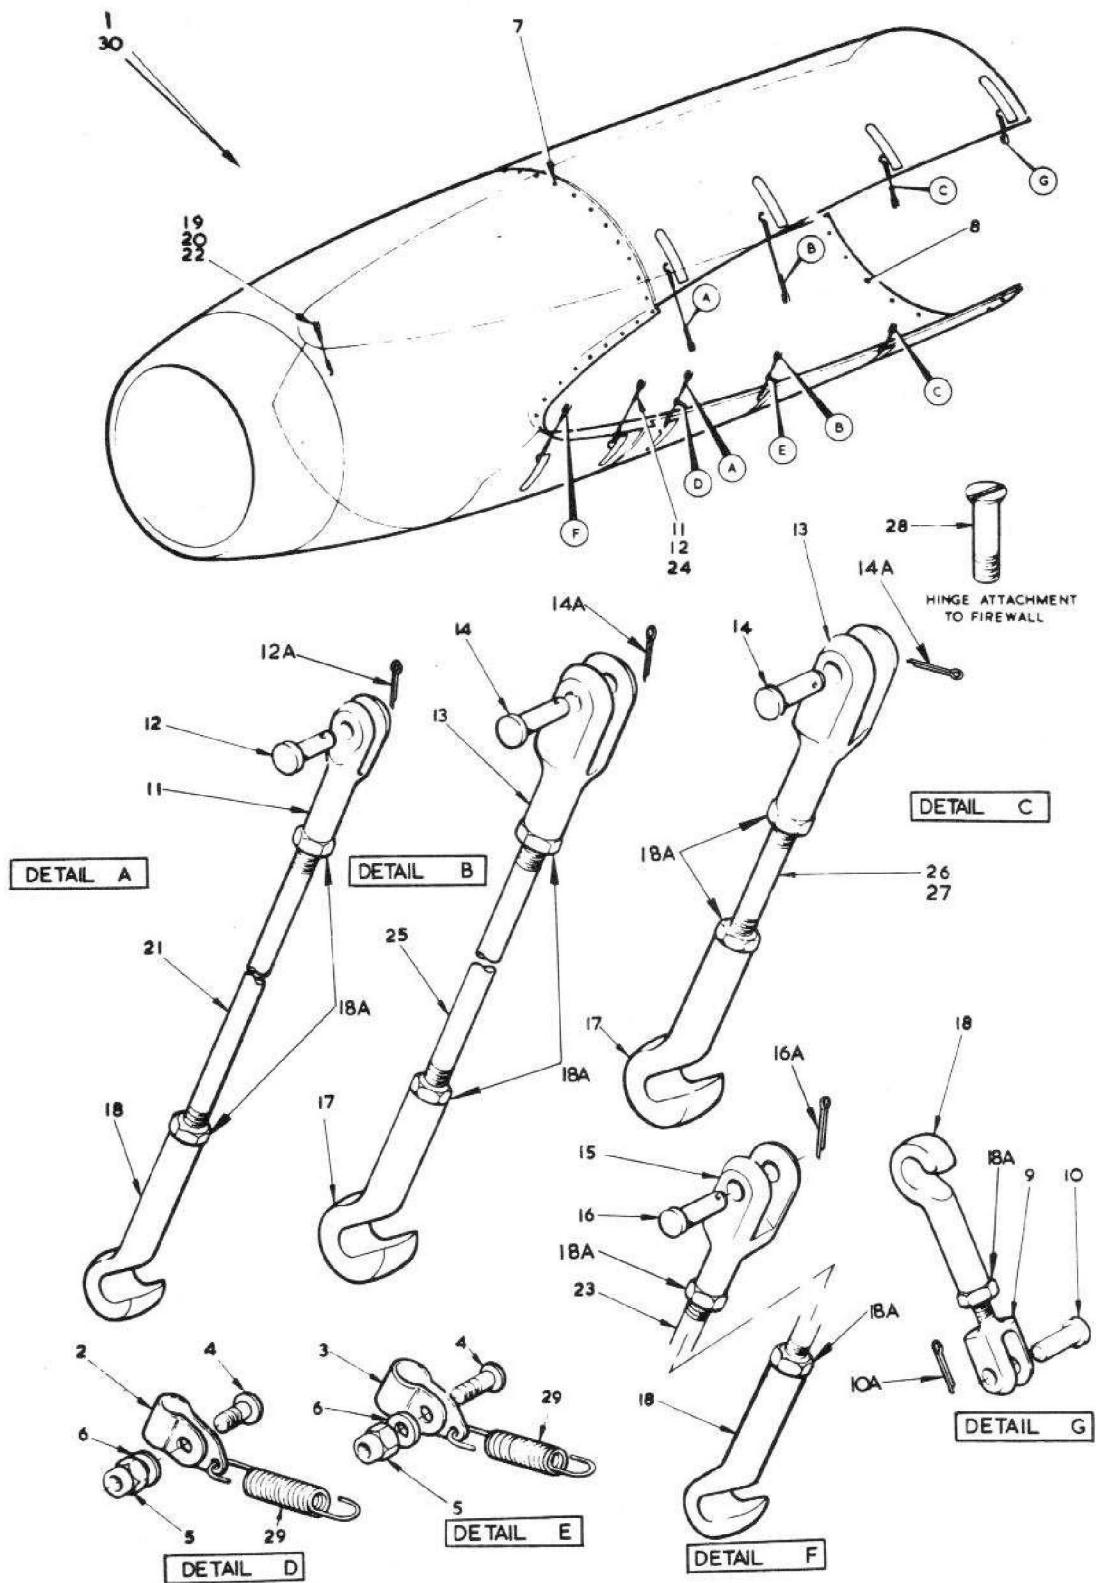 


FIG1 COWLING ENGINE PORT AND STBD

CODE RS

SECT PA/PB

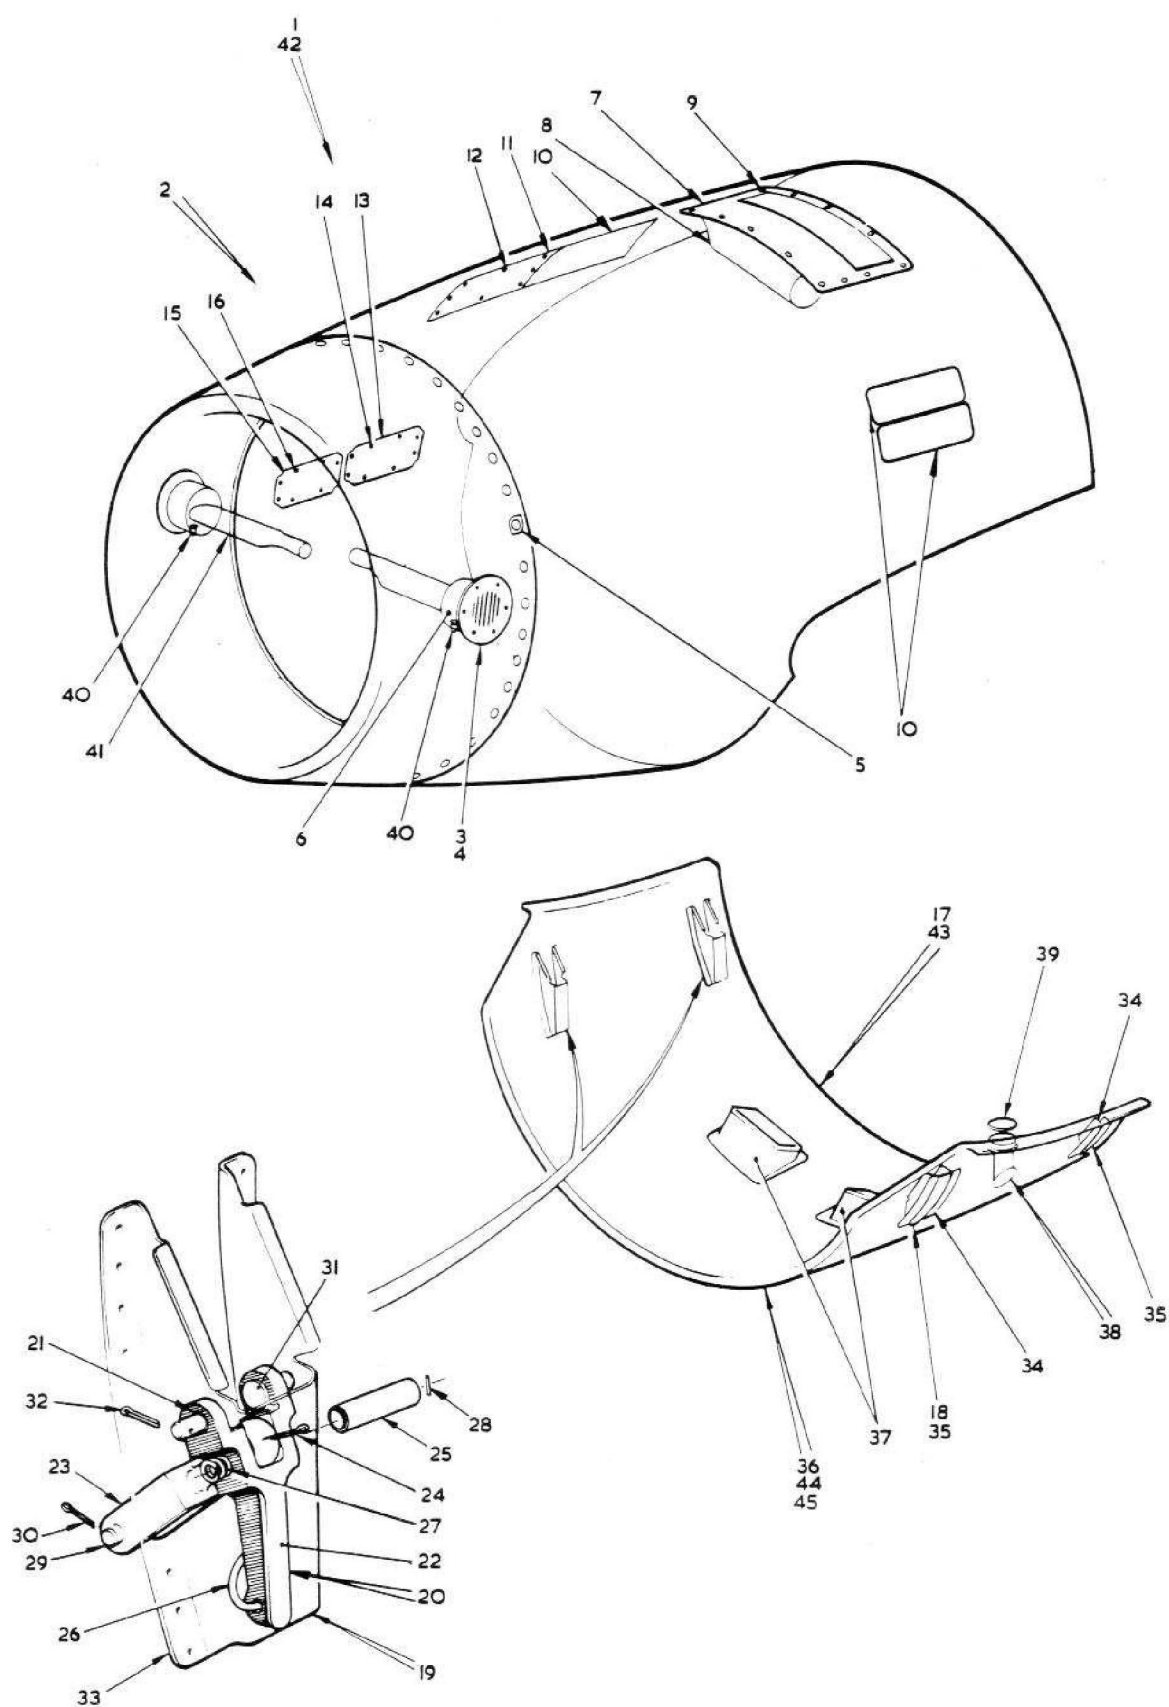 


FIG 2 COWLING ENGINE PORT AND STBD

CODE RS

SECT PA/PB

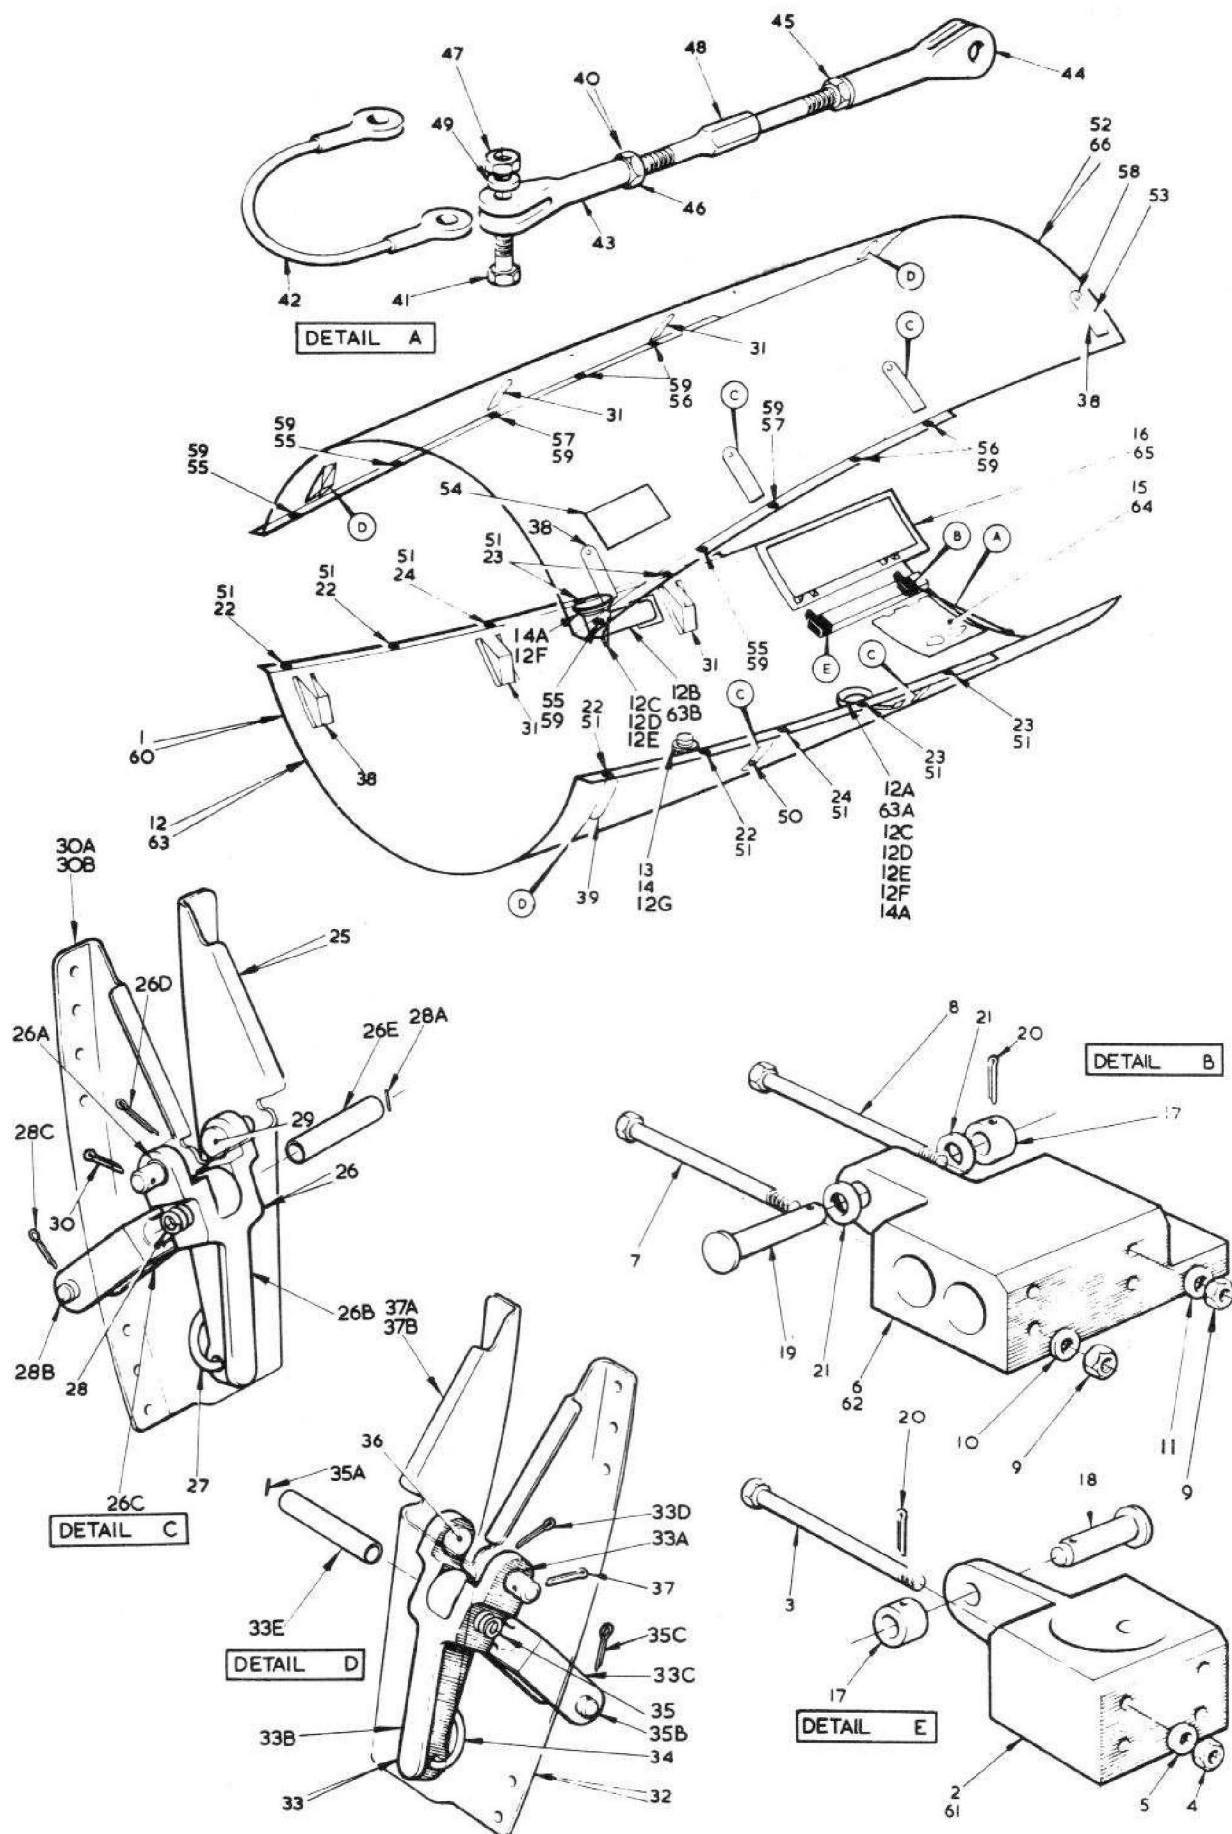 


FIG 3 COWLING ENGINE PORT AND STBD

CODE RS

SECT. PA/PB