

AP101B-0402-3A

RADAR
REBECCA, A.R.I. 5610

Page QC.1

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA3.90.5	A.R.I.5610, REBECCA, INSTALLATION (PRE MODS.4937 AND 4868) Spares for:	—	—	QC1/1
EA3.90.81	. AERIAL, R.X., INSTALLATION, PORT	—	—	QC1/2
EA3.90.82	. AERIAL, R.X., INSTALLATION, STARBOARD	—	—	QC1/3
TYPE 144	. . ADAPTOR	1	—	QC1/4
EA3.90.77	. . BRACKET, assembly	1	—	QC1/5
EA3.90.78	. . BRACKET, assembly	1	—	QC1/6
AGS2001C1	. . NUT, 2BA	1	—	QC1/7
AS2230/404	. . RIVET	3	—	QC1/7A
EEAS1/3½C	. . SCREW, 2BA	1	—	QC1/8
A31B8	. . SCREW, 4BA	4	—	QC1/9
EA3.90.137	. . STRIP, connecting	1	—	QC1/10
SP15C	. . WASHER	1	—	QC1/11
SP47B	. . WASHER	4	—	QC1/12
EA3.90.129	. AERIAL, PROBE, T.X., INSTALLATION Spares for:	—	—	QC1/13
Z1841	. . GROMMET	1	—	QC1/14
10H18411	. . HOLDER, probe Attaching parts for 10H/18411:	1	—	QC1/15
A31B12	. . Screw, 4BA	4	—	QC1/16
EA3.90.127	. . TUBE, probe, assembly Attaching parts for EA3.90.127:	1	—	QC1/17
A55A2	. . Screw, grub, 6BA	2	—	QC1/18
A25/1C	. BOLT, 2BA	16	—	QC1/19
EA3.90.615	. CONNECTOR, type B21/31B/2, switch unit to transmitter/receiver	1	—	QC2/1
EA3.90.617	. CONNECTOR, type 3349/2, pressure bulkhead to transmitter/receiver	1	—	QC2/2
EA3.90.619	. CONNECTOR, type 3344/3, transmitter aerial to pressure bulkhead	1	—	QC2/3
EA3.90.621	. CONNECTOR, type 3347/2, pressure bulkhead to switch unit	1	—	QC2/4
EA3.90.623	. CONNECTOR, type 3344/4, socket, type XC129 to pressure bulkhead, L.H.	1	—	QC2/5
EA3.90.625	. CONNECTOR, type 3333/22, switch unit to trans- mitter/receiver	1	—	QC2/6
EA3.90.627	. CONNECTOR, type 3347/3, pressure bulkhead to switch unit	1	—	QC2/7
EA3.90.629	. CONNECTOR, type 3344/5, socket, type XC129 to pressure bulkhead	1	—	QC2/8
EA3.90.631	. CONNECTOR, type 3333/23, switch unit to trans- mitter/receiver	1	—	QC2/9
EA3.90.633	. CONNECTOR, type 3351/5, switch unit to rear bomb bay bulkhead (Frame 29)	1	—	QC2/10
EA3.90.635	. CONNECTOR, type 3348/10, rear bomb bay bulkhead to access door break	1	—	QC2/11
EA3.90.637	. CONNECTOR, type 3348/11, access door break to Babs, aerial	1	—	QC2/12
EA3.90.639	. CONNECTOR, type 3337/4, transmitter/receiver to I.F.F.M.P.3G.R. receiver	1	—	QC2/13
EA3.90.641	. CONNECTOR, type 3344/6 aerial slot, port to socket type XC129	1	—	QC2/14
EA3.90.643	. CONNECTOR, type 3344/7 aerial slot, starboard, to socket type XC129	1	—	QC2/15

RADAR

AP101B-0402-3A

REBECCA, A.R.I. 5610

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
R EA3.90.645	.	CONNECTOR, type 3344/8, shorting socket to					2	—	QC2/16
R EA3.90.605	.	socket type XC129, port and starboard					1	—	QC2/17
R EA3.90.603	.	CONNECTOR, type B.13/20B/3, transmitter/					1	—	QC2/18
R EA3.90.601	.	receiver to pressure bulkhead					1	—	QC2/19
R EA3.90.609	.	CONNECTOR, type 9310, indicating unit to pressure					1	—	QC2/20
R 10HA12324	.	bulkhead					1	—	QC2/21
R 10HA12325	.	CONNECTOR, type 9321, pressure bulkhead to					1	—	QC2/22
R EA3.90.143	.	transmitter/receiver					1	—	QC1/20
R EA3.90.83	.	CONNECTOR, type B.15/20B/3, pressure bulkhead					1	—	QC1/21
R A25/8E	.	to transmitter/receiver					4	—	QC1/22
R AS3360B3E	.	CONNECTOR, type B.13/30C/16, control unit to					2	—	QC1/23
R 10A1201999	.	pressure bulkhead					4	—	QC1/24
R A27EP	.	CONNECTOR, type B.15/30C/24, control unit to					4	—	QC1/25
R AGS2002B3	.	pressure bulkhead					2	—	QC1/26
R A40B8	.	COVER, aerial, switch					2	—	QC1/27
R TYPE 212B	.	MOUNTING, RADAR EQUIPMENT, ASSEMBLY					1	—	QC1/28
R AS2811/6/020	.	Consisting of:					4	Light Alloy	QC1/29
R SIS5280	.	. BOLT, 1/4" BSF					1	—	QC1/30
R AGS2001C1-66	.	. BONDING, flexible					16	—	QC1/31
R A31C14	.	. MOUNTING, type 968					9	—	QC1/32
R 10H0560063	.	. NUT, 1/4" BSF					2	—	QC1/33
R 10H4695484	.	. NUT, 4BA					2	—	QC1/34
R SIS2931	.	. SCREW, 4BA					1	—	QC1/35
R SIS5226	.	. TRAY, mounting, type 212B					1	—	QC1/36
R SIS5225	.	. TUBE, distance					1	—	QC1/37
R SP15C	.	MOUNTING, type 814					8	—	QC1/38
	.	NUT, 2BA							
	.	SCREW, 2BA							
	.	SOCKET, type XC129							
	.	SOCKET, shorting							
	.	SWITCH, unit, type 78A							
	.	TRANSMITTER/RECEIVER, TR3624							
	.	UNIT, control, type 526A							
	.	WASHER							