


GENERAL ASSEMBLY OF AIRCRAFT

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA3.00.1	GENERAL ASSEMBLY OF AIRCRAFT Consisting of:—	—	—	
EA1.00.25	. ATTACHMENTS, CENTRE FUSELAGE TO REAR FUSELAGE (See page N.1)	—	—	
EA1.00.23	. ATTACHMENTS, FRONT FUSELAGE TO CENTRE FUSELAGE (See page N.1)	—	—	
EA1.00.81	. ATTACHMENTS, JETTISONABLE TANK TO WING, PORT (See page UA.1)	—	—	
EA1.00.82	. ATTACHMENTS, JETTISONABLE TANK TO WING, STARBOARD (See page UA.1)	—	—	
EA1.00.21	. ATTACHMENTS, WING TO FUSELAGE, PORT (See page N.3)	—	—	
EA1.00.22	. ATTACHMENTS, WING TO FUSELAGE, STARBOARD (See page N.3)	—	—	
EA1.47.3	. CONTROLS, ENGINE, GENERAL ASSEMBLY (See Chapter C)	—	—	
EA3.45.1	. CONTROLS, FLYING, GENERAL ASSEMBLY (See Chapter D)	—	—	
EA1.20.10733	. DOOR, UNDERCARRIAGE, PORT (See Chapter LC)	—	—	
EA1.20.10734	. DOOR, UNDERCARRIAGE, STARBOARD (See Chapter LC)	—	—	
EA1.00.103	. ENGINE, RA3, INSTALLATION, PORT (See Chapter PE)	—	—	
EA1.00.104	. ENGINE, RA3, INSTALLATION, STARBOARD (See Chapter PF)	—	—	
EA3.81.3	. EQUIPMENT, ELECTRICAL (See Chapter E)	—	—	
EA1.88.2	. EQUIPMENT, GROUND (See Chapter F)	—	—	
EA3.90.1	. EQUIPMENT, RADAR (See Chapter Q)	—	—	
EA3.00.43	. FUSELAGE, CENTRE, GENERAL ASSEMBLY (See Chapter KA)	—	—	
EA3.00.5	. FUSELAGE, FRONT, GENERAL ASSEMBLY (See Chapter KB)	—	—	
EA1.00.45	. FUSELAGE, REAR, AND TAIL UNIT, GENERAL ASSEMBLY (See Chapter KC)	—	—	
R	. MOUNTING, SONAR LOCATOR BEACON (EA3.82.8103) (Mod 5441) Spares for:—	—	—	
R	EA3.82.8105 . . ANGLE, mounting	1	—	A1/1
R	EA3.82.8107 . . ANGLE, mounting	1	—	A1/2
R	8.201.00.001 . . BEACON, sonar locator, type 17638 Attaching parts for beacon:—	1	—	A1/3
R	LN29943K-06003 . . Bolt, 6 mm dia	4	—	A1/4
R	SP124/E . . Washer	4	—	A1/5
R	EE11/2 . . EXTRUSION (Make from 32C/6216635) Attaching parts for EE11/2:—	2	—	A1/6
R	EC1099 . . Adhesive	QR	—	
EA3.75.575	. SUIT, VENTILATED, INSTALLATION GENERAL ASSEMBLY (MOD. 2717—S.O.O.) (See page SB.35 to SB.41)	—	—	
EA3.62.175	. TANK, JETTISONABLE, PORT, ASSEMBLY (PRE—MOD 2395) (See Chapter UA)	—	—	
EA3.62.217	. TANK, JETTISONABLE, PORT, ASSEMBLY (MOD 2395) (See Chapter UA)	—	—	
EA3.62.176	. TANK, JETTISONABLE, STARBOARD, ASSEMBLY (PRE—MOD 2395) (See Chapter UA)	—	—	
EA3.62.218	. TANK, JETTISONABLE, STARBOARD, ASSEMBLY (MOD 2395) (See Chapter UA)	—	—	
EA3.00.11	. WING, GENERAL ASSEMBLY, PORT (See Chapter L)	—	—	
EA3.00.12	. WING, GENERAL ASSEMBLY, STARBOARD (See Chapter L)	—	—	

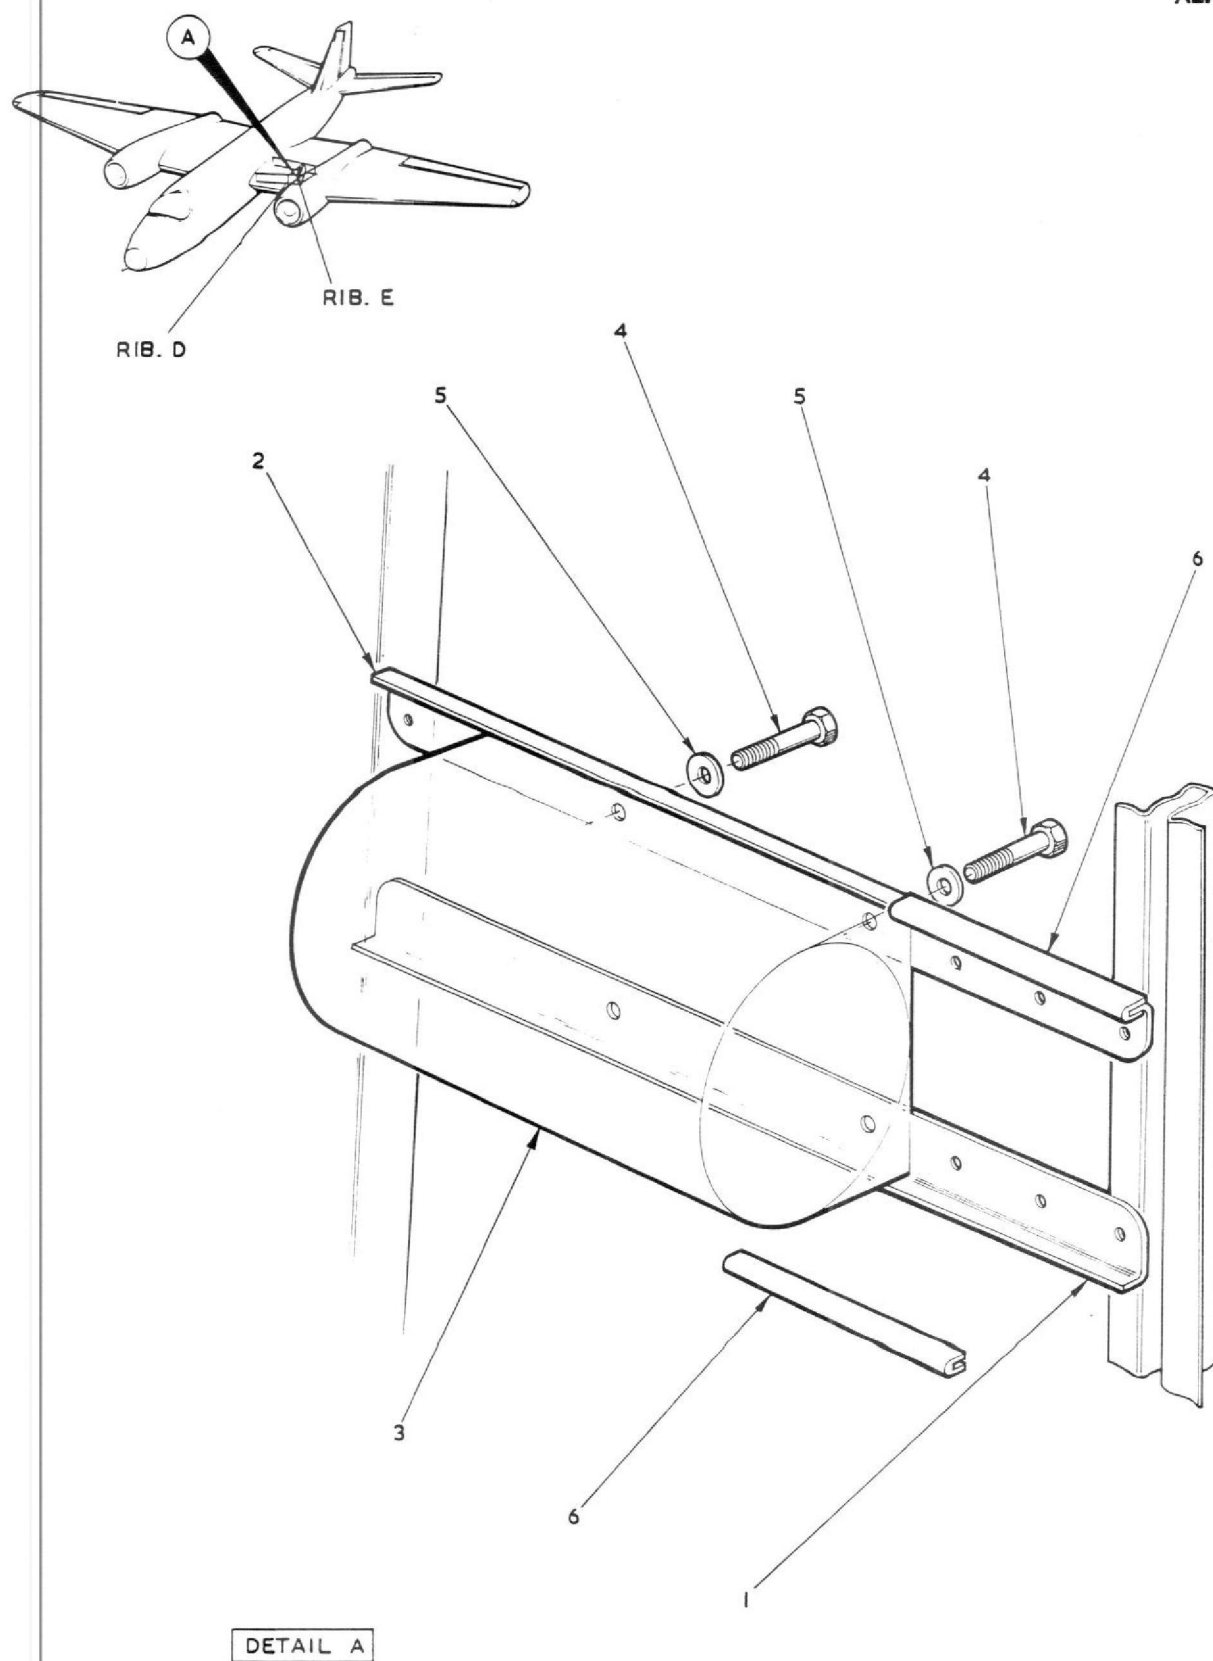

DETAIL A