

RADIO

PR. 175 & STANDBY UHF, ARI.23143

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA3.82.7005	INSTALLATION OF PTR.175 AND STANDBY UHF, ARI.23143 (MOD.4937-S.O.O) (PRE-MOD.5204)	—	—	
EA3.82.8005	INSTALLATION OF PTR.175 & STANDBY UHF, ARI.23143 (MOD.5204-S.O.O) (Pre Mod.5409) Spares for:—	—	—	
	INSTALLATION OF ARI 23300. ASR 889 V/UHF (EA3.82.8115 and EA3.82.8117) (Mod.5409)	—	—	
CHELTON 16-1	. AERIAL, upper, between frames 29 and 30 (SRIM. 3577) (Mod.4937) Attaching parts for 16-1	1	—	RC1/1
AS1248/6C	. Bolt, 2BA	8	—	RC1/2
EB6.82.1417	. Plate, mounting	1	—	RC1/3
SP15C	. Washer	8	—	RC1/4
40923	. AERIAL, LOWER, ON PORT BOMB DOOR, INSTALLATION (SRIM.2577) (MOD.4937-S.O.O) Spares for:—	—	—	RC1/5
16-1-P1	. . AERIAL, type 16-1 Attaching parts for 16-1-P1:	1	—	RC1/6
AS1248/6C	. . Bolt, 2BA	8	—	RC1/7
SP15C	. . Washer	8	—	RC1/8
13667	. . BLOCK, support, relay armature	1	L85	RC1/9
1240	. . BLOCK, terminal Attaching parts for 1240	1	—	RC1/10
AGS2001A1	. . Nut, 6BA	2	—	RC1/11
A33A20	. . Screw 6 BA	2	—	RC1/12
SP15A	. . Washer	2	—	RC1/13
31219	. . CONDUIT, cable, assembly Attaching parts for 31219:	1	—	RC1/14
AS1248/2C	. . Bolt, 2BA	2	—	RC1/15
A25/2C	. . Bolt, 2BA	1	—	RC1/16
AS5418/16	. . Clip, 'P'	1	—	RC1/17
AGS2001C1-66	. . Nut, 2BA	1	—	RC1/18
SP15C	. . Washer	3	—	RC1/19
31220	. . PANEL, access, assembly Attaching parts for 31220:	1	—	RC1/20
AS1248/2C	. . Bolt, 2BA	18	—	RC1/21
A05/1	. . RELAY, armature, type 1741 Attaching parts for 13667 and A05/1	1	—	RC1/22
AS1242/14B	. . Bolt, 4BA	2	—	RC1/23
AGS2001B1	. . Nut, 4BA	2	—	RC1/24
SP15B	. . Washer	2	—	RC1/25
TYPE 228 40938	. AERIAL — WHIP (Mod 5409) . BATTERY, UHF, STANDBY, IN LOWER EQUIPMENT BAY (SRIM.3577) (MOD.4937-S.O.O) (PRE MOD.5204)	1 —	— —	
41164	. BATTERY, UHF, STANDBY IN LOWER EQUIPMENT BAY (SRIM.3676) (MOD.5204-S.O.O) Spares for:—	—	—	RC2/1
19-V0-7/LK 40937	. . BATTERY, 24V, 7A . . TRAY, MOUNTING, SUB-ASSEMBLY Spares for:—	1 1	— —	RC2/2 RC2/3
13643	. . . CLAMP, screw	4	S1	RC2/4
AGS120A	. . . NUT, wing, 1/4" BSF	4	—	RC2/5
13644	. . . TIE-BAR	2	S510	RC2/6
13645	. . . TRUNNION Attaching parts for 40937	4	S1	RC2/7
AS1242/3C	. . Bolt, 2BA	4	—	RC2/8

RADIO

PR. 175 & STANDBY UHF, ARI.23143

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EG7.82.2379	. BONDING FOR REDUNDANT VHF AERIALS IN CANOPY (MOD.5204-S.O.O) Spares for:—	—	—	
EG7.82.2381	. . BRACKET	2	—	
FILMS & EQUIP. DC239	. . COVER	2	—	
EG7.82.2359	. . LEAD, bonding, assembly	2	—	
	. . SOCKET, type 684	2	—	
EC4.82.563	. . WASHER, bonding	2	—	
EA6.82.73	. . WASHER	2	—	
EA3.80.7069	. BOX, JUNCTION, STANDBY UHF, IN LOWER EQUIPMENT BAY, INSTALLATION (MOD.4937-S.O.O) Spares for:—	—	—	RC3/1
40912	. . BOX, JUNCTION, SUB-ASSEMBLY (SRIM.3577) (MOD.4937-S.O.O) Spares for:—	1	—	RC3/2
21954	. . . BOX, junction, 18 SWG	1	L59	RC3/3
10H/0139176	. . . CAP, protective	1	—	RC3/4
21953	. . . LID, 18 SWG	1	L59	RC3/5
TJ-11E-02-05	. . . MODULE, terminal junction	3	—	RC3/6
TJ-11E-02-06	. . . MODULE, terminal junction	3	—	RC3/7
460-8-33P	. . . PLUG, 3-way	1	—	RC3/8
460-14-19P	. . . PLUG, 19-way	1	—	RC3/9
	Attaching parts for 460-8-33P and 460-14-19P:			
AGS2001A1	. . . Nut, 6BA	4	—	RC3/10
A32A16	. . . Screw, 6BA	4	—	RC3/11
SP15A	. . . Washer	4	—	RC3/12
12159A	. . . RING, bonding, copper, 24 SWG	1	—	RC3/13
10H/0130889	. . . SOCKET, fixed	1	—	RC3/14
460-14-19S	. . . SOCKET, 19-way	1	—	RC3/15
	Attaching parts for 460-14-19S:			
AGS2001A1	. . . Nut, 6BA	4	—	RC3/16
A32A16	. . . Screw, 6BA	4	—	RC3/17
SP15A	. . . Washer	4	—	RC3/18
AS10512A-7	. . . SWITCH, SP	1	—	RC3/19
HC292	. . . TAG	5	—	RC3/20
HC294D	. . . TAG	2	—	RC3/21
JF11E01-03	. . . TERMINAL, junction frame	1	—	RC3/22
	Attaching parts for JF11E01-03:			
AGS2001B1	. . . Nut, 4BA	2	—	RC3/23
13614	. . . Piece, distance, 1/4" o/d, 17 SWG	2	L62	RC3/24
A32B40	. . . Screw, 4BA	2	—	RC3/25
SP15B	. . . Washer	2	—	RC3/26
	Attaching parts for 40912:			
A25/1B	. . Bolt, 4BA	4	—	RC3/27
SP15B	. . Bolt, 4BA	4	—	RC3/28
A33-7061-01	. CABLE (Service supply) (Mod.5409)	1	—	
A33-698-01	. CABLE (Service supply) (Mod.5409)	1	—	
A34-3285-01	. CABLE (Service supply) (Mod.5409)	1	—	
5388/19	. CABLE, ASSEMBLY, from radio junction box, aerial c/o switch, mic/tel panel to pressure bulkhead (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5389/1	. CABLE, ASSEMBLY, from standby transmitter/receiver type D403M to terminal block (SRIM. 3577) (Mod.4937-S.O.O)	1	—	
5389/2	. CABLE, ASSEMBLY, from standby transmitter/receiver type D403M to standby junction box (SRIM.3577) (Mod.4937-S.O.O)	1	—	

AP101B-0402-3A

RADIO

PTR. 175 & STANDBY UHF, ARI.23143

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
5389/3	. CABLE, ASSEMBLY, from pressure bulkhead to standby junction box and terminal blocks (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5389/4	. CABLE, ASSEMBLY, from standby junction box to terminal block (SRIM.3577) (Mod.4937-S.O.O.)	1	—	
5389/5	. CABLE, ASSEMBLY, from pressure bulkhead to radio junction box and pilot's auxilliary port panel (SRIM.3577) (Mod.4937-S.O.O.)	1	—	
5389/6	. CABLE, ASSEMBLY, from standby transmitter/receiver type D403M to standby aerial switch unit (SRIM.3577) (Mod.4937-S.O.O.)	1	—	
5389/7	. CABLE, ASSEMBLY, from standby aerial switch unit to lower aerial (SRIM.3577) (Mod.4937-S.O.O.)	1	—	
5390/1	. CABLE, ASSEMBLY, from control units and control unit switch (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5390/6	. CABLE, ASSEMBLY, from navigator's control unit type 1607/7 to pressure bulkhead (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
EA3.82.229	. CABLE, ASSEMBLY, UHF.1, from frame 29 to inter-connecting box	1	—	
EA3.82.231	. CABLE, ASSEMBLY, UHF.2, from interconnecting box to muting control unit	1	—	
EA3.82.233	. CABLE, ASSEMBLY, UHF.3, from transmitter/receiver to interconnecting box	1	—	
EB6.82.553	. CABLE, ASSEMBLY, UHF.1A, from pressure bulkhead to frame 29	1	—	
5388/17	. CABLE, ASSEMBLY, from frame 29 to interconnecting box (SRIM.3577) (Mod.4937-S.O.O.)	1	—	
5388/18	. CABLE, ASSEMBLY, from pressure bulkhead to frame 29 and terminal blocks (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5390/2	. CABLE, ASSEMBLY, from transmitter/receiver to upper/lower aerial switch unit (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5390/3	. CABLE, ASSEMBLY, from upper aerial to upper/lower aerial switch unit (SRIM.3577) (Mod. 4937-S.O.O.)	1	—	
5390/4	. CABLE, ASSEMBLY, between aerial switch units (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5390/5	. CABLE, ASSEMBLY, from transmitter/receiver to VHF aerial (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
2507/7	. CONNECTOR, from interconnecting box to connector block (Mod 5204-S.O.O.)	1	—	
R CP190003	. MOUNTING, type MT1477/ARC52 for transmitter/receiver	1	—	RC2/29
R	Attaching parts for CP19003:—			
A25/1C	. Bolt, 2BA	16	—	RC2/30
SP15C	. Washer	16	—	RC2/31
EA3.82.255	. PANEL, UHF, BETWEEN FRAMES 30 AND 30A, STARBOARD SIDE, INSTALLATION (For spares breakdown, see Page RC.8)	—	—	RC2/32
EA3.82.7075	. STRUCTURE SUPPORT, TRANSMITTER/RECEIVER, BETWEEN FRAMES 28 and 29 (MOD 4937-S.O.O.)	—	—	RC2/33
EA3.82.251	Spares for:— . . CHANNEL, assembly	2	—	RC2/34

RADIO

AP101B-0402-3A

PTR. 175 & STANDBY UHF, ARI. 23143

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.82.7079	.	SWITCH UNIT, UPPER/LOWER AERIALS BETWEEN FRAMES 30 AND 30A, PORT SIDE, INSTALLATION (MOD 4937-S.O.O.) Spares for:—	—	—	RC2/35
EA3.82.5659	.	PANEL ASSEMBLY, AERIAL SWITCH UNIT (MOD 4859) Spares for:—	1	—	RC2/36
13667	.	BLOCK, support, aerial relay (SRIM. 3577)	1	—	RC2/37
1240	.	BLOCK, terminal, type B, 2-way Attaching parts for 1240:—	1	—	RC2/38
A33A24	.	Screw, 6BA	2	—	RC2/39
EA3.82.5657	.	PLATE, MOUNTING, ASSEMBLY Spares for:—	1	—	RC2/40
EA3.82.5639	.	BRACKET, Alt/Trans Test and 115 Volt Test Supply, 18 SWG	1	L72	RC2/41
EG4.82.911	.	BRACKET, 28V DC Test Supply, 18 SWG	1	L72	RC2/42
EA3.82.5655	.	PLATE, mounting engraved, 18 SWG Attaching parts for EA3.82.5657:—	1	L72	RC2/43
A25/1A	.	Bolt, 6BA	10	—	RC2/44
AGS2001A1	.	Nut, 6BA	10	—	RC2/45
SP124A	.	Washer	10	—	RC2/46
A05-1	.	RELAY, armature, aerial switching Attaching parts for A05-1 and 13667:—	1	—	RC2/47
A25/14B	.	Bolt, 4BA	2	—	RC2/48
SP15B	.	Washer	2	—	RC2/49
31708	.	SWITCH, PRESS TO MUTE, AT NAVIGATOR'S STATION, INSTALLATION (SRIM.3577) (MOD 4937-S.O.O.) (PRE-MOD 5204)	—	—	RC3/29
31980	.	SWITCH, PRESS TO MUTE, AT NAVIGATOR'S STATION, INSTALLATION (SRIM.3676) (MOD 5204-S.O.O.) Spares for:—	—	—	
WT33046	.	SWITCHING, unit Attaching parts for WT33046	1	—	RC3/30
A25/2B	.	Bolt, 4BA	3	—	RC3/31
AGS2001B1	.	Nut, 4BA	3	—	RC3/32
SP15B	.	Washer	3	—	RC3/33
31722	.	TRANSMITTER/RECEIVER, STANDBY UHF, IN LOWER EQUIPMENT BAY, INSTALLATION (SRIM.3577) (MOD 4937-S.O.O.) Spares for:—	—	—	RC3/34
C41433-043-0	.	MOUNT, electrical equipment Attaching parts for CA1433-043-0:—	1	—	RC3/35
A25/2C	.	Bolt, 2BA	4	—	RC3/36
AGS2001C1-66	.	Nut, 2BA	4	—	RC3/37
SP15C	.	Washer	4	—	RC3/38
D403M	.	TRANSMITTER/RECEIVER, type D403M	1	—	RC3/39
640-1-03492	.	TRANSMITTER/RECEIVER, PTR.175	1	—	RC3/40

RADIO

PTR. 175 & STANDBY UHF, ARI. 23143 AND 23159

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
41087	INSTALLATION OF PTR.175 AND STANDBY UHF, ARI. 23143 AND 23159 (SRIM.3479) (MOD 4868-S.O.O.) (For Aircraft WJ637 and WJ731) Spares for:-	—	—	RC4/1
R CHELTON 16-1	. AERIAL, type 16-1, upper between frames 29-30 (For spares breakdown see Page RC.1)	1	—	RC4/2
40923	. AERIAL, LOWER, FORWARD ON PORT BOMB DOOR, INSTALLATION (For spares breakdown see Page RC.1)	—	—	RC4/3
R WT38156F 40938	. AERIAL, lower, rear, on port bomb door	1	—	RC4/4
	. BATTERY, UHF, STANDBY, IN LOWER EQUIPMENT BAY, GROUP (For spares breakdown see page RC.1)	—	—	RC4/5
40912	. BOX, JUNCTION, SUB-ASSEMBLY, UHF, STANDBY IN LOWER EQUIPMENT BAY (For spares breakdown see Page RC.2)	1	—	RC4/6
5394/1	. CABLE, ASSEMBLY, from pressure bulkhead to radio junction box and pilot's starboard auxiliary panel	1	—	RC4/7
5394/2	. CABLE, ASSEMBLY, from bomb-bay bulkhead to interconnecting box	1	—	RC4/8
5394/3	. CABLE, ASSEMBLY, from upper aerial to aerial change over switch	1	—	RC4/9
5394/4	. CABLE, ASSEMBLY, from aerial change over switch to aerial switch unit	1	—	RC4/10
5394/5	. CABLE, ASSEMBLY, from PTR.175 transmitter/receiver to aerial change over switch	1	—	RC4/11
5394/6	. CABLE, ASSEMBLY, from PTR.175 transmitter/receiver to VHF aerial	1	—	RC4/12
5394/7	. CABLE, ASSEMBLY, from aerial switch unit to UHF aerial	1	—	RC4/13
5394/8	. CABLE, ASSEMBLY, from aerial switch unit to standby transmitter/receiver	1	—	RC4/14
5394/9	. CABLE, ASSEMBLY, from standby transmitter/receiver to standby junction box	1	—	RC4/15
5394/10	. CABLE, ASSEMBLY, from standby junction box to pressure bulkhead	1	—	RC4/16
5394/11	. CABLE, ASSEMBLY, from pressure bulkhead to radio junction box	1	—	RC4/17
5394/12	. CABLE, ASSEMBLY, from standby transmitter/receiver to standby junction box and terminal block	1	—	RC4/18
5394/13	. CABLE, ASSEMBLY, from standby junction box to standby transmitter/receiver and terminal block	1	—	RC4/19
5394/14	. CABLE, ASSEMBLY, from pilot's PTR.175 control unit to navigator's PTR.175 control unit	1	—	RC4/20
5394/15	. CABLE, ASSEMBLY, from navigator's PTR.175 control unit to pressure bulkhead	1	—	RC4/21

RADIO

PTR.175 & STANDBY UHF, ARI.23143 AND 23159

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA3.82.229	.	CABLE, ASSEMBLY, UHF.1, from frame 29 to inter-					1	—	RC4/22
		connecting box							
EA3.82.231	.	CABLE, ASSEMBLY, UHF.2, from interconnecting box					1	—	RC4/23
		to muting control unit							
EA3.82.233	.	CABLE, ASSEMBLY, UHF.3, from transmitter/receiver					1	—	RC4/24
		to interconnecting box							
EB6.82.553	.	CABLE, ASSEMBLY, UHF.1A, from pressure bulkhead					1	—	RC4/25
		to frame 29							
5394/16	.	CABLE, ASSEMBLY, from pressure bulkhead to					1	—	RC4/26
		terminal blocks							
5394/17	.	CABLE, ASSEMBLY, from pressure bulkhead to pilot's					1	—	RC4/27
		port auxiliary panel							
R 640-1-02600	.	CABLE, unit, type C1607/4, pilot's					1	—	RC4/28
R 640-1-12638	.	CONTROL, unit, type C1607/7, navigator's					1	—	RC4/29
EA3.82.5659	.	PANEL ASSEMBLY, AERIAL SWITCH UNIT					1	—	RC4/30
		(MOD 4859)							
		(For spares breakdown see Page RC.4)							
EA3.82.255	.	PANEL, UHF, BETWEEN FRAMES 30 AND 30A,					—	—	RC4/31
		INSTALLATION							
		(For spares breakdown see Page RC.8)							
R WT33046	.	SWITCHING unit, type 184, press to mute					RF	—	RC4/32
31722	.	TRANSMITTER/RECEIVER, STANDBY UHF, IN					—	—	RC4/33
		LOWER EQUIPMENT BAY, INSTALLATION							
		(For spares breakdown see Page RC.4)							
40958	.	TRANSMITTER/RECEIVER, PTR.175, BETWEEN					—	—	RC4/34
		FRAMES 29A AND 30, INSTALLATION							
		Spares for:—							
R CP190003	.	MOUNTING, type MT1477					1	—	RC4/35
		Attaching parts for CP190003:—							
R A25/5C	.	Bolt, 2BA					16	—	RC4/36
R 640-1-03492	.	TRANSMITTER/RECEIVER, PTR.175					1	—	RC4/37

AP101B-0402-3A

Page RC.7

RADIO
U.H.F., A.R.I. 18124/1

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA3.82.227	U.H.F. -A.R.I. 18124/1, INSTALLATION (MOD.3905-S.O.O) (PRE MODS.4937 AND 4868) Spares for:						—	—	
EB6.82.611	. AERIAL, UPPER, INSTALLATION Spares for:						—	—	RG4/1
RSP20448	. . AERIAL, U.H.F. Type A.100 Attaching parts for Ref. 10B/9118266:						1	—	RC4/2
AS1242/4C	. . Bolt, 2BA						8	—	RC4/3
EB6.82.1417	. . Plate, mounting						1	—	RC4/4
EA3.82.279	. BOX, RELAY, U.H.F./V.H.F., INSTALLATION Spares for:						—	—	RC4/5
EB6.82.1365	. . BOX, RELAY, ASSEMBLY Consisting of:						1	—	RC4/6
703-2-00244	. . . BLOCK, terminal, 10-wav Attaching parts for 703-2-00244:						1	—	RC4/7
EB6.82.1373	. . . Pillar						2	—	RC4/8
A31B10	. . . Screw, 4BA						2	—	RC4/9
A31B24	. . . Screw, 4BA						2	—	RC4/10
EB6.82.1369	. . . BOX, shell, assembly						1	—	RC4/11
EB6.82.1375	. . . LID Attaching parts for EB6.82.1375:						1	—	RC4/12
A31B16	. . . Screw, 4BA						4	—	RC4/13
AGS2035B	. . . Washer, shakeproof						4	—	RC4/14
EA9.81.4623	. . . MOUNTING, RELAY, ASSEMBLY Consisting of:						1	—	RC4/15
AGS2001A1	 NUT, 6BA						2	—	RC4/16
EA9.81.4203	 PANEL, relay, mounting						1	—	RC4/17
LP733615	 PLATE						2	—	RC4/18
4190HD	 RELAY, midget						2	—	RC4/19
A33A18	 SCREW, 6BA						2	—	RC4/20
LP736720	 SOCKET						2	—	RC4/21
LP733614	 SPRING						2	—	RC4/22
SP13A	 WASHER						2	—	RC4/23
EB6.82.1373	. . . Pillar						4	—	RC4/24
A31B6	. . . Screw, 4BA						2	—	RC4/25
A31B10	. . . Screw, 4BA						2	—	RC4/26
AGS2035B	. . . Washer, shakeproof						8	—	RC4/27
CZ49112	. . . PLUG, Mk.4						1	—	RC4/28
CZ48995	. . . PLUG, Mk.4						1	—	RC4/29
EEAS146/12	. . . SLEEVE						10	—	RC4/30
EEAS146/22	. . . SLEEVE						16	—	RC4/31
EEAS146EQ	. . . SLEEVE						36	—	RC4/32
CZ49459	. . . SOCKET						1	—	RC4/31
HC294	. . . TAG						1	—	RC4/34
HC490	. . . TAG						9	—	RC4/35
HC500	. . . TAG						2	—	RC4/36
AS1246/1C	. . Bolt, 2BA						4	—	RC4/37
SP13C	. . Washer						4	—	RC4/38
EA3.82.281	. . CHANNEL						1	—	RC4/39
EA3.82.283	. . CHANNEL						1	—	RC4/40

R
R

RADIO

AP101B-0402-3A

U.H.F., A.R.I. 18124/1

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA3.82.229	.	CONNECTOR, U.H.F. 1, from frame 29 to inter-					1	—	RC5/1
EA3.82.231	.	CONNECTOR, U.H.F. 2, from interconnecting box					1	—	RC5/2
EA3.82.233	.	CONNECTOR, U.H.F. 3, from transmitter/receiver					1	—	RC5/3
EA3.82.235	.	CONNECTOR, U.H.F. 4, from frame 29 to inter-					1	—	RC5/4
EA3.82.237	.	CONNECTOR, U.H.F. 4A, from pressure bulkhead					1	—	RC5/5
EA3.82.239	.	CONNECTOR, U.H.F. 4B, from relay box to pressure					1	—	RC5/6
EA3.82.241	.	CONNECTOR, U.H.F. 5, from transmitter receiver					1	—	RC5/7
EA3.82.243	.	CONNECTOR, U.H.F. 6, from interconnecting box					1	—	RC5/8
EB6.82.553	.	CONNECTOR, U.H.F. 1A, from pressure bulkhead					1	—	RC5/9
EB6.82.555	.	CONNECTOR, U.H.F. 1B, from control unit to					1	—	RC5/10
EA3.82.245	.	HOLDER, TUNING CARD, INSTALLATION					—	—	RC5/11
EA3.82.247	.	BRACKET, mounting					1	—	RC5/12
CP102302	.	HOLDER, card					1	—	RC5/13
630/8/07401	.	MOUNTING, Type MT1477 ARC52					1	—	RC5/14
A25/1C	.	Bolt, 2BA					16	—	RC5/15
SP15C	.	Washer					16	—	RC5/16
EA3.82.255	.	PANEL, U.H.F. IN CENTRE FUSELAGE,					—	—	RC5/17
AS2651	.	BOARD, terminal					1	—	RC5/18
A31B16	.	Screw, 4BA					2	—	RC5/19
CP191999	.	BOX, interconnecting					1	—	RC5/20
A31B16	.	Screw, 4BA					4	—	RC5/21
SP15B	.	Washer					4	—	RC5/22
CP195566	.	CONTROL, receiver, muting					1	—	RC5/23
A31B16	.	Screw, 4BA					4	—	RC5/24
SP15B	.	Washer					4	—	RC5/25
AS2638	.	COVER, assembly, terminal board					1	—	RC5/26
PLESSEY	.	FERRULE, adaptor					1	—	RC5/27
Z49631	.	PANEL, assembly					1	—	RC5/28
EA3.82.257	.	Attaching parts for EA3.82.257:							
A31C16	.	Screw, 2BA					4	—	RC5/29
SP15C	.	Washer					4	—	RC5/30
AS2640	.	SOCKET, terminal					2	—	RC5/31
HC312	.	TAG					1	—	RC5/32

AP101B-0402-3A

Page RC.9

RADIO AND INTER-COMM.

U.H.F. - A.R.I. 18124/1

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.
EA3.82.249	. STRUCTURE, SUPPORT, TRANSMITTER/RECEIVER GROUP	—	—	RC5/33
EA3.82.251	. . CHANNEL, ASSEMBLY	2	—	RC5/34
ARC.52/T5	. TRANSMITTER/RECEIVER, ARC.52/T5	1	—	RC5/35

R

RADIO

ILS, ARI. 18011

	Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.
R	EA3.82.7007	INSTALLATION OF ILS, ARI. 18011 (MOD 4937) (S.O.O.) (PRE-MOD 5204)	—	—	
R	EA3.82.8007	INSTALLATION OF ILS, ARI. 18011 (MOD 5204) (S.O.O.) Spares for:—	—	—	
	3C40306	. AERIAL, ILS, IN PORT WING LEADING EDGE, INSTALLATION (SRIM.3577) (MOD 4937) (S.O.O.) Spares for:—	—	—	RC6/1
R	VNC400	. . AERIAL, type 239, localiser Attaching parts for VNC400	1	—	RC6/2
R	A26½C	. . Bolt, 2BA	18	—	RC6/3
	EA9.20.1379	. . COVER, assembly, aerial Attaching parts for EA9.20.1379:—	1	—	RC6/4
	EEAS1/3C	. . Screw, 2BA	38	S96	RC6/5
	EA3.20.1727	. . Seal, neoprene	1	—	RC6/6
	EA3.20.2253 or 41067	. . HOUSING, aerial . . HOUSING, aerial	1 1	— —	RC6/7
	3C40305	. AERIAL, ILS, IN STARBOARD WING LEADING EDGE, INSTALLATION (SRIM.3577) (MOD 4937) (S.O.O.) Spares for:—	—	—	RC6/8
R	WTC125808	. . AERIAL, type 238, glide path Attaching parts for WTC125808:—	1	—	RC6/9
R	A26½C	. . Bolt, 2BA	10	—	RC6/10
	EA9.20.1381	. . COVER, assembly, aerial Attaching parts for EA9.20.1381:—	1	—	RC6/11
	EEAS1/3C	. . Screw, 2BA	20	S96	RC6/12
	EA3.20.1757	. . Seal, neoprene	1	—	RC6/13
	EA3.20.1773 or 41080	. . HOUSING, aerial . . HOUSING, aerial	1 1	— —	RC6/14
	3C40307	. AERIAL, ILS, IN STARBOARD INNER WING, INSTALLATION (SRIM.3577) (MOD 4937) (S.O.O.) Spares for:—	—	—	RC6/15
R	WTC125784	. . AERIAL, type 237, marker	1	—	RC6/16
R	3C12230	. . COVER, assembly, aerial (Ref. No. 18320 modified) Attaching parts for WTC125784 and 3C12230:—	1	—	RC6/17
R	AGS2001C1-66	. . Nut, 2BA	28	—	RC6/18
	3C12229	. . Packing, seal, neoprene	1	—	RC6/19
	EEAS1/3C	. . Screw, 2BA	28	S96	RC6/20
	SP13C	. . Washer	28	—	RC6/21
	13952	. . PLUG, aerial cover	1	—	RC6/22
	3C30780	. BOX, JUNCTION, TYPE 164, AFT OF FRAME A, PORT SIDE, INSTALLATION (SRIM.3577) (MOD 4937) (S.O.O.) Spares for:—	—	—	RC6/23
R	WTB116236	. . BOX, junction, type 164 Attaching parts for WTB116236	1	—	RC6/24
R	AGS2001B1	. . Nut, 4BA	4	—	RC6/25
	A31B12	. . Screw, 4BA	4	—	RC6/26
	SP13B	. . Washer	4	—	RC6/27

AP101B-0402-3A

RADIO

ILS, ARI. 18011

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
5328/1	. CABLE, ASSEMBLY, from junction box 157 to terminal block (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5328/2	. CABLE, ASSEMBLY, from junction box 157 to terminal block (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5328/4	. CABLE, ASSEMBLY, from port outer engine break to localiser aerial (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5328/5	. CABLE, ASSEMBLY, from starboard outer engine break to glide path aerial (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5328/6	. CABLE, ASSEMBLY, from receiver R1964 to pressure bulkhead (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5328/7	. CABLE, ASSEMBLY, from receiver R1964 to pressure bulkhead (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5328/8	. CABLE, ASSEMBLY, from receiver R1965 to pressure bulkhead (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5328/9	. CABLE, ASSEMBLY, from port wing root break to inner engine break (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5328/10	. CABLE, ASSEMBLY, between port engine breaks (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5328/11	. CABLE, ASSEMBLY, from starboard wing root break to inner engine break (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5328/12	. CABLE, ASSEMBLY, between starboard engine breaks (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5328/14	. CABLE, ASSEMBLY, from JB.157 to JB.164 (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5328/15	. CABLE, ASSEMBLY, from JB.164 to electrical indicator (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5328/18	. CABLE, ASSEMBLY, from JB.164 to marker lamp (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5328/19	. CABLE, ASSEMBLY, from pressure bulkhead to starboard wing root break (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5328/20	. CABLE, ASSEMBLY, from pressure bulkhead to marker aerial (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5328/21	. CABLE, ASSEMBLY, from pressure bulkhead to port wing root break (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5406/1	. CABLE, ASSEMBLY, from JB.157 to control unit (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5406/2	. CABLE, ASSEMBLY, from JB.157 to control unit (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5406/3	. CABLE, ASSEMBLY, from JB.157 to control unit (SRIM.3577) (Mod.4937-S.O.O)	1	—	
5406/4	. CABLE, ASSEMBLY, from JB.157 to radio junction box (SRIM.3577) (Mod.4937-S.O.O)	1	—	
40602	. CABLE ROUTING FOR AERIALS IN MAINPLANES (SRIM.3577) (MOD.4937-S.O.O) (PRE MOD.5204) Spares for:	—	—	
3C12244	. . BRACKET, for cable break plug	4	—	
3C40303	. . CONDUIT, BETWEEN SPAR AND AERIALS, INSTALLATION Spares for:	—	—	
3C12237	. . . CONDUIT	2	—	
3C12240	. . CONDUIT, outer wing aft of spar	2	—	
	. . PLUG, type 753, at cable breaks	6	—	
EA3.82.8045	. CABLE RUNS FOR AERIAL IN PORT MAINPLANE (MOD.5204-S.O.O)	—	—	
EA3.82.8046	. CABLE RUNS FOR AERIAL IN STARBOARD MAINPLANE (MOD.5204-S.O.O) Spares for:	—	—	
EA3.82.8047	. . BRACKET, assembly on rib 5B (Mod.5204-S.O.O)	1	L73	
40602	. . CABLE ROUTING FOR AERIALS IN MAINPLANES (SRIM.3577) (MOD.5204-S.O.O) (For spares breakdown see Page RC.11)	—	—	

R

R

R

RADIO
ILS, ARI. 18011

AP101B-0402-3A

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
5413/1	. PLUG, shorting, at JB.164	1	—	
5413/2	. PLUG, shorting, at JB.164	1	—	
EA3.82.7065	. RECEIVERS AND EQUIPMENT, FORWARD OF FRAME 1, INSTALLATION (MOD.4937-S.O.O) (PRE MOD.5204)	—	—	
31906	. RECEIVERS AND EQUIPMENT, FORWARD OF FRAME 1, INSTALLATION (SRIM.3577) (MOD.5204-S.O.O)	—	—	RC6/28
AS2635	. . BOARD, terminal, 19A Spares for:	1	—	RC6/29
Type 157	. . BOX, junction, type 157	1	—	RC6/30
3C30780	. . BOX, JUNCTION, TYPE 164, INSTALLATION (SRIM.3577) (MOD.5204-S.O.O) Spares for:	—	—	RC6/31
Type 164	. . . BOX, junction, type 164 Attaching parts for Type 164:	1	—	RC6/32
AGS2001B1	. . . Nut, 4BA	4	—	RC6/33
A31B12	. . . Screw, 4BA	4	—	RC6/34
SP13B	. . . Washer	4	—	RC6/35
AS2603	. . COVER, terminal board	1	—	RC6/36
3C12906	. . PANEL, access (SRIM.3577) (Mod.5204-S.O.O) Attaching parts for 3C12906:	1	—	RC6/37
A31B16	. . Screw, 4BA	8	—	RC6/38
Type 933	. . RACK, mounting, type 933 Attaching parts for Type 933:	1	—	RC6/39
A25/12E	. . Bolt, 1/4" BSF	4	—	RC6/40
	. . Washer, check	4	—	RC6/41
Type 1965	. . RECEIVER, (Alternative fit to item below when 40 channel pairing required)	1	—	
Type 1965	. . RECEIVER, glide path	1	—	
Type 1964	. . RECEIVER, (Alternative fit to item below when 40 channel pairing required)	1	—	
R1964	. . RECEIVER, localiser marker	1	—	
152968	. . REGULATOR, voltage, type 60 Attaching parts for 152968:—	1	—	RC6/42
A25/16C	. . Bolt, 2BA	4	—	RC6/43
SP13C	. . Washer	4	—	RC6/44
EA3.82.7085	. STRUCTURE, RECEIVERS AND REGULATOR, INSTALLATION (MOD.4937-S.O.O) (PRE MOD.5204)	—	—	
3C40254	. STRUCTURE, RECEIVERS AND REGULATOR, INSTALLATION (SRIM.3577) (MOD.5204-S.O.O) Spares for:	—	—	RC6/45
3C12096	. . PANEL, access (SRIM.3577) (Mod.4937-S.O.O) Attaching parts for 3C12096:	1	—	
A31B16	. . Screw, 4BA	8	—	
3C21020	. . PLATE, cover (SRIM.3577) (Mod.4937-S.O.O) (Mod.5204-S.O.O) Attaching parts for 3C21020:	1	—	RC6/46
A25/1/4B	. . Bolt, 4BA	12	—	RC6/47
3C30781	. . PLATFORM, voltage regulator (SRIM.3577) (Mod.4937-S.O.O) (Mod.5204-S.O.O)	1	—	RC6/48
AS2606	. . TERMINAL, screwed head, 4-way, double tier	5	—	RC6/49
31186	. UNIT, CONTROL, TYPE 705, INSTALLATION (SRIM.3577) (MOD.4937-S.O.O)	—	—	
32668	. UNIT, CONTROL, TYPE 705, INSTALLATION (SRIM.3868) (MOD.5204-S.O.O) Spares for:	—	—	RC6/50
	. . UNIT, control, type 705	1	—	RC6/51

AP101B-0402-3A

RADIO

SINGLE ILS, TWIN VOR, AD260, ARI.23118

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
41001	INSTALLATION OF SINGLE ILS, TWIN VOR. AD260, ARI.23118 (SRIM.3479) (MOD.4868-S.O.O) For Aircraft WJ637 and WJ731 Spares for:	—	—	
3C40305	. AERIAL, ILS, IN STARBOARD WING LEADING EDGE, INSTALLATION (For spares breakdown see Page RC.10)	—	—	RC7/1
3C40307	. AERIAL, ILS, IN STARBOARD INNER WING, INSTALLATION (For spares breakdown see Page RC.10)	—	—	RC7/2
40956	. AERIALS AND ACCESS PANELS IN FIN, INSTALLATION Spares for:	—	—	RC7/3
R 140LRU99A/1	. . AERIAL, type 140-LRU-99A Attaching parts for 140LRU99A1:—	2	—	RC7/4
A113/3D	. . Bolt, 10 UNF	6	—	RC7/5
A113/5D	. . Bolt, 10 UNF	4	—	RC7/6
10D1078789	. . COUPLER, transmission line, type 133-LRU-14A Attaching parts for 10D/107879:	1	—	RC7/7
A25/1B	. . Bolt, 4BA	4	—	
40954A	. . PANEL, access, port, 10 SWG	1	L72	RC7/9
40954B	. . PANEL, access, starboard, 10 SWG Attaching parts for 40954A or 40954B:	1	L72	RC7/10
AS1242/14B	. . Bolt, 4BA	18	—	RC7/11
31760	. . PLATE, COVER AND FAIRLEAD, PORT, INSTALLATION Spares for:	—	—	RC7/12
13753	. . . FAIRLEAD (Make from Ref.5F/9400952) Attaching parts for 13753:	1	—	RC7/13
A25/2B	. . . Bolt, 4BA	4	—	RC7/14
13751	. . . PLATE, cover, 12 SWG Attaching parts for 13751:	1	L73	RC7/15
AS1242/1C	. . . Bolt, 2BA	8	—	RC7/16
41071	. BOX, JUNCTION, ILS/VOR, ASSEMBLY Spares for:	1	—	RC7/17
AS2736	. . BLOCK, fuse, 12-way	1	—	RC7/18
41070	. . BOX, junction	1	—	RC7/19
R Y2240095-3	. . CLIP, relay	1	—	RC7/20
10H4709460	. . FUSE, 5A	9	—	RC7/21
R WIS.10112-C-1	. . FUSE, 5A, HRC	2	—	RC7/22
31835	. . LID, junction box	1	—	RC7/23
TJ.11E-02-05	. . MODULE	5	—	RC7/24
TJ.11E-02-02	. . MODULE	5	—	RC7/25
R Y2240095-1	. . PLATE, clip retaining	1	—	RC7/26
460-8-33P	. . PLUG, 3-way	1	—	RC7/27
460-10-6P	. . PLUG, 6-way	1	—	RC7/28
460-10-6PC	. . PLUG, 6-way	1	—	RC7/29
460-10-6PE	. . PLUG, 6-way	1	—	RC7/30

RADIO

AP101B-0402-3A

SINGLE ILS, TWIN VOR, AD260, ARI.23118

Part Number	Description					No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5 6			
460-10-6PF	.	.	PLUG, 6-way			1	—	RC7/31
460-12-10P	.	.	PLUG, 10-way			1	—	RC7/32
460-12-10PB	.	.	PLUG, 10-way			1	—	RC7/33
460-12-10PC	.	.	PLUG, 10-way			1	—	RC7/34
460-14-5P	.	.	PLUG, 5-way			1	—	RC7/35
460-14-19P	.	.	PLUG, 19-way			1	—	RC7/36
460-16-26P	.	.	PLUG, 26-way			1	—	RC7/37
SM5AN96	.	.	RELAY, magnetic, small			1	—	RC7/38
KT94127/1	.	.	SOCKET, relay			1	—	RC7/39
460-10-6S	.	.	SOCKET, 6-way			1	—	RC7/40
460-10-6SB	.	.	SOCKET, 6-way			1	—	RC7/41
460-10-6SC	.	.	SOCKET, 6-way			1	—	RC7/42
460-10-6SE	.	.	SOCKET, 6-way			1	—	RC7/43
460-10-6SF	.	.	SOCKET, 6-way			1	—	RC7/44
D5900	.	.	SWITCH, magnetic, type 20B No.3			2	—	RC7/45
5393/1	.	.	CABLE, ASSEMBLY, aerial type 140-LRU-99A to balance unit			2	—	
5393/2	.	.	CABLE, ASSEMBLY, from balance unit to frame 29			1	—	
5393/3	.	.	CABLE, ASSEMBLY, from frame 29 to pressure bulkhead			1	—	
5393/4	.	.	CABLE, ASSEMBLY, from pressure bulkhead to T junction			1	—	
5393/5	.	.	CABLE, ASSEMBLY, from T junction to interconnecting box M7			1	—	
5393/6	.	.	CABLE, ASSEMBLY, from T junction to interconnecting box EJB 21D			1	—	
5328/5	.	.	CABLE, ASSEMBLY, from glide path aerial to coupling			1	—	
D273/30A/R2	.	.	CABLE, ASSEMBLY, glide path aerial continuation between first and second couplings			1	—	
D267/30A/R10	.	.	CABLE, ASSEMBLY, glide path aerial continuation between second and third couplings			1	—	
5393/7	.	.	CABLE, ASSEMBLY, glide path aerial, from third coupling to pressure bulkhead			1	—	
5393/8	.	.	CABLE, ASSEMBLY, glide path aerial, from pressure bulkhead to interconnecting box M7			1	—	
5393/9	.	.	CABLE, ASSEMBLY, from marker aerial to pressure bulkhead			1	—	
5393/10	.	.	CABLE, ASSEMBLY, marker aerial, from pressure bulkhead to interconnecting box M8			1	—	
5393/11	.	.	CABLE, ASSEMBLY, from ILS/VOR junction box to G4B master indicator			1	—	
5393/12	.	.	CABLE, ASSEMBLY, from interconnecting box EJB8 21D to G4B master indicator			1	—	
5393/13	.	.	CABLE, ASSEMBLY, from interconnecting box M7 to G4B master indicator			1	—	
5393/14	.	.	CABLE, ASSEMBLY, from ILS/VOR 1 control unit to interconnecting box M7			1	—	
5393/15	.	.	CABLE, ASSEMBLY, from interconnecting box EJB 21D to VOR 2 control unit			1	—	

AP101B-0402-3A

Page RC.15

RADIO

SINGLE ILS, TWIN VOR, AD260, ARI.23118

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
5393/16	. CABLE, ASSEMBLY, from ILS/VOR junction box to omni bearing indicator	1	—	
5393/17	. CABLE, ASSEMBLY, from ILS/VOR junction box to pilot's radio magnetic indicator	1	—	
5393/18	. CABLE, ASSEMBLY, from ILS/VOR junction box to pilot's radio magnetic indicator	1	—	
5393/19	. CABLE, ASSEMBLY, from ILS/VOR junction box to pilot's radio magnetic indicator	1	—	
5393/20	. CABLE, ASSEMBLY, from ILS/VOR junction box to navigator's magnetic indicator	1	—	
5393/21	. CABLE, ASSEMBLY, from ILS/VOR junction box to navigator's radio magnetic indicator	1	—	
5393/22	. CABLE, ASSEMBLY, from ILS/VOR junction box to navigator's radio magnetic indicator	1	—	
5393/23	. CABLE, ASSEMBLY, from ILS/VOR junction box to ILS/VOR switch and indicator	1	—	
5393/24	. CABLE, ASSEMBLY, from ILS/VOR junction box to interconnecting box EJB 21D	1	—	
5393/25	. CABLE, ASSEMBLY, from ILS/VOR junction box to interconnecting box M7	1	—	
5393/26	. CABLE, ASSEMBLY, from ILS/VOR junction box to interconnecting box M7	1	—	
5393/27	. CABLE, ASSEMBLY, from ILS/VOR junction box to interconnecting box M7	1	—	
5393/28	. CABLE, ASSEMBLY, from ILS/VOR junction box to interconnecting box EJB 21D	1	—	
5393/29	. CABLE, ASSEMBLY, from ILS/VOR junction box to interconnecting box M8	1	—	
5393/30	. CABLE, ASSEMBLY, from ILS/VOR junction box to power supplies	1	—	
5393/31	. CABLE, ASSEMBLY, from interconnecting box M7 to radio junction box	1	—	
5393/32	. CABLE, ASSEMBLY, from interconnecting box EJB1 21D to radio junction box	1	—	
5393/33	. CABLE, ASSEMBLY, from interconnecting box M8 to radio junction box	1	—	
5393/34	. CABLE, ASSEMBLY, from interconnecting box M8 to marker indicator unit	1	—	
5393/35	. CABLE, ASSEMBLY, from radio junction box to voice range switch	1	—	
R A30-2534-01	. CONTROL, unit, type 7430M	2	—	RC8/1
41005	. EQUIPMENT ON NAVIGATOR'S CONSOLE LOWER SHELF Spares for:	RF	—	RC8/2
R W104056-1-A	. . ANALYSER, navigational, type 6402MA	1	—	RC8/3
R 3041D1267M	. . BOX, interconnecting, EJB 21D	1	—	RC8/3
5975-99-9713436	. . RACK, electrical for 6402MA, 6401M and EJB 21D	1	—	RC8/4
R W104055	. . RECEIVER, type 6401M	1	—	RC8/5
R TEA071-50	. JUNCTION, tee	1	—	RC8/6

RADIO

SINGLE ILS, TWIN VOR, AD260, ARI.23118

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
31838	. PANEL, access, ILS aerial, between ribs 6B and 7A, starboard inner wing	1	—	RC8/7
41200	. PANEL, PILOT'S INSTRUMENT, GROUP Spares for:	—	—	RC8/8
RL7003/184B	. . INDICATOR, Mk.1, omni bearing Attaching parts for RL7003-184B:—	1	—	RC8/9
A217B24	. . Screw, 6 UNC	3	—	RC8/10
PW/21RNA/CP/1	. . INDICATOR, radio magnetic Attaching parts for PW21RNACP1:—	1	—	RC8/11
26TA9557296	. . Clamp	1	—	RC8/12
A217D24	. . Screw, 10 UNF	2	—	RC8/13
31778	. . INDICATOR unit, marker, assembly Attaching parts for 31778:	1	—	RC8/14
A25/2C	. . Bolt, 2BA	2	—	RC8/15
41207	. PANEL, SPRUNG, NAVIGATOR'S INSTRUMENT, GROUP Spares for:	—	—	RC8/16
19834-0	. . INDICATOR, master, G4B, type E5 Attaching parts for 19834-0:—	1	—	RC8/17
AGS2001C1-66	. . Nut, 2BA	3	—	RC8/18
A32C32	. . Screw, 2BA	3	—	RC8/19
SP13C	. . Washer	3	—	RC8/20
PW/21RNA/CP/1	. . INDICATOR, radio magnetic Attaching parts for PW21RNACP1:—	1	—	RC8/21
26TA11140	. . Clamp	1	—	RC8/22
A217D24	. . Screw, 10 UNF	2	—	RC8/23
40982	. RECEIVERS AT NAVIGATOR'S STATION, PORT WALL, INSTALLATION Spares for:	—	—	RC8/24
W104056-1-A	. . ANALYSER, navigational, type 6402MA	1	—	RC8/25
EJB21B-1	. . BOX, interconnecting, type M7 (Pre Mod.5251)	1	—	RC8/26
EJB21B-1	. . BOX, interconnecting, type M7A (Mod.5251)	1	—	
10AD4309260	. . BOX, interconnecting, type M8	1	—	RC8/27
3041D0660	. . RACK, type M35 for marker receiver Attaching parts for 3041D0660	1	—	RC8/28
A25/2E	. . Bolt, 1/4" BSF	6	—	RC8/29
AGS2001E1/66	. . Nut, 1/4" BSF	6	—	RC8/30
SP13E	. . Washer	6	—	RC8/31
3041D0630	. . RACK, type M36 for VHF and glideslope receiver and analyser Attaching parts for 3041D0630:—	1	—	RC8/32
A25/8E	. . Bolt, 1/4" BSF	4	—	RC8/33
W104058/SHI/ED/A 10AD6384405	. . RECEIVER, glideslope, type 6404M (Pre Mod.5251)	1	—	RC8/34
	. . RECEIVER, glideslope, type 6404ME (Mod.5251)	1	—	
W104057/SHI/ED/A W104055	. . RECEIVER, marker, type 6403M	1	—	RC8/35
	. . RECEIVER, VHF, type 6401M	1	—	RC8/36

CHAPTER RC
FIGURES TO BE ISSUED LATER