AP 101B-0402-3A

UNDERCARRIAGE

Page WB.1

Part Number	art Number Description			Plate No.	
EA1.40.2	MAIN UNDERCARRIAGE, STARBOARD ASSEMBLY	1	-		
EA3.40.6	Consisting of: LEG, OLEO (LESS WHEEL, FIXED FAIRING AND BRAKE UNIT), ASSEMBLY	1	-	WB1/13	
DUNLOP AH9598	Consisting of: . BRAKE, unit (For spares see AP.4515, Sect.2, Chap.37) Attaching parts for AH9598:	1	-	WB1/14	
EA6.40.35	Bolt	10	S97	WB3/1	
A27NS	Nut, ½" BSF	10	-	WB3/33	
SP90E8	. Pin, split	10	-	WB3/35A	
EA3.40.43	Washer	10	DTD124A	WB3/35	
EA3.20.854	FAIRING, FIXED, ASSEMBLY (Supplied with trim allowance) Spares for:	1	-	WB1/15	
EA3.20.2870	Spares for: PANEL, HINGE, ASSEMBLY Spares for:	1	-	WB1/16	
E 4 4 00 4070	HINGE	1	_	WB1/6	
EA1.20.1679 EA1.20.1676	PANEL, hinge, 16 SWG	1	L72	WB1/17	
EA1,20,436	SPRING	2	-	WB1/18	
EA1.20.6817	PANEL access, picket point	1	-	WB1/9	
EA3.20.1627	SEAL, 'P' (Make from EEAS 121) (26FZ/4432)	1	-	WB1/10	
EA3.20.5317	SEAL, 'P' (Make from EEAS 843) (26FZ/6147758) (Mod.5282)	1	-	WB1/19	
EA3.20.1741	SEAL 'P' (Make from EEAS120) (26FZ/20626) (Pre Mod.5282)	1	-	WB1/20	
EA3.20.5319	SEAL, 'P' (Make from EEAS842) (26FZ/6147759) (Mod.5282)	1	-	WB1/21	
EA1.40.519	Attaching parts for EA3.20.854: . Bolt, securing, fixed fairing mounting brackets to let (Made from A25/5G)	8	-	WB2/34	
SP47E	Washer, ¼" BSF spring	8	-	WB2/35	
EA3.40.234	LEG, SLIDING AND OLEO HEAD, ASSEMBLY Spares for:	1	-	WB2/67	
EA1.40.639	BRACKET, angle, micro-switch, mounting Attaching parts for EA1.40.639:	1	L72	WB2/68	
A25/4B	Bolt, 4BA	4	-	WB2/69	
A27BP	Nut, 4BA	4		WB2/70	
EA1.40.335	Plate, packing	1 4	LA	WB2/71 WB2/72	
SP47B	Washer FINGER, operating micro-switch plunger	1	_	WB2/73	
EA1.40.671	Attaching parts for EA1.40.671:	2	_	WB2/74	
A31C20 SP47C	Washer	2	-	WB2/75	
			1	1	

Page WB.2

UNDERCARRIAGE

AP 101B-0402-3A

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.
EA3.40.232	HEAD, OLEO, ASSEMBLY	1	_	WB2/76
EA1.40.89	Spares for: BEARING, spherical seated, ball joint side stay Attaching parts for EA1.40.89:	1	S11	WB2/4
EA1.40.101 EA1.40.96	Bush, bearing Ring, lower, retaining, ball joint	1 1	DTD412 DTD124	WB2/5 WB2/77
EA1.40.98 EA1.40.99	Ring, upper, retaining, ball joint Stud, retaining rings	1 12	DTD124 S11	WB2/78 WB2/8
EA9.40.63 EA1.40.111	BUSH, pivot BUSH, torque link lug	2 2	DTD412 DTD412	WB2/9 WB2/10
EA1.40.679	Attaching parts for EA1.40.111: Plug, bearing bush, retaining	1	L40	WB2/11
EA1.40.133	DISC, sealing piston dowel plug Attaching parts for EA1.30.133:	2	L40	WB2/12
EA1.40.625	Screw, retaining plug dowel seal	1	L40	WB2/13
EA.40.131 EA9.40.56 or	DOWEL, piston HEAD, oleo, forging	1	S11 DTD683	WB2/14 WB2/79
EA9.07.36	HEAD, oleo, forging c/w bushes (spares Conditioned)	1	-	
EA1.40.103 EA1.40.127	HOOK, 'S' shaped, 16 SWG PIPE, stack, assembly	2	-	WB2/16 WB2/17
AGS1138B	Attaching parts for EA1.40.127: Washer, jointing	1	-	WB2/18
EA1.40.18	PISTON, OPERATING, ASSEMBLY Consisting of:	1	-	WB2/80
EEAS37/22A EA1.40.647 EA1.40.649	NIPPLE, 2BA PISTON PLATE, orifice enclosure, control Attaching parts for EA4.40.649:	2 1 1	S11 DTD197 S11	WB2/20 WB2/21 WB2/22
EA1.40.61	Bolt, attachment, orifice plate	3	S11	WB2/23
EA1.40.651 EEAS38/3A EA1.40.118 EA1.40.155	RING, piston SPOKE, 2BA STRUT, piston, main RING, sealing, at dowel	1 1 1 2	S11 T4	WB2/24 WB2/25 WB2/81 WB2/27
EA1.40.105	TUBE, distance	1	L40	WB2/30
AGS2096A	VALVE, charging Attaching parts for AGS2096A:—	1	-	WB2/28
AS1246/5C SP47C AGS1138B EA1.40.149	Bolt, 2BA round head Washer Washer, jointing Washer, locking, valve 14 SWG	1 1 1 1		WB2/29 WB2/31 WB2/32 WB2/33
	0.00			

AP 101B-0402-3A

UNDERCARRIAGE

Page WB.3

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.
A3.40.236	LEG, SLIDING, COMPRESSION, ASSEMBLY Consisting of:	1	-	WB3/36
- 40 40 301	BOLT, clamp, axle locking	1	\$95	WB3/3
A3.40.201	BUSH, bearing, in lug	2	DTD124	WB3/5
A1.40.161	BUSH, bearing (Mod.271)	1	_	WB3/4
A3.40.45	CLAMP, AXLE, ASSEMBLY	1 1	_	WB3/6
A3.40.13	Spares for:			
	Spares for:	1	L16	WB3/7
A3.40.23	BUSH	1	_	WB3/8
A3.40.17	CLAMP, axle body	1 1	_	WB3/9
A3.40.19	LINK, towing Attaching parts for EA3.40.19:	1 '		
900001000000		1	_	WB3/9A
A27JS	Nut	1 1		WB3/9B
SP90C8	Pin, split	1 1	_	WB3/9C
SP10J	Washer	1 1	_	WB3/10
EA3.40.21	Washer, tow link	1 '		1100/10
	HOMEING SEATS	1	L65	WB3/11
EA3.40.209	HOUSING, SEALS	1		WB3/12
EA3.40.10	LEG, sliding, c/w integral axle	1 1	S11	WB3/13
EA1.40.41	NUT, stop	3	\$97	WB3/14
EA3.40.221	PIN, locking piston	1	DTD197	WB3/15
EA3.40.219	PISTON, sliding leg	1	\$65	WB3/16
EA1.40.175	PLATE, orifice	1 '	555	
	Attaching parts for EA1.40.175:	6	S11	WB3/!7
EA1.40.61	Bolt, stud	1 0	311	1.557.7
	with the state of	2	L40	WB3/19
EA1.40.677	PLUG, pivot bearing bush retaining	1	DTD683	WB3/18
EA3.40.203	PLUG, sealing		Fabric	WB3/18 WB3/27
EA1.40.215	RING, backing	2	10. 10.000	WB3/24
EA3.40.207	RING, distance, between sealing and backing rings	1	L64	WB3/22
EA1.40.57	RING, piston	1	MS	WB3/22 WB3/20
EA1.40.45	RING, retaining, felt washer, 12 SWG	1	IVIS	VVB3/20
	Attaching parts for EA1.40.45:		34.000	WP2/24
AS1242/1B	Bolt,4BA	8	-	WB3/21
EA3.40.213	RING, sealing, seal housing	2	Synthetic	WB3/26
EA1.40.205	RING, sealing	1	Rubber Synthetic	WB3/23
			Rubber	WB3/25
EA3.40 211	RING, sealing, seal housing	1	Soft Rubber DTD683	WB3/29
EA1.40 659	RING, shock absorber, stop	1 1	DTD683	WB3/29 WB3/28
EA1.40.657	RING, spacer, between sealing rings			
	-			

Page WB.4

UNDERCARRIAGE

AP 101B-0402-3A

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.
EA1.40.167	SCREW, grub, stop nut locking	1	S1	WB3/30
EA1.40.39	WASHER, fibre, under stop nut	l i	BS216	WB3/31
EA1.40.43				
	WASHER, packing, 3/16" stop	1	RS4 Felt	WB3/32
EA1.40.28	LINK, torque top	1	DTD5024	WB2/40
	Attaching parts for EA1.40.28:	1		
EA1.40.153	Bush, bearing	2	DTD412	WB2/2
SP21	Nipple, lubricating	1		WB2/41A
A27SS	Nut, ¾" BSF	1		WB2/41
EA1.40.69	Pin, bearing, top torque link	1	S11	WB2/42
EA3.40.27	Pin, bearing, torque link joint	l i	S97	WB2/43
SP90H11	Pin, split	li		The state of the s
EA1.40.139				WB2/41B
	Screw, grub locking top bearing pin	1	MS	WB2/45
EA1.40.77	Screw, retaining bearing pin	1	S11	WB2/44
EA1.40.619	Shim, bearing pin sleeve	1	LA	WB2/58
EA1.40.73	Sleeve, bearing, for torque link	1	S11	WB2/47
EA1.40.147	Washer, bearing, thrust	1	DTD419	WB2/51
EA1.40.75	Washer, bearing, thrust	1	DTD419	WB2/48
EA1.40.79	Washer, locking, bearing pin retaining screw 26 SWG	1	MS	WB2/49
EA1.40.83	Washer, locking, bearing bill retailing screw 26 SWG	1		
EA3.40.29	Wesher at terrus link joint between link bearing		\$11	WB2/50
	Washer, at torque link joint	1	\$96	WB2/52
EA3.40.31	Washer, at torque link joint	1	\$96	WB2/53
EA1.40.27	LINK, torque, bottom Attaching parts for EA1.40.27:	1	DTD5024	WB2/54
EA1.40.153	Bush, bearing	2	DTD412	WDO /O
EA1.40.67				WB2/2
EA1.40.139	Pin, bearing bottom torque link	1	S11	WB2/55
	Screw, grub, locking bottom bearing pin	1	MS	WB2/57
EA1.40.77	Screw, retaining bearing pin	1	S11	WB2/56
A1.40.619	Shim, bearing, pin sleeve	1	L.A	WB2/58
A1.40.71	Sleeve, bearing, for torque link	1	S11	WB2/59
A1.40.75	Washer, bearing thrust	1	DTD412	WB2/60
A1.40.147	Washer, bearing thrust	1	DTD412	WB2/62
A1.40.79	Washer, locking bearing pin retaining screw, 16 SWG	1	MS	WB2/61
SP21	NIPPLE, lubricating	5		
EA1.40.137	TAB, locking, 16 SWG	1	MS	WB2/63
	Attaching parts for EA1.40.137:	'	IVIO	WB2/64
121D16				LAIME INC
A31B16	Screw, 4BA	1		WB2/65
SP47B	Washer, spring	1	-	WB2/66
	100			
	1 ps			
		- 1	1	
		- 1		

UNDERCARRIAGE

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.
EA1.40.467	LEVER, COWL DOOR MECHANISM, ASSEMBLY	1	_	WB2/36
EA1.40.465	Spares for: BUSH, bearing Attaching parts for EA1.40.465:—	2	L40	WB2/37
A25/15C AGS2001C1/66	Bolt, 2BA Nut, 2BA	1	_	WB2/37A WB2/37B
EA1.40.529	LEVER, operating Attaching parts for EA1.40.467:	1	-	WB2/38
EA1.40.517	Bolt, securing cowl door mechanism to leg (Make from A25/5E)	4	HTS	WB2/39
DUNLOP KJ9 DUNLOP KJN16N	TUBE, 43" x 13.5" x 19 TYRE, 43" x 13.5" x 19	1	-	WB1/11 WB1/3
Or DUNLOP DR4521 DUNLOP AH50439	TYRE, 43" x 13.5" x 19 WHEEL, undercarriage (For spares see AP4515C Sect.2, Chap.37)	1	-	WB1/3 WB1/12
or DUNLOP AH9343	WHEEL, undercarriage (For spares see AP4515C Vol.3 pt.1 Sect.2, Chap.37)	1	-	WB1/12
EA1.40.30 EA9.40.44	STAY SIDE, UNDERCARRIAGE ASSEMBLY (Pre Mod 3585) STAY SIDE, UNDERCARRIAGE ASSEMBLY (Mod.3585)	1	_	WB4/45 WB4/45
EA9.40.74	. STAY SIDE, UNDERCARRIAGE ASSEMBLY (Mod.5051) Spares for:	1	-	WB4/1
EA1.40.221 EA1.40.239	BOLT, connecting u/c operating jack BOLT, stop link stay	1	S65 or S81 S65 or S81	WB4/2 WB4/3
EA1.40.353	Attaching parts for EA1.40.239: . Nut, lock	1	S11	WB4/4
EA1.40.405 EA1.40.229	Bolt, sequence, valve operating BRACKET, stop bolt	1	S11 S11	WB4/5 WB4/6
A25/15L	Attaching parts for EA1.40.229: . Bolt, 7/16" BSF . Bolt, 7/16" BSF	1 2	HTS HTS	WB4/7 WB4/8
A25/8L A27LS SP90E8	Nut, 7/16" BSF Pin, split 3/32" dia	3	_	WB4/9 WB4/9A

Page WB.6

UNDERCARRIAGE

AP 101B-0402-3A

Part Number	rt Number Description 1 2 3 4 5 6			Plate No	
EA1.40.404	BRACKET, sequence, valve operating stud	1	L40	WB4/46	
A25/2C	Attaching parts for EA1.40.404: . Bolt, 2BA				
A25/18L	Bolt, 28A	1 1	HTS	WB4/10A	
A27LS	Nut, 7/16" BSF	1 1		WB4/11 WB4/12	
SP90E8	Pin, split 3/32" dia	1	_	WB4/12A	
AGS2035C	Washer, shakeproof	1	-	WB4/10B	
EA1.40.199	LEVER, UNDERCARRIAGE LOCK LH ASSEMBLY Consisting of:	1	-	WB4/!3	
A1.40.213	BUSH	1	DTD197	WB4/16	
A1.40.201	LEVER, LH	1	S11	WB4/15	
A1,40.200	. LEVER, UNDERCARRIAGE ROCK RH ASSEMBLY Consisting of:	. 1	-	WB4/16	
A1,40.213	BUSH	1	DTD197	WB4/17	
A1.40.202	LEVER, RH	1	S11	WB4/18	
	Attaching parts for EA1.40.199 & EA1.40.200:				
A1.40.195	Bolt, hook catch	1	S65 or S81	WB4/19	
EA1.40.351	Nut, slotted	1 1	MS	WB4/20	
SP90G10	Pin, split	1	-	WB4/20A	
A1.40.219	. Tube, distance for u/c 'down' switch operating bracket	1	L40	WB4/21	
P15Q A1.40.291	Washer, 5/8" Washer, tab at u/c hook catch bolt 20 SWG	1 1	- 02	WB4/22	
A1.40.417	Washer, tab at u/c hook catch bolt 20 SWG Washer, under tab & connecting bolts	1	S3 L72	WB4/23 WB4/24	
EA3.40.192	LEVER, UNDERCARRIAGE 'DOWN' MICRO SWITCH OPERATING, ASSEMBLY	1	-	WB4/47	
A27ET	Spares for: NUT, thin ¼" BSF			MD 4 /00 4	
A1.40.569	SCREW, tappet	1 1	_ S11	WB4/26A WB4/26	
A1.40.225	LINK, SIDE STAY ASSEMBLY Spares for:	1 1	-	WB4/26 WB4/27	
A1.40-227	BUSH, bearing Attaching parts for EA1.40.225:	2	DTD197	WB4/28	
A1.40.197	Bolt, connecting stay and link	1	\$65 or \$81	WB4/29	
A1.40.347	Nut, slotted	1 1	MS	WB4/30	
P90K17	Pin, split	1	-	WB4/30A	
A1.40.233	Plug, adaptor	1	L40	WB4/31	
A1.40.765	Washer, link and link stay connecting bolt	1	-	WB4/32	
	,				
			^		
	*				
		1 1			

UNDERCARRIAGE

Ref.	No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	CI. of Equip M.R. L.M.	Plate No.
28N/915637 28M/10114 26667 13184 539 527 40530 28P/952761 7113 540 38707 40651 5119309 541 542 545	70	SP21 A27GT EA3.40.193 EA3.40.199 EA1.40.205 EA1.40.203 EA1.40.349 SP90C7 EA1.40.233 EA1.40.237 EA1.40.32 EA9.40.40 EA9.40.80 EA1.40.235 EA1.40.235 EA1.40.217 EA1.40.355	NIPPLE, lubricating, 1/4" BSF NUT, 5/16" BSF, sequence valve operating bolt NUT, slotted, for u/c operating jack both PLATE ROLLER, stop lever, assembly Attaching parts for EA1.40.205:— Bolt Nut, slotted Pin, split SLEEVE, operating spring for u/c lock stop SPRING, compression, at lock stop STAY, side (Pre—Mod 3585) STAY, side (Mod 3585) (Pre—Mod 5051) STOP, u/c lock TUBE, distance, u/c jack bolt u/c 'Down' switch WASHER, link and link stay connecting bolt	3 1 1 1 1 1 1 1 1 1 1 1 1 1 1	LA DTD124 S11 MS DTD197 Spring Steel DTD683 S11 L40 L72	00000 000 00 0000	WB4/33 WB4/5A WB4/34 WB4/35 WB4/36 WB4/38 WB4/38 WB4/40 WB4/40 WB4/48 WB4/48 WB4/48 WB4/44 WB4/44 WB4/44