


PART 6

ILLUSTRATIONS

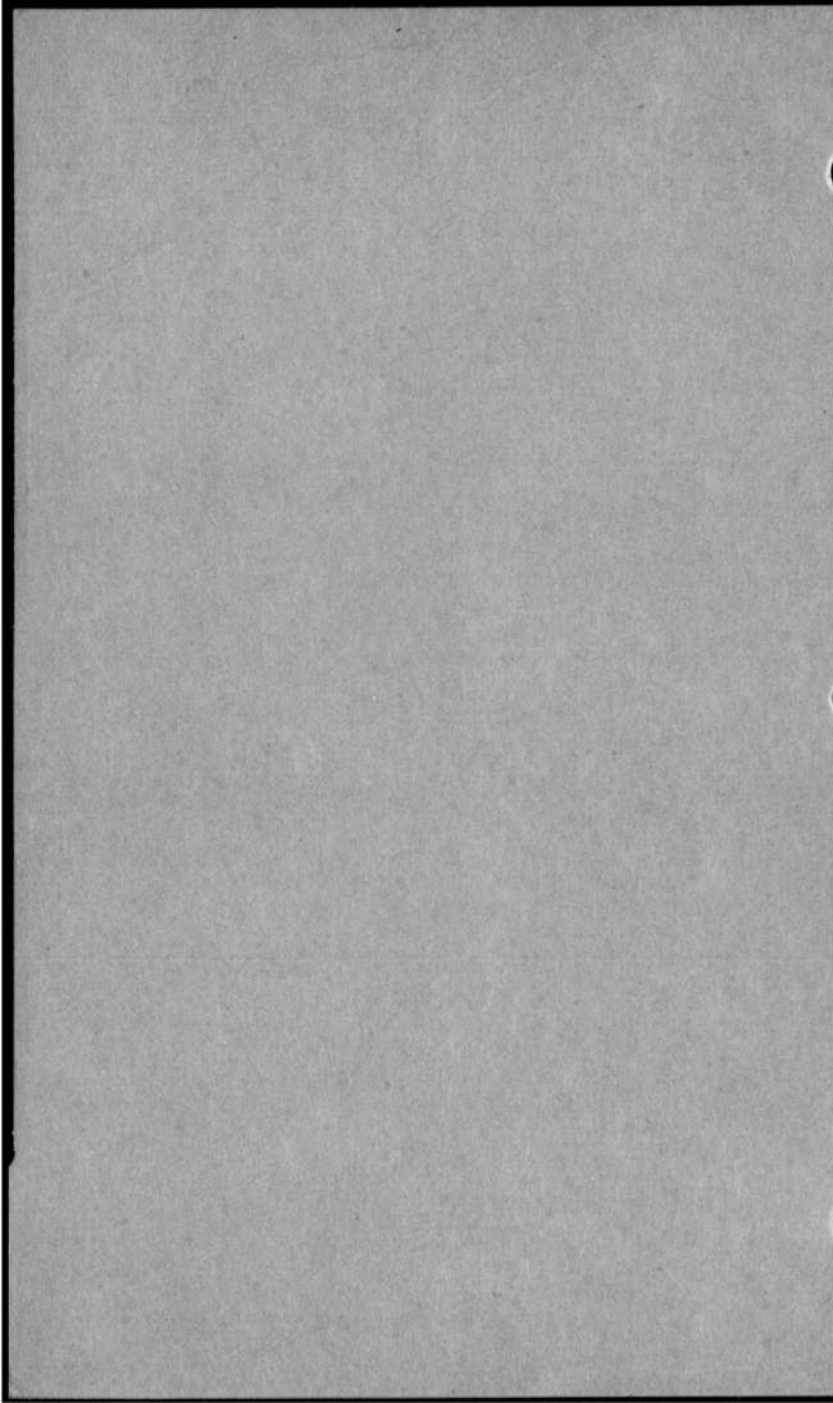

PART 6

ILLUSTRATIONS

List of Illustrations

	Fig
Cockpit, Port Wall	1
Cockpit, Forward View Left-Hand Side	2
Cockpit, Forward View Right-Hand Side	3
Cockpit, Starboard Wall	4
Navigator's Station, Port Wall	5
Navigator's Station, Forward View	6
Navigator's Station, Starboard Wall	7

Key to Fig 1 Cockpit, Port Wall

- 1 Canopy demist switch
- 2 Vent valve heater switch (inoperative)
- 3 Pressure head heater switch
- 4 Windscreen (DV panels) heaters switch
- 5 Bomb doors position indicator light
- 6 Bomb door selector switch
- 7 Wing-tip tanks jettison pushbutton
- 8 Ejection seat safety pin stowage (pupil)
- 9 Bomb doors emergency opening control
- 10 Port console lamp and dimmer switch
- 11 Voltmeter
- 12 No 1 generator failure warning light
- 13 No 1 generator switch
- 14 No 2 generator switch
- 15 No 2 generator failure warning light
- 16 Canopy/snatch master switch
- 17 Battery master switch
- 18 V/UHF press-to-mute switch (pupil)
- 19 Canopy internal demister control
- 20 HP cock levers and relight buttons (pupil)
- 21 Throttle levers (pupil)
- 22 HP pump isolation switches
- 23 Lighting switches, right to left:
 - External lights master switch
 - Identification light steady switch
 - Identification light morse switch
 - Taxy lamps switch
 - Anti-collision lights switch
 - Navigation lights switch
 - Landing lamp switch
- 24 Pilot's Notes and maps stowage
- 25 Canopy jettison switch
- 26 Hatch jettison test light
- 27 Canopy jettison test light
- 28 Rudder trim switches (pupil)
- 29 Aileron trim switch (pupil)
- 30 Fuse panel

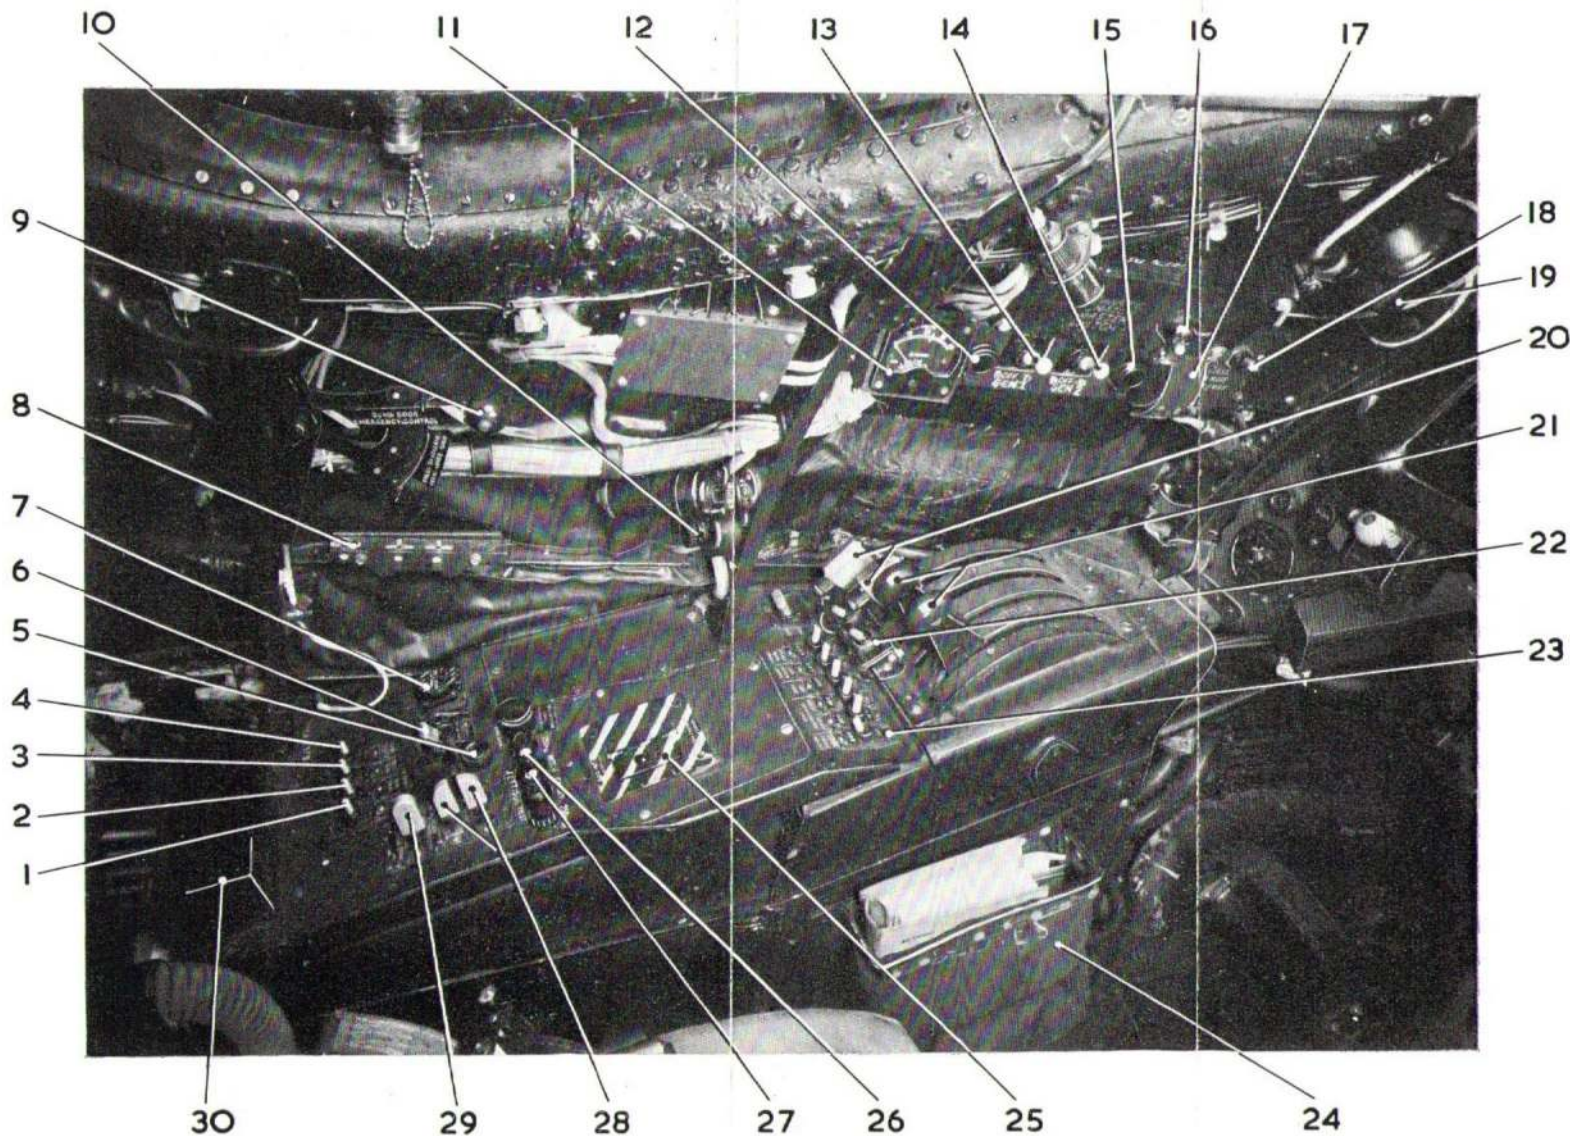


Fig 1 Cockpit, Port Wall

Key to Fig 2 Cockpit, Forward View Left-Hand Side

- 1 Undercarriage master switch
- 2 Undercarriage position indicator (pupil)
- 3 Undercarriage selector switch unit
- 4 Flaps selector switch (pupil)
- 5 Undercarriage emergency lowering control
- 6 Flaps position indicator
- 7 Ventilation louvre
- 8 Machmeter
- 9 Tacan indicator
- 10 Altimeter
- 11 Direct vision panel (pupil)
- 12 Airspeed indicator (pupil)
- 13 Dimmer switch (port U/V lamps)
- 14 Horizon gyro unit
- 15 Marker light (on panel behind U/V lamp)
- 16 Dimmer switch (port red lamps)
- 17 Standby compass
- 18 ILS indicator
- 19 ILS control switch
- 20 Zero reader indicator
- 21 Emergency instrument supply MI
- 22 Vertical speed indicator
- 23 Mk 4B compass
- 24 Turn and slip indicator
- 25 Oxygen contents gauges
- 26 No 1 and No 2 engine master starting switches
- 27 V/UHF control unit
- 28 No 2 engine ignition switch and starter pushbutton
- 29 No 1 engine ignition switch and starter pushbutton
- 30 Oxygen regulator (pupil)
- 31 Airbrakes control switch (pupil)
- 32 Rudder trim indicator
- 33 Tail trim indicator
- 34 Aileron trim indicator

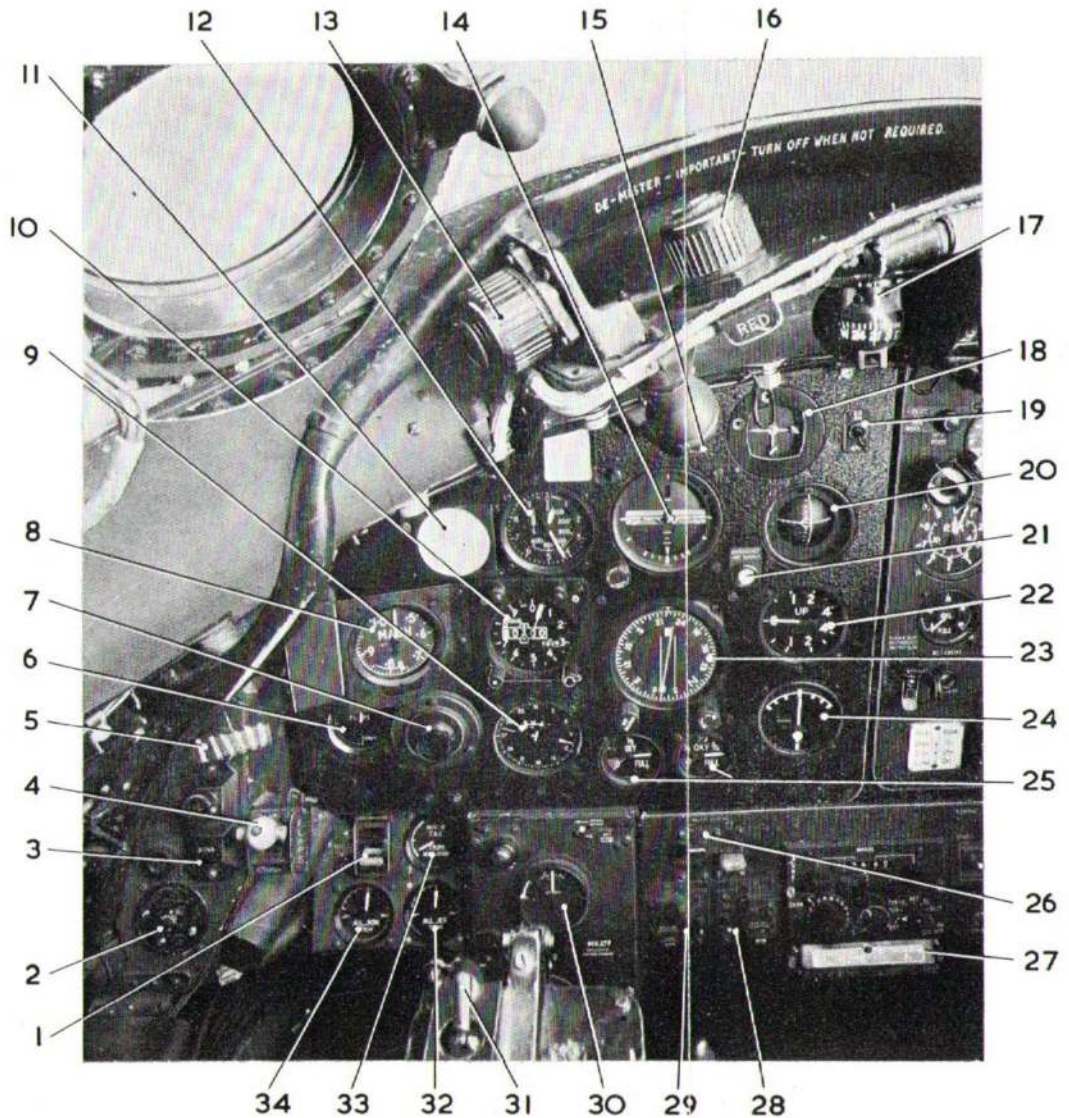


Fig 2 Cockpit, Forward View Left-Hand Side

Key to Fig 3 Cockpit, Forward View Right-Hand Side

- 1 Intercom master switch
- 2 Intercom normal/emergency switch
- 3 Standby UHF guard/A selector switch
- 4 Standby UHF normal/standby power supply switch
- 5 No 1 engine fuel cock and pump switches
- 6 Turn and slip indicator emergency supply switch
- 7 No 1 engine fuel pressure warning light
- 8 No 1 engine oil pressure gauge
- 9 Fuel contents gauges
- 10 No 1 engine fire extinguisher pushbutton and warning light
- 11 No 1 engine RPM indicator
- 12 Engine fire warning test pushbutton
- 13 Dimmer switch (starboard red lamps)
- 14 Dimmer switch (starboard U/V lamps)
- 15 Zero reader control unit
- 16 V/UHF tone switch
- 17 Dimmer switch (red lamps)
- 18 Direct vision panel (instructor)
- 19 No 1 and No 2 engine JPT indicator
- 20 No 2 engine fire extinguisher pushbutton and warning light
- 21 No 2 engine RPM indicator
- 22 No 2 engine oil pressure gauge
- 23 Airspeed indicator (instructor)
- 24 Undercarriage position indicator (instructor)
- 25 V/UHF frequency card holder
- 26 Flaps selector switch (instructor)
- 27 Cabin air temperature control switch
- 28 Cabin pressure warning horn switch
- 29 Wheelbrakes hydraulic pressure gauge
- 30 Cabin air mixing valve position indicator
- 31 Engine air to cabin switches
- 32 Cabin altimeter
- 33 No 2 engine fuel pressure warning light
- 34 Oxygen regulator (instructor)
- 35 Airbrakes control switch
- 36 No 2 engine fuel cock and pump switches
- 37 Compass/directional gyro switch
- 38 ILS/Tacan audio selector switch
- 39 V-UHF/UHF standby selector switch
- 40 ILS volume control

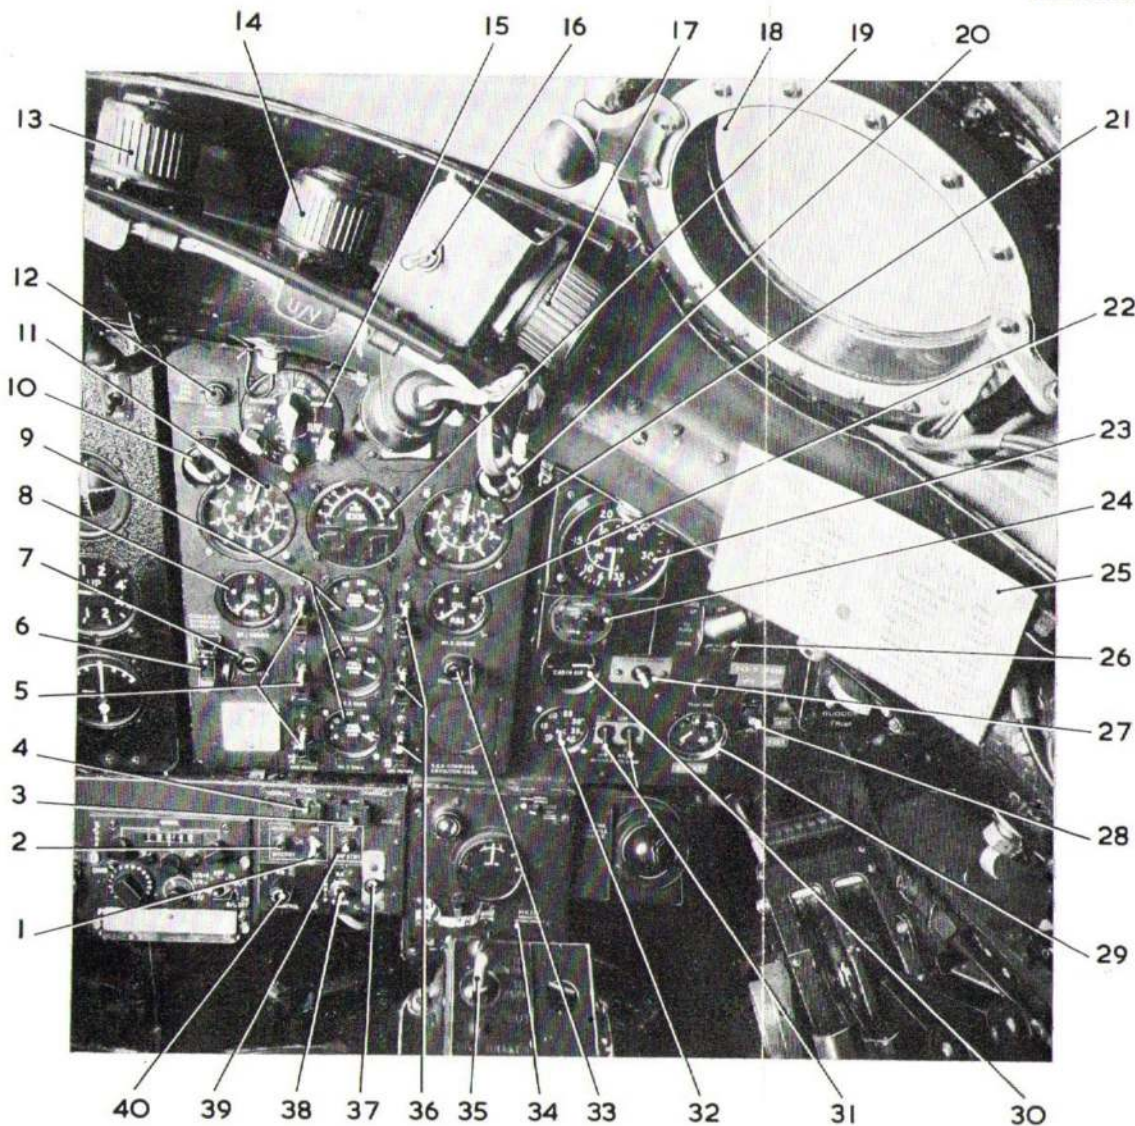


Fig 3 Cockpit, Forward View Right-Hand Side

Key to Fig 4 Cockpit, Starboard Wall

- 1 Rudder trim switches (instructor)
- 2 Tail trim switch (inoperative)
- 3 Canopy jettison switch (instructor)
- 4 Aileron trim switch (instructor)
- 5 V/UHF press-to-mute switch (instructor)
- 6 Entrance door jettison handle
- 7 Ejection seat safety pin stowage (instructor)
- 8 Throttle levers (instructor)
- 9 HP cock levers and relight buttons (instructor)
- 10 Friction damper, throttle levers
- 11 Friction damper, HP cock levers

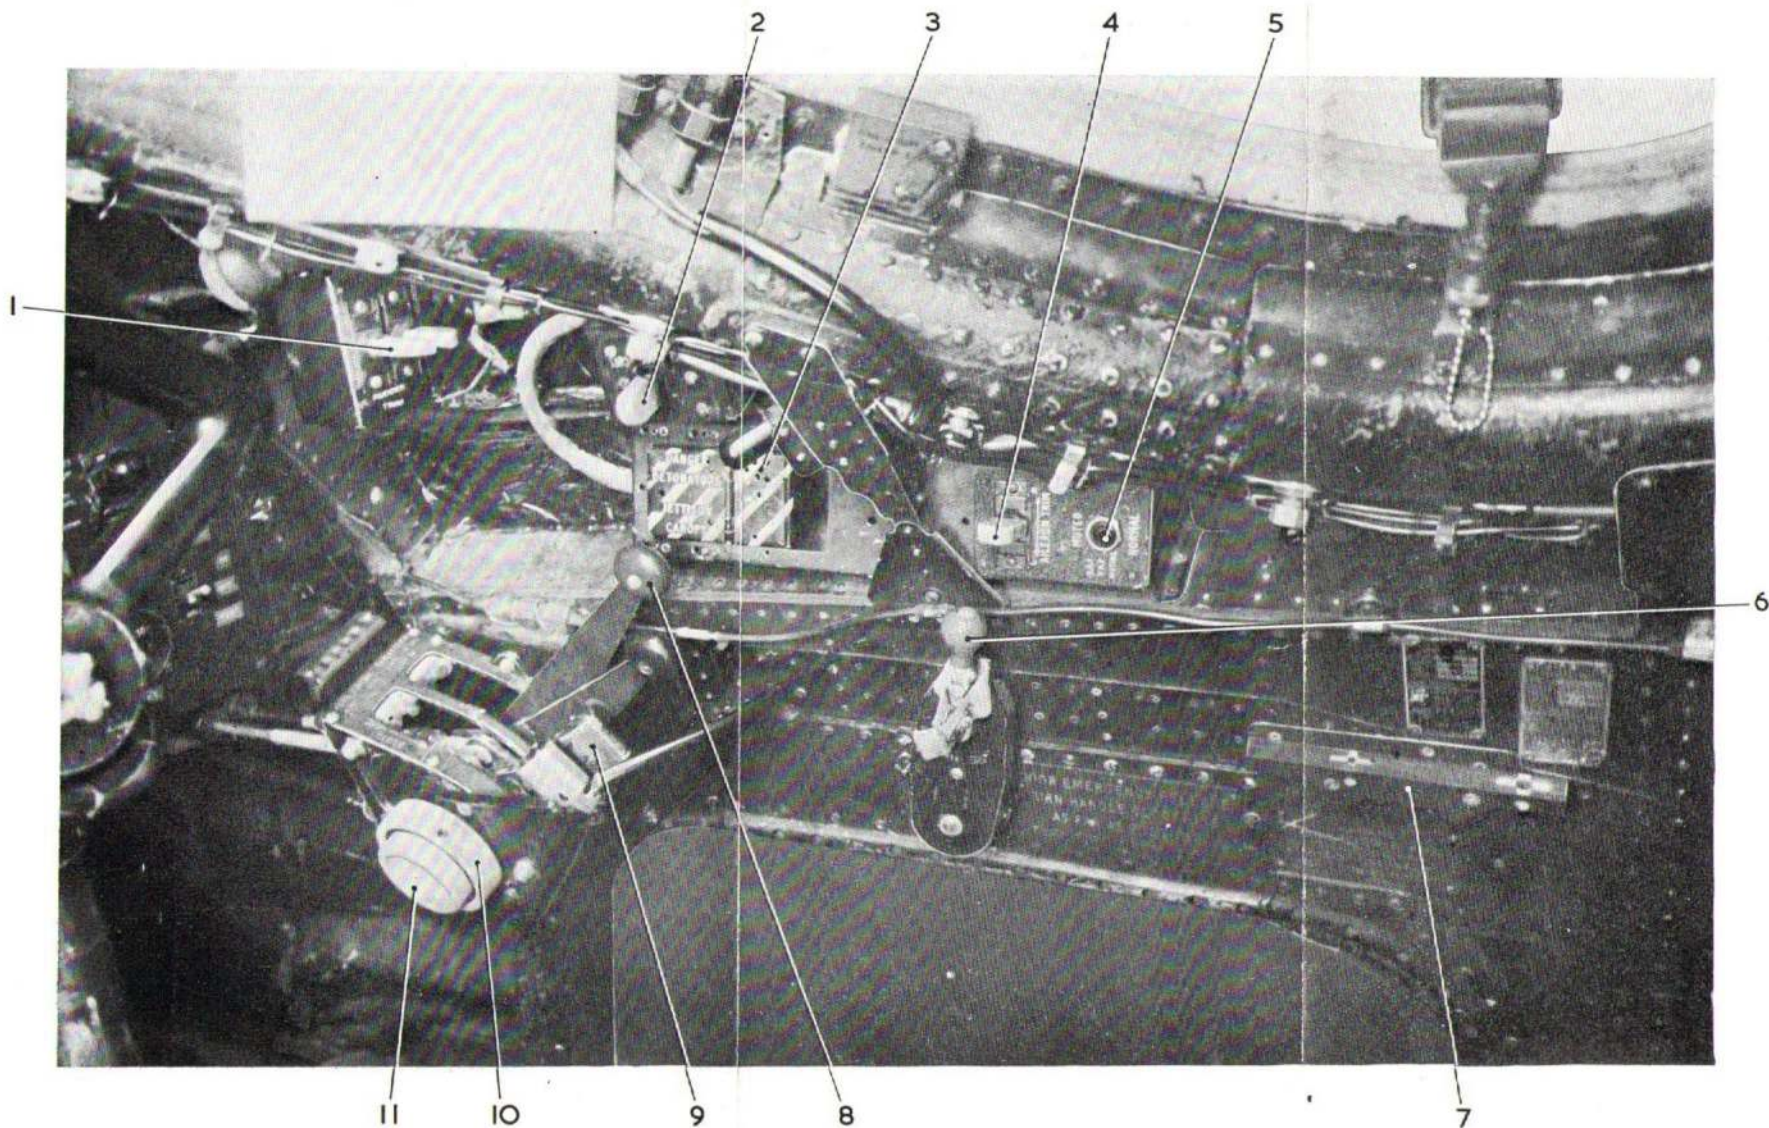


Fig 4 Cockpit, Starboard Wall

Key to Fig 5 Navigator's Station, Port Wall

- 1 AMU control panel
- 2 Hatch safety switch
- 3 Hatch jettison switch
- 4 ILS control unit
- 5 Anglepoise lamp dimmer switch
- 6 Dome lamp
- 7 Ventilation louvre
- 8 Tacan indicator
- 9 Tacan control unit
- 10 IFF/SSR control unit
- 11 Navigator's table (Ejection seat safety pin stowage on inboard edge)
- 12 IFF/SSR normal/emergency supply switch
- 13 IFF/SSR lamp check switch
- 14 IFF/SSR system failure light
- 15 Dimmer switch (IFF/SSR and Tacan control units)
- 16 Oxygen regulator
- 17 Window with blind

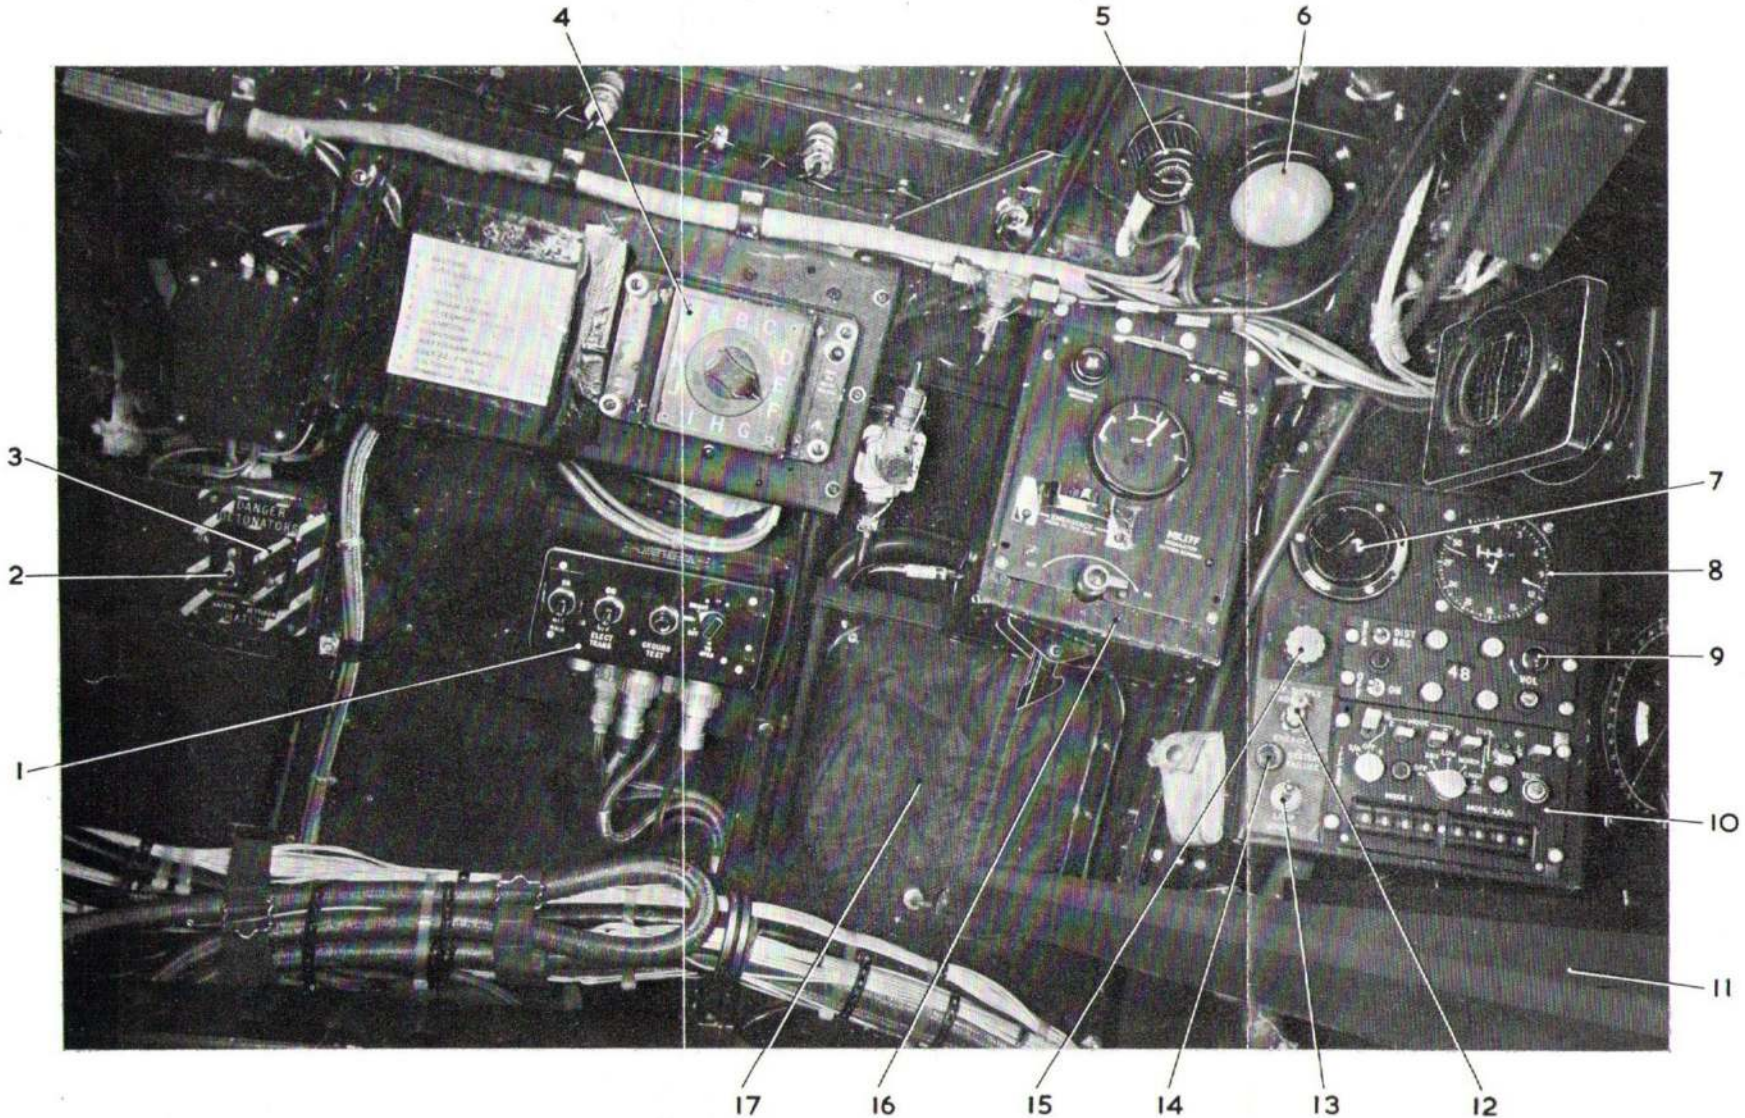


Fig 5 Navigator's Station, Port Wall

Key to Fig 6 Navigator's Station, Forward View

- 1 Mk 4B compass master indicator
- 2 Rebecca indicator
- 3 Airspeed indicator
- 4 Anglepoise lamp
- 5 Tacan coupling unit
- 6 Air position indicator
- 7 Compass deviation card stowage
- 8 Outside air temperature gauge
- 9 V/UHF press-to-mute switch
- 10 Altimeter

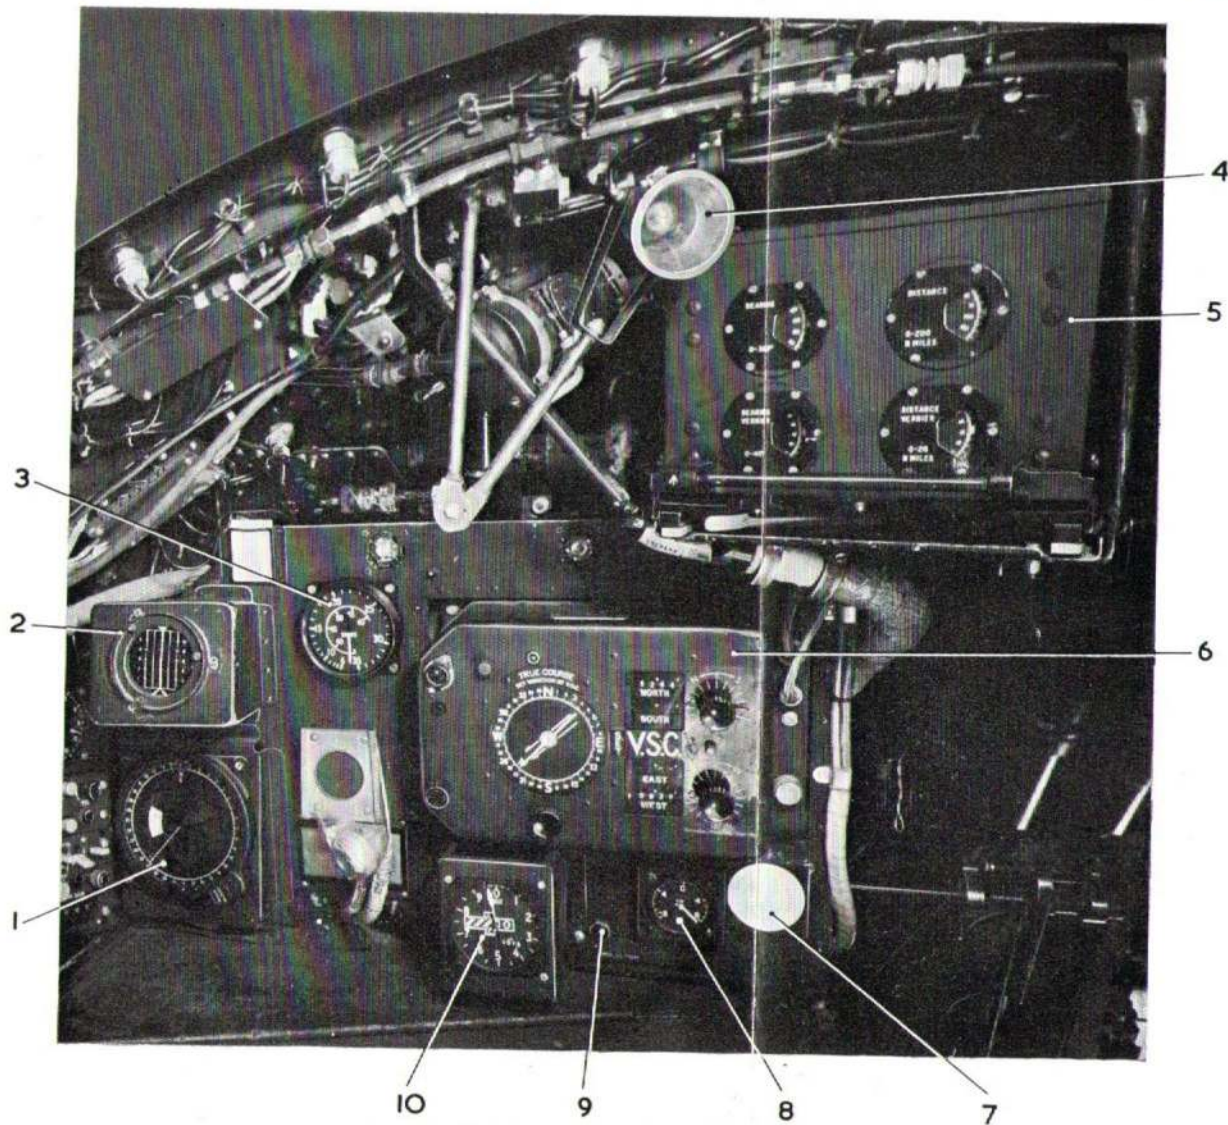


Fig 6 Navigator's Station, Forward View

Key to Fig 7 Navigator's Station, Starboard Wall

- 1 Hand-operated fire extinguisher
- 2 Axe
- 3 First-aid kit
- 4 Asbestos gloves
- 5 Fuel pump test switches
- 6 Mk 4B compass control panel
- 7 Anglepoise lamp dimmer switch
- 8 Cabin air pressure warning horn
- 9 Dome lamp
- 10 Fuel pump and cock circuit breakers
- 11 Anglepoise lamp
- 12 No 6 inverter (Type 108) ON switch
- 13 No 6 inverter (Type 108) OFF switch
- 14 IFF/SSR aerial position switch
- 15 No 1 and No 2 engine generator field circuit breakers
- 16 Circuit breakers, left to right:
 - ILS
 - No 1 inverter
 - No 2 inverter
 - No 3 inverter
 - No 4 inverter
 - Pilot's services
- 17 Hand-operated fire extinguisher
- 18 Rebecca control switch
- 19 No 3/No 4 inverter control switch
- 20 Generator test sockets
- 21 Fuel pump ammeter test socket


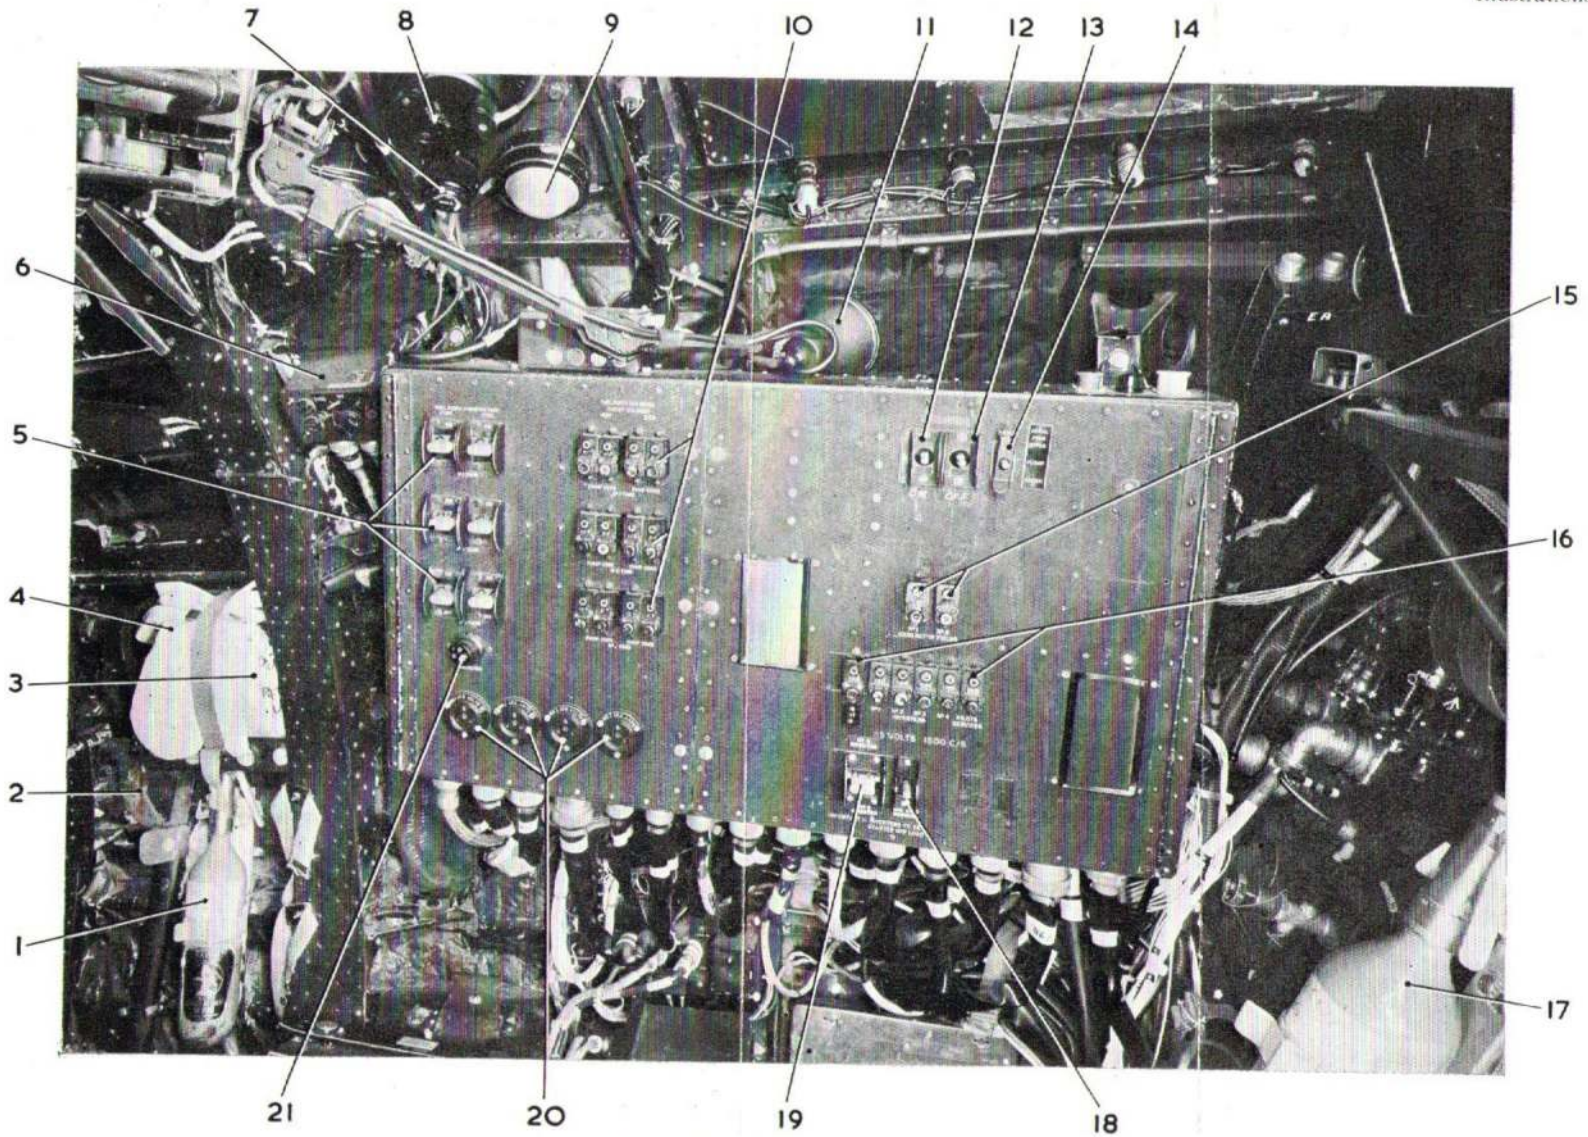


Fig 7 Navigator's Station, Starboard Wall



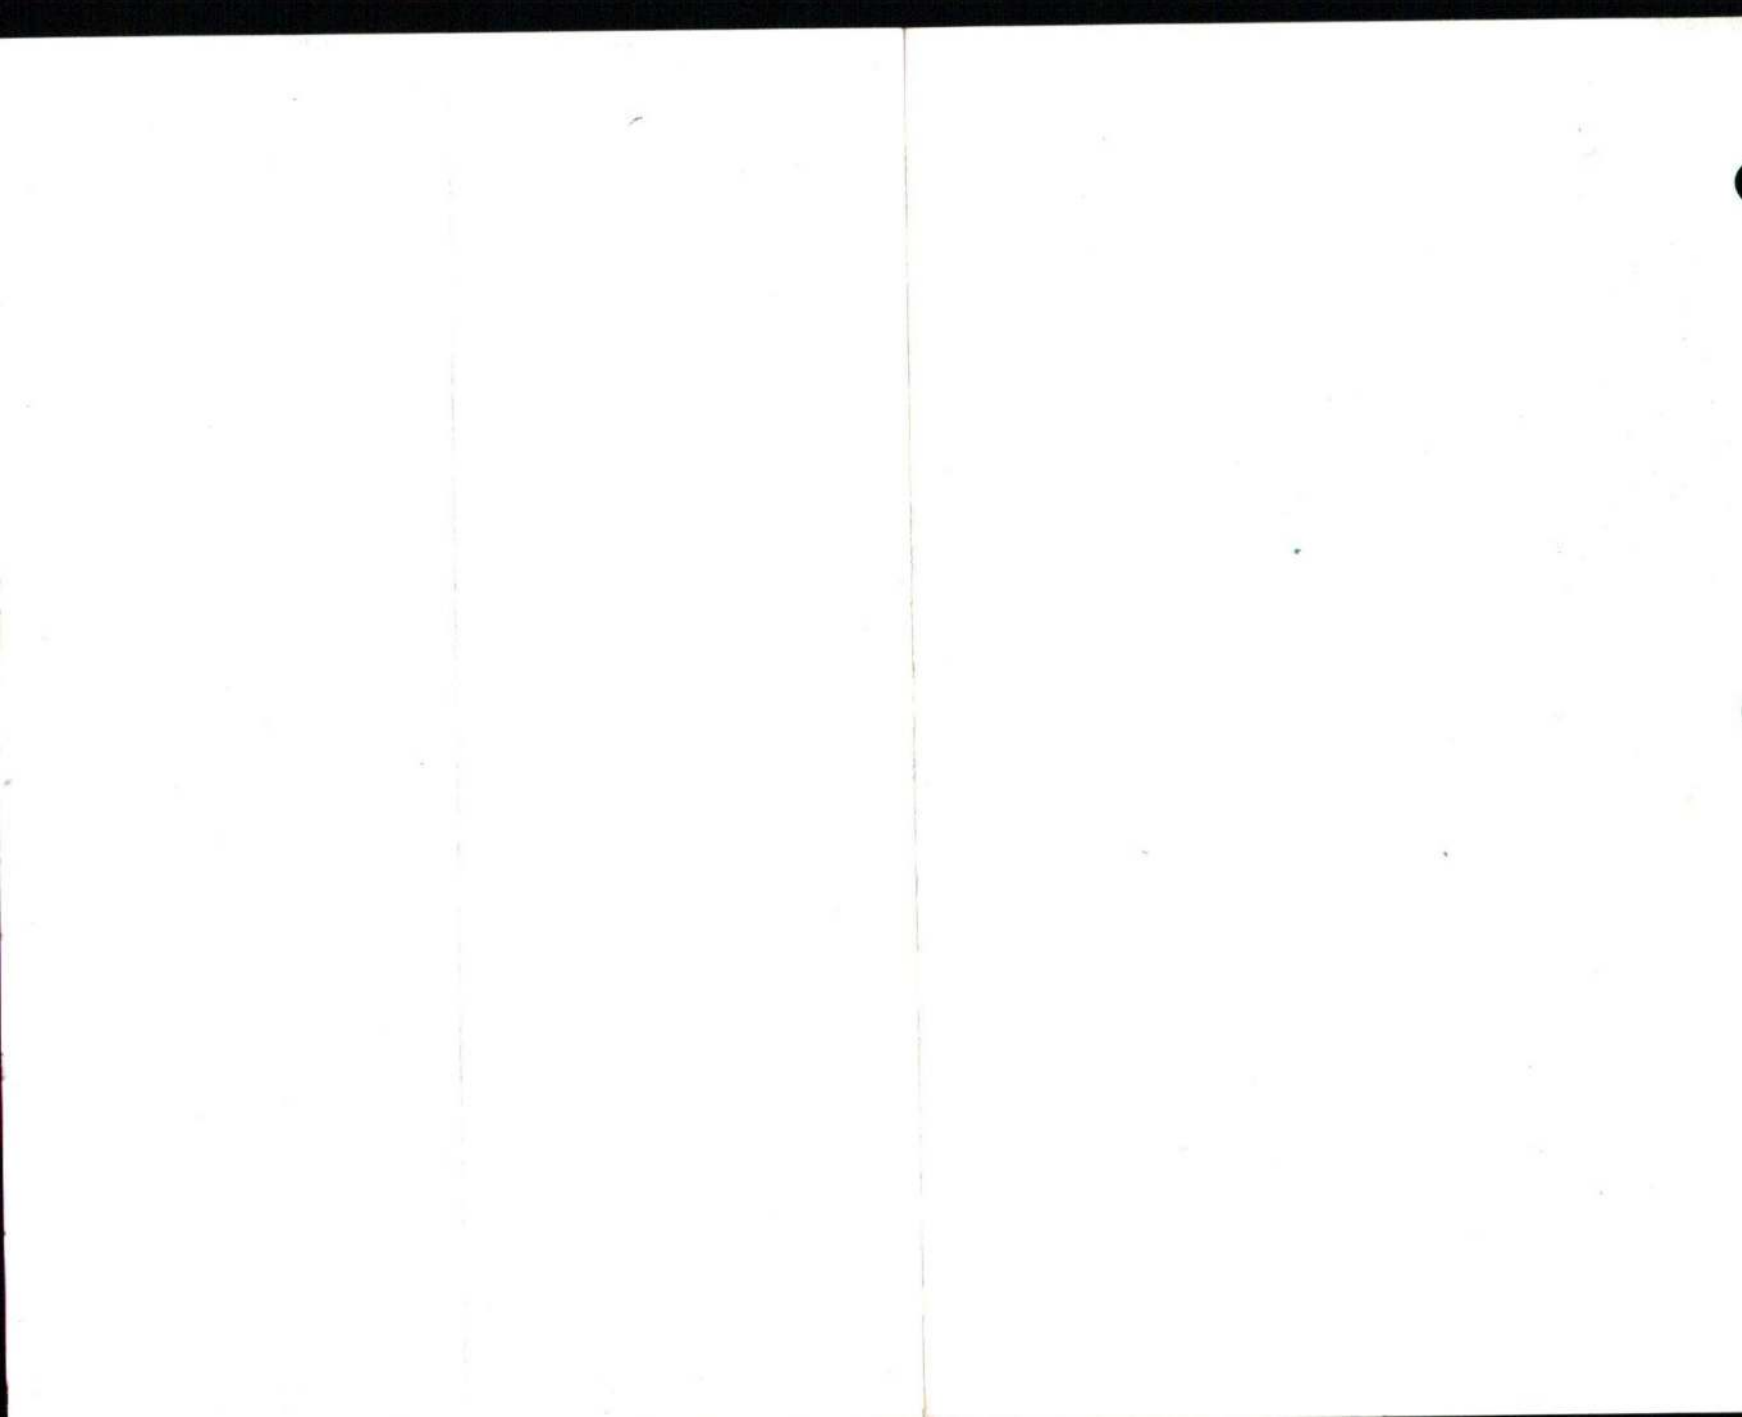

This file was downloaded from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms, and more aircraft documents.

