

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	1 2 3 4 5 6				
	PANEL, Camera Control Console Assembly (Mod 5137) (EB8.81.5059)	-	-	-	ED5/1
	Spares for:				
EB8.81.5071	BOX, Spare Fuse Stowage	1	-	C	ED5/2
	Spares for:				
EB8.00.543	LID c/w spring	1	-	C	ED5/3
EB8.81.5431	CONDUCTOR, fuse	1	-	-	
	Attachment of Conductor to fuses				
A31/A8	Screw	22	-	C	
A31/B10	Screw	4	-	C	
14A/4862	CONTROL, IMC type F96 Mk.1	1	-	L	
	Attachment of IMC Control to Camera console panel				
A32/B8	Screw, 4BA	4	-	C	
Ltd	COUNTER, figure reset	5	-	L	
5213	COUNTER, figure reset (Pre Mod 5131)	1	-	-	
Ltd	Attachments of figure reset counter to camera console				
5713					
A33/A8	Screw 6BA	2	-	C	
EB8.81.5713	COVER (Pre Mod 5131)	1	-	C	
51/9959118	FILAMENT, midget (Pre Mod 5131)	10	-	C	
5L/9959118	FILAMENT, midget (Mod 5131)	7	-	C	
10H/	FUSE 3 amp, size 'O'	2	-	C	
10H/01200076	FUSE 5 amp, size 'O' (Pre Mod 5131)	5	-	C	
10H/01200076	FUSE 5 amp, size 'O' (Mod 5131)	11	-	C	
10H/01200078	FUSE 10 amp, size 'O' (Pre Mod 5131)	2	-	C	
10H/01200078	FUSE 10 amp, size 'O' (Mod 5131)	5	-	C	
10H/01200079	FUSE 15 amp, size 'O' (Pre Mod 5131)	4	-	C	
10H/01200079	FUSE 15 amp, size 'O' (Mod 5131)	6	-	C	
10H/01200080	FUSE 20 amp, size 'O' (Pre Mod 5131)	2	-	C	
10H/01200080	FUSE 20 amp, size 'O' (Mod 5131)	1	-	C	
Belling Lee					
L1341	HOLDER, fuse	26	-	C	
	Attachment of fuse holders to "TRANSLITE" panel				
AGS2035/A	Washer	2	-	C	
AGS2035/B	Washer	2	-	C	
390/1A	INDICATOR, film type 109	3	-	P	
	Attachment of film indicator to camera console panel				
A32/A8	Screw 6BA	4	-	C	

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	1 2 3 4 5 6				
5CZ/5073	INDICATOR magnetic type A2	2	-	L	
X11601	KNOB oak switch (Pre Mod 5131)	2	-	L	
X11601	KNOB oak switch (Mod 5131)	1	-	L	
10AK/0112996	KNOB, oak switch	2	-	L	
C500/C7	LAMP, push to test amber (Pre Mod 5131)	1	-	L	
5CX/1635	LAMP warning green	1	-	L	
PPL120	LAMP HOLDER, c/w shroud (Pre Mod 5131)	10	-	L	
PPL120	LAMP HOLDER, c/w shroud (Mod 5131)	7	-	L	
EB8.81.5885	LOCK, switch (Mod 3494 (Pre Mod 5131)	1	-	C	ED5/4
	Attachment of switch lock to "TRANSLITE" panel P971X1				
AGS2002/A1	Nut stiff 6BA (Pre Mod 5131)	2	-	C	
A33/A6	Screw, 6BA (Pre Mod 5131)	2	-	C	
P970X2	PANEL, "TRANSLITE" (SEM/CAN/01/STC SEM(CAN/02/STC embodied (Pre Mod 5131)	1	-	L	ED5/5
EB8.81.6811	PANEL, "Translite" (Mod 5131)	1	-	L	ED5/6
P971X1	PANEL, "Translite" (Thorn Electrics) SEM/CAN/01/STC SEM/CAN/02/STC and SEM/CAN/04/STC embodied (Pre Mod 5137)	1	-	L	ED5/7
EB8.81.6719	PANEL, "Translite" (Thorn Electrics) SRIM 3983 embodied (Make from P971X1) (Mod 5137)	1	-	L	ED5/8
5CW/1035907	SHROUD (Pre Mod 5131)	1	-	C	
Dowty D7617Y	SHROUD safety flap (Pre Mod 5131)	1	-	C	
01-0106	SWITCH, dimmer (Mod 5131)	1	-	-	
01-0015	SWITCH, dimmer (Mod 5131)	1	-	L	
5CW/6608	SWITCH, dimmer double ganged (Pre Mod 5131)	1	-	L	
Dowty C5162Y Mk.3	SWITCH, push type B (Pre Mod 5131)	3	-	L	R
Dowty C5162Y Mk.3	SWITCH, push type B (Mod 5131)	1	-	L	R
5CW/5088	SWITCH, push type C (Pre Mod 5131)	3	-	L	
5CW/5088	SWITCH, push type C (Mod 5131)	1	-	L	
	Attachment of push switch to camera console panel				
A47/Z	Nut, 8BA	4	-	C	
A32/Z10	Screw, 8BA	4	-	C	
1202 type 12	Washer, spring 8BA	2	-	C	
10F/18744	SWITCH, rotary	4	-	L	
N.S.F. 8824-B107	SWITCH, tumbler (Pre Mod 4843)	5	-	L	R
N.S.F. 8824-B107	SWITCH, tumbler (Mod 4843 Pre Mod 5000 ALT/SB/9/009)	4	-	L	R
Dowty AS10512C-1	SWITCH, tumbler (Mod 5000 ALT/SB/9/009)	4	-	L	
N.S.F. 8804-B105	SWITCH, tumbler (Pre Mod 5131)	1	-	L	R
N.S.F. 8810-B109	SWITCH, tumbler (Pre Mod 4372)	9	-	L	R
N.S.F. 8810-B109	SWITCH, tumbler (Mod 4372 Pre Mod 5000 ALT/SB/9/009)	8	-	L	

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	1 2 3 4 5 6				
Dowty AS10512A-2	SWITCH, tumbler (Mod 5000 ALT/SB/9/009)	8	-	L	
5CW/4400215	SWITCH, tumbler (Pre Mod 5131)	1	-	L	
5CW/4400216	SWITCH, tumbler (Pre Mod 5131)	8	-	L	
5CW/4400216	SWITCH, tumbler (Mod 5131)	6	-	L	
Dowty AS10512A-4	SWITCH, tumbler (Mod 5000 ALT/SB/9/009)	3	-	L	
	Attachment of tumbler switch to camera console panel				
EEAS200	Washer, locking	AR	-	C	
10C/9133137	SWITCH, type D.M.I. 32530 (Pre Mod 5131)	2	-	C	
10C/9133137	SWITCH, type D.M.I. 32530 (Mod 5131)	1	-	C	
5CW/7303	SWITCH, type 665512 DM.6	1	-	L	
10F/2107	SWITCH, type DMI 57535 rotary motor	1	-	L	
	PANELS MAIN ELECTRICAL ASSEMBLY (EB8.81.2001)	-	-	-	
	Spares for:				
EB8.81.4861	BAR, bus "P1" (Pre Mod 3062)	1	-	C	
EB8.81.4897	BAR, bus "P2" (Pre Mod 3062)	1	-	C	
	Attachment of bus bar to relay plug and connectors				
A25/6E	Bolt 1/4 in. BSF	1	-	C	
A25/6J	Bolt 3/8 in. BSF	1	-	C	ED3/1
A27/EP	Nut 1/4 in. BSF	1	-	C	
A27/JF	NUT 3/8 in. BSF	1	-	C	ED3/2
SP13/E	Washer 1/4 in.	1	-	C	
SP13/J	Washer 3/8 in.	1	-	C	ED3/3
SP47/E	Washer spring 1/4 in.	1	-	C	
SP47/J	Washer spring 3/8 in.	1	-	C	ED3/4
EB8.81.4857	BAR, bus "P3" (Pre Mod 3062)	1	-	C	
EB8.81.4845	BAR, bus "P4" (Pre Mod 3062)	1	-	C	
	Attachment of bus bar to relay plug and circuit breaker				
A25/6E	Bolt 1/4 in. BSF	1	-	C	
A27/EP	Nut, 1/4 in. BSF	1	-	C	
EA9.81.2403	Washer contact	1	B11	C	
SP13/E	Washer 1/4 in.	1	-	C	
SP47/E	Washer spring 1/4 in.	1	-	C	
EB8.81.5507	BAR, bus "1" (Mod 3062)	1	-	C	ED3/5
EB8.81.5511	BAR, bus "P2" (Mod 3062)	1	-	C	ED3/6
	Attachment of bus bar to switch and connectors				
A104/3G	Bolt, 5/16 in. UNF	1	-	C	ED3/7
A25/6J	Bolt, 3/8 in. BSF	2	-	C	
A27/JF	Nut, 3/8 in. BSF	2	-	C	
SP13/G	Washer, 5/16 in.	1	-	C	ED3/8
SP13/J	Washer, 3/8 in.	2	-	C	
SP47/G	Washer, spring 5/16 in.	1	-	C	ED3/9
SP47/J	Washer, spring, 3/8 in.	2	-	C	
EB8.81.5641	BAR, bus "P3" (Mod 3062)	1	-	C	ED3/10
EB8.81.5637	BAR, bus "P4" (Mod 3062)	1	-	C	ED3/11

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	1 2 3 4 5 6					
	Attachment of bus bar to switch and circuit breaker					
A104/3G	Bolt, 5/16 in. UNF	1	-	C	ED3/12	
EA9.81.2403	Washer, contact	1	B11	C	ED3/13	
SP13/G	Washer, 5/16 in.	1	-	C	ED3/14	
SP47/G	Washer, spring 5/16 in.	1	-	C	ED3/15	
5X/3271	BLOCK, fuse, 4 way	3	-	L	ED3/16	
EB8.81.5389	FAIRLEAD, group	2	-	C	ED3/17	
	Attachment of fairlead to stiffener on frame 12A					
A25/11C	Bolt, 2BA	2	-	C	ED3/18	
AGS2001/C1	Nut, stiff, 2BA	2	-	C	ED3/19	
AS2807/5/087	Tube, distance (Make from 30A/1940) 20 swg	2	T45	LM	ED3/20	
	PANEL, Bus Bar Assembly (EB8.81.1939) (SA5385)	-	-	-		R
	Spares for:					
EB8.81.1961	BAR, main bus	1	BSS1432	C	ED3/21	
5X/3271	BLOCK, fuse 4 way	4	-	L	ED3/22	
EB8.81.1949	BLOCK, mounting, upper	1	BS1137	C	ED3/23	
EB8.81.1951	BLOCK, mounting, upper	1	BS1137	C	ED3/24	
EB8.81.1953	BLOCK, mounting, upper	1	BS1137	C	ED3/25	
EB8.81.1955	BLOCK, mounting, lower	1	BS1137	C	ED3/26	
EB8.81.1957	BLOCK, mounting, lower	2	BS1137	C	ED3/27	
	Attachment of mounting block to panel					
AS1246/9B	Bolt, 4BA	7	-	C	ED3/28	
AS1246/13B	Bolt, 4BA	12	-	C	ED3/29	
EB8.81.5799	COVER, Bus Bar, Group (Pre Mod 5131)	1	-	C	ED3/30	
EB8.81.5799x6	COVER, Bus Bar, Group (Mod 5131 Pre Mod 5478/B)	1	-	C	ED3/31	
EB8.81.5799x7	COVER, Bus Bar Group (Mod 5478/B satisfied by SEM/CAN/099/STC, Pre SA5385) (M/F 26FZ/6147767)	1	-	LM	ED3/32	
EB8.81.5799x8	COVER, Bus Bar Group (Post SA5385 Pre Mod 5000 ALT/SB/9/080) (M/F 26FZ/6147767)	1	-	LM	-	R
EB8.81.5799x9	COVER, Bus Bar Group (Mod 5000 ALT/SB/9/080) (M/F 26FZ/6147767)	1	-	LM	-	R
	Spares for:					
EB8.81.5807	COVER (SA5385)	1	-	C	-	R
EB8.84.1143	LABEL, additional (Mod 5000 ALT/SB/9/080)	1	-	C	-	R
EA4.81.1611	SCREW, cover, 4BA	6	BS249	C	ED3/33	
	Attachment of label to fuse No. 14					
A4103	Adhesive, 'Araldite'	AR	-	C	-	R
H7951	Hardener	AR	-	C	-	R
5CZ/5214	FUSE, 2.5 amp	4	-	C	ED3/34	
5CZ/5215	FUSE, 5 amp	3	-	C	ED3/35	
5CZ/5216	FUSE, 10 amp	3	-	C	ED3/36	
5CZ/5218	FUSE, 20 amp	2	-	C	ED3/37	
5CZ/5780	FUSE, type 1078	2	-	C	ED3/38	R

Part No.	Description 1 2 3 4 5 6	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
10H/0119128	FUSE, H R C 125 amp (SA5385)	2	-	C	ED3/39	R
10H/0590126	FUSE, H R C 40 amp	6	-	C	ED3/40	
10H/0590127	FUSE, H R C 60 amp	3	-	C	ED3/41	
10H/0590129	FUSE, H R C 100 amp	3	-	C	ED3/42	
10H/0119927	FUSE, H R C 200 amp	2	-	C	-	R
	Attachment of heavy duty fuses to mounting blocks					
EB7.81.1009	Stud, 5/16 in. BSF c/w nut and washer	1	-	C	ED3/43	
EB7.81.1041	LINK, copper	18	BSS1432	C	ED3/44	
	Attachment of copper link to mounting block					
EB7.81.1011	Stud, 1/4 in. BSF c/w nut and washer	1	-	C	ED3/45	
EEAS71/3	LINK, 4-way	2	-	C	-	R
AS2697	LUG, adapter 4-way 19 amp	1	-	C	ED3/46	
	Attachment of lug adaptor to bus bar					
A25/2G	Bolt, 5/16 in. BSF	1	-	C	ED3/47	
AGS2002/G1	Nut, stiff 5/16 in. BSF	1	-	C	ED3/48	
SP13/G	Washer, 5/16 in	1	-	C	ED3/49	
	PANEL, Aft Assembly (EB8.81.1991)	-	-	-		R
5X/3271	BLOCK, fuse, 4-way	1	-	L	ED3/50	
5X/3181	BLOCK, terminal, 20-way	2	-	L	ED3/51	
EB8.81.4855	BLOCK, bus bar (Pre Mod 3062)	3	BS1137	C	-	R
EB8.81.4853	COVER, bus bar block (Pre Mod 3062)	3	BS1137	C	-	R
	Attachment of bus bar cover and block to aft panel					
A25/20C	Bolt, 2BA	2	-	C	-	R
EB8.81.5663	BLOCK, support (Mod 3062)	1	-	C	ED3/52	
	Attachment of support block to aft panel					
A25/27C	Bolt, 2BA	2	-	C	ED3/53	
EB8.81.5647	BLOCK, support (Mod 3062)	1	-	C	ED3/54	
	Attachment of support block to aft panel					
A25/28C	Bolt, 2BA	2	-	C	ED3/55	
EB8.81.5645	BLOCK, support (Mod 3062)	1	-	C	ED3/56	
EB8.81.5657	BLOCK, support (Mod 3062)	1	-	C	ED3/57	
EB8.81.5659	BLOCK, support (Mod 3062)	1	-	C	ED3/58	
	Attachment of support block to aft panel					
A25/31C	BOLT, 2BA	2	-	C	ED3/59	
SP13/C	Washer	2	-	C	ED3/60	
EB8.81.5649	BLOCK, support (Mod 3062)	1	-	C	ED3/61	
	Attachment of support block to aft panel					
A25/31C	Bolt, 2BA	1	-	C	ED3/62	

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	1 2 3 4 5 6					
AS1242/30C	Bolt, 2BA	1	-	C	ED3/63	R
5X/6165	COVER, terminal block, 20 way	2	-	C	ED3/64	
Z28426	PILLAR, fixing, 4BA	4	-	C	ED3/65	
EB8.81.5129	PLUG, relay (Pre Mod 3026)	4	BS249	C		
5UC/5210	RESISTOR, remote	2	-	C	ED3/66	
	Attachment of resistor to aft panel					
A33/B24	Screw, 4BA	2	-	C	ED3/67	R
5CY/3002	SOCKET, 3 pole 2 amp.	3	-	L	ED3/68	
	Attachment of socket to aft panel					
A33/B14	Screw, 4BA	3	-	C	ED3/69	
AGS2002/B1	Nut, stiff, 4BA	3	-	C	ED3/70	
5CW/6166	SWITCH, magnetic, type 19B	2	-	P	ED3/71	
	Attachment of switch to aft panel					
A25/10E	Bolt, 1/4 in. BSF	4	-	C	ED3/72	R
5CW/6441	SWITCH, double pole	2	-	L	ED3/73	
	Attachment of switch to aft panel					
A31/B8	Screw, 4BA	4	-	C	ED3/74	
	PANEL, Forward Assembly (EB8.81.1997) (Mod 5156)	-	-	-	-	
	Spares for:					
EB8.81.2005	BAR, bus, circuit breaker to bus bar panel	1	-	C	ED4/1	R
	Attachment of bus bar to connecting links and bus bar panel					
A25/6E	Bolt, 1/4 in. BSF	2	-	C	ED4/2	
A25/6J	Bolt, 3/8 in. BSF	5	-	C	ED4/3	
A27/EP	Nut, 1/4 in. BSF	2	-	C	ED4/4	
A27/JP	Nut, 3/8 in. BSF	5	-	C	ED4/5	R
SP13/E	Washer, 1/4 in.	4	-	C	ED4/6	
SP13/J	Washer, 3/8 in.	10	-	C	ED4/7	
SP47/E	Washer, spring, 1/4 in.	2	-	C	ED4/8	
SP47/J	Washer, spring, 3/8 in.	5	-	C	ED4/9	
EB8.81.2531	BAR, bus, P10 to circuit breaker	2	-	C	ED4/10	R
	Attachment of bus bar to connecting link					
A25/6E	Bolt, 1/4 in. BSF	2	-	C	-	
A27/EP	Nut, 1/4 in. BSF	2	-	C	-	
SP13/E	Washer, 1/4 in.	4	-	C	-	
SP47/E	Washer, spring, 1/4 in.	2	-	C	-	R
EB8.81.4849	BAR, bus, reverse current circuit breaker to bus bar panel	1	-	C	ED4/11	
	Attachment of bus bar to connecting link and bus bar panel					
A25/6J	Bolt, 3/8 in. BSF	5	-	C	-	
A25/JP	Nut, 3/8 in. BSF	5	-	C	-	

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	1 2 3 4 5 6				
SP13/J SP47/J AS2657	Washer, 3/8 in. Washer, spring, 3/8 in. BLOCK, terminal	10 5 1	- - -	C C C	ED3/75
	Attachment of terminal block to forward panel				
A32/B20 3271	Screw, 4BA BLOCK, fuse, 4 way	2 1	- -	C L	ED3/76
EB8.81.4855	BLOCK, bus bar (Pre Mod 3062)	1	BS1137	C	
EB8.81.5643	BLOCK, support, (Mod 3062)	1	-	C	ED3/77
EB8.81.4853	COVER, bus bar block (Pre Mod 3062)	1	BS1137	C	
	Attachment of bus bar cover and block to forward panel				
A25/20C	Bolt, 2BA	2	-	C	ED3/78
EB8.81.2287	COVER, bus bar	1	DTD797A	C	ED3/79
	Attachment of bus cover to forward panel				
A31/C16 SP13/C	Screw, 2BA Washer, 2BA	6 6	- -	C C	ED3/80 ED3/81
EB8.81.5713	COVER, switch, D/P	1	-	C	ED3/82
5CY/5332	CIRCUIT-BREAKER, reverse current	2	-	P	ED3/83
	Attachment of circuit-breaker to forward panel				
A31/C32 5CY/4376492	Screw, 2BA CIRCUIT - BREAKER, type D28	4 1	- -	C P	ED3/84 ED3/85
	Attachment of circuit breaker to forward panel				
A25/24C EA9.81.2433	Bolt, 2BA Piece, distance	4 4	- LFB82	C C	ED3/86 ED3/87
SP13/C	Washer, 2BA	4	-	C	ED3/88
EB8.81.2535	CONNECTOR, bus bar, ground supply connection to circuit breaker	1	-	C	ED4/12
	Attachment of connector to bus bar connection				
A25/6E A27/EP	Bolt, 1/4 in. BSF NUT 1/4 in. BSF	4 4	- -	C C	ED4/13 ED4/14
SP13/E	Washer, 1/4 in.	8	-	C	ED4/15
SP47/E	Washer, spring 1/4 in.	4	-	C	ED4/16
EB8.81.4909	CONNECTOR, bus bar, circuit breakers to terminal block	1	-	C	ED3/89
EB8.81.2345	FLAP, spring, group	1	-	C	ED3/90
EB8.81.2283	LINK, reverse current circuit breaker	1	-	C	ED4/17
EB8.81.1999x5	PANEL, Forward Assembly (Pre Mod 5156)	1	-	-	-
EB8.81.1999x6	PANEL, Forward Assembly (Mod 5156)	1	-	-	-
	Spares for:				
AGS2007/B1	NUT, anchor 4BA (Pre Mod 5156)	6	-	C	-

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description 1 2 3 4 5 6	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
AGS2007/B1 AGS2018/B1 AS2230/404 AS2230/404 EA9.81.2403	NUT, anchor 4BA (Mod 5156) NUT, anchor, (Mod 5156) RIVET, (Pre Mod 5156) RIVET, (Mod 5156) WASHER, contact	11 1 54 62 2	- - - - -	C C C C C	ED4/18	
	PLUG, External Supply Assembly (EB8.81.2291)	-	-	-	-	R
	Spares for:					
EB8.81.2339	BRACKET, Mounting Assembly (Pre Mod 5156)	1	-	C	ED4/19	
EB8.81.6711	BRACKET, Mounting Assembly (Mod 5156)	1	-	C	ED4/20	R
	Spares for:					
AGS2007/C1	NUT, anchor 2BA (Mod 5156)	2	-	C	ED4/21	
AGS2007/B1 SP88/304	NUT, anchor 4BA (Mod 5156) RIVET 3/32 in. (Mod 5156)	2 8	- -	C C	ED4/22 ED4/23	
	Attachment of mounting bracket to forward panel					
A31/B16 EB8.81.2533	Screw, 4BA Connector Bus Bar	4 1	- -	C C/MR	ED4/24 ED4/25	
	Attachment of bus bar connector to power supply plug					
EA9.81.2419 EA9.81.869 EB8.81.6755	Washer spacing COVER side aft (Pre Mod 5156) COVER side aft (Mod 5156)	1 1 1	L34 - -	C/MR - C	ED4/26 - -	R R
	Attachment of side cover aft to external supply plug					
A33/B14 5CW/6185	Screw, 4BA SWITCH, magnetic relay, type R3	2 1	- -	C P	- ED3/91	R
	Attachment of magnetic relay switch to forward panel					
A25/24C EA9.81.2433 SP13/C D5900	Bolt, 2BA Piece, distance Washer, 2BA SWITCH, magnetic relay type 20B No.3	4 4 4 1	- LFB82 - -	C C C L	ED3/92 ED3/93 ED3/94 ED3/95	R R
	Attachment of switch to mounting brackets					
A31/A14 SP47/A 5CW/6580	Screw, 6BA Washer, spring, 6BA SWITCH, tumbler	2 2 1	- - -	C C C	ED3/96 ED3/97 ED3/98	
	Attachment of tumbler switch to mounting bracket					
A31/C14 EB8.81.6717	Screw, 2BA Stiffener (Make from 30B/5611218)	2 1	- -	C LM	ED3/99 -	R

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	1 2 3 4 5 6					
	Attachment of stiffener to external supply plug:					
A25/1B	Bolt, 4BA	4	-	C	-	R R R
AGS2050/424	Rivet Monel	11	-	C	-	
SP13/B	Washer	4	-	C	-	
5CW/9499154	SWITCH, magnetic relay, type T, No 2	2	-	L	ED3/100	
	Attachment of magnetic relay switch to frame 12A					
A25/2C	Bolt, 2BA	2	-	C	ED3/101	R R R
5CW/6165	SWITCH, magnetic, type 18B	2	-	P	ED3/102	
	Attachment of magnetic switch to structure between frames 11 and 12A					
A31/C14	Screw, 2BA	3	-	C	ED3/103	
EEAS28/33EW	Washer, earth connection	1	-	C	ED3/104	R
	PANEL, Navigator's Instrument, Port Assembly (EB8.80.2521)	-	-	-	ED5/9	R
	Spares for:-					
EB8.20.2677	BRIDGE, master compass indicator	1	L72	LM		R R R
6A/5957	CONTROL UNIT, manual, type 605	1	-	L		
	Attachment of control unit to panel					
AGS2001/A4	Nut, stiff 6BA	4	-	C		
A44/A16	Screw, 6BA	4	-	C		R R R
5L/9959118	FILAMENT, miniature 28V .04 amp	7	-	C		
SP40/C10	GROMMET	1	-	C		
6B/2644	INDICATOR, master compass, type C (See Section EA)	-	-	P		
6A/5949	INDICATOR, rate of flow and total, type 1, 302-5PM	1	-	P		R R R
	Attachment of rate of flow indicator to panel					
A44/B12	Screw, 4BA	1	-	C		
A44/B20	Screw, 4BA	2	-	C		
5CZ/5003	INDICATOR, electric magnetic	2	-	C		R R R
5CX/1143214	LIGHT, bridge, type C	1	-	C		
	Attachment of lighting bridge to panel					
A44/B20	Screw, 4BA	2	-	C		
Thorn	PILLAR LAMPHOLDER	5	-	C		R R R
80/10/0855	TUBE, distance 17 swg, between bridge and flange of indicator	2	T45	LM		
AS2808/15/02						
	PANEL, Navigator's, Centre, Installation (Pre Mod 5000 ALT/SB/9/080) (EB8.80.4321)	-	-	-		
	PANEL, Navigator's Centre, Installation (Mod 5000 ALT/SB/9/080) (EB8.80.4323)	-	-	-		R

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	1 2 3 4 5 6				
	Spares for:				
Page A260	FILAMENT, 28V (Mod 5000 ALT/SB/9/080)	1	-	C	
Page Type 5A	KNOB (Mod 5000 ALT/SB/9/080)	1	-	C	
EB8.81.6865	LABEL (Mod 5000 ALT/SB/9/080)	1	-	C	
EB8.81.6867	LABEL (Mod 5000 ALT/SB/9/080)	1	-	C	
Dowty C5162Y Mk.6C	SWITCH, push (Mod 5000 ALT/SB/9/080)	1	-	L	R
Page B2400	UNIT, indicating flashing (Mod 5000 ALT/SB/9/080)	1	-	P	
	PANEL, Navigators Instrument, Starboard, Assembly (EB8.80.2643)	-	-	-	ED5/10 R
	Spares for:				
L83261-04-010	ALTIMETER, servo encoding type 30A	1	-	P	
	Attachment of altimeter to mooring plate				
A204/B36	Screw, pan hd. 6-32 UNC (Mod.4404)	4	-	C	
6A/3687	CAPTION, "AIR" (Pre Mod 5481)	1	-	C	R
10Q/16327	COMPASS, radio (Mod.4365)	1	-	P	
Thorn 5L/9959118	FILAMENT, miniature 28V.04 amp (Pre Mod 5481)	10	-	C	R
Thorn 5L/9959122	FILAMENT, 28V. 2W. (Pre Mod 5481)	1	-	C	R
Thorn 5L/9959118	FILAMENT, miniature, 28V .04 amp (Mod 5481)	8	-	C	R
Thorn 5L/9951230	FILAMENT, 24V. 2.8W	1	-	C	R
Thorn 5L/9959118	FILAMENT, midget 28V, .04 amp	2	-	C	R
Thorn 5L/9959118	FILAMENT, miniature, 28V.04 amp	1	-	C	
6A/3681	INDICATOR, air temperature, type A (Pre Mod 5481)	1	-	P	R
	Attachment of air temperature indicator to panel				
A44/B28	Screw, 4BA (Pre Mod 5481)	2	-	C	R
A44/B24	Screw, 4BA (Pre Mod 5481)	2	-	C	R
A44/B28	Screw, 4BA (Mod 5481)	4	-	C	R
6A/4722	INDICATOR, air speed mark 9M	1	-	P	
	Attachment of air speed indicator to panel				
A44/C40	Screw, 2BA.	2	-	C	
A44/C44	Screw, 2BA.	2	-	C	
5CZ/5003	INDICATOR, electro magnetic, type C1	1	-	L	
10Q/16335	INDICATOR, electrical, type 9547	1	-	P	
	Attachment of electrical indicator to panel				
A44/B20	Screw, 4BA	2	-	C	
A44/B28	Screw, 4BA	2	-	C	

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	1 2 3 4 5 6					
Thorn 80/10/0678 (Red)	LAMPHOLDER, pillar	2	-	C		
Thorn PPL120	LAMPHOLDER, type A, No.2	1	-	C		
5CX/1143214	LIGHTING, bridge type C (Pre Mod 5481)	4	-	C		R
5CX/1143214	LIGHTING, bridge type C (Mod 5481)	3	-	C		R
5CX/1069	LIGHT, warning	1	-	C		R
Thorn P969X1	PANEL, "TRANSLITE"	1	-	C	ED5/11	
L84380-00-000	PLATE, mooring (Mod 4404)	1	-	L		
Thorn 80/10/0237	PLATE, pressure, round	1	-	C		
Thorn 80/10/0286	RECEPTACLE, round type	1	-	C		
Page Eng. C180/A/6	SWITCH, push button	1	-	C		
Thorn 80/10/0098	TERMINAL, earth	1	-	C		
	PANEL, Navigator's Switch and Dimmer (EB8.81.4945)	-	-	-	ED6/1	R
	Spares for:					
5L/9959118	FILAMENT, miniature, 28V, .04 amp.	8	-	C		
10AK/2112996	KNOB, csk. switch	1	-	L		R
Smiths 44C/FP	LAMP, indicator	1	-	C		
Thorn PPL120	LAMPHOLDER, plastec panel, c/w shroud	1	-	C		R
Page C1101/C/7	SWITCH, I.F.F. fail	1	-	C		R
Berco 5CW/6608	SWITCH, dimmer, double ganged	2	-	L		R
Dowty C5162Y Mk.6C	SWITCH, push type B	1	-	L		R
5CW/5057	SWITCH, push button	1	-	L		
N.S.F. 32530-DM1	SWITCH, rotary	1	-	L		R
Rotax D5431/1	SWITCH, toggle	1	-	L		R
	Attachment of toggle switch to panel					
A33/B8	Screw, 4BA	2	-	C		
N.S.F. 8804-B105	SWITCH, tumbler	2	-	L		R
N.S.F. 8810-B109	SWITCH, tumbler	5	-	L		R
N.S.F. 8834-B102	SWITCH, tumbler	1	-	L		
	Attachment of tumbler switch to panel					
EEAS200	Washer, locking	1	-	C		
Berco 5CW/6608	SWITCH, dimmer double ganged	1	-	L		R
	PANEL, Navigators Undercarriage Fuse Assembly (EB8.81.6665)	-	-	-		R

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	1 2 3 4 5 6				
	Spares for:				
Plessey CZ62879	BLOCK, fuse, 4 way	1	-	C	
	Attachment of fuse block to panel				
A31/B8	Screw, ch. hd. 4BA	2	-	C	
10H/23865	FUSE, 2.5 amp	2	-	C	
10H/23864	FUSE, 5 amp	2	-	C	
Hellerman Z22431	GROMMET, Helsyn, type 3	1	-	C	
AS2766	LINK, commoning, 3 way	1	-	C	
EB8.81.6667	PANEL, navigators U/C fuse	1	-	-	
	Attachment of panel structure				
AS1246/1B	Bolt, rd. hd., 4BA	4	-	C	
SP13/B	Washer	4	-	C	
	PANELS, Pilot's Assembly (EB8.80.101)	-	-	-	R
	Spares for:				
	ACCELEROMETER, Mounting, on Pilots Anti Reflection Screen (EB8.80.3703)	-	-	-	ED1/1 R
	Spares for:				
6A/4825	ACCELEROMETER, indicating, Mk. 2A	1	-	P	
	Attachment of accelerometer to mounting				R
A32/B24	Screw, 4BA	1	-	C	
CZ50205	BLOCK, terminal, 2-way	1	-	C	R
	Attachment of terminal block to mounting				R
AGS2002/B3	Nut, stiff, 4BA	2	-	C	
SP15/B	Washer, 4BA	2	-	C	
5CX/5356	BRIDGE, lighting type G	1	-	C	
	Attachment of lighting bridge to mounting				R
A32/B28	Screw, 4BA	2	-	C	
C226799	COVER, terminal block	1	-	L	
5L/9959118	FILAMENT, midget 28V, .04 amp	2	-	L	R
SP40/B4	GROMMET, rubber	2	-	C	
SP40/B8	GROMMET, rubber	1	-	C	
EB8.10.8067	MOUNTING, accelerometer	1	-	C	ED1/2
	Attachment of mounting to pilot's coaming panel				
A61/2B	Bolt, 4BA	5	-	C	
AGS2002/B3	Nut, stiff, 4BA	5	-	C	
SP15/B	Washer, 4BA	5	-	C	
Z28426	PILLAR, fixing	2	-	C	
EB8.80.225	QUADRANT	1	-	C	R

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	1 2 3 4 5 6					
5L/9959118 Thorn 80/10/0228	CARD, frequency, illuminated (Mod 4844 Satisfied by CM/CAN/0482/NEAF)	1	-	-		R
	FILAMENT, 28V, .04A (Mod 4844 Satisfied by CM/CAN/0482/NEAF)	4	-	C		
	Lamp, pillar (Mod 4844 Satisfied by CM/CAN/0482/NEAF)	4	-	C		
	PANEL, Circuit Breaker, Assembly (Mod 5130, Mod 5137 and Mod 5000 ALT/SB/9/009) (EB8.80.2105)	-	-	-	ED2/1	R
10AK/1423347 5CY/2561	Spares for:					
	CAP (Mod 5130) (Pre Mod 5137)	1	-	C		
	CIRCUIT BREAKER type A3, 15 amp	2	-	L		
	Attachment of circuit breaker to panel					R
A33/B8 10W/0119642	Screw, csk. 4BA	2	-	C		
	CONTROL, Volume (Mod 5130) (Pre Mod 5137)	1	-	C		
	COVER, switch D/P (Pre Mod 5000 ALT/SB/9/009)	1	-	C	ED2/2	
	COVER, switch S/P (Pre Mod 5000 ALT/SB/9/009)	2	-	C	ED2/3	
5L/9959118 10AK/1123892 Thorn PPL120 EB8.81.5265	FILAMENT, midget 28V, .04 amp	8	-	L		
	KNOB (Mod 5130)	1	-	C		
	LAMPHOLDER, plastec panel c/w shroud	8	-	L		
	LOCK, switch, inverter, selector	1	-	C	ED2/4	
AGS2001/A1 A33/A16 Sangamo Weston S109/6/60	Attachment of switch lock to panel					
	Nut, stiff, 6BA	2	-	C		
	Screw, CSK. 6BA	2	-	C		
	METER, frequency	1	-	P		
A33/B16 Thorn P512x5	Attachment of frequency meter to panel					R
	Screw, csk 4BA	4	-	C		
	PANEL, "Translite" (CM/CAN/0502/STC embodied) (Mod 5130)	1	-	L	ED2/5	R
	PANEL, "Translite" (Pre Mod 5137) (Make from ref 32317)	-	-	L		R
EB8.80.2129x3 EB8.80.2129x4 Dowty AS10512M-1 Dowty AS10512M-2	PANEL, "Translite" (Mod 5137) (Make from ref 32317)	-	-	L		R
	SHROUD, switch (Mod 5000 ALT/SB/9/009)	2	-	C		
	SHROUD, switch (Mod 5000 ALT/SB/9/009)	1	-	C		

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	1 2 3 4 5 6				
10F/0510554 Dowty A-7 N.S.F. 8810-B109	SWITCH, (Mod 5130) (Pre Mod 5137) SWITCH, S/P SWITCH, tumbler (Pre Mod 5000 ALT/SB/9/009)	1 1 2	- - -	L L L	R
Dowty AS10512A-2 N.S.F. 8824-B107	SWITCH, tumbler (Mod 5000 ALT/SB/9/009) SWITCH, tumbler (Pre Mod 5000 ALT/SB/9/009)	2 1	- -	L L	
Dowty AS10512C-1	SWITCH, tumbler (Mod 5000 ALT/SB/9/009) Attachment of tumbler switch to panel	1	-	L	
EEAS200 5CW/6429	Washer, locking SWITCH, tumbler S/P, generator Attachment of tumbler switch to panel	AR 2	- -	C L	R
A33/B6 Sangamo Weston S149/2/115	Screw, csk. 4BA VOLTMETER Attachment of voltmeter to panel	1	-	P	
6A/4246 A33/B20	Plate, adaptor Screw, csk. 4BA PANEL Coaming, Assembly (Mod 5137) (EB8.81.3463) Spares for:	1 4 - -	- - - -	L C - -	
EB8.81.5715 EB8.81.5717 5L/9951271 5L/9959118 5L/9959122 EB8.81.3463/A	COVER, switch, S/P COVER, switch, S/P FILAMENT, 28V 3.5W FILAMENT midget, 28V .04 amp FILAMENT, 28V, 2W LABEL (Pre Mod 5137) Attachment of label to panel	1 1 3 7 5 1	- - - - - -	C C C C C C	ED1/4 ED1/5
AS2230/203	Rivet LAMP, type 44 CFP (Pre Mod 5137)	2 1	- -	C -	R
Thorn PPL120	LAMPHOLDER, plastec panel, c/w shroud	7	-	L	
Rotax H4301/1	LAMP, fire warning Attachment of firewarning lamp to panel	3	-	L	
A31/A14 AGS2035/A	Screw, 6BA Washer, shakeproof, 6BA	2 2	- -	C C	R

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	1 2 3 4 5 6					
Thorn P513x5	PANEL, "TRANSLITE"	1	-	L	ED1/6	R
5CW/5061	SWITCH, push, type A	1	-	L		
5CW/5057	SWITCH, push, type B	1	-	L		
5CW/6460	SWITCH, push button, illuminated, green	3	-	L		R
5CW/6462	SWITCH, push button, illuminated, amber	2	-	L		R
N.S.F. 8810-B109	SWITCH, tumbler	1	-	L		
N.S.F. 8295/B138	SWITCH, tumbler	1	-	L		
Rotax D5431/1	SWITCH	1	-	L		
	Attachment of switch to panel					
A33/B8	Screw, 4BA	2	-	C		
Thorn 80/10/0098	TERMINAL, earth	2	-	C		
	PANEL, Console, Aft, Assembly (EB8.80.91)	-	-	-	ED1/7	R
	Spares for:					
EB8.81.5713	COVER, switch, D/P (Pre Mod 5167)	6	-	C	ED1/8	
5L/9959118	FILAMENT, midget, 28B .04 amp	10	-	C		
5CZ/5073	INDICATOR, electro magnetic 2 position	2	-	L		R
5CZ/5271	INDICATOR, electric magnetic, 3 position	1	-	L		R
EA3.81.2077	KNOB, tumbler switch	1	-	C		
	Attachment of knob to toggle					
A31/B28	Screw, 4BA	1	-	C		
Thorn PPL120	LAMPHOLDER, plastec panel, c/w shroud	10	-	L		R
EB8.80.4203	LOCK, Assembly Switch (Mod 4372)	1	-			
	Spares for:					
EB8.80.3155	BRACKET	1	L72	C		
EB8.80.4201	GUARD	1	DTD687	C		
EB8.80.4199	SPRING	1	DTD215	C		
Thorn P1575x1	PANEL, "TRANSLITE" (Mod 3342)	1	-	L	ED1/9	R
Thorn 80/10/0285	PLATE, pressure, square	1	-	L		
Thorn 80/10/0287	PLATE, pressure, round	2	-	L		
Thorn 80/10/0284	RECEPTACLE, square type	1	-	L		
Thorn 80/10/0286	RECEPTACLE, round type	2	-	L		
Dowty AS10512M-2	SHROUD, switch (Mod 5167)	6	-	C	ED1/10	
EB8.81.1913	SWITCH, Assembly (Pre Mod 5167)	6	-	-		

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description 1 2 3 4 5 6	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	Consisting of:					
EB8.81.1921	KEY, switch (Pre Mod 5167)	1	DTD166	C	ED1/11	
EB8.81.1919	KNOB, switch (Pre Mod 5167)	1	L65	C	ED1/12	
SP41/C	LOCKWASHER, tab (Pre Mod 5167)	1	-	C		
EB8.81.1927	NUT, 2BA (Make from Ref 28M/16507) (Pre Mod 5167)	1	-	LM		
N.S.F. 8834-B103 Dowty AS10512C-5P2	SWITCH (Pre Mod 5167)	1	-	L		R
5CW/4612	SWITCH, DP (Mod 5167)	6	-	L		
5CW/6429	SWITCH, type 8B No 1	1	-	L		
5CW/6432	SWITCH, SP changeover	3	-	L		
5CW/6435	SWITCH, SP changeover	1	-	L		
5CW/6435	SWITCH, DP changeover	3	-	L		
N.S.F. 8810-B109	SWITCH, tumbler	1	-	L		R
	Attachment of switch to panel					
A33/B10 Thorn 80/10/0098 5CW/4835	Screw, 4BA	4	-	C		
	TERMINAL, earth	2	-	C		
	TOGGLE, switch	1	-	L		
	Attachment of toggle to switch					
A33/A6	Screw, 6BA	2	-	C		
	PANEL, Console, Forward, Assembly (EB8.80.93)	-	-	-	ED1/13	R
	Spares for:					
EB8.81.5717	COVER, switch, S/P (Pre Mod 5000 ALT/SB/9/009)	4	-	C	ED1/14	
5L/9959118	FILAMENT, midget 28V.04 amp	3	-	C		
PPL120	LAMPHOLDER, plastec panel c/w shroud	4	-	L		
Thorn P565x1 5CW/6264	PANEL, "TRANSLITE"	1	-	L	ED1/15	R
	SWITCH, lever	1	-	P		
	Attachment of lever switch to panel					
A32/B20	Screw, 4BA	1	-	C		
A32/B32	Screw, 4BA	1	-	C		
Dowty AS10512M-1	SHROUD, switch (Mod 5000 ALT/SB/9/009)	4	-	C	ED1/16	R
N.S.F. 8810-B109	SWITCH, tumbler (Pre Mod 5000 ALT/SB/9/009)	4	-	L		R
Dowty AS10512A-2	SWITCH, tumbler (Mod 5000 ALT/SB/9/009)	4	-	L		
	Attachment of tumbler switch to panel					
EEAS200	Washer, locking	AR	-	C		
	SWITCH, Assembly (Mod 3720) (EB8.80.4045)	-	-	-		R

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	1 2 3 4 5 6				
	Spares for:				
EB8.80.4051	BAR, connecting	1	L72	C	
5CW/4401181	COVER, switch	3	MAM 1701A	C	
EB8.81.1921	KEY, switch	1	DTD166	C	
EB8.80.4047	KNOB, switch	2	L65	C	
EB8.80.4049	KNOB, switch	1	L65	C	
EB8.81.1927	NUT, 2BA (Make from 28M/16507)	3	-	LM	
A41/B14	SCREW	2	-	C	
N.S.F.					
8824-B118	SWITCH, double pole	3	-	C	
SP41/C	WASHER	3	-	C	
EB8.80.4061	SWITCH, Lock (Mod 3720)	1	-	L	
Thorn					
80/10/0098	TERMINAL, earth	2	-	C	
	PANEL, Dimmer Console, Starboard Assembly (EB8.80.2221)	-	-	-	ED2/6
	Spares for:				
EB8.81.5717	COVER, switch S/P	1	-	C	ED2/7
5L/9959118	FILAMENT, miniature, 28V, 04. amp	7	-	C	
EB8.81.2345	FLAP, spring group	1	-	C	ED2/8
SP40/A6	GROMMET, rubber	1	-	C	
Thorn					
PPL120	LAMPHOLDER, plastec panel c/w shroud	7	-	L	
Thorn					
P538x3	PANEL, "TRANSLITE"	1	-	C	ED2/9
N.S.F.					
8810-B109	SWITCH, tumbler (Mod 3716 Pre Mod 5000 ALT/SB/9/009)	2	-	L	
Dowty					
AS10512A-2	SWITCH, tumbler (Mod 5000 ALT/SB/9/009)	2	-	L	
	Attachment of switch to panel				
EEAS200	Washer, locking	AR	-	C	
5CW/6604	SWITCH, dimmer, double ganged	2	-	L	
5CW/6607	SWITCH, dimmer, double ganged	1	-	L	
	Attachment of dimmer switch to panel				
AGS2001/A4	Nut, stiff, 6BA	4	-	C	
A44/A10	Screw, 6BA	4	-	C	
SP25/A	Washer, 6BA	4	-	C	
5CW/6608	SWITCH, dimmer double ganged	1	-	L	
Berco					
L50/G2	SWITCH, dimmer. double ganged (Consisting of 1 type L50 pattern No.DT15 and 1 type L50 pattern No.DT30)	1	-	P	
	Attachment of dimmer switch to panel				
AGS2001/B4	Nut, stiff, 4BA	4	-	C	
A44/B10	Screw, 4BA	4	-	C	
SP25/B	Washer, 4BA	4	-	C	
5CW/5767	SWITCH, dimmer, Type R.	1	-	L	

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	1 2 3 4 5 6					
	Attachment of dimmer switch to panel					
A27/AP	Nut, plain, 6BA	3	-	C		
A36/A20	Screw, 6BA	3	-	C		
AGS2035/A	Washer, shakeproof, 6BA	3	-	C		
Thorn						
80/10/0098	TERMINAL, earth	2	-	C		
	PANEL, Fuel Assembly (Mod 3096, Mod 5137, Mod 5000 ALT/SB/9/009, Pre Mod 5478) (EB8.80.3727)	-	-	-	ED2/10	R
	PANEL, Fuel, Assembly (Mod 5478/B and /C, Pre AS5381) (EB8.80.3727x14)	-	-	-		R
	PANEL, Fuel, Assembly (AS5381) (EB8.80.3727x15)	-	-	-		R
	Spares for:					
EB8.80.223	BAR, locking	2	S91	C	ED2/11	
	Attachment of locking bar to quadrant					
EB8.80.275	Pin, locking bar	1	S91	C	ED2/12	
EB8.80.4157	BRACKET, mounting	1	DTD683	C		
EB8.80.4158	BRACKET, mounting	1	DTD683	C		
EB8.80.213	CASTOR, group	4	-	C	ED2/13	
	Attachment of castor to panel structure					
SP90/C5	Pin, split, 1/16 in. dia.	1	-	C		
EB8.80.203	COVER, panel	1	Glasscloth	C	ED2/14	
	Attachment of panel cover to structure					
AS1242/1/2B	Bolt, csk, 4BA	1	-	C		R
AS1248/1/2B	Bolt, 4BA	5	-	C		R
AS1248/1B	Bolt, 4BA	6	-	C		
EB8.81.5713	COVER, switch, D/P (Pre Mod 5000 ALT/SB/9/009)	1	-	C	ED2/15	
EB8.81.5717	COVER, switch, S/P (Pre Mod 5000 ALT/SB/9/009)	1	-	C	ED2/16	
5L/9959118	FILAMENT, miniature, 28V, .04 amp	19	-	C		
6A/3856	GAUGE, fuel contents	1	-	P		
6A/3868	GAUGE, fuel contents	1	-	P		
6A/3878	GAUGE, fuel contents	2	-	P		
6A/5853	GAUGE, fuel contents	1	-	P		
	Attachment of fuel contents gauge to panel					
A25/B24	Screw, 4BA	4	-	C		
Hellerman						
4646/C	GROMMET (Mod 5478/B satisfied by SEM/CAN/099/STC)	1	-	C		
EB8.82.2303	GUARD, switch (Mod 4379)	2	L72	C		
Z970179	KNOB, switch (Pre Mod 5137)	1	-	C		
EB8.82.2305	LABEL, switch (Mod 4379)	1	Plasteck	C		

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	1 2 3 4 5 6					
Thorn PPL120	LAMPHOLDER, plasteck, panel, c/w shroud	19	-	L		
EB8.81.5265	LOCK, switch, fuel cock	1	-	C	ED2/17	
	Attachment of switch to panel					
AGS2001/A1	Nut, stiff, 6BA	2	-	C		
A33/A16	Screw, csk. 6BA	2	-	C		
10AJ/132	MOUNTING, type 945	4	-	L		
	Attachments of mounting to brackets					
A25/7B	Bolt, 4BA	1	-	C		
AGS2001/B1	Nut, stiff, 4BA	5	-	C		
A31/B14	Screw, 4BA	1	-	C		
10A/19429	Washer, check	1	-	C		
EB8.80.4159	PACKING,	2	L72	C		
	PANEL, "Translite" aerial tone and oak switch (Mod 4084) (EB8.80.4147)	1	-	L		
Thorn PI327x2	PANEL, "Translite" press to mute (Pre Mod 4084)	1	-	L	ED2/18	R
Thorn PI317x2	PANEL, "Translite", aerial, tone and oak switch (Pre Mod 4084)	1	-	L	ED2/19	R
Thorn PI318x2	PANEL, "Translite", H.F. selector switch	1	-	L	ED2/20	R
Thorn PI319x2	PANEL, "Translite", fuel fixed	1	-	L	ED2/21	R
Thorn PI320x2	PANEL, "Translite", fuel gauge (Modified by EB8.80.4025)	1	-	L	ED2/22	R
EB8.80.279	PIN, quadrant	1	S91	C	ED2/23	
CZ.48995	PLUG	1	-	C		
CZ.66969	PLUG, 9 pin.	1	-	C		
CZ.49112	PLUG, fixed, 12 way (Plessey)	1	-	C		
D5194	SHROUD, push switch	2	-	C		
EB8.80.221	SPRING, compression, castor	4	DTD215	C	ED2/24	
EB8.80.277	SPRING, override	1	DTD215	C	ED2/25	
Dowty AS10512M-2	SHROUD, switch (Mod 5000 ALT/SB/9/009)	1	-	C	ED2/26	
Dowty AS10512M-1	SHROUD, switch (Mod 5000) ALT/SB/9/009 and Mod 5478/B (Satisfied by SEM/CAN/099/STC)	8	-	C	ED2/27	
Dowty C5162Y Mk.3	SWITCH, push, type B	2	-	L		R
D.M.L.57535	SWITCH, oak, selector	1	-	L		
5CW/6430	SWITCH, tumbler (Pre Mod 5478/C)	1	-	L		
XD781	SWITCH, tumbler (Mod 5478/C satisfied by SRIM 2903)	1	-	L		

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	1 2 3 4 5 6					
N.S.F. 8810-B109	SWITCH, tumbler (Pre Mod 5000 ALT/ SB/9/009)	1	-	L		
Dowty AS10512A-2	SWITCH, tumbler (Mod 5000) ALT/ SB/9/009 and Mod 5478/B (Satisfied by SEM/CAN/099/STC)	9	-	L		R
5CW/5270	SWITCH, tumbler (Pre Mod 5000 ALT/ SB/9/009)	1	-	L		
N.S.F. 8824-B107	SWITCH, tumbler (Pre Mod 5000 ALT/SB/9/009)	2	-	L		
Dowty AS10512C-1	SWITCH, tumbler (Mod 5000 ALT/SB/9/009)	2	-	L		
	Attachment of switch to panel					
EEAS200	Washer, locking	13	-	C		R
EB7.81.259	Washer, spacing	39	-	C	ED2/28	
Thorn 80/10/0098	TERMINAL, earth	2	-	C		
	PANEL, Limit Switch Assembly (EB8.80.105)	-	-	-	ED1/17	R
	Spares for:					
5L/9959118	FILAMENT, miniature, 28V, .04 amp	4	-	C		
Thorn PPL120	LAMPHOLDER, plastec panel, c/w shroud	4	-	L		R
EB8.80.225	QUADRANT, assembly	1	-	C		
Thorn 80/10/0098	TERMINAL, earth	2	-	C		
	PANEL, Main Instrument, Assembly (Mod 4990 and Mod 5000) ALT/SB/9/009 (EB8.80.4305)	-	-	-	ED1/18	R
	Spares for:					
L82621-04-010	ALTIMETER, servo controlled type 29B (Mod 4404)	1	-	P		
	Attachment of altimeter to mooring plate					R
A204/B36	Screw, pan hd. 6-32 UNC (Mod 4404)	4	-	C		
5X/3181	BLOCK, terminal, 20-way	1	-	L		
	Attachment of terminal block to panel					
A45/B28	Screw, 4BA	2	-	C		
Smiths 6A/4833	CLOCK, MK.5A	1	-	P		
EB8.81.5717	COVER, switch S/P	1	-	C	ED1/19	

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	1 2 3 4 5 6				
5X/9149643	COVER, terminal block 20 way	1	-	C	
5L/9951110	FILAMENT 6V.24W	AR	-	C	
5L/9959101	FILAMENT (Mod 5478W satisfied by CM/CAN/0573/STC)	2	-	C	
5L/9951273 Thorn	FILAMENT, 28V, 3.5W	4	-	C	
5L/9959118	FILAMENT, midget, 28V, .04 amp	54	-	C	
6A/5948	FLOWMETER, fuel	2	-	P	R
	Attachment of fuel flowmeter to panel				
SA21284	Clamp securing (Post SA.4897)	1	-	C	
6A/387	HOLDER, correction card	1	-	C	R
	Attachment of card holder to panel				
AS2229/304	Rivet, 3/32 in. dia	4	-	C	
6A/4337796	HORIZON, gyro Mk 3 (Pre Mod 5162)	1	-	P	
6A/4338176	HORIZON, gyro Mk 4 (Mod 5162)	1	-	P	
	Attachment of gyro to panel				
A44/C28	Screw, 2BA	3	-	C	
6A/4722	INDICATOR, air speed (Pre Mod 4966)	1	-	P	
	Attachment of air speed indicator to panel				
AGS2001/C4	Nut, stiff, 2BA	4	-	C	
A44/C48	Screw, 2BA	4	-	C	
AS2807/5/070	Tube, distance, 20 SWG	4	T45	LM	
6A/3360	INDICATOR air speed (Mod 4966 satisfied by CM/CAN/0244/NEAF)				R
5CZ/5003	INDICATOR, electro magnetic, type C1	4	-	L	
6A/5845	INDICATOR, rate of climb	1	-	P	
6A/3953	INDICATOR, turn and slip	1	-	P	
10Q/16335	INDICATOR, tacan repeater type 9547 (MOD 4365)	1	-	P	
Louis Newmark 8528	INDICATOR, remote pilots tans-type 80445A	1	-	-	R
Sangamo Weston S193/6/13	INDICATOR, combined trim	1	-	P	
H4702/2	KNOB, (Mod 5478 satisfied by CM/CAN/0573/STC)	2	-	C	
EB8.83.3034	LABEL, (Mod 4407)	1	-	C	
38CFP	LAMP, warning, red	AR	-	L	
H2803	LAMP, warning, green	1	-	L	
H2805	LAMP, warning, amber	1	-	L	
EB8.80.4079	LAMP, Warning, Assembly (Mod 3720)	-	-	-	R
	Spares for:				
EB8.80.4085	Lamp	1	-	L	
H3505/1	LAMPHOLDER (Mod 5478/W satisfied by CM/CAN/0573/STC)	2	-	L	
Thorn 80/10/0678 (Red)	LAMPHOLDER, pillar	2	-	L	
Thorn 80/10/0855	LAMPHOLDER, pillar	22	-	L	

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	1 2 3 4 5 6				
5CX/5301	LIGHTING, bridge, 2BA	1	-	L	
5CX/5302	LIGHTING, bridge, 2BA	1	-	L	
5CX/5303	LIGHTING, bridge, 4BA	10	-	L	
01-0461	LIGHTING, bridge, 4BA	1	-	L	
5CX/5308	LIGHTING, bridge, 2BA	11	-	L	
6A/5943	MACHMETER, Mk 2A	1	-	P	
6A/5305 #	PLATE, adaptor (Mod 4966)	1	-	C	
L84380-00-000	PLATE, mooring (Mod 4404)	1	-	L	
5CZ/5848	POTENTIOMETER, type PV 2	2	-	P	
Dowty					
AS10512A/6	SWITCH (Mod 4407)	1	-	L	
D5194	SHROUD, push button	1	-	C	
5CW/5058	SWITCH, push, type C	1	-	L	
	Attachment of push switch to panel				
A47/Z	Nut, 8BA	2	-	C	
A32/Z10	Screw, 8BA	2	-	C	
N.S.F.					
8810-B109	SWITCH, tumbler (Pre Mod 5000 ALT/SB/9/009)	1	-	L	
Dowty					
AS10512A-2	SWITCH, tumbler (Mod 5000 ALT/SB/9/009)	1	-	L	
	Attachment of tumbler switch to panel				
EB7.81.259	Washer, spacing	2	DTD610	C	ED1/20
6A/8910	TACHOMETER, engine speed	2	-	P	
	Attachment of engine speed tachometer to panel				
SA21284	CLAMP, securing (SA 4897)	1	-	C	
6A/4723	THERMOMETER, jet pipe temperature	2	-	P	
	Attachment of thermometer to panel				
SA21284	Clamp, securing (SA 4897)	1	-	C	
5Q/107	VOLTMETER, 0-35V	1	-	P	

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	1 2 3 4 5 6					
	PANEL, Pilot's Instrument, Starboard (EB8.80.2167)	-	-	-	ED1/21	
	Spares for:					
Thorn 80/10/1190	BRIDGE, lighting, type D, oxygen gauge	2	-	L		
5L/9959118	FILAMENT, miniature, 28V, .04 amp.	6	-	C		
6D/1615	GAUGE, pressure, oxygen, Mk. 3	2	-	P		
	Attachment of gauge to panel					
A44/B12	Screw, 4BA	2	-	C		
	PANEL, Take Off Assembly (EB8.80.2141)	-	-	-	ED2/29	R
	Spares for:					
6A/4245	ALTIMETER, Mk.21, fluorescent	1	-	P		
	Attachment of altimeter to panel					
SA21284	Clamp, securing (SA 4897)	1	-	C		R
EB8.81.5713	COVER, switch, D/P (Pre Mod 5000 ALT SB/9/009 Pre Mod 5481)	6	-	C	ED2/30	R
EB8.81.5717	COVER, switch, S/P (Pre Mod 5000 ALT SB/9/009 Pre Mod 5481)	7	-	C	ED2/31	R
EB8.81.5717	COVER, switch, S/P (Mod 5481)	6	-	C		R
EB8.81.5713	COVER, switch, D/P (Mod 5481)	7	-	C		R
Thorn 5L/9959118	FILAMENT, miniature, 28V, .04 amp.	12	-	C		
Smiths 505FL	INDICATOR, position, air valve	1	-	P		
	Attachment of indicator to panel					
A33/B24 Thorn PPL120	Screw, csk. 4BA	4	-	C		
	LAMPHOLDER, plastec panel, c/w shroud	12	-	L		R
EB8.80.3563	LOCK, engine switch	2	-	C	ED2/32	
EB8.81.5265	LOCK, battery switch	1	-	C	ED2/33	
	Attachment of switch lock to panel					
AGS2002/A1	Nut, stiff, 6BA	2	-	C		
A33/A16 Thorn P505x4 Dowty AS10512M-1	Screw, csk, 6BA	2	-	C		
	PANEL, "Translite"	1	-	C	ED2/34	R
	SHROUD, switch (Mod 5000 ALT/SB/9/009)	7	-	C		
Dowty AS10512M-2	SHROUD, switch (Mod 5000 ALT/SB/9/009)	6	-	C		
	SWITCH UNIT, Engine (EB8.80.3559)	-	-	-		R

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	1 2 3 4 5 6				
	Consisting of:				
EB8.80.3561/C	PIECE, joint	2	L72	C	ED2/35
	Attachment of joint piece to switch units				
A33/C10	Screw, csk, 2BA	2	-	C	
EB8.00.625	SWITCH UNIT, Engine	2	-	L	ED2/36
EB8.00.626	SWITCH UNIT, Engine	2	-	L	ED2/37
	Spares for:				
EB8.81.1921	KEY, switch	1	DTD166	C	ED2/38
EB8.81.1927	NUT, 2BA (Make from Ref.28M/16507)	1	-	LM	ED2/39
N.S.F. 8824-B118	SWITCH, double pole	2	-	L	
N.S.F. 8810-B109	SWITCH, tumbler (Pre Mod 5481)	6	-	L	R
N.S.F. 8810-B109	SWITCH, tumbler (Mod 5481)	5	-	L	R
N.S.F. 8824-K5	SWITCH, D/P (Mod 5481)	1	-	C	R
N.S.F. 8812-B102	SWITCH, tumbler (Pre Mod 5000 ALT/SB/9/009)	1	-	L	
Dowty AS10512A-1	SWITCH, tumbler (Mod 5000 ALT/SB/9/009)	1	-	L	
N.S.F. 8824-B107	SWITCH, tumbler (Pre Mod 5000 ALT/SB/9/009)	2	-	L	
Dowty AS10512C-1	SWITCH, tumbler (Mod 5000 ALT/SB/9/009)	2	-	L	
	Attachment of tumbler switch to panel				
EEAS200 Thorn 80/10/0098	Washer, locking	AR	-	C	
	TERMINAL, earth	2	-	C	
	PANEL, Undercarriage, Assembly (EB8.80.1349) (SA5384)	-	-	-	ED1/22 R
	Spares for:				
EA9.83.141	BRACKET, switch lock	1	-	C	R
EB8.81.1415	CABLE, 16U, group	1	-	C	ED1/23
5K/2724	COVER, spring (SA5384)	1	-	C	
5L/9951272	FILAMENT, 28V, 3.5W	9	-	C	
5L/9959118	FILAMENT, midget, 28V, .04 amp	1	-	C	
Sangamo Weston S63/4/950	INDICATOR, flap position	1	-	P	
	Attachment of indicator to panel				R
A45/B20	Screw, 4BA	4	-	C	
5CX/4204	INDICATOR, undercarriage position	1	-	L	R

EQUIPMENT
INSTRUMENT AND PANELS

Part No.	Description 1 2 3 4 5 6	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
A45/B20 Thorn 80/10/0328 5CW/898	Attachment of indicator to panel					
	Screw, 4BA	4	-	C		
	LAMPHOLDER, pillar SWITCH, push	1 1	- -	L L		
A44/A16 AGS2001A3 EB8.20.1357 5CW/4506	Attachment of push switch to panel					
	Screw, 6BA	4	-	C		
	Nut, stiff 6BA	4	-	C	-	R
	SHROUD, switch	1	-	P	-	R
	SWITCH, undercarriage	1	-	P		
A44/B24 Dowty C5148Y	Attachment of switch and shroud to panel					R
	Screw, 4BA	2	-	C		
	SWITCH, lever	1	-	P	-	R
A44/B24 A44/B28 5X/2747	Attachment of lever switch to bracket EA9.83.141 and to panel					R
	Screw, 4BA	1	-	C		
	Screw, 4BA	1	-	C		
	TRANSFER, "Fuel Tank Jettison"	1	-	C		











