

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EG4.81.2805	ELECTRICAL EQUIPMENT IN FRONT FUSELAGE						—	—	
EG4.81.2863	Spares for :— BOX, DISTRIBUTION No. 2 INSTALLATION						1	—	EB1/1
EG4.81.3137	Spares for :— BLOCK, 4-WAY FUSE, ASSEMBLY						1	—	EB1/2
703-1-00416	Spares for :— BLOCK, fuse, 4-way						1	—	EB1/3
EG4.81.3139	LABEL						1	—	EB1/4
EG4.81.3141	BLOCK, 4-WAY FUSE, ASSEMBLY						1	—	EB1/5
703-1-00416	Spares for :— BLOCK, fuse, 4-way						1	—	EB1/6
EG4.81.3143	LABEL						1	—	EB1/7
EG4.81.3145	BLOCK, 4-WAY FUSE, ASSEMBLY						1	—	EB1/8
703-1-00416	Spares for :— BLOCK, fuse, 4-way						1	—	EB1/9
EG4.81.3147	LABEL						1	—	EB1/10
EG4.81.3129	BLOCK, 4-WAY FUSE, ASSEMBLY						1	—	EB1/11
703-1-00416	Spares For :— BLOCK, fuse, 4-way						1	—	EB1/12
EG4.81.3127	LABEL						1	—	EB1/13
A3188	Attaching parts for EG4.81.3137 and EG4.81.3141, EG4.81.3145 and EG4.81.3129 :—								
SP47B	Screw, 4BA, cheese head						2	—	EB1/14
	Washer, 4BA						2	—	EB1/15
703-2-00244	BLOCK, terminal, 10-way						1	—	EB1/16
AGS2001B1	Attaching parts for 703-2-00244 :—								
A31B24	Nut, 4BA						2	—	EB1/17
	Screw, 4BA, cheese head						2	—	EB1/18
703-1-00249	BLOCK, terminal, 20-way						2	—	EB1/19
A31B24	Attaching parts for 703-1-00249 :—								
	Screw, 4BA, cheese head						2	—	EB1/20
EB7.81.941	BOX, distribution						1	—	EB1/21
508/1/03442/003	CAP, protective						1	—	EB1/22
EA2.81.795	CARRIER, spare fuse						1	—	EB1/23
AGS2001A1	Attaching parts for EA2.81.795 :—								
A32A16	Nut, 6BA						2	—	EB1/24
	Screw, 6BA, round head						2	—	EB1/25
EB7.81.943	COVER, ASSEMBLY						1	—	EB1/26
EEAS117/1	Spares for :— SCREW, cover						4	S92	EB1/27
EEAS28/2CU	WASHER						8	DTD124	EB1/28
EEAS42	WASHER						4	Leather	EB1/29
EA1.81.488	DISC, blanking						5	—	EB1/30
EA1.81.487	DISC, blanking						4	—	EB1/31
EB6.81.4807	DISC, blanking						2	—	EB1/32
102096	FUSE, dummy						7	—	
10H9463981	FUSE, 5 amp						9	—	
5X9431616	GROMMET						10	—	EB1/33
EB7.81.945	LABEL						1	—	EB1/34
2R X 3/16"	Attaching parts for EB7.81.945 :—								
	Screw, PK round head 3/16" long						1	—	EB1/35
EA3.81.577	LABEL						1	—	EB1/36
2R X 3/16"	Attaching parts for EA3.81.577 :—								
	Screw, PK round head 3/16" long						4	—	EB1/37

R
R

ELECTRICAL

AP101B-0415-3A

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA3.81.585	. . LABEL	1	—	EB1/38
2R X 3/16"	. . Attaching parts for EA3.81.585 :— . . Screw, PK round head 3/16" long	2	—	EB1/39
EB7.81.953	. . LABEL	1	—	EB1/40
2R X 3/16"	. . Attaching parts for EB7.81.953 :— . . Screw, PK round head 3/16" long	2	—	EB1/41
EG4.81.3149	. . LABEL	1	—	EB1/42
2R X 3/16"	. . Attaching parts for EG4.81.3149 :— . . Screw, PK round head 3/16" long	4	—	EB1/43
EA3.81.581	. . LABEL	1	—	EB1/44
2R X 3/16"	. . Attaching parts for EA3.81.581 :— . . Screw, PK round head 3/16" long	2	—	EB1/45
PLESSEY				
703-2-00255	. . LINK, 6 - way	1	—	
703-2-00252	. . LINK, 3 - way	2	—	
EEAS71/2	. . LINK, 3 - way	1	—	
EEAS71/1	. . LINK, 2 - way	2	—	
703-2-00260	. . LINK, transverse	1	—	
EA3.81.243	. . MOUNTING, fuse block	1	—	EB1/46
A31B12	. . Attaching parts for EA3.81.243 :— . . Screw, 4BA, cheese head	6	—	EB1/47
EA3.81.241	. . MOUNTING, relay	1	—	EB1/48
A31B12	. . Attaching parts for EA3.81.241 :— . . Screw, 4BA, cheese head	6	—	EB1/49
508-2-07657-003	. . NUT, union	5	—	EB1/50
10H0970127	. . NUT, union	4	—	EB1/51
10H0970130	. . NUT, union	2	—	EB1/52
508/1/07060/220	. . PLUG, fixed, Mk 7	1	—	EB1/53
508/1/07060/221	. . PLUG, fixed, Mk 7	1	—	EB1/61
508/1/07060/222	. . PLUG, fixed, Mk 7	1	—	EB1/62
5CW9729122	. . RELAY, type S1	3	—	EB1/54
AGS2001A1	. . Attaching parts for Ref. 5CW/9729122 . . Nut, 6BA	4	—	EB1/55
508/2/12373/001	. . RING, anti chafe	3	—	EB1/63
EA3.81.245	. . SCREEN	1	—	EB1/56
AGS2001A1	. . Attaching parts for EA3.81.245 :— . . Nut, 6BA	5	—	EB1/57
A31A8	. . Screw, 6BA, cheese head	5	—	EB1/58
EEAS146/10	. . SLEEVE, 3/8" long	QR	—	
EEAS146/10	. . SLEEVE, 1/4" long	QR	—	
EEAS146/20	. . SLEEVE, 1/2" long	QR	—	
PLESSEY				
508-1-40049-322	. . SOCKET, fixed, Mk 4	1	—	EB1/59
HV3254	. . STRAP, helvin	QR	—	
OP3255	. . STUD	QR	—	
HELLERMANN				
HC304	. . TAG, RT	2	—	
HC500	. . TAG, QR	3	—	
HC490	. . TAG, QR	QR	—	
EEAS43/2	. . WASHER	1	Alum	
EEAS43/1	. . WASHER	3	Alum	
A251C	. . Attaching parts for EG4.81.2863 :— . . Bolt, 2BA	4	—	EB1/60

AP101B-0415-3A

Page EB.3

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EG4.81.2865	.	.	.	.	.	BOX, DISTRIBUTION, DC AND 400 CYCLE, INSTALLATION	—	—	EB2/1
EB7.81.679	.	.	.	.	.	BLOCK, FUSE ASSEMBLY Spares for :—	1	—	EB2/2
PLESSEY 703-1-00416	.	.	.	.	.	BLOCK, fuse, 4 — way	1	—	EB2/3
EB7.81.769	.	.	.	.	.	LABEL	1	—	EB2/4
A31B8	.	.	.	.	.	Attaching parts for EB7.81.679 :—	2	—	EB2/5
AGS2035B	.	.	.	.	.	Screw, 4BA, cheese head	2	—	EB2/6
EB7.81.681	.	.	.	.	.	Washer, spring	1	—	EB2/7
PLESSEY 703-1-00416	.	.	.	.	.	BLOCK, FUSE ASSEMBLY Spares for :—	1	—	EB2/8
EB7.81.771	.	.	.	.	.	BLOCK, fuse, 4 — way	1	—	EB2/9
A31B8	.	.	.	.	.	LABEL	2	—	EB2/10
AGS2035B	.	.	.	.	.	Attaching parts for EB7.81.681 :—	2	—	EB2/11
EG4.81.3133	.	.	.	.	.	Screw, 4BA, cheese head	1	—	EB2/12
PLESSEY 703-1-00416	.	.	.	.	.	Washer, spring	1	—	EB2/13
EG4.81.3131	.	.	.	.	.	BLOCK, FUSE, ASSEMBLY Spares for :—	1	—	EB2/14
A31B8	.	.	.	.	.	BLOCK, fuse, 4 — way	2	—	EB2/15
AGS2035B	.	.	.	.	.	LABEL	2	—	EB2/16
PLESSEY 703-2-00244	.	.	.	.	.	Attaching parts for EG4.81.3133 :—	2	—	EB2/17
A31B28	.	.	.	.	.	Screw, 4BA, cheese head	2	—	EB2/18
703-1-00249	.	.	.	.	.	Washer, spring	7	—	EB2/19
A31B32	.	.	.	.	.	BLOCK, terminal, 10 way Attaching parts for 703-2-00244 :—	2	—	EB2/21
AGS2035B	.	.	.	.	.	Screw, 4BA, cheese head	2	—	EB2/22
AS2652	.	.	.	.	.	Washer, spring	2	—	EB2/23
A31B16	.	.	.	.	.	BLOCK, terminal, 37 amp Attaching parts for AS2652 :—	2	—	EB2/24
EB6.81.549	.	.	.	.	.	Screw, 4BA, cheese head	1	—	
EB7.81.461	.	.	.	.	.	CABLE, ASSEMBLY, F18	1	—	
508-1-03442-003	.	.	.	.	.	CABLE, ASSEMBLY, EW	3	—	
Z11533	.	.	.	.	.	CAP, blanking	3	—	EB3/1
Z11533	.	.	.	.	.	CAPACITOR, 0.5 μ F, 250V	3	—	EB3/2
EA2.81.795	.	.	.	.	.	CAPACITOR, 0.25 μ F, 350V	2	—	EB3/3
AGS2001A1	.	.	.	.	.	CARRIER, fuse 4 — way	1	—	
A32A12	.	.	.	.	.	Attaching parts for EA2.81.795 :—	2	—	EB3/4
AS1900G	.	.	.	.	.	Nut, 6BA	2	—	EB3/5
A31B12	.	.	.	.	.	Screw, 6BA, round head	2	—	EB3/6
	.	.	.	.	.	CLIP, 'P'	2	—	EB3/7
	.	.	.	.	.	Attaching parts for AS1900G :—	1	—	
	.	.	.	.	.	Screw, 4BA, cheese head	1	—	

R

R
R

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA6.81.355	. CLIP, capacitor	1	-	EB3/8
AGS2001B1	. Attaching parts for EA6.81.355 :-	1	-	EB3/9
A31B16	. Nut, 4BA	1	-	EB3/10
A32B16	. Screw, 4BA, cheese head	1	-	EB3/11
EG4.81.2075	. COVER, assembly	1	-	EB3/12
EEAS117/1	. Spares for :-			
EEAS28/2CU	. SCREW	8	-	EB3/13
EEAS42	. WASHER	16	-	EB3/14
AS2639	. WASHER, leather	8	-	EB3/15
EA1.81.488	. COVER, assembly	2	-	EB2/25
	. DISC, blanking	3	-	EB3/16
508-2-07657-003	. Attaching parts for EA1.81.488 :-			
508-2-07708-200	. Nut, union	1	-	EB3/17
	. Ring, sealing	1	-	EB3/18
10H1047920	. FUSE, dummy	4	-	
10H21797	. FUSE, type S, 2.5 amp	2	-	
2Z84912A	. GASKET, plug	1	-	EB3/19
HV2420A	. GROMMET, dummy	1	-	EB3/37
EA6.81.199	. LINK	1	-	
EEAS71/1	. LINK, 2 - way	2	-	
703-2-00251	. LINK, 2 - way	16	-	
703-2-00257	. LINK, 8 - way	1	-	
703-2-00259	. LINK, 10 - way	1	-	
703-2-00252	. LINK, 3 - way	-	-	
EA6.81.227	. MOUNTING, fuse block	2	-	EB2/26
EA6.81.221	. MOUNTING, relay	4	-	EB2/27
A31B12	. Attaching parts for EA6.81.221 :-			
AGS20358	. Screw, 4BA, cheese head	3	-	EB2/28
	. Washer, spring	3	-	EB2/29
EA2.81.721	. MOUNTING, relay	2	-	EB2/30
A31B12	. Attaching parts for EA2.81.721 :-			
	. Screw, 4BA, cheese head	2	-	EB2/31
EA6.81.225	. MOUNTING, transformer	1	-	EB2/32
A31A8	. Attaching parts for EA6.81.225 :-			
AGS2035A	. Screw, 6BA, cheese head	4	-	EB2/33
	. Washer, spring	4	-	EB2/34
EA6.81.229	. PILLAR, mounting	12	-	EB2/35
EA3.81.247	. PLATE, blanking	1	-	EB3/20
AGS2001A1	. Attaching parts for EA3.81.247 :-			
A31A12	. Nut, 6BA	4	-	EB3/21
	. Screw, 6BA, cheese head	4	-	EB3/22
EB6.81.3633	. PLATE, blanking	1	-	EB3/23
AGS2001A1	. Attaching parts for EB6.81.3633 :-			
A32A8	. Nut, 6BA	4	-	EB3/24
	. Screw, 6BA, cheese head	4	-	EB3/25
EB6.81.3631	. PLATE, blanking	1	-	EB3/26
EB7.81.359	. PLATE, terminal block mounting	1	-	EB2/36
A32A12	. Attaching parts for EB7.81.359 :-			
AGS2035A	. Screw, 6BA, round head	6	-	EB2/37
	. Washer, spring	6	-	EB2/38

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
PLESSEY									
508-1-06413	.	.	PLUG, size D				12	—	EB3/28
508-1-06394	.	.	PLUG, size A				2	—	EB3/29
508-1-40076-320	.	.	PLUG, Mk. 4 25-way				1	—	EB3/30
508-1-06410	.	.	PLUG, size D				2	—	EB3/31
508-1-06406	.	.	PLUG, size C				1	—	EB3/32
EL34333	.	.	RELAY, type S3				2	—	EB2/47
EL34331	.	.	RELAY, type S1				4	—	EB2/46
EG4.81.2077	.	.	SHELL, DISTRIBUTION BOX				1	—	EB2/39
508-2-11232-002	.	.	SLEEVE, 4-7 amp				QR	—	
508-2-11231-002	.	.	SLEEVE, 7-19 amp				QR	—	
EEAS146/12	.	.	SLEEVE				QR	—	
EEAS146/6	.	.	SLEEVE				QR	—	
EEAS146/16	.	.	SLEEVE				QR	—	
—	.	.	SLEEVING, 1mm, systoflex				QR	—	
—	.	.	SLEEVING, 3mm, systoflex				QR	—	
508-1-40041-320	.	.	SOCKET, Mk. 4 3-way				1	—	EB3/34
508-1-40041-321	.	.	SOCKET, Mk. 4, 3-way				1	—	EB3/35
AS2640	.	.	SOCKET, assembly				6	—	EB2/25A
NY18007A	.	.	STRAP				QR	—	
NY3255	.	.	STUD				QR	—	
EB7.81.347	.	.	SUPPORT, terminal block				9	—	EB2/40
			Attaching parts for EB7.81.347:—						
A31B28	.	.	Screw, 4BA, cheese head				2	—	EB2/41
HC304	.	.	TAG, RT, 4BA				QR	—	
HC400	.	.	TAG, QR				QR	—	
HC510	.	.	TAG, QR				QR	—	
HC490	.	.	TAG, QR				QR	—	
SMITHS									
213MV	.	.	TRANSFORMER				2	—	EB2/42
			Attaching parts for 213MV:—						
AGS2001B1	.	.	Nut, 4BA				4	—	EB2/43
A31B12	.	.	Screw, 4BA, cheese head				4	—	EB2/44
EEAS43/1	.	.	WASHER, panel				3	—	
EEAS43/3	.	.	WASHER, panel				1	—	
			Attaching parts for EG4.81.2865:—						
A25/1C	.	.	Bolt, 2BA				4	—	EB2/45
EG4.81.3073	.	.	BOX, FUSE, 400 CYCLE, INSTALLATION				—	—	EB4/1
			Spares for:—						
EB6.81.5699	.	.	BLOCK, FUSE, ASSEMBLY				1	—	EB4/2
			Spares for:—						
703-1-00416	.	.	BLOCK, fuse, 4-way				1	—	EB4/3
EB6.81.5701	.	.	LABEL				1	—	EB4/4
EG4.81.3077	.	.	BLOCK, FUSE, ASSEMBLY				1	—	EB4/5
			Spares for:—						
703-1-00416	.	.	BLOCK, fuse, 4-way				1	—	EB4/6
EG4.81.3079	.	.	LABEL				1	—	EB4/7
EG4.81.3081	.	.	BLOCK, FUSE, ASSEMBLY				1	—	EB4/8
			Spares for:—						
703-1-00416	.	.	BLOCK, fuse, 4-way				1	—	EB4/9
EG4.81.3083	.	.	LABEL				1	—	EB4/10

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EG4.81.3085	. . BLOCK, FUSE, ASSEMBLY Spares for:—	1	—	EB4/11
703-1-00416	. . . BLOCK, fuse, 4-way	1	—	EB4/12
EG4.81.3117	. . . LABEL	1	—	EB4/13
EG4.81.3087	. . BLOCK, FUSE, ASSEMBLY Spares for:—	1	—	EB4/14
703-1-00416	. . . BLOCK, fuse, 4-way	1	—	EB4/15
EG4.81.3119	. . . LABEL	1	—	EB4/16
EG4.81.3089	. . BLOCK, FUSE, ASSEMBLY Spares for:—	1	—	EB4/17
703-1-00416	. . . BLOCK, fuse, 4-way	1	—	EB4/18
EG4.81.3091	. . . LABEL Attaching parts for EB6.81.5699, EG4.81.3077, EG4.81.3081, EG4.81.3085, EG4.81.3087 and EG4.81.3089:—	1	—	EB4/19
A32B12	. . Screw, 4BA, round head	2	—	EB4/20
SP47B	. . Washer, 4BA, spring	2	—	EB4/21
EG4.81.3075	. . COVER, ASSEMBLY Spares for:—	1	—	EB4/22
EA1.81.542	. . . CARRIER, spare fuse	1	—	EB4/23
EA3.81.1259	. . . CLIP, spring	4	—	EB4/24
EEAS117/1	. . . SCREW, 4BA	4	S92	EB4/25
EEAS28/2CU	. . . WASHER	8	—	EB4/26
EEAS42	. . . WASHER	4	Leather	EB4/27
EA3.81.487	. . DISC, blanking	2	—	EB4/28
EA3.81.488	. . DISC, blanking	1	—	EB4/29
AS2.5	. . FUSE, H.R.C., 2.5 amp	10	—	
AS5	. . FUSE, H.R.C., 5 amp	2	—	
102096	. . FUSE, dummy	12	—	
EG4.81.953	. . GLAND, assembly	1	—	EB4/51
EEAS62/2	. . GLAND	7	—	EB4/30
EEAS62/3	. . GLAND	2	—	EB4/31
EEAS71/1	. . LINK, commoning	3	—	
EEAS71/2	. . LINK, commoning	2	—	
EEAS71/3	. . LINK, commoning	2	—	
PLESSEY				
508-2-07657-003	. . NUT, union	1	—	EB4/32
10H/0970127	. . NUT, union	2	—	EB4/33
EG4.81.963	. . PLATE, insulating	1	—	EB4/34
EG4.81.957	. . SHELL, fuse box	1	—	EB4/35
EEAS146/20	. . SLEEVE, $\frac{3}{4}$ " LONG	8	—	
HC490	. . TAG	8	—	
EG4.81.965	. . TERMINAL, ASSEMBLY Spares for:—	1	—	EB4/36
EG4.81.967	. . . BLOCK, insulating	1	—	EB4/37
EG4.81.951	. . . LINK, connecting	1	—	EB4/38
AGS2002B4	. . . NUT, 4BA	2	—	EB4/39
A54B	. . . NUT, 4BA	2	—	EB4/40
A45B32	. . . SCREW, 4BA	2	—	EB4/41
SP25B	. . . WASHER, 4BA	4	—	EB4/42
EG4.81.947	. . TERMINAL, DOUBLE EARTH, ASSEMBLY Spares for:—	1	—	EB4/43
EG4.81.949	. . . BLOCK, insulating	1	—	EB4/44
EG4.81.951	. . . LINK, connecting	1	—	EB4/45
AGS2002B4	. . . NUT, 4BA	4	—	EB4/46
A54B	. . . NUT, 4BA	2	—	EB4/47
EEAS144	. . . STUD, terminal	2	—	EB4/48
EEAS28/7EW	. . . WASHER	8	—	EB4/49
A31C16	Attaching parts for EG4.81.3073:— . . Screw, cheese head 2BA	4	—	EB4/50

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EG4.81.2983	. BOX, JUNCTION, No. 13, ASSEMBLY Spares for:—	1	—	EB5/1
PLESSEY 703-1-00249	. . BLOCK, terminal, 20-way Attaching parts for 703-1-00249:—	1	—	EB5/2
A43B24	. . Screw, 4BA, cheese head	2	—	EB5/3
EA1.81.589	. . BOX, junction, shell	1	—	EB5/4
EB7.81.361	. . COVER, ASSEMBLY Spares for:—	1	—	EB5/5
EEAS117/1	. . . SCREW	4	S92	EB5/6
EEAS28/2CU	. . . WASHER	8	DTD124	EB5/7
EEAS42	. . . WASHER	4	—	EB5/8
PLESSEY 508-4-11290-004	. . GASKET	1	—	EB5/9
or 508-4-11290-004	. . GASKET	1	—	
PLESSEY 703-2-00253	. . LINK, connecting, 4-way	1	—	EB5/10
CZ24644	. . PLATE, ferrule, size 'C' Attaching parts for CZ24644:—	1	—	EB5/11
AGS2002A1	. . Nut, 6BA	4	—	EB5/12
A32A12	. . Screw, 6BA, round head	4	—	EB5/13
508-1-11778-004	. . RING, clamp	1	—	EB5/14
EEAS146C	. . SLEEVE, $\frac{3}{8}$ " long, yellow	16	—	
EEAS146/6	. . SLEEVE, $\frac{7}{8}$ " long Attaching parts for EG4.81.2983:—	1	—	
A25/1C	. Bolt, 2BA	4	—	EB5/15
EG4.81.2985	. BOX, JUNCTION, No. 14, ASSEMBLY Spares for:—	1	—	EB6/1
EEAS281/1D	. . ADAPTOR, outlet Attaching parts for EEAS281/1D:—	1	—	EB6/2
AGS2002A1	. . Nut, stiff, 6BA	4	—	EB6/3
A32A12	. . Screw, 6BA	4	—	EB6/4
SP13A	. . Washer	4	—	EB6/5
PLESSEY 703-1-00249	. . BLOCK, terminal, 20-way Attaching parts for 703-1-00249:—	2	—	EB6/6
A43B24	. . Screw, 4BA, cheese head	2	—	EB6/7
EB6.81.1517	. . BOX, junction, 40-way	1	—	EB6/8
508-1-07780-003	. . CLAMP, cable	1	—	EB6/9
EB6.81.427	. . COVER, ASSEMBLY Spares for:—	1	—	EB6/10
EA3.81.1259	. . . CLIP, spring	6	—	EB6/11
EEAS117/1	. . . SCREW	6	S92	EB6/12
EEAS28/2CU	. . . WASHER	12	DTD124	EB6/13
EEAS42	. . . WASHER	6	Leather	EB6/14
PLESSEY 508-4-11290-006	. . GASKET, size D	1	—	EB6/15
508-4-11290-004	. . GASKET, size C	2	—	EB6/16
Z22634	. . GROMMET, dummy	6	—	EB6/17
703-2-00257	. . LINK, connecting, 8-way	1	—	EB6/31
703-2-00251	. . LINK, connecting, 2-way	4	—	EB6/32

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA1.81.461	. . PLATE, blanking	1	—	EB6/18
AGS2002A1	. . . Attaching parts for EA1.81.461:—			
A32A12	. . . Nut, 6BA	4	—	EB6/19
SP13A	. . . Screw, 6BA, round head	4	—	EB6/20
	. . . Washer	4	—	EB6/21
EA1.81.463	. . PLATE, blanking	—	—	EB6/22
AGS2002A1	. . . Attaching parts for EA1.81.463:—			
A32A12	. . . Nut, 6BA	4	—	EB6/23
SP13A	. . . Screw, 6BA, round head	4	—	EB6/24
	. . . Washer	4	—	EB6/25
EG4.81.1805	. . PLATE, blanking	1	—	EB6/26
AGS2002A1	. . . Attaching parts for EG4.81.1805:—			
A32A12	. . . Nut, stiff, 6BA	4	—	EB6/27
SP13A	. . . Screw, 6BA	4	—	EB6/28
	. . . Washer	4	—	EB6/29
MAM RUBBER	. . SLEEVE, 3 mm, grade CXH, $\frac{3}{8}$ " long	QR	—	
A25/1C	. . . Attaching parts for EG4.81.2985:—			
	. . Bolt, 2BA	4	—	EB6/30
EG4.81.3125	. . BOX, JUNCTION No. 16, INSTALLATION	—	—	
	. . . Spares for:—			
EB7.81.297	. . . ANGLE	1	—	EB7/1
EG4.81.3123	. . BOX, JUNCTION, No. 16, ASSEMBLY	1	—	EB7/2
	. . . Spares for:—			
703-1-00249	. . . BLOCK, terminal, 20-way	2	—	EB7/3
	. . . Attaching parts for 703-1-00249:—			
AGS2001B1	. . . Nut, 4BA	2	—	EB7/4
A31B28	. . . Screw, 4BA, cheese head	2	—	EB7/5
EB6.81.4093	. . . BOX, JUNCTION, ASSEMBLY	1	—	EB7/6
	. . . Spares for:—			
EB7.81.89	 PANEL, access	1	—	EB7/7
	 Attaching parts for EB7.81.89:—			
A31B16	 Screw, 4BA, cheese head	6	—	EB7/8
EB7.81.87	 SEAL, panel access	1	—	EB7/9
HELSYN	 GROMMET, dummy	5	—	EB7/10
Z22634	. . . LID, ASSEMBLY	1	—	EB7/11
EB7.81.79	 Spares for:—			
EA3.81.1259	 CLIP, spring	6	—	EB7/12
EEAS117/1	 SCREW, cover	6	S92	EB7/13
EEAS28/2CU	 WASHER	12	DTD124	EB7/14
EEAS42	 WASHER	6	Leather	EB7/15
PLESSEY				
703-2-00251	. . . LINK, commoning, 2-way	1	—	
703-2-00260	. . . LINK, commoning, traverse	1	—	
703-2-00259	. . . LINK, commoning, 10-way	1	—	
703-2-00253	. . . LINK, commoning, 4-way	1	—	
508-1-06413	. . . PLUG, size D	6	—	EB7/16
508-1-40069-320	. . . PLUG, Mk. 4, 12-way	2	—	EB7/17
508-1-40076-320	. . . PLUG, Mk. 4, 25-way	6	—	EB7/18
508-1-40060-320	. . . PLUG, Mk. 4, 2-way	1	—	EB7/19

R

R

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
508-2-11231-002	.	.	.	SLEEVE, reducing			QR	-	
508-2-11232-002	.	.	.	SLEEVE, reducing			QR	-	
EEAS146/00	.	.	.	SLEEVE, 1" long			QR	-	
EEAS146/10	.	.	.	SLEEVE, 1" long			QR	-	
EEAS146/12	.	.	.	SLEEVE, 3/8" long			QR	-	
EEAS146/12	.	.	.	SLEEVE, 3/8" long			QR	-	
EEAS146/16	.	.	.	SLEEVE, 3/8" long			QR	-	
EEAS146/20	.	.	.	SLEEVE, 3/8" long			QR	-	
D2363	.	.	.	SWITCH, magnetic, type 9B No. 2A			1	-	EB7/20
A25/2B	.	.	.	Bolt, 4BA			2	-	EB7/21
AGS2001B1	.	.	.	Nut, 4BA			2	-	EB7/22
HELLERMANN									
HC510	.	.	.	TAG, QR			QR	-	
HC500	.	.	.	TAG, QR			QR	-	
HC490	.	.	.	TAG, QR			QR	-	
EEAS43/3	.	.	.	WASHER, panel			6	-	EB7/23
EEAS43/2	.	.	.	WASHER, panel			2	-	EB7/24
EEAS43/1	.	.	.	WASHER, panel			1	-	EB7/25
				Attaching parts for EG4.81.3123 :-					
EB7.81.99	.	.	.	Packing			2	-	EB7/26
A31B12	.	.	.	Screw, cheese head 4BA			6	-	EB7/27
EB7.81.69	.	.	.	PLATE, mounting			1	-	EB7/28
EG4.81.1187	.	.	.	BRACKET, mounting, plug break, frame 5			1	-	EB8/1
				Attaching parts for EG4.81.1187 :-					
A25/1C	.	.	.	Bolt, 2BA			4	-	EB8/2
AGS2001C1/66	.	.	.	Nut, stiff, 2BA			4	-	EB8/3
SP15C	.	.	.	Washer			4	-	EB8/4
EB6.81.5291	.	.	.	BRACKET, PLUG INSTALLATION, FRAME 11			-	-	EB8/5
				Spares for :-					
EB6.81.5289	.	.	.	BRACKET, plug			1	L72	EB8/6
				Attaching parts for EB6.81.5289 :-					
A25/2C	.	.	.	Bolt, 2BA			1	-	EB8/7
AGS2001B1	.	.	.	Nut, 4BA			4	-	EB8/8
AGS2001C1/66	.	.	.	Nut, 2BA			1	-	EB8/9
EB6.81.1077	.	.	.	Piece, packing			1	-	EB8/10
A32B16	.	.	.	Screw, 4BA, round head			4	-	EB8/11
SP13B	.	.	.	Washer, 4BA			4	-	EB8/12
SP13C	.	.	.	Washer, 2BA			1	-	EB8/13
416125/14	.	.	.	CAP, protective			1	-	
416125/20	.	.	.	CAP, protective			1	-	EB8/14
EG4.81.2687	.	.	.	CLIPPING AND BONDING OF CABLE N567			-	-	EB22/1
				Spares for :-					
EA2.81.841	.	.	.	BRACKET			1	-	EB22/2
				Attaching parts for EA2.81.841 :-					
A25/1/8B	.	.	.	Bolt, 4BA			1	-	EB22/3
SP124B	.	.	.	Washer			1	-	EB22/4
EEAS136	.	.	.	BRACKET			1	-	EB22/5
AS3181/8C	.	.	.	CLIP			1	-	EB22/6
				Attaching parts for AS3181/8C :-					
A25/2C	.	.	.	Bolt, 2BA			1	-	EB22/7
EEAS237/7A	.	.	.	Washer, 'D'			1	-	EB22/8

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
AS3181/3B	.	.	CLIP				4	—	EB22/9
AS3181/4B	.	.	CLIP				7	—	EB22/10
AS3181/8B	.	.	CLIP				9	—	EB22/11
			Attaching parts for AS3181/3B, AS3181/4B and AS3181/8B :—						
A25/1B	.	.	Bolt, 4BA				QR	—	EB22/12
AGS2001B1	.	.	Nut, stiff, 4BA				QR	—	EB22/13
SP125B	.	.	Washer				QR	—	EB22/14
EEAS237/8A	.	.	Washer, 'D'				QR	—	EB22/15
EEAS238/1A	.	.	Washer, 'D'				QR	—	EB22/16
HELLERMANN									
HV3254	.	.	STRAPPING				QR	—	EB22/17
OP3255	.	.	STUD				QR	—	EB22/18
506-1-07360	.	.	CONTROLLER, type 34, windscreen heater				1	—	EB8/15
			Attaching parts for 506-1-07360 :—						
AS1246/1B	.	.	Bolt, 4BA				4	—	EB8/16
AGS2001B1	.	.	Nut, 4BA				4	—	EB8/17
SP15B	.	.	Washer				4	—	EB8/18
6A/4332835	.	.	COMPENSATOR, voltage, type A				1	—	EB8/19
			Attaching parts for 6A/4332835 :—						
AS1246/1C	.	.	Bolt, 2BA, round head				3	—	EB8/20
EA3.81.2245	.	.	COVER, torque, switch				1	—	EB8/21
			Attaching parts for EA3.81.2245 :—						
AGS2001B1	.	.	Nut, 4BA				4	—	EB8/22
A31B16	.	.	Screw, 4BA, cheese head				4	—	EB8/23
R EA4.81.647	.	.	EARTH POINT, ACCUMULATOR, ASSEMBLY				1	—	EB8/37
			Spares for :—						
A25/2E	.	.	BOLT, 1/4" BSF				2	—	EB8/38
AGS2001E1-66	.	.	NUT, stiff, 1/4" BSF				2	—	EB8/39
EEAS28/22EP	.	.	WASHER				4	—	EB8/40
R EA9.81.10869	.	.	EARTH POINT, E.80, GROUND SERVICE IN STARBOARD HATCH, INSTALLATION				1	—	EB8/24
			Spares for :—						
EA9.81.10865	.	.	BOLT, 5/16" UNF				1	S96	EB8/25
EA9.81.10867	.	.	LABEL, engraved				1	L72	EB8/26
A103GT	.	.	NUT, 5/16" UNF				2	—	EB8/27
AGS3413G	.	.	NUT, wing, 5/16" UNF				1	—	EB8/28
SP90C5	.	.	PIN, split				1	—	EB8/29
EEAS28/31ERH	.	.	WASHER				1	—	EB8/30
SP55G	.	.	WASHER, spring 5/16"				1	—	EB8/31
SP126G	.	.	WASHER, 5/16"				1	—	EB8/32
STANDARD									
INSULATOR									
SIC.664.4133	.	.	GROMMET				1	—	EB8/33
EG4.81.2861	.	.	INVERTER BAY LAYOUT				—	—	EB9/1
			Spares for :—						
EB6.81.1033	.	.	ANGLE, foot				1	—	EB10/1
			Attaching parts for EB6.81.1033 :—						
A25/3E	.	.	Bolt, 1/4" BSF				2	—	EB10/2
AGS2001E1/66	.	.	Nut, stiff, 1/4" BSF				1	—	EB10/3
SP10E	.	.	Washer, facing				2	—	EB10/4

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EB6.81.1231	. . . ANGLE, foot	1	—	EB10/5
A25/3E	. . . Attaching parts for EB6.81.1231 :—	2	—	EB10/6
AGS2001E1/66	. . . Bolt, 1/4" BSF	2	—	EB10/7
SP10E	. . . Nut, 1/4" BSF	2	—	EB10/8
EB6.81.1083	. . . ANGLE, mounting	1	—	EB9/2
A25/1C	. . . Attaching parts for EB6.81.1083 :—	3	—	EB9/3
AGS2001C1/66	. . . Bolt, 2BA	2	—	EB9/4
SP10C	. . . Nut, 2BA	2	—	EB9/4A
SP15C	. . . Washer, 2BA	1	—	EB9/4B
EB6.81.1063	. . . ANGLE, reinforcing	1	—	EB10/9
EB6.81.1064	. . . ANGLE, reinforcing	1	—	EB10/10
EG4.81.867	. . . BLOCK, FUSE, ASSEMBLY (SRIM.3533)	1	—	EB9/5
EB6.81.1049	. . . Spares for :—	1	—	EB9/6
EB6.81.1043	. . . BASE, fuse block	2	—	EB9/7
AS4565/7C	. . . BOLT	2	—	EB9/8
EB6.81.1045	. . . BOLT, 2BA	1	—	EB9/9
EB6.81.1047	. . . COVER, sub-assembly	2	—	EB9/10
A14GB	. . . END, fuse block	2	—	EB9/11
AGS2002G/4	. . . NUT, 5/16" BSF	2	—	EB9/12
A33B16	. . . NUT, 5/16" BSF	2	—	EB9/13
A41B16	. . . SCREW, 4BA	2	—	EB9/14
A41B20	. . . SCREW, 4BA	2	—	EB9/15
AS2721	. . . SCREW, 4BA	5	—	EB9/16
A25/3C	. . . WASHER, contact	2	—	EB9/17
SP15C	. . . Attaching parts for EG4.81.867 :—	2	—	EB9/18
EB6.81.1073	. . . Bolt, 2BA	2	—	EB9/19
EB6.81.1074	. . . Washer, 2BA	2	—	EB9/20
A25/2C	. . . BRACKET	4	—	EB9/21
AGS2001C1/66	. . . BRACKET	4	—	EB9/22
SP16C	. . . Attaching parts for EB6.81.1073 and EB6.81.1074 :—	4	—	EB9/23
EB6.81.1029	. . . Bolt, 2BA	1	—	EB9/24
SCB76943/1	. . . Nut, 2BA	1	—	EB10/11
SCB76943/2	. . . Washer, 2BA	1	—	EB10/12
A25/3C	. . . CHANNEL, assembly	9	—	EB10/13
AGS2001C1/66	. . . CHANNEL (SRIM.3533)	8	—	EB10/14
SCD76956/6	. . . CHANNEL (SRIM.3533)	8	—	EB10/15
SP91L	. . . Attaching parts for SCB76943/1 and SCB76943/2 :—	2	—	EB10/16
SP91M	. . . Bolt, 2BA	2	—	EB10/17
SP91L	. . . Nut, stiff, 2BA	1	—	EB10/18
SCB76958	. . . Washer, contour (SRIM.3533)	1	—	EB10/19
10H24028	. . . CLIP, hose	1	—	EB9/25
EB6.81.1003	. . . CONNECTION (SRIM.3533)	1	—	EB9/26
5UB4342693	. . . FUSE, H.R.C. 115 amp	1	—	EB10/20
AS1242/6G	. . . GUSSET	4	—	EB10/21
AGS2001G1	. . . INVERTER, type 103A	4	—	EB10/22
SP15G	. . . Attaching parts for 5UB4342693 :—	4	—	EB10/23
	. . . Bolt, 5/16" BSF			
	. . . Nut, 5/16" BSF			
	. . . Washer, 5/16"			

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
5UB4938	. . . INVERTER, type 100A	1	—	EB10/24
5UB4357518	. . . INVERTER, type 108 (SCRIM.3533) Attaching parts for Ref. 5UB/4357518 :—	1	—	EB10/25
A25/4G	. . . Bolt, 5/16" BSF	4	—	EB10/26
SP13G	. . . Washer	4	—	EB10/27
EB6.81.1013	. . . LINK, M1	1	—	EB9/27
5UC6369631	. . . PANEL, control, type 12 Attaching parts for 5UC/6369631 :—	1	—	EB9/28
AS1242/3E	. . . Bolt, 1/4" BSF	4	—	EB9/29
AGS2001E1/66	. . . Nut, 1/4" BSF	4	—	EB9/30
SP15E	. . . Washer, 1/4"	4	—	EB9/31
EB6.81.1035	. . . PLATE	1	—	EB9/32
EB6.81.1059	. . . PLATE, mounting, assembly	1	—	EB9/33
EB6.81.1037	. . . PLATE, MOUNTING, assembly Spares for :—	1	—	EB9/34
EA3.81.2885	. . . PIN, locating Attaching parts for EA3.81.2885 :—	2	—	EB9/35
AGS2001E1/66	. . . Nut, 1/4" BSF	2	—	EB9/36
SP13E	. . . Washer, 1/4"	2	—	EB9/37
EB6.81.1039	. . . PLATE, mounting	1	—	EB9/38
5CW4405591	. . . RELAY, type 1 Attaching parts for 5CW/4405591 :—	1	—	EB9/39
A25/3C	. . . Bolt, 2BA	2	—	EB9/40
SP15C	. . . Washer	2	—	EB9/41
EB6.74.87	. . . SLEEVE, connecting	1	—	EB10/28
EB6.74.89	. . . SLEEVE, connecting	1	—	EB10/29
U2005 - 1	. . . SWITCH, magnetic starting, type 1A, No. 5 Attaching parts for U2005 - 1 :—	1	—	EB9/42
A25/1C	. . . Bolt, 2BA	2	—	EB9/43
or A25/10C	. . . Bolt, 2BA	2	—	
SP15C	. . . Washer, 2BA	2	—	EB9/44
EB6.81.5275	. . . INVERTER, TYPE 103A, INSTALLATION Spares for :—	—	—	EB23/1
EB6.81.5269	. . . ANGLE	1	—	EB23/2
EB6.81.5271	. . . ANGLE Attaching parts for EB6.81.5269 and EB6.81.5271 :—	1	—	EB23/3
A25/1C	. . . Bolt, 2BA	2	—	EB23/3A
AGS2001C1	. . . Nut, stiff, 2BA	2	—	EB23/3B
SP13C	. . . Washer, plain	2	—	EB23/3C
EB6.81.3415	. . . BOX, RELAY, ASSEMBLY Spares for :—	1	—	EB23/4
EB6.81.4141	. . . BLOCK, FUSE, ASSEMBLY Spares for :—	1	—	EB23/5
703-1-00416	. . . BLOCK, fuse	1	—	EB23/6
EB6.81.4143	. . . LABEL Attaching parts for EB6.81.4141 :—	1	—	EB23/7
A32B10	. . . Screw, 4BA	2	—	EB23/8
AGS2035B	. . . Washer, shakeproof	2	—	EB23/9
EB6.81.3423	. . . CHANNEL, mounting Attaching parts for EB6.81.3423 :—	1	—	EB23/10
A32B14	. . . Screw, 4BA	4	—	EB23/11
SP13B	. . . Washer	4	—	EB23/12

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
R 10H/1094061	. . . FUSE, 7.5 amp, type AS	3	—	EB23/22
EB6.81.3421	. . . LID, assembly	1	—	EB23/13
	Attaching parts for EB6.81.3421:—			
A32C16	. . . Screw, 2BA	4	—	EB23/14
508/1/40061/320	. . . PLUG	1	—	EB23/15
CZ48993/5	. . . PLUG	1	—	EB23/16
7CZ107791	. . . RELAY, assembly	1	—	EB23/17
	Attaching parts for 7CZ107791:—			
A33B14	. . . Screw, 4BA	2	—	EB23/18
EB6.81.3417	. . . SHELL, box sub-assembly	1	—	EB23/19
EEAS146/0	. . . SLEEVE, insulating, $\frac{3}{4}$ " long	23	—	EB23/20
7CZ107794	. . . SOCKET, assembly	1	—	EB23/20
CZ49219	. . . SOCKET	1	—	EB23/21
HC490	. . . TAG	6	—	EB23/21
	Attaching parts for EB6.81.3415:—			
A25/2C	. . Bolt, 2BA	4	—	EB23/23
SP13C	. . Washer	4	—	EB23/24
EB6.81.5267	. . BRACKET, inverter mounting assembly	1	—	EB23/25
EB6.81.4391	. . CLIP, bonding	5	—	EB23/26
EB6.81.4419	. . CLIP, bonding	1	—	EB23/27
SP91L	. . CLIP, hose	6	—	EB23/28
EB7.57.181	. . HOSE, rubber	3	—	EB23/29
5UB/4342693	. . INVERTER, type 103A	1	—	EB23/30
	Attaching parts for 5UB/4342693:—			
A25/5G	. . Bolt, $\frac{5}{16}$ " BSF	4	—	EB23/31
SP13G	. . Washer	4	—	EB23/32
AS3360B48	. . LEAD, bonding	3	—	EB23/33
	Attaching parts for AS3360B48:—			
A25/1B	. . Bolt, 4BA	2	—	EB23/34
AGS2001B1	. . Nut, stiff, 4BA	2	—	EB23/35
SP13B	. . Washer	2	—	EB23/36
EB6.81.3021	. . PIPE, assembly	1	—	EB23/37
EB6.81.5589	. . PIPE, assembly	1	—	EB23/38
EB6.81.3049	. . PLATE, packing	1	—	EB23/39
EB6.81.3065	. . SCOOP, assembly	1	—	EB23/40
EB6.81.5273	. . STRIP, reinforcing	1	—	EB23/41
EG4.81.2885	. INVERTER, TYPE 108, UPPER EQUIPMENT	—	—	EB23/42
	BAY, INSTALLATION			
	Spares for:—			
R SCB79234	. . ADAPTOR, hose (SRIM.3533)	1	—	EB23/43
SCB79245/1	. . BRACKET (SRIM.3533)	1	—	EB23/44
	Attaching parts for SCB79245/1:—			
AGS2001C1/66	. . Nut, stiff, 2BA	4	—	EB23/45
A31C20	. . Screw, 2BA	4	—	EB23/46
SP13C	. . Washer	4	—	EB23/47
SCB79245/2	. . CLAMP (SRIM.3533)	1	—	EB23/48
R SP91J	. . CLIP, hose, type J, Mk. 2 (SRIM.3533)	2	—	EB23/49
BESTOBELL				
†	. . HOSE, $1\frac{1}{4}$ " i/d, flexible, type D	1	—	EB23/50
5UB/4357518	. . INVERTER, type 108	1	—	EB23/51
	Attaching parts for Ref.5UB/4357518:—			
A25/7G	. . Bolt, $\frac{3}{8}$ " BSF	4	—	EB23/52
SP13G	. . Washer	4	—	EB23/53

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Mtl. Spec.	Plate No.
	1 2 3 4 5 6			
EG4.81.2833	. LOOMS, CABLE, ASSEMBLY Spares for:-	-	-	
SCA78015/29	. . CABLE, ASSEMBLY, from electrical control panel to high frequency distribution box (SRIM.3533)	1	-	
SCA78015/71	. . CABLE, ASSEMBLY, from electrical control panel to Decca power unit (SRIM.3533)	1	-	
SCA78015/86	. . CABLE, ASSEMBLY, from electrical control panel to I.F.F. connection on pressure bulkhead (SRIM.3533)	1	-	
SCA78015/92	. . CABLE, ASSEMBLY, from No. 5 inverter to No. 5 inverter control panel (SRIM.3533)	1	-	
SCA78015/93	. . CABLE, ASSEMBLY, from No. 5 inverter to No. 5 inverter control panel (SRIM.3533)	1	-	
SCA78015/94	. . CABLE, ASSEMBLY, from No. 6 inverter to No. 6 inverter control panel (SRIM.3533)	1	-	
SCA78015/95	. . CABLE, ASSEMBLY, from No. 6 inverter to No. 6 inverter control panel (SRIM.3533)	1	-	
SCA78015/151	. . CABLE, ASSEMBLY, from No. 5 inverter control panel to 1600 cycles distribution box (SRIM.3533)	1	-	
SCA78015/152	. . CABLE, ASSEMBLY, from No. 6 inverter control panel to 1600 cycles distribution box (SRIM.3533)	1	-	
SCA78015/153	. . CABLE, ASSEMBLY, from No. 5 inverter control panel to 1600 cycles distribution box (SRIM.3533)	1	-	
SCA78015/154	. . CABLE, ASSEMBLY, from No. 6 inverter control panel to 1600 cycles distribution box (SRIM.3533)	1	-	
EB6.81.2961	. . CABLE, ASSEMBLY, EB, from magnetic starter switch to earth	1	-	
EG4.81.929	. . CABLE, ASSEMBLY, E14, from 400 cycles fuse box to earth (Pre-Mod 5100)	1	-	
EG4.81.3203	. . CABLE, ASSEMBLY, E14 (Alt. R60/68-Mod 5100)	1	-	
EB6.81.4287	. . CABLE, ASSEMBLY, E25, from electrical control panel to earth	1	-	
EA3.81.852/1	. . CABLE, ASSEMBLY, E28, from D.C. distribution box to earth (Pre-Mod 5100)	1	-	
EA3.81.6215	. . CABLE, ASSEMBLY, E28 (Alt. R60/68-Mod 5100)	2	-	
EA3.81.853/1	. . CABLE, ASSEMBLY, E29, from 1600 cycles distribution box to earth (Pre-Mod 5100)	1	-	
EA3.81.6217	. . CABLE, ASSEMBLY, E29 (Alt. R60/68-Mod 5100)	2	-	
EB6.81.2963	. . CABLE, ASSEMBLY, E34, from No. 8 inverter to earth	1	-	
EA3.81.1969	. . CABLE, ASSEMBLY, E34, from No. 4 inverter to earth (Pre-Mod 5195)	1	-	
EB6.81.1155	. . CABLE, ASSEMBLY, E100A, from No. 2 inverter control panel to earth	1	-	
EB6.81.1167	. . CABLE, ASSEMBLY, E103, from No. 1 inverter to earth	1	-	
EB6.81.10439/2	. . CABLE, ASSEMBLY, F24, from D.C. distribution box to main electrical panel	1	-	
EB6.81.2847	. . CABLE, ASSEMBLY, F41, from 400 cycles distribution box to torque switch	1	-	
EB6.81.1867	. . CABLE, ASSEMBLY, F42, from 400 cycles distribution box to torque switch	1	-	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA3.81.669/1	.	.	.	CABLE, ASSEMBLY, F44, from D.C. distribution box to undercarriage switch terminal block			1	—	
EA3.81.670/1	.	.	.	CABLE, ASSEMBLY, F45, from D.C. distribution box to pyrometer voltage controller			1	—	
EB6.81.4063	.	.	.	CABLE, ASSEMBLY, F46, from main electrical panel to port and starboard inertia switches			1	—	
EB7.81.1235/2	.	.	.	CABLE, ASSEMBLY, F49, from main electrical panel to pressure bulkhead connection			1	—	
EB6.81.1159/2	.	.	.	CABLE, ASSEMBLY, F52, from D.C. distribution box to No. 2 inverter control panel, magnetic starter switch relay and main electrical panel			1	—	
EB6.81.1161	.	.	.	CABLE, ASSEMBLY, F52C, from No. 1 inverter to No. 1 inverter control panel			1	—	
EA3.81.2931/2	.	.	.	CABLE, ASSEMBLY, F52E, from No. 2 inverter to No. 2 inverter control panel			1	—	
EA3.81.689/1	.	.	.	CABLE, ASSEMBLY, F54, from No. 4 inverter to D.C. distribution box (Pre-Mod 5195)			1	—	
EB6.81.1163/2	.	.	.	CABLE, ASSEMBLY, F57, from No. 2 inverter control panel to 400 cycles distribution box			1	—	
EB6.81.1153/2	.	.	.	CABLE, ASSEMBLY, F58, from No. 1 inverter to 400 cycles distribution box			1	—	
EB6.81.1129	.	.	.	CABLE, ASSEMBLY, F68, from D.C. distribution box to voltage regulator terminal block			1	—	
EB6.81.1133	.	.	.	CABLE, ASSEMBLY, F68A, from terminal block to voltage regulator			1	—	
EB6.81.563/2	.	.	.	CABLE, ASSEMBLY, F72, from D.C. distribution box to pressure bulkhead connection			1	—	
EA3.81.679/1	.	.	.	CABLE, ASSEMBLY, F83, from D.C. distribution box to suppressor (Pre-Mod 5195)			1	—	
EA3.81.682/1	.	.	.	CABLE, ASSEMBLY, F83A, from 1600 cycles distribution box to suppressor			1	—	
EA3.81.683	.	.	.	CABLE, ASSEMBLY, F88, from 1600 cycles distribution box to Rebecca T/R unit (Pre-Mod 5195)			1	—	
EA3.81.685	.	.	.	CABLE, ASSEMBLY, F90, from 1600 cycles distribution box to Rebecca T/R unit (Pre-Mod 5195)			1	—	
EA3.81.811/1	.	.	.	CABLE, ASSEMBLY, F92, from 1600 cycles distribution box to 500 volts transformer (Pre-Mod 5195)			1	—	
EA3.81.2561	.	.	.	CABLE, ASSEMBLY, F93, from 1600 cycles distribution box to Tacan T/R unit			1	—	
EB6.81.2947	.	.	.	CABLE, ASSEMBLY, F131, from main electrical panel to magnetic starter switch relay			1	—	
EB6.81.2949	.	.	.	CABLE, ASSEMBLY, F132, from relay to magnetic starter switch			1	—	
EB6.81.2951	.	.	.	CABLE, ASSEMBLY, F133, from No. 8 inverter to magnetic starter switch			1	—	
EB6.81.2953	.	.	.	CABLE, ASSEMBLY, F134, from No. 8 inverter to fuse relay box			1	—	
EB6.81.2955	.	.	.	CABLE, ASSEMBLY, F135, from No. 8 inverter control panel to fuse relay box			1	—	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EB6.81.2957	. . CABLE, ASSEMBLY, F136, from No. 8 inverter control panel to No. 8 inverter	1	—	
EB6.81.2959	. . CABLE, ASSEMBLY, F137, from No. 8 inverter control panel to type 15 control panel	1	—	
EB6.81.3629	. . CABLE, ASSEMBLY, F157, from main electrical electrical panel to pressure bulkhead connection	1	—	
EB6.81.3373	. . CABLE, ASSEMBLY, F160, from No. 8 inverter and fuse relay box to D.C. distribution box	1	—	
EG4.81.2093	. . CABLE, ASSEMBLY, F170, from 400 cycles fuse box to windscreen heater control box	1	—	
EG4.81.2691	. . CABLE, ASSEMBLY, F567, from P.E.C. transducer and 1600 cycles distribution box to pressure bulkhead connection	1	—	
EB6.81.1165	. . CABLE, ASSEMBLY, M11, from magnetic starter switch to magnetic starter switch relay	1	—	
EB6.81.3945	. . CABLE, ASSEMBLY, M12 and M82, both from No. 1 inverter M12 to magnetic starter switch M82 to magnetic starter switch relay	1	—	
EB6.81.1157	. . CABLE, ASSEMBLY, M13, magnetic starter switch loop	1	—	
EB6.81.3003	. . CABLE, ASSEMBLY, M83, magnetic starter switch loop	1	—	
EB6.81.10047	. . CABLE, ASSEMBLY, N51, from electrical control panel to starboard instrument panel	1	—	
EA3.81.2537/2	. . CABLE, ASSEMBLY, N52, from starboard instrument panel to pressure bulkhead connection	1	—	
EB6.81.4689	. . CABLE, ASSEMBLY, N2A, from junction box 14 to pressure bulkhead connection	1	—	
EB6.81.565/2	. . CABLE, ASSEMBLY, N5, from pilot's console to pressure bulkhead connection	1	—	
EB6.81.5437	. . CABLE, ASSEMBLY, N7X, from electrical control panel to pressure bulkhead connection	1	—	
EB6.81.5425	. . CABLE, ASSEMBLY, N8X, from electrical control panel to pressure bulkhead connection	1	—	
EG5.81.151	. . CABLE, ASSEMBLY, N13, from electrical control panel to junction box 13	1	—	
EG4.81.1845	. . CABLE, ASSEMBLY, N14, from electrical control panel to junction box 14	1	—	
EB6.81.3617	. . CABLE, ASSEMBLY, N16A, from electrical control panel to junction box 16	1	—	
EB6.81.4065	. . CABLE, ASSEMBLY, N16B, from electrical control panel to junction box 16	1	—	
EB6.81.5433	. . CABLE, ASSEMBLY, N16C, from electrical control panel to junction box 16	1	—	
EB7.81.457/2	. . CABLE, ASSEMBLY, N16D, N16E, N16F and N58, all from D.C. distribution box, N16D, N16E and N16F to junction box 16, N58 to take off panel	1	—	
EG4.81.931	. . CABLE, ASSEMBLY, N18, from 400 cycles fuse box to pressure bulkhead connection	1	—	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
		1 2 3 4 5 6				
40526	EB6.81.4137	CABLE, ASSEMBLY, N19, N22, N26 and N27, all from electrical control panel, N19 to 1600 cycles distribution box, N22 to main electrical panel, N26 and N27 to D.C. distribution box	1	—	C	
	EB6.81.3471	CABLE, ASSEMBLY, N28 and N29, both from electrical control panel to D.C. distribution box	1	—	—	
	EB6.81.5427	CABLE, ASSEMBLY, N30, from electrical control panel to pilot's console (Pre—Mod 5100)	1	—	—	
	EG4.81.3223	CABLE, ASSEMBLY, N30 (Alt. R60/61—Mod 5100)	1	—	—	
41629	EB7.81.591/2	CABLE, ASSEMBLY, N49, from jettison relay panel to pressure bulkhead connection	1	—	C	
17128	EB7.81.491	CABLE, ASSEMBLY, N51, from electrical control panel to engine instrument panel	1	—	C	
17129	EB7.81.493	CABLE, ASSEMBLY, N52, from electrical control panel to engine instrument panel	1	—	C	
	EB7.81.549/2	CABLE, ASSEMBLY, N55, from starter panel to time switch	1	—	—	
	EB7.81.551/2	CABLE, ASSEMBLY, N56, from starter panel to time switch	1	—	—	
40571	EB6.81.5423	CABLE, ASSEMBLY, N57, from electrical control panel to take-off panel	1	—	C	
	EG4.81.2715	CABLE, ASSEMBLY, N69, from electrical control panel to pilot's coaming panel, port and starboard and control column terminal block	1	—	—	
42353	EB6.81.5421	CABLE, ASSEMBLY, N70, from electrical control panel to aileron trim actuator and aileron trim position transmitter	1	—	C	
40584	EB6.81.5435	CABLE, ASSEMBLY, N71, from electrical control panel to pilot's console	1	—	C	
41647	EB6.81.581/2	CABLE, ASSEMBLY, N72, from pilot's console to pressure bulkhead connection	1	—	C	
5419	EA1.81.684/1	CABLE, ASSEMBLY, N74, from windscreen heater relay to direct vision window	1	—	C	
	EG4.81.1791	CABLE, ASSEMBLY, N76, from junction box 14 to pilot's console	1	—	—	
	EG4.81.937	CABLE, ASSEMBLY, N87, from 400 cycles fuse box to GIV8 amplifier	1	—	—	
38421	EB7.81.2015	CABLE, ASSEMBLY, N102, from slave relay box to pressure bulkhead connection	1	—	C	
	EB7.81.6549	CABLE, ASSEMBLY, N104, from pilot's console to pressure bulkhead connection (Pre—Mod 5100)	1	—	—	
	EB7.81.6721	CABLE, ASSEMBLY, N104 (Alt. R60/61—Mod 5100)	1	—	—	
	EB6.81.4077	CABLE, ASSEMBLY, N150, from main electrical panel to electrical control panel	1	—	—	
	EB6.81.3827	CABLE, ASSEMBLY, N157, from take-off panel to pressure bulkhead connection	1	—	—	
	EB6.81.4235	CABLE, ASSEMBLY, N185, from control column terminal block to control column	1	—	—	
	EG4.81.935	CABLE, ASSEMBLY, N183, from 400 cycles fuse box to flying instruments panel	1	—	—	
	EG4.81.2681	CABLE, ASSEMBLY, N567, from flying instruments panel to pressure bulkhead connections	1	—	—	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
		1 2 3 4 5 6				
32526	EB6.81.1171	CABLE, ASSEMBLY, P10, from main electrical panel to fuse block	1	—	C	
	EB7.81.1783	CABLE, ASSEMBLY, 4C1, from undercarriage switch terminal block to undercarriage switch (Pre—Mod 5091)	1	—	—	
22539	EA1.81.1225	CABLE, ASSEMBLY, 4C1 (Mod 5091)	1	—	—	
	EB7.81.1785	CABLE, ASSEMBLY, 4C2, from undercarriage switch terminal block to undercarriage switch (Pre—Mod 5091)	1	—	C	
	EA1.81.1227	CABLE, ASSEMBLY, 4C2 (Mod 5091)	1	—	—	
21777	EB7.81.1787	CABLE, ASSEMBLY, 4C3, from undercarriage switch terminal block to undercarriage switch (Pre—Mod 5091)	1	—	C	
	EA1.81.1229	CABLE, ASSEMBLY, 4C3 (Mod 5091)	1	—	—	
4868	EA1.81.675/1	CABLE, ASSEMBLY, 4C4, from undercarriage switch terminal block to undercarriage switch	1	—	C	
	EB6.81.4241	CABLE, ASSEMBLY, 13D, from junction box 13 to air thermostat	1	—	—	
17112	EB7.81.445	CABLE, ASSEMBLY, 13H, from junction box 13 to canopy blower motor suppressor	1	—	C	
42451	EB6.81.4237	CABLE, ASSEMBLY, 13H1, from suppressor to canopy blower motor	1	—	C	
17412	EB6.81.763	CABLE, ASSEMBLY, 13J, from junction box 13 to navigator's oxygen regulator	1	—	C	
	EA3.81.2961	CABLE, ASSEMBLY, 13K, from junction box 13 to terminal block	1	—	—	
42348	EB6.81.3139	CABLE, ASSEMBLY, 13L, from junction box 13 to pilot's oxygen demand regulator	1	—	C	
42349	EB6.81.3141	CABLE, ASSEMBLY, 13M, from junction box 13 to navigator's instrument panel	1	—	C	
	EG4.81.815	CABLE, ASSEMBLY, 13P, from junction box 13 to navigator's coaming panel terminal block	1	—	—	
	EB6.81.4277	CABLE, ASSEMBLY, 14A, from junction box 14 to 400 cycles fuse box suppressor	1	—	—	
	EB6.81.4279	CABLE, ASSEMBLY, 14A1, from suppressor to 400 cycles fuse box	1	—	—	
	EB6.81.4743	CABLE, ASSEMBLY, 14J and 14Q, both from junction box 14, 14J to Westland valve, 14Q to pressure bulkhead connection	1	—	—	
	EB6.81.4239	CABLE, ASSEMBLY, 14L, 14M and 14N, all from junction box 14, 14L and 14M to type Q relay, 14N to warning horn	1	—	—	
	EB6.81.3137	CABLE, ASSEMBLY, 14S, from junction box 14 to second navigator's oxygen regulator	1	—	—	
17119	EB7.81.463	CABLE, ASSEMBLY, 16J, from junction box 16 to windscreen heater control box	1	—	C	
17418	EB6.81.775	CABLE, ASSEMBLY, 16P, from junction box 16 to pitot head	1	—	C	
17123	EB7.81.479	CABLE, ASSEMBLY, 16S, from junction box 16 to starter panel	1	—	C	
17124	EB7.81.481	CABLE, ASSEMBLY, 16T, from junction box 16 to throttle box	1	—	C	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EB7.81.483	. . CABLE, ASSEMBLY, 16U, from junction box 16 to undercarriage panel	1	—	
EB6.81.3429	. . CABLE, ASSEMBLY, 16X, from junction box 16 to pilot's console (Pre-Mod 5100)	1	—	
EG4.81.3233	. . CABLE, ASSEMBLY, 16X (Alt. R60/61-Mod 5100)	1	—	
EB6.81.761	. . CABLE, ASSEMBLY, 16Y, from junction box 16 to bomb aimer's oxygen regulator	1	—	
HC294	. . TAG, ring tongue (Com Mod 0500)	2	—	
EG4.81.2843	. LOOMS, INSTRUMENT CABLE Spares for:—	1	—	
EB6.81.1145	. . CABLE, ASSEMBLY, azure blue, from flight computer to GIVB amplifier	1	—	
EB6.81.4819	. . CABLE, ASSEMBLY, A2-C2, from GIVB control panel to GIVB amplifier	1	—	
EB6.81.1149	. . CABLE, ASSEMBLY, brown, from flight computer to combined heading selector and control panel	1	—	
EB6.81.4041	. . CABLE, ASSEMBLY, BS1-AJ2A, from bomb aimer's compass to repeater junction box	1	—	
EB6.81.4045	. . CABLE, ASSEMBLY, BS1-AJ2C, from bomb aimer's compass to compass repeater	1	—	
EB6.81.4825	. . CABLE, ASSEMBLY, C1-SW, from GIVB control panel to engine starter panel (Pre-Mod 5100)	1	—	
EG4.81.3239	. . CABLE, ASSEMBLY, C1-SW (Alt. R60/61-Mod 5100)	1	—	
EB6.81.1139	. . CABLE, ASSEMBLY, grey, from flight computer to I.L.S. junction box	1	—	
EB6.81.807	. . CABLE, ASSEMBLY, G1-C3, from GIVB control panel to gyro unit	1	—	
EB6.81.1143	. . CABLE, ASSEMBLY, lemon, from flight computer to combined heading selector and control panel	1	—	
EB6.81.4813	. . CABLE, ASSEMBLY, M1-A1, from GIVB amplifier to GIVB master indicator	1	—	
EB6.81.1151	. . CABLE, ASSEMBLY, orange, from flight computer to junction box (Ref. 6A/6126)	1	—	
EB6.81.1141	. . CABLE, ASSEMBLY, salmon pink, from indicator to junction box (Ref. 6A/6126)	1	—	
EG4.81.933	. . CABLE, ASSEMBLY, white, from flight computer to 400 cycles fuse box	1	—	
EG4.81.941	. . CABLE, ASSEMBLY, white, from 400 cycles fuse box to junction box	1	—	
508-1-03442-003	. . CAP, protective	3	—	
EB6.81.4823	. . CONNECTOR, M2-A4, from GIVB amplifier to master indicator	1	—	
EB6.81.4821	. . CONNECTOR, M3-D1C, from GIVB master indicator to pressure bulkhead connection	1	—	
EA2.81.1241	. MOUNTING, SLAVE RELAY BOX, INSTALLATION Spares for:—	—	—	EB11/1
EA3.81.2843	. . BOX, RELAY, ASSEMBLY Spares for:—	1	—	EB11/2
EA3.81.2845	. . . BOX, shell assembly	1	—	EB11/3
SIS1564	. . . BLOCK, terminal type B 2-way Attaching parts for SIS1564:—	1	—	EB11/4
A33A18	. . . Screw, csk, head 6BA	2	—	EB11/5

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
EA3.81.2847	.	.	.	.	LID, ASSEMBLY		1	—	EB11/6
	.	.	.	.	Spares for:—				
L1850-1	.	.	.	.	BLOCK, terminal		4	—	EB11/7
	.	.	.	.	Attaching parts for L1850-1:—				
A27BP	.	.	.	.	Nut, 4BA		1	—	EB11/8
A33B16	.	.	.	.	Screw, 4BA, csk. head		1	—	EB11/9
AGS2035B	.	.	.	.	Washer, 4BA		1	—	EB11/10
EA3.81.3101	.	.	.	.	LID, box		1	—	EB11/11
	.	.	.	.	Attaching parts for EA3.81.3101:—				
EA3.81.3107	.	.	.	.	Screw, special		2	—	EB11/12
EA3.81.3113	.	.	.	.	LINK, connecting		2	—	EB11/13
EA3.81.3103	.	.	.	.	PANEL, relay mounting		1	—	EB11/14
	.	.	.	.	Attaching parts for EA3.81.3103:—				
AGS2001B1	.	.	.	.	Nut, 4BA		8	—	EB11/15
EA3.81.3105	.	.	.	.	Stud, mounting		4	—	EB11/16
SP13B	.	.	.	.	Washer, 4BA		4	—	EB11/17
STC	.	.	.	.					
4190 ED	.	.	.	.	RELAY		2	—	EB11/18
	.	.	.	.	Spares for:—				
A27BP	.	.	.	.	NUT, 4BA		1	—	EB11/19
AGS2035B	.	.	.	.	WASHER, shakeproof		1	—	EB11/20
	.	.	.	.	Attaching parts for 4190 ED:—				
AGS2002A1	.	.	.	.	Nut, 6BA		1	—	EB11/21
SP13A	.	.	.	.	Washer, 6BA		1	—	EB11/22
EA3.81.3115	.	.	.	.	BRACKET, mounting, relay box		1	—	EB11/23
EB7.81.1377	.	.	.	.	MOUNTING, TIME SWITCHES		—	—	EB7/29
	.	.	.	.	Spares for:—				
EB7.81.1375	.	.	.	.	BRACKET, assembly		1	—	EB7/30
TEDDINGTON CONTROLS	.	.	.	.					
FHMA25	.	.	.	.	SWITCH, time		2	—	EB7/31
	.	.	.	.	Attaching parts for FHMA25:—				
A31C20	.	.	.	.	Screw, 2BA		4	—	EB7/32
EB6.81.3071	.	.	.	.	PANELS, CONTROL, AND INVERTER STARTER SWITCHES INSTALLATION		—	—	EB24/1
	.	.	.	.	Spares for:—				
EB6.81.3051	.	.	.	.	CHANNEL, mounting		1	—	EB24/2
EB6.81.3055	.	.	.	.	CHANNEL, mounting		1	—	EB24/3
	.	.	.	.	Attaching parts for EB6.81.3051 and EB6.81.3055:—				
A25/1C	.	.	.	.	Bolt, 2BA		4	—	EB24/4
AGS2001C1/66	.	.	.	.	Nut, stiff, 2BA		4	—	EB24/5
SP15C	.	.	.	.	Washer		4	—	EB24/6
EB6.81.3021	.	.	.	.	CHANNEL, reinforcing		1	—	EB24/7
EB6.81.3033	.	.	.	.	CHANNEL, reinforcing		1	—	EB24/8
EB6.81.3029	.	.	.	.	PACKING		1	—	EB24/9
EB6.81.3035	.	.	.	.	PACKING		1	—	EB24/10
U1502-2	.	.	.	.	PANEL, control, type 15		1	—	EB24/11
	.	.	.	.	Attaching parts for U1502-2:—				
A25/4E	.	.	.	.	Bolt, 1/4" BSF		4	—	EB24/12
SP15E	.	.	.	.	Washer		4	—	EB24/13

AP101B-0415-3A

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
5UC4379155	.	.	PANEL, control, type 24				1	—	EB24/14
A25/2E	.	.	Attaching parts for Ref. 5UC/4379155 :—				4	—	EB24/15
SP15E	.	.	Bolt, 1/4" BSF				4	—	EB24/16
	.	.	Washer					—	
EB6.81.3455	.	.	STIFFENING, assembly				2	—	EB24/17
5CW4405591	.	.	SWITCH, magnetic relay, type T1				1	—	EB24/18
	.	.	Attaching parts for Ref. 5CW/4405591 :—					—	
A25/3C	.	.	Bolt, 2BA				2	—	EB24/19
AGS2001C1/66	.	.	Nut, stiff, 2BA				2	—	EB24/20
SP15C	.	.	Washer				2	—	EB24/21
5CW9003770	.	.	SWITCH, starter, type 1A, No. 5				1	—	EB24/22
	.	.	Attaching parts for Ref. 5CW/9003770 :—					—	
A25/7C	.	.	Bolt, 2BA				4	—	EB24/23
AGS2001C1/66	.	.	Nut, stiff, 2BA				4	—	EB24/24
SP15C	.	.	Washer				4	—	EB24/25
EB6.81.3067	.	.	TRAY, mounting, assembly				1	—	EB24/26
	.	.	Attaching parts for EB6.81.3067 :—					—	
A25/1C	.	.	Bolt, 2BA				8	—	EB24/27
SP15C	.	.	Washer				8	—	EB24/28
EG4.81.2873	.	.	PANEL, ELECTRICAL CONTROL, INSTALLATION				—	—	
	.	.	Spares for :—					—	
EG4.81.2875	.	.	PANEL, ELECTRICAL CONTROL, ASSEMBLY				1	—	EB12/1
	.	.	Spares for :—					—	
703-2-00253	.	.	BAR, commoning, 4 way				34	—	
EA1.81.410	.	.	BAR, TERMINAL, ASSEMBLY				4	—	EB12/1A
	.	.	Spares for :—					—	
EA1.81.411	.	.	BAR, terminal				1	—	EB12/2
	.	.	Attaching parts for EA1.81.411 :—					—	
A45B12	.	.	Screw				2	—	EB12/3
EA1.81.410A	.	.	BASE, 5/16" thick				1	LFS21	EB12/4
EA1.81.410B	.	.	COVER, plate, 1/8" thick				1	LFS21	EB12/5
BULGIN T5	.	.	HEAD, terminal, moulded				2	—	EB12/6
AGS2002E4	.	.	NUT, stiff, 1/4" BSF				3	—	EB12/7
	.	.	Attaching parts for EA1.81.410 :—					—	
AGS2002B1	.	.	Nut, 4BA				2	—	EB12/8
A33B14	.	.	Screw, 4BA, csk. head				2	—	EB12/9
703-2-00268	.	.	BLOCK, mounting				12	—	EB12/10
PLESSEY	.	.						—	
703-1-00249	.	.	BLOCK, terminal, 20 - way				8	—	EB12/11
	.	.	Attaching parts for 703-1-00249 :—					—	
AS1246/3B	.	.	Bolt, 4BA				2	—	EB12/12
A32B14	.	.	Screw, 4BA				2	—	EB12/13
AGS2035B	.	.	Washer, shakeproof				2	—	EB12/14
LGA12B1-1	.	.	BREAKER, circuit, 12A				1	—	EB12/15
LGA35B1	.	.	BREAKER, circuit, 35A				2	—	EB12/16

R

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA2.81.803	. . .	CARRIER, SPARE FUSE, ASSEMBLY	1	-	EB12/17
AS2294/1	. . .	Spares for :-			
EA2.81.805	. . .	CLIP, spring	24	-	EB12/18
	. . .	PLATE, base	1	-	EB12/19
AGS2001A1	. . .	Attaching parts for EA2.81.803 :-			
A32A16	. . .	Nut, 6BA	4	-	EB12/20
	. . .	Screw, 6BA, round head	4	-	EB12/21
AS3180/78	. . .	CLIP	1	-	EB12/22
AS3180/148	. . .	CLIP	1	-	EB12/23
	. . .	Attaching parts for AS3180/78 and AS3180/148 :-			
AGS2001B1	. . .	Nut, 4BA	1	-	EB12/24
A32B16	. . .	Screw, 4BA, round head	1	-	EB12/25
SP138	. . .	Washer, 4BA	1	-	EB12/26
5L9951271	. . .	FILAMENT	2	-	EB12/27
10H6211965	. . .	FUSE, 40 amp, HRC	1	-	
10H1043043	. . .	FUSE, 30 amp, HRC	6	-	
10H1047920	. . .	FUSE, 2.5 amp, HRC, type AS	37	-	
10H1043046	. . .	FUSE, 20 amp, HRC, type AS	14	-	
10H9718191	. . .	FUSE, 10 amp, HRC, type AS	33	-	
10H9463981	. . .	FUSE, 5 amp, HRC, type AS	69	-	
10H1094061	. . .	FUSE, 7.5 amp, HRC, type AS	2	-	
SP93A8	. . .	GROMMET	1	-	EB13/1
SP93A18	. . .	GROMMET	2	-	EB13/2
EG4.81.879	. . .	LABEL, HRC fuses	1	-	EB12/84
EG4.81.2917	. . .	LABEL, circuit breaker	1	-	EB12/28
5CX1041518	. . .	LAMP, cockpit floodlight	2	-	EB12/29
	. . .	Attaching parts for 5CX1041518 :-			
AGS2002B1	. . .	Nut, 4BA	2	-	EB12/30
A32B14	. . .	Screw, 4BA, round head	2	-	EB12/31
EB6.81.4747	. . .	LANYARD, assembly	2	-	EB12/32
	. . .	Attaching parts for EB6.81.4747 :-			
AGS2001B1	. . .	Nut, 4BA	2	-	EB12/33
SP138	. . .	Washer, 4BA	2	-	EB12/34
EEAS71/1	. . .	LINK, commoning, 2 - way	1	-	
PLESSEY	. . .				
703-2-00253	. . .	LINK, commoning, 4 - way	2	-	
703-2-00251	. . .	LINK, commoning, 2 - way	20	-	
703-2-00254	. . .	LINK, commoning, 5 - way	2	-	
EB6.81.3385	. . .	MOUNTING, FUSE, ASSEMBLY	1	-	EB12/35
	. . .	Spares for :-			
EB6.81.3403	. . .	BOLT, special	12	-	EB12/36
E. E. CO. LTD.	. . .				
V1234	. . .	CARRIER, fuse	6	-	EB12/37
EB6.81.3405	. . .	LINK, fuse	3	-	EB12/38
A14EB	. . .	NUT	12	-	EB12/39
AGS2002E4	. . .	NUT, 1/4" BSF	12	-	EB12/40

AP101B-0415-3A

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EB6.81.3387		PLATE, mounting, bottom	1	—	EB12/41
EB6.81.3369		PLATE, mounting, top	1	—	EB12/42
EEAS28/22EW		WASHER	12	—	EB12/43
SP10E		WASHER	24	—	EB12/44
		Attaching parts for EB6.81.3365 :—			
A25/16C		Bolt, 2BA	4	—	EB12/45
SP13C		Washer, 2BA	4	—	EB12/46
EG4.81.2915		PANEL, FUSE, EQUIPMENT, ASSEMBLY	—	—	EB14/1
		Spares for :—			
EB6.81.3483		BLOCK, FUSE, ASSEMBLY	1	—	EB14/2
		Spares for :—			
703-1-00416		BLOCK, fuse	1	—	EB14/3
EB6.81.3543		LABEL	1	—	EB14/4
		Attaching parts for EB6.81.3483 :—			
A32B10		Screw, 4BA	2	—	EB14/5
AGS2035B		Washer, shakeproof	2	—	EB14/6
EB6.81.3485		BLOCK, FUSE, ASSEMBLY	1	—	EB14/7
		Spares for :—			
703-1-00416		BLOCK, fuse	1	—	EB14/8
EB6.81.3545		LABEL	1	—	EB14/9
		Attaching parts for EB6.81.3485 :—			
A32B10		Screw, 4BA	2	—	EB14/10
AGS2035B		Washer, shakeproof	2	—	EB14/11
EB6.81.3489		BLOCK, FUSE, ASSEMBLY	1	—	EB14/12
		Spares for :—			
703-1-00416		BLOCK, fuse	1	—	EB14/13
EB6.81.3549		LABEL	1	—	EB14/14
		Attaching parts for EB6.81.3489 :—			
A32B8		Screw, 4BA	2	—	EB14/15
AGS2035B		Washer, shakeproof	2	—	EB14/16
EB6.81.3491		BLOCK, FUSE, ASSEMBLY	1	—	EB14/17
		Spares for :—			
703-1-00416		BLOCK, fuse	1	—	EB14/18
EB6.81.3551		LABEL	1	—	EB14/19
		Attaching parts for EB6.81.3491 :—			
A32B8		Screw, 4BA	2	—	EB14/20
AGS2035B		Washer, shakeproof	2	—	EB14/21
EB6.81.3495		BLOCK, FUSE, ASSEMBLY	1	—	EB14/22
		Spares for :—			
703-1-00416		BLOCK, fuse	1	—	EB14/23
EB6.81.3555		LABEL	1	—	EB14/24
		Attaching parts for EB6.81.3495 :—			
A32B8		Screw, 4BA	2	—	EB14/25
AGS2035B		Washer, shakeproof	2	—	EB14/26
R EB6.81.3499		BLOCK, FUSE, ASSEMBLY	1	—	EB14A/1
		Spares for :—			
R 703-1-00416		BLOCK, fuse	1	—	EB14A/2
R EB6.81.3559		LABEL	1	—	EB14A/3
		Attaching parts for EB6.81.3499 :—			
R A32B10		Screw, 4BA	2	—	EB14A/4
R AGS2035B		Washer, shakeproof	2	—	EB14A/5

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

	Part Number	Description						No. Off	Mati. Spec.	Plate No.
		1	2	3	4	5	6			
R	EG4.81.3255		BLOCK, FUSE, ASSEMBLY (Mod 5218)					1	—	EB14A/6
R	703-1-00416		Spares for :—					1	—	EB14A/7
R	EG4.81.3253		. BLOCK, fuse					1	—	EB14A/8
			. LABEL							
R	A32B10		Attaching parts for EG4.81.3255 :—					2	—	EB14A/9
R	AGS2035B		Screw, 4BA					2	—	EB14A/10
			Washer, shakeproof							
R	EB6.81.3511		BLOCK, FUSE, ASSEMBLY					1	—	EB14A/11
R	703-1-00416		Spares for :—					1	—	EB14A/12
R	EB6.81.3571		. BLOCK, fuse					1	—	EB14A/13
			. LABEL							
R	A32B10		Attaching parts for EB6.81.3511 :—					2	—	EB14A/14
R	AGS2035B		Screw, 4BA					2	—	EB14A/15
			Washer, shakeproof							
R	EB6.81.3513		BLOCK, FUSE, ASSEMBLY					1	—	EB14A/16
R	703-1-00416		Spares for :—					1	—	EB14A/17
R	EB6.81.3573		. BLOCK, fuse					1	—	EB14A/18
			. LABEL							
R	A32B10		Attaching parts for EB6.81.3513 :—					2	—	EB14A/19
R	AGS2035B		Screw, 4BA					2	—	EB14A/20
			Washer, shakeproof							
R	EB6.81.3515		BLOCK, FUSE, ASSEMBLY					1	—	EB14A/21
R	703-1-00416		Spares for :—					1	—	EB14A/22
R	EB6.81.3575		. BLOCK, fuse					1	—	EB14A/23
			. LABEL							
R	A32B10		Attaching parts for EB6.81.3515 :—					2	—	EB14A/24
R	AGS2035B		Screw, 4BA					2	—	EB14A/25
			Washer, shakeproof							
R	EB6.81.3517		BLOCK, FUSE, ASSEMBLY					1	—	EB14A/26
R	703-1-00416		Spares for :—					1	—	EB14A/27
R	EB6.81.3577		. BLOCK, fuse					1	—	EB14A/28
			. LABEL							
R	A32B10		Attaching parts for EB6.81.3517 :—					2	—	EB14A/29
R	AGS2035B		Screw, 4BA					2	—	EB14A/30
			Washer, shakeproof							
R	EB6.81.3519		BLOCK, FUSE, ASSEMBLY					1	—	EB14A/31
R	703-1-00416		Spares for :—					1	—	EB14A/32
R	EB6.81.3579		. BLOCK, fuse					1	—	EB14A/33
			. LABEL							
R	A32B10		Attaching parts for EB6.81.3519 :—					2	—	EB14A/34
R	AGS2035B		Screw, 4BA					2	—	EB14A/35
			Washer, shakeproof							
R	EB6.81.3521		BLOCK, FUSE, ASSEMBLY					1	—	EB14A/36
R	703-1-00416		Spares for :—					1	—	EB14A/37
R	EB6.81.3581		. BLOCK, fuse					1	—	EB14A/38
			. LABEL							
R	A32B10		Attaching parts for EB6.81.3521 :—					2	—	EB14A/39
R	AGS2035B		Screw, 4BA					2	—	EB14A/40
			Washer, shakeproof							

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
R EB6.81.3259	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	—	EB14B/1
R 703-1-00416	.	.	.	.	Spares for:—		1	—	EB14B/2
R EB6.81.3589	.	.	.	.	BLOCK, fuse		1	—	EB14B/3
R A32B8	.	.	.	.	LABEL				
R AGS2035B	.	.	.	.	Attaching parts for EB6.81.3529:—				
R A32B8	.	.	.	.	Screw, 4BA		2	—	EB14B/4
R AGS2035B	.	.	.	.	Washer, shakeproof		2	—	EB14B/5
R EG4.81.2011	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	—	EB14/27
R 703-1-00416	.	.	.	.	Spares for:—		1	—	EB14/28
R EG4.81.2013	.	.	.	.	BLOCK, fuse		1	—	EB14/29
R A32B10	.	.	.	.	LABEL				
R AGS2035B	.	.	.	.	Attaching parts for EG4.81.2011:—				
R EG4.81.2923	.	.	.	.	Screw, 4BA		2	—	EB14/30
R 703-1-00416	.	.	.	.	Washer, shakeproof		2	—	EB14/31
R EG4.81.2923	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	—	EB14/32
R 703-1-00416	.	.	.	.	Spares for:—		1	—	EB14/33
R EG4.81.2925	.	.	.	.	BLOCK, fuse		1	—	EB14/34
R A32B10	.	.	.	.	LABEL				
R AGS2035B	.	.	.	.	Attaching parts for EG4.81.2923:—				
R EG4.81.2927	.	.	.	.	Screw, 4BA		2	—	EB14/35
R 703-1-00416	.	.	.	.	Washer, shakeproof		2	—	EB14/36
R EG4.81.2927	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	—	EB14/37
R 703-1-00416	.	.	.	.	Spares for:—		1	—	EB14/38
R EG4.81.2929	.	.	.	.	BLOCK, fuse		1	—	EB14/39
R A32B10	.	.	.	.	LABEL				
R AGS2035A	.	.	.	.	Attaching parts for EG4.81.2927:—				
R EG4.81.2931	.	.	.	.	Screw, 4BA		2	—	EB14/40
R 703-1-00416	.	.	.	.	Washer, shakeproof		2	—	EB14/41
R EG4.81.2931	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	—	EB14/42
R 703-1-00416	.	.	.	.	Spares for:—		1	—	EB14/43
R EG4.81.2933	.	.	.	.	BLOCK, fuse		1	—	EB14/44
R A32B10	.	.	.	.	LABEL				
R AGS2035B	.	.	.	.	Attaching parts for EG4.81.2931:—				
R EG4.81.2935	.	.	.	.	Screw, 4BA		2	—	EB14/45
R 703-1-00416	.	.	.	.	Washer, shakeproof		2	—	EB14/46
R EG4.81.2937	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	—	EB14/47
R 703-1-00416	.	.	.	.	Spares for:—		1	—	EB14/48
R EG4.81.2937	.	.	.	.	BLOCK, fuse		1	—	EB14/49
R A32B8	.	.	.	.	LABEL				
R AGS2035B	.	.	.	.	Attaching parts for EG4.81.2935:—				
R EG4.81.2939	.	.	.	.	Screw, 4BA		2	—	EB14/50
R 703-1-00416	.	.	.	.	Washer, shakeproof		2	—	EB14/51
R EG4.81.2941	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	—	EB14A/41
R A32B10	.	.	.	.	Spares for:—		1	—	EB14A/42
R AGS2035B	.	.	.	.	BLOCK, fuse		1	—	EB14A/43
R 703-1-00416	.	.	.	.	LABEL				
R AGS2035B	.	.	.	.	Attaching parts for EG4.81.2939:—				
R 703-1-00416	.	.	.	.	Screw, 4BA		2	—	EB14A/44
R AGS2035B	.	.	.	.	Washer, shakeproof		2	—	EB14A/45

ELECTRICAL

AP101B-0415-3A

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description					No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5 6			
EG4.81.2943	.	.	.	.	BLOCK, FUSE, ASSEMBLY	1	—	EB14A/46
	.	.	.	.	Spares for:—			
703-1-00416	.	.	.	.	BLOCK, fuse	1	—	EB14A/47
EG4.81.2945	.	.	.	.	LABEL	1	—	EB14A/48
	.	.	.	.	Attaching parts for EG4.81.2943:—			
A32B10	.	.	.	.	Screw, 4BA	2	—	EB14A/49
AGS2035B	.	.	.	.	Washer, shakeproof	2	—	EB14A/50
EG4.81.2947	.	.	.	.	BLOCK, FUSE, ASSEMBLY	1	—	EB14B/6
	.	.	.	.	Spares for:—			
703-1-00416	.	.	.	.	BLOCK, fuse	1	—	EB14B/7
EG4.81.2949	.	.	.	.	LABEL	1	—	EB14B/8
	.	.	.	.	Attaching parts for EG4.81.2947:—			
A32B8	.	.	.	.	Screw, 4BA	2	—	EB14B/9
AGS2035B	.	.	.	.	Washer, shakeproof	2	—	EB14B/10
EG4.81.2951	.	.	.	.	BLOCK, FUSE, ASSEMBLY	1	—	EB14B/11
	.	.	.	.	Spares for:—			
703-1-00416	.	.	.	.	BLOCK, fuse	1	—	EB14B/12
EG4.81.2953	.	.	.	.	LABEL	1	—	EB14B/13
	.	.	.	.	Attaching parts for EG4.81.2951:—			
A32B8	.	.	.	.	Screw, 4BA	2	—	EB14B/14
AGS2035B	.	.	.	.	Washer, shakeproof	2	—	EB14B/15
EG4.81.2955	.	.	.	.	BLOCK, FUSE, ASSEMBLY	1	—	EB14B/16
	.	.	.	.	Spares for:—			
703-1-00416	.	.	.	.	BLOCK, fuse	1	—	EB14B/17
EG4.81.2957	.	.	.	.	LABEL	1	—	EB14B/18
	.	.	.	.	Attaching parts for EG4.81.2955:—			
A32B8	.	.	.	.	Screw, 4BA	2	—	EB14B/19
AGS2035B	.	.	.	.	Washer, shakeproof	2	—	EB14B/20
EG4.81.2959	.	.	.	.	BLOCK, FUSE, ASSEMBLY	1	—	EB14B/21
	.	.	.	.	Spares for:—			
703-1-00416	.	.	.	.	BLOCK, fuse	1	—	EB14B/22
EG4.81.2961	.	.	.	.	LABEL	1	—	EB14B/23
	.	.	.	.	Attaching parts for EG4.81.2959:—			
A32B8	.	.	.	.	Screw, 4BA	2	—	EB14B/24
AGS2035B	.	.	.	.	Washer, shakeproof	2	—	EB14B/25
EG4.81.2963	.	.	.	.	BLOCK, FUSE, ASSEMBLY	1	—	EB14B/26
	.	.	.	.	Spares for:—			
703-1-00416	.	.	.	.	BLOCK, fuse	1	—	EB14B/27
EG4.81.2965	.	.	.	.	LABEL	1	—	EB14B/28
	.	.	.	.	Attaching parts for EG4.81.2963:—			
A32B8	.	.	.	.	Screw, 4BA	2	—	EB14B/29
AGS2035B	.	.	.	.	Washer, shakeproof	2	—	EB14B/30
EG4.81.2967	.	.	.	.	BLOCK, FUSE, ASSEMBLY	1	—	EB14B/31
	.	.	.	.	Spares for:—			
703-00416	.	.	.	.	BLOCK, fuse	1	—	EB14B/32
EG4.81.2969	.	.	.	.	LABEL	1	—	EB14B/33
	.	.	.	.	Attaching parts for EG4.81.2967:—			
A32B10	.	.	.	.	Screw, 4BA	2	—	EB14B/34
AGS2035B	.	.	.	.	Washer, shakeproof	2	—	EB14B/35

AP101B-0415-3A

Page EB.27

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
EG4.81.2971	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	—	EB14B/36
703-1-00416	.	.	.	.	Spares for :—		1	—	EB14B/37
EG4.81.2973	.	.	.	.	BLOCK, fuse		1	—	EB14B/38
	.	.	.	.	LABEL				
A32B10	.	.	.	.	Attaching parts for EG4.81.2971 :—		2	—	EB14B/39
AGS2035B	.	.	.	.	Screw, 4BA		2	—	EB14B/40
	.	.	.	.	Washer, shakeproof				
EG4.81.2975	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	—	EB14B/41
703-1-00416	.	.	.	.	Spares for :—		1	—	EB14B/42
EG4.81.2977	.	.	.	.	BLOCK, fuse		1	—	EB14B/43
	.	.	.	.	LABEL				
A32B10	.	.	.	.	Attaching parts for EG4.81.2975 :—		2	—	EB14B/44
AGS2035B	.	.	.	.	Screw, 4BA		2	—	EB14B/45
	.	.	.	.	Washer, shakeproof				
EG4.81.2979	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	—	EB14B/46
703-1-00416	.	.	.	.	Spares for :—		1	—	EB14B/47
EG4.81.2981	.	.	.	.	BLOCK, fuse		1	—	EB14B/48
	.	.	.	.	LABEL				
A32B10	.	.	.	.	Attaching parts for EG4.81.2979 :—		2	—	EB14B/49
AGS2035B	.	.	.	.	Screw, 4BA		2	—	EB14B/50
	.	.	.	.	Washer, shakeproof				
EG4.81.3097	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	—	EB14/52
703-1-00416	.	.	.	.	Spares for :—		1	—	EB14/53
EG4.81.1533	.	.	.	.	BLOCK, fuse		1	—	EB14/54
	.	.	.	.	LABEL				
A32B8	.	.	.	.	Attaching parts for EG4.81.3097 :—		2	—	EB14/55
AGS2035B	.	.	.	.	Screw, 4BA		2	—	EB14/56
	.	.	.	.	Washer, shakeproof				
EG4.81.3099	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	—	EB14A/51
703-1-00416	.	.	.	.	Spares for :—		1	—	EB14A/52
EG4.81.1535	.	.	.	.	BLOCK, fuse		1	—	EB14A/53
	.	.	.	.	LABEL				
A32B10	.	.	.	.	Attaching parts for EG4.81.3099 :—		2	—	EB14A/54
AGS2035B	.	.	.	.	Screw, 4BA		2	—	EB14A/55
	.	.	.	.	Washer, shakeproof				
EG4.81.3101	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	—	EB14/57
703-1-00416	.	.	.	.	Spares for :—		1	—	EB14/58
EG4.81.3103	.	.	.	.	BLOCK, fuse		1	—	EB14/59
	.	.	.	.	LABEL				
A32B8	.	.	.	.	Attaching parts for EG4.81.3101 :—		2	—	EB14/60
AGS2035B	.	.	.	.	Screw, 4BA		2	—	EB14/61
	.	.	.	.	Washer, shakeproof				
EG4.81.3105	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	—	EB14A/56
703-1-00416	.	.	.	.	Spares for :—		1	—	EB14A/57
EG4.81.3107	.	.	.	.	BLOCK, fuse		1	—	EB14A/58
	.	.	.	.	LABEL				
A32B10	.	.	.	.	Attaching parts for EG4.81.3105 :—		2	—	EB14A/59
AGS2035B	.	.	.	.	Screw, 4BA		2	—	EB14A/60
	.	.	.	.	Washer, shakeproof				

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EG4.81.3109	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	—	EB14B/51
703-1-00416	.	.	.	.	Spares for :—				
EG4.81.3111	.	.	.	.	BLOCK, fuse		1	—	EB14B/52
	.	.	.	.	LABEL		1	—	EB14B/53
A32B10	.	.	.	.	Attaching parts for EG4.81.3109 :—				
AGS2035B	.	.	.	.	Screw, 4BA		2	—	EB14B/54
	.	.	.	.	Washer, shakeproof		2	—	EB14B/55
EG4.81.3113	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	—	EB14B/56
703-1-00416	.	.	.	.	Spares for :—				
EG4.81.3115	.	.	.	.	BLOCK, fuse		1	—	EB14B/57
	.	.	.	.	LABEL		1	—	EB14B/58
A32B10	.	.	.	.	Attaching parts for EG4.81.3113 :—				
AGS2035B	.	.	.	.	Screw, 4BA		2	—	EB14B/59
	.	.	.	.	Washer, shakeproof		2	—	EB14B/60
AS3180/12B	.	.	.	.	CLIP		1	—	EB14B/61
AS3180/14B	.	.	.	.	CLIP		4	—	EB14B/62
AS1246/1B	.	.	.	.	Attaching parts for AS3180/14B :—				
AGS2001B1	.	.	.	.	Bolt, 4BA		1	—	EB14B/63
SP13B	.	.	.	.	Nut, stiff, 4BA		1	—	EB14B/64
	.	.	.	.	Washer		1	—	EB14B/65
5X9131181	.	.	.	.	GROMMET		15	—	EB14B/66
EB6.81.3323	.	.	.	.	PANEL, FUSE, ASSEMBLY		1	—	EB14B/67
	.	.	.	.	Spares for :—				
EB6.81.785	.	.	.	.	HINGE		2	—	EB14B/68
ODDIE 213	.	.	.	.	Attaching parts for EG4.81.2915 :—				
ODDIE 214	.	.	.	.	Stud		3	—	EB14/62
	.	.	.	.	Washer		3	—	EB14/63
EG4.81.2913	.	.	.	.	PANEL, RELAY EQUIPMENT, ASSEMBLY		1	—	EB12/47
	.	.	.	.	Spares for :—				
EB6.81.3411	.	.	.	.	BOLT, special		6	—	EB12/48
EB6.81.3329	.	.	.	.	COVER, relay, assembly		1	—	EB12/49
AGS2001C1/66	.	.	.	.	NUT, 2BA		6	—	EB12/50
EB6.81.3327	.	.	.	.	PANEL, relay mounting, assembly		1	—	EB12/51
PLESSEY	.	.	.	.					
7CZ107792	.	.	.	.	RELAY, type SDP/2DM/2DB/28/25/200AC		3	—	EB12/52
7CZ107791	.	.	.	.	RELAY, type SDP/4DM/4DB/28/10/200AC		2	—	EB12/53
A33B14	.	.	.	.	SCREW, 4BA, csk. head		8	—	EB12/54
PLESSEY	.	.	.	.					
7CZ107805	.	.	.	.	SOCKET, relay, type S1		3	—	EB12/55
7CZ107794	.	.	.	.	SOCKET, relay, type S3		2	—	EB12/56
SP10C	.	.	.	.	WASHER, 2BA		2	—	EB12/57
SP13C	.	.	.	.	WASHER, 2BA		6	—	EB12/58
	.	.	.	.	Attaching parts for EG4.81.2913 :—				
A25/1B	.	.	.	.	Bolt, 4BA		4	—	EB12/59
SP13B	.	.	.	.	Washer, 4BA		4	—	EB12/60
EB6.81.5505	.	.	.	.	PANEL		2	—	EB12/61
EB6.81.3733	.	.	.	.	PIECE, packing		4	—	EB12/62
EB6.81.3837	.	.	.	.	PLATE, insulating		1	—	EB12/63
EG4.81.3095	.	.	.	.	PLATE, cover, assembly		1	—	EB13/8
	.	.	.	.	Attaching parts for EG4.81.3095 :—				
ODDIE 213	.	.	.	.	Stud		11	—	EB13/9
ODDIE 214	.	.	.	.	Washer		11	—	EB13/10
EG4.81.3219	.	.	.	.	PLATE, switch, engraved (Alt.R60/61R1)		1	—	EB13/7

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EG4.81.2651	. . .	. . .	. . .	. . .	. . .	PLATE, TERMINAL BLOCK, ASSEMBLY	1	—	EB12/64
703-1-00238	. . .	. . .	. . .	. . .	. . .	Spares for :- BLOCK, terminal	1	—	EB12/65
AGS2001B1	. . .	. . .	. . .	. . .	. . .	Attaching parts for 703-1-00238 :- Nut, stiff, 4BA	2	—	EB12/66
A31B24	. . .	. . .	. . .	. . .	. . .	Screw, 4BA	2	—	EB12/67
EG4.81.2649	. . .	. . .	. . .	. . .	. . .	PLATE	1	—	EB12/68
MAM RUBBER	. . .	. . .	. . .	. . .	. . .	SLEEVE, 3mm i/d X 3/8", CXH	5	—	
508-1-06413	. . .	. . .	. . .	. . .	. . .	PLUG, fixed, 26 - way	12	—	EB13/11
508-1-06406	. . .	. . .	. . .	. . .	. . .	PLUG, fixed, 14 - way	2	—	EB13/12
508-1-06405	. . .	. . .	. . .	. . .	. . .	PLUG, fixed, 12 - way	1	—	EB13/13
508-1-06399	. . .	. . .	. . .	. . .	. . .	PLUG, fixed 9 - way	3	—	EB13/14
508-1-06410	. . .	. . .	. . .	. . .	. . .	PLUG, fixed, 13 - way	2	—	EB13/15
508-1-06396	. . .	. . .	. . .	. . .	. . .	PLUG, fixed, 5 - way	1	—	EB13/16
508-1-06415	. . .	. . .	. . .	. . .	. . .	PLUG, fixed, 27 - way	1	—	EB13/17
508-1-06394	. . .	. . .	. . .	. . .	. . .	PLUG, fixed, 4 - way	1	—	EB13/18
10H0130589	. . .	. . .	. . .	. . .	. . .	PLUG, Mk. 7, 12 - way	1	—	EB13/19
508-2-12373-002	. . .	. . .	. . .	. . .	. . .	RING, anti-chafe	1	—	EB13/20
MAM RUBBER	. . .	. . .	. . .	. . .	. . .	SLEEVE, 3 mm i/d X 3/8" CXH	QR	—	
EEAS146/20	. . .	. . .	. . .	. . .	. . .	SLEEVE, 1/2"	QR	—	
EEAS146/000	. . .	. . .	. . .	. . .	. . .	SLEEVE, 3/4"	QR	—	
EEAS146/6	. . .	. . .	. . .	. . .	. . .	SLEEVE, 3/4"	QR	—	
EEAS146/10	. . .	. . .	. . .	. . .	. . .	SLEEVE, 3/4"	QR	—	
EEAS146/12	. . .	. . .	. . .	. . .	. . .	SLEEVE, 3/4"	QR	—	
EEAS124/16	. . .	. . .	. . .	. . .	. . .	SLEEVE, 3/4"	QR	—	
EEAS146/20	. . .	. . .	. . .	. . .	. . .	SLEEVE, 3/4"	QR	—	
PLESSEY	. . .	. . .	. . .	. . .	. . .				
508-2-11232-002	. . .	. . .	. . .	. . .	. . .	SLEEVE, reducing, 6 - 12 amp	305	—	
508-2-11231-002	. . .	. . .	. . .	. . .	. . .	SLEEVE, reducing, 12 - 24 amp	1	—	
508-1-07041-220	. . .	. . .	. . .	. . .	. . .	SOCKET, fixed, 2 - way	1	—	EB13/21
508-1-07042-220	. . .	. . .	. . .	. . .	. . .	SOCKET, fixed, 4 - way	1	—	EB13/22
MS3102E24/11S	. . .	. . .	. . .	. . .	. . .	SOCKET, fixed, 11 - way	1	—	EB13/23
MS3102E20/14S	. . .	. . .	. . .	. . .	. . .	SOCKET, fixed, 14 - way	1	—	EB13/24
460/14/19S	. . .	. . .	. . .	. . .	. . .	SOCKET, fixed, 19 - way	1	—	EB13/25
508-1-40053-320	. . .	. . .	. . .	. . .	. . .	SOCKET, fixed, Mk.4, 9 - way	2	—	EB13/26
5CW1102662	. . .	. . .	. . .	. . .	. . .	SOCKET, test, type F	1	—	EB13/27
	. . .	. . .	. . .	. . .	. . .	Attaching parts for 5CW/1102662 :-			
AGS2001B1	. . .	. . .	. . .	. . .	. . .	Nut, 4BA	2	—	EB13/28
A32B18	. . .	. . .	. . .	. . .	. . .	Screw, 4 BA, round head	2	—	EB13/29
SP13B	. . .	. . .	. . .	. . .	. . .	Washer, 4BA	2	—	EB13/30
NY18007A	. . .	. . .	. . .	. . .	. . .	STRAPPING	QR	—	
NY18067	. . .	. . .	. . .	. . .	. . .	STRAPPING	QR	—	
EG4.81.2903	. . .	. . .	. . .	. . .	. . .	STRUCTURE, electrical control panel	1	—	
NY3255	. . .	. . .	. . .	. . .	. . .	STUD	QR	—	
5CW1102662	. . .	. . .	. . .	. . .	. . .	SWITCH, push button	8	—	EB13/31
	. . .	. . .	. . .	. . .	. . .	Attaching parts for Ref.5CW/1102662 :-			
AGS2001A1	. . .	. . .	. . .	. . .	. . .	Nut, 6 BA	4	—	EB13/3
A32A16	. . .	. . .	. . .	. . .	. . .	Screw, 6BA, round head	4	—	EB13/4
NSF8396B102	. . .	. . .	. . .	. . .	. . .	SWITCH, on/off	1	—	EB13/5
8801K6	. . .	. . .	. . .	. . .	. . .	SWITCH, single pole	1	—	EB13/6
HELLERMANN	. . .	. . .	. . .	. . .	. . .				
HC510	. . .	. . .	. . .	. . .	. . .	TAG, QR, 19 amp	QR	—	
HC500	. . .	. . .	. . .	. . .	. . .	TAG, QR, 7 amp	QR	—	
HC490	. . .	. . .	. . .	. . .	. . .	TAG, QR, 4 amp	QR	—	
HC310	. . .	. . .	. . .	. . .	. . .	TAG, closed end, 24 amp	QR	—	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
HC296	. . . TAG, closed end, 6 amp	QR	—	
12318	. . . TAG, closed end, 50 amp	QR	—	
ERMA	. . . TAG, closed end	QR	—	
HC314C	. . . TAG, closed end, 24 amp	QR	—	
HC304	. . . TAG, closed end, 12 amp	QR	—	
CPL98-01-18/16G	. . . TAG, closed end, 12 amp	QR	—	
CPL98-01-12A	. . . TAG, closed end, 50 amp	QR	—	
EB6.81.3407	. . . TERMINAL, earth assembly	1	—	EB12/69
	Spares for:—			
EB6.81.3409	. . . LINK, earth	1	—	EB12/70
AGS2001B4	. . . NUT, stiff, 4BA	6	—	EB12/71
A45B32	. . . SCREW, 4BA	6	—	EB12/72
SP25B	. . . WASHER	12	Brass	EB12/73
	Attaching parts for EB6.81.3407:—			
AS1246/3C	. . . Bolt, round head, 2 BA	2	—	EB12/74
AGS2001C1/66	. . . Nut, stiff, 2BA	2	—	EB12/75
A44C6	. . . Screw, 2BA	1	—	EB12/86
AGS2035C	. . . Washer, shakeproof, 2BA	1	—	EB12/87
SP13C	. . . Washer, 2BA	2	—	EB12/85
6A1062526	. . . UNIT, resistance	2	—	EB12/76
	Attaching parts for 6A/1062526:—			
AGS2002B1	. . . Nut, stiff, thin, 4BA	2	—	EB12/77
A32B22	. . . Screw, round head, 4BA	2	—	EB12/78
SP13B	. . . Washer, 4BA	2	—	EB12/79
EEAS43/3	. . . WASHER, 2BA, shakeproof	2	—	
	Attaching parts for EG4.81.2875:—			
A25/1C	. . . Bolt, 2BA	3	—	EB12/81
A25/2C	. . . Bolt, 2BA	6	—	EB12/82
SP13C	. . . Washer	9	—	EB12/83
R EG4.81.2889	. . . PANEL, MAIN ELECTRICAL, ASSEMBLY (Pre Mod 5438)	—	—	EB15/1
R EG4.81.3515	. . . PANEL, MAIN ELECTRICAL, ASSEMBLY (Mod 5438)	—	—	
	Spares for:—			
Z54032	. . . BAR, commoning, 2-way	3	—	EB16/1
Z63021	. . . BAR, commoning, 4-way	5	—	EB16/2
R EG4.81.3155	. . . BLOCK, FUSE, ASSEMBLY (Pre Mod 5438)	1	—	EB16/3
R EG4.81.3513	. . . BLOCK, FUSE, ASSEMBLY (Mod 5438)	1	—	
	Spares for:—			
703-1-00416	. . . BLOCK, fuse	1	—	EB16/4
EG4.81.3157	. . . LABEL	1	—	EB16/5
	Attaching parts for EG4.81.3155 or EG4.81.3513:—			
A31B10	. . . Screw, 4BA	2	—	EB16/6
AGS2035B	. . . Washer, lock	2	—	EB16/7
EB6.81.3109	. . . BLOCK, fuse mounting	1	—	EB16/8
	Attaching parts for EB6.81.3109:—			
AS1246/14B	. . . Bolt, 4BA	1	—	EB16/9
AS4566/5B	. . . Bolt, 4BA	1	—	EB16/10
AS4566/9B	. . . Bolt, 4BA	1	—	EB16/11
EG4.81.727	. . . BLOCK, fuse mounting	1	—	EB16/12
	Attaching parts for EG4.81.727:—			
AS1246/14B	. . . Bolt, 4BA	2	—	EB16/13
AS1246/15C	. . . Bolt, 2BA	1	—	EB16/14
EB6.81.2997	. . . BLOCK, packing	1	—	EB16/15
EB6.81.2999	. . . BLOCK, packing	1	—	EB16/16
EB6.81.4281	. . . BOLT, special	2	—	EB15/2
5CZ433526	. . . BOLT, rubber	2	—	EB15/3
EA9.81.1003	. . . BRACKET, assembly	1	—	EB15/4
	Attaching parts for EA9.81.1003:—			
AS1248/½B	. . . Bolt, 4BA, mush. head	4	—	EB15/5

AP101B-0415-3A

ELECTRICAL

Page EB.31

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EB6.81.5569	. . BRACKET, support	1	—	EB15/6
EB6.81.4721	. . BRACKET, support	1	—	EB15/7
EB6.81.1579	. . BUS-BAR P10, interconnector assembly	1	—	EB15/8
	Attaching parts for EB6.81.1579 :—			
A25-6E	. . Bolt, 1/4" BSF	2	—	EB15/9
AGS2001E1/66	. . Nut, stiff 1/4" BSF	2	—	EB15/10
SP13E	. . Washer, 1/4"	2	—	EB15/11
EB6.81.4943	. . BUS-BAR, P3, assembly	1	—	EB15/12
EB6.81.4945	. . BUS-BAR, P4, assembly	1	—	EB15/13
	Attaching parts for EB6.81.4943 and EB6.81.4945 :—			
EB6.81.4779	. . Bolt, special	1	—	EB15/14
EB6.81.4713	. . Washer, bearing	1	—	EB15/15
EA9.81.2403	. . Washer, contact	1	—	EB15/16
SP56G	. . Washer, spring	1	—	EB15/17
EB7.81.1221	. . CABLE, ASSEMBLY, E21, from MEP to earth	1	—	EB15/18
	Attaching parts for EB7.81.1221 :—			
A25/3G	. . Bolt, 5/16" BSF	1	—	EB15/19
AGS2001G1	. . Nut, 5/16" BSF	1	—	EB15/20
AGS2001J4	. . Nut, 3/8" BSF	2	—	EB15/21
EB7.81.1007	. . Stud, earth	1	BS249	EB15/22
SP122G	. . Washer, 5/16"	1	—	EB15/23
EEAS2833EP	. . Washer	2	—	EB15/24
EB6.81.1099	. . CABLE, ASSEMBLY, F33 to plug bracket to bus-bar panel	1	—	
EB6.81.559	. . CABLE, ASSEMBLY, F348	1	—	
EB6.81.561	. . CABLE, ASSEMBLY, F34C	1	—	
5CY4376383	. . CIRCUIT-BREAKER, type A3	2	—	EB15/25
	Attaching parts for 5CY4376383 :—			
A44A6	. . Screw, round head, 6BA	2	—	EB15/26
EB6.81.3729	. . CLAMP, half, cable	2	—	EB15/27
EB6.81.4939	. . CLAMP, half, cable	2	—	EB15/28
	Attaching parts for EB6.81.3729 and EB6.81.4939 :— (per pair) :—			
A25/25C	. . Bolt, 2BA	2	—	EB15/29
SP13C	. . Washer, 2BA	2	—	EB15/30
EG4.81.549	. . CONNECTOR, bus-bar, P10	1	—	EB16/17
	Attaching parts for EG4.81.549 :—			
AGS2002C4	. . Nut, 4BA	2	—	EB16/18
EG4.81.1171	. . Stud	2	—	EB16/19
EG4.81.725	. . Washer	2	—	EB16/20
EG4.81.731	. . COVER, assembly	1	—	EB16/20A
CX133877	. . COVER, moulded	2	—	EB15/31
HELLERMANN				
AS2674	. . FERRULE, cable, 24 amp	6	—	
AS2673	. . FERRULE, cable, 12 amp	4	—	
10H1047920	. . FUSE, dummy, type S (Pre Mod 5438)	5	—	
10H1047920	. . FUSE, dummy, type S (Mod 5438)	14	—	
TIS40	. . FUSE, 40 amp, type HRC (Pre Mod 5438)	2	—	
10H1043046	. . FUSE, 20 amp, type AS (Mod 5438)	1	—	
10H9718191	. . FUSE, 10 amp, type AS HRC (Pre Mod 5438)	4	—	
10H9718191	. . FUSE, 10 amp, type AS HRC (Mod 5438)	11	—	
10H9463981	. . FUSE, 5 amp, type AS HRC (Pre Mod 5438)	2	—	
10H9463981	. . FUSE, 5 amp, type AS HRC (Mod 5438)	5	—	
10H1043043	. . FUSE, 2.5 amp, type AS HRC	1	—	
EA9.81.971	. . LABEL, 'field C/B's'	1	—	EB15/32

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EEAS71/2	. . .	LINK, commoning, 3 - way	1	-	
703-2-00259	. . .	LINK, commoning, 10 - way	1	-	
703-2-00251	. . .	LINK, commoning, 2 - way	12	-	
EB7.81.1041	. . .	LINK, copper	2	-	EB16/21
AGS2002E4	. . .	Attaching parts for EB7.81.1041 :-			
AGS2002C4	. . .	Nut, 1/4" BSF	1	-	EB16/22
EB7.81.1011	. . .	Nut, 2BA	1	-	EB16/23
EG4.81.1171	. . .	Stud, 1/4"	1	-	EB16/24
EB7.81.1035	. . .	Stud, 2BA	1	-	EB16/25
	. . .	Washer	1	-	EB16/26
AS2721-C	. . .	Washer	1	-	EB16/27
HC1189	. . .	LUG, cranked, 6 amp, 4BA	9	-	
HC326G	. . .	LUG, 35 amp, 6BA	4	-	
HC296	. . .	LUG, 6 amp, 6BA	48	-	
HC306A	. . .	LUG, 6 amp, 6BA	3	-	
CPL98-01-1F	. . .	LUG, 150 amp, 1/4"	1	-	
CPL98-01-1A	. . .	LUG, 150 amp, 5/16"	1	-	
5C24350503	. . .	LUG, 24 amp, 4BA	4	-	
HC4212	. . .	LUG, 24 amp, 3/8"	2	-	
HC292	. . .	LUG, 6 amp, 2BA	7	-	
HC294D	. . .	LUG, 6 amp, 4BA	16	-	
HC4012	. . .	LUG, 6 amp, 3/8"	4	-	
HC4010	. . .	LUG, 6 amp, 5/16"	2	-	
HELLERMANN					
HC304	. . .	LUG, 6 amp, 4BA	4	-	
EB6.81.4881	. . .	PANEL, GENERATOR TEST, ASSEMBLY	1	-	EB17/1
	. . .	Spares for :-			
EB6.81.4879	. . .	PANEL, generator test	1	-	EB17/2
5CY4376392	. . .	SOCKET, 3 pole, 2 amp	2	-	EB17/3
	. . .	Attaching parts for Ref. 5CY/4376392 :-			
AGS2002B1	. . .	Nut, 4BA	3	-	EB17/4
A33B14	. . .	Screw, 4BA	3	-	EB17/5
SP13B	. . .	Washer, 4BA	3	-	EB17/6
XD783	. . .	SWITCH, DP	2	-	EB17/7
	. . .	Attaching parts for XD783:-			
A32B12	. . .	Screw, 4BA	4	-	EB17/8
AGS2035B	. . .	Washer	4	-	EB17/8A
	. . .	Attaching parts for EB6.81.4881 :-			
A31B16	. . .	Screw, 4BA, cheese head	4	-	EB17/9
SP13B	. . .	Washer, 4BA	4	-	EB17/10
EB6.81.3171	. . .	PANEL, AFT, assembly	1	-	EB17/11
	. . .	Spares for :-			
EB6.81.4845	. . .	MOUNTING, fuse block, assembly	1	-	EB17/12
	. . .	Spares for :-			
EB6.81.3723	. . .	BLOCK, FUSE, ASSEMBLY	1	-	EB17/13
	. . .	Spares for :-			
703-1-00416	. . .	BLOCK, fuse	1	-	EB17/14
EB6.81.3727	. . .	LABEL	1	-	EB17/15
	. . .	Attaching parts for EB6.81.3723 :-			
A45B6	. . .	Screw, 4BA	2	-	EB17/16

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EB6.81.3721	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	—	EB17/17
703-1-00416	.	.	.	.	Spares for :—		1	—	EB17/18
EB6.81.3721	.	.	.	.	BLOCK, fuse		1	—	EB17/19
R A45B6	.	.	.	.	Attaching parts for EB6.81.3721 :—		2	—	EB17/19A
EA9.81.4205	.	.	.	.	Screw, 4BA		1	—	EB17/20
A31B16	.	.	.	.	PLATE, fuse block mounting		4	—	EB17/21
SP13B	.	.	.	.	Attaching parts for EB6.81.4845 :—		4	—	EB17/22
R EB6.81.3173	.	.	.	.	Screw, 4BA, cheese head		1	—	EB17/23
EB6.81.3183	.	.	.	.	Washer, 4BA		2	—	EB17/24
EB6.81.3185	.	.	.	.	PANEL, AFT, SUB-ASSEMBLY		4	—	EB17/25
EB7.81.865	.	.	.	.	Spares for :—		4	—	EB17/26
EB6.81.3189	.	.	.	.	BLOCK, mounting		1	—	EB17/27
EB6.81.3191	.	.	.	.	BLOCK, mounting		1	—	EB17/28
EB6.81.3175	.	.	.	.	LABEL, No.1 generator		1	—	EB17/29
F6701	.	.	.	.	LABEL, No.2 generator		1	—	EB17/30
A31B20	.	.	.	.	PANEL, aft		2	—	EB17/31
SP13B	.	.	.	.	SWITCH, magnetic, type 188		4	—	EB17/32
F6801	.	.	.	.	Attaching parts for F6701 :—		4	—	EB17/33
A25/5C	.	.	.	.	Screw, 4BA, cheese head		2	—	EB17/34
SP13C	.	.	.	.	Washer, 2BA		4	—	EB17/35
5UC1054116	.	.	.	.	SWITCH, magnetic, type 198		2	—	EB17/36
A32B28	.	.	.	.	Attaching parts for F6801 :—		2	—	EB17/37
A25/5C	.	.	.	.	Bolt, 2BA		6	—	EB17/38
A25/5E	.	.	.	.	Washer, 2BA		4	—	EB17/39
EB6.81.3165	.	.	.	.	TRIMMER, remote resistance		1	—	EB18/1
5CY4376087	.	.	.	.	Attaching parts for 5UC/1054116 :—		1	—	EB18/2
A25/24C	.	.	.	.	Screw, 4BA, round head		4	—	EB18/3
EA9.81.2433	.	.	.	.	Attaching parts for EB6.81.3171 :—		8	—	EB18/4
SP13C	.	.	.	.	Bolt, 2BA		4	—	EB18/5
LEA300B2/1	.	.	.	.	Washer		2	—	EB18/6
or	.	.	.	.	BREAKER, circuit, reverse current		2	—	EB18/7
LEA300B4	.	.	.	.	BREAKER, circuit, type D2B		4	—	EB18/8
A25/1C	.	.	.	.	Attaching parts for Ref. 5CY/4376087 :—		1	—	EB18/9
AS3180/6B	.	.	.	.	Bolt, 2BA		1	—	EB18/10
AS3180/10B	.	.	.	.	Piece, distance		2	—	EB18/11
AS3180/12B	.	.	.	.	Washer		1	—	EB18/12
A32B16	.	.	.	.	Attaching parts for LEA300B2/1 or LEA300B4 :—		1	—	EB18/13
SP13B	.	.	.	.	Bolt, 2BA		1	—	EB18/14
	.	.	.	.	CLIP		2	—	EB18/15
	.	.	.	.	CLIP		1	—	EB18/16
	.	.	.	.	CLIP		1	—	EB18/17
	.	.	.	.	Attaching parts for AS3180/6B, AS3180/10B and AS3180/12B :—		1	—	EB18/18
	.	.	.	.	Screw, 4BA, round head		1	—	EB18/19
	.	.	.	.	Washer, 4BA		1	—	EB18/20

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA9.81.2409	. . .	CONNECTOR, bus-bar	1	—	EB18/13
EA3.81.2405	. . .	CONNECTOR, bus-bar	1	—	EB18/14
EA9.81.2411	. . .	CONNECTOR, bus-bar	1	—	EB18/15
EA9.81.2415	. . .	CONNECTOR, bus-bar	1	—	EB18/16
		Attaching parts for EA9.81.2409, EA9.81.2405, EA9.81.2411 and EA9.81.2415 :—			
A25/6E	. . .	Bolt, 1/4" BSF	QR	—	EB18/17
A27EP	. . .	Nut, 1/4" BSF	QR	—	EB18/18
SP13E	. . .	Washer, 1/4"	QR	—	EB18/19
SP47E	. . .	Washer, 1/4" spring	QR	—	EB18/20
EA9.81.2357	. . .	COVER, assembly	1	—	EB18/21
		Attaching parts for EA.9.81.2357 :—			
A32C16	. . .	Screw, 2BA, round head	3	—	EB18/22
EA9.81.2371	. . .	COVER, end, assembly	1	—	EB18/23
		Attaching parts for EA9.81.2371 :—			
A32B14	. . .	Screw, 4BA, round head	1	—	EB18/24
A32B20	. . .	Screw, 2BA, round head	1	—	EB18/25
EA9.81.2369	. . .	COVER, top	1	—	EB18/26
		Attaching parts for EA9.81.2369 :—			
A32B14	. . .	Screw, 4BA, round head	4	—	EB18/27
AGS2035B	. . .	Washer, shakeproof	4	—	EB18/28
EB7.81.967	. . .	LABEL, 'inverter 201'	1	—	EB18/29
EB7.81.947	. . .	LABEL, 'accumulator positive'	1	—	EB18/30
		Attaching parts for EB7.81.967 and EB7.81.947 :—			
4R X 3/16"	. . .	Screw, P.K.	4	—	EB18/31
EB7.81.969	. . .	LABEL, 'warning'	1	—	EB18/32
EA9.81.2407	. . .	LINK, reverse current	1	—	EB18/33
		Attaching parts for EA9.81.2407 :—			
A27GT	. . .	Nut, thin	4	—	EB18/34
EA9.81.2403	. . .	Washer, contact	4	—	EB18/35
EB6.81.10155	. . .	PANEL, FORWARD, SUB-ASSEMBLY	1	—	EB18/36
		Spares for :—			
EA9.81.821	. . .	BLOCK, mounting	2	—	EB18/37
EB7.81.865	. . .	BLOCK, mounting	8	—	EB18/38
EB8.81.2377	. . .	LABEL, 'crash relays'	1	—	EB18/39
EA9.81.5583	. . .	PANEL, forward	1	—	EB18/40
EA9.81.2365	. . .	PLUG, EXTERNAL SUPPLY, ASSEMBLY	1	—	EB18/41
		Spares for :—			
EB7.81.873	. . .	BRACKET	1	—	EB18/42
EA9.81.2417	. . .	CONNECTOR, bus-bar	1	—	EB18/43
EA9.81.2367	. . .	COVER, side	1	—	EB18/44
		Attaching parts for EA9.81.2367 :—			
A33B24	. . .	Screw, 4BA, csk. head	2	—	EB18/45
EA9.81.869	. . .	COVER, side, aft	1	—	EB18/46
		Attaching parts for EA9.81.869 :—			
A33B14	. . .	Screw, 4BA, csk. head	2	—	EB18/47
EL35659	. . .	PLUG, power supply	1	—	EB18/48
		Attaching parts for EL35659 :—			
AS1248/6C	. . .	Bolt, 2BA, mush. head	2	—	EB18/49

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Mtl. Spec.	Plate No.
	1	2	3	4	5	6			
EA9.81.891	.	.	.	.	STRIP, negative		1	—	EB18/50
EA9.81.2419	.	.	.	.	WASHER, spacing		1	—	EB18/51
A31B16	.	.	.	.	Attaching parts for EA9.81.2365:—				
	.	.	.	.	Screw, 4BA, cheese head		4	—	EB18/52
R 5CW/4405610	.	.	.	.	RELAY, type 'R'		1	—	EB18/53
80-10-2016	.	.	.	.	RELAY, type 'R'		1	—	
	.	.	.	.	Attaching parts for 5CW/4405610 or 80-10-2016:—				
A25/24C	.	.	.	.	Bolt, 2BA		4	—	EB18/54
EA9.81.2433	.	.	.	.	Piece, distance		8	—	EB18/55
SP13C	.	.	.	.	Washer		4	—	EB18/56
R 5CW/3945	.	.	.	.	RELAY, type S4		2	—	EB18/57
	.	.	.	.	Attaching parts for 5CW/3945:—				
A31B20	.	.	.	.	Screw, 4BA, cheese head		4	—	EB18/58
EA9.81.951	.	.	.	.	TERMINAL, EARTH, INSULATED		2	—	EB18/59
	.	.	.	.	Spares for:—				
EA9.81.953	.	.	.	.	BASE, earth terminal		1	—	EB18/60
AGS2001C4	.	.	.	.	NUT, stiff, 2BA		1	—	EB18/61
A54C	.	.	.	.	NUT, thin, 2BA		1	Brass	EB18/62
A43C32	.	.	.	.	SCREW, cheese head, 2BA		1	—	EB18/63
1210	.	.	.	.	WASHER, lock 2BA		2	—	EB18/64
	.	.	.	.	Attaching parts for EA9.81.951:—				
A33B20	.	.	.	.	Screw, 4BA, csk. head		2	—	EB18/65
	.	.	.	.	Attaching parts for EB6.81.3165:—				
A25/5E	.	.	.	.	Bolt, 1/4" BSF		8	—	EB18/66
EG4.81.2891	.	.	.	.	PANEL, BUS-BAR, ASSEMBLY		1	—	EB19/1
	.	.	.	.	Spares for:—				
EB6.81.3107	.	.	.	.	BLOCK, fuse mounting, assembly		1	—	EB19/2
	.	.	.	.	Attaching parts for EB6.81.3107:—				
EB6.81.2999	.	.	.	.	Block, packing		1	—	EB19/3
AS1246/14B	.	.	.	.	Bolt, 4BA, round head		1	—	EB19/4
AS1246/15C	.	.	.	.	Bolt, 2BA, round head		1	—	EB19/5
AGS2001C1/66	.	.	.	.	Nut, 2BA		1	—	EB19/6
SP13C	.	.	.	.	Washer, 2BA		1	—	EB19/7
EB6.81.3109	.	.	.	.	BLOCK, fuse mounting, assembly		1	—	EB19/8
	.	.	.	.	Attaching parts for EB6.81.3109:—				
EB6.81.2997	.	.	.	.	Block, packing		1	—	EB19/9
AS1246/14B	.	.	.	.	Bolt, 4BA, round head		2	—	EB19/10
EG4.81.847	.	.	.	.	BLOCK, fuse mounting, assembly		1	—	EB19/11
	.	.	.	.	Attaching parts for EG4.81.847:—				
EB6.81.3357	.	.	.	.	Block, packing		1	—	EB19/12
AS1246/14B	.	.	.	.	Bolt, 4BA, round head		6	—	EB19/13
EB6.81.2977	.	.	.	.	BLOCK, fuse mounting, assembly		1	—	EB19/14
	.	.	.	.	Attaching parts for EB6.81.2977:—				
EB6.81.3355	.	.	.	.	Block, packing		1	—	EB19/15
AS1246/16B	.	.	.	.	Bolt, 4BA, round head		6	—	EB19/16

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
AS2654	.	.	.	BLOCK, connector			1	—	EB19/17
	.	.	.	Attaching parts for AS2654:—					
EB7.81.1033	.	.	.	Packing			1	—	EB19/18
A31B36	.	.	.	Screw, 4BA			2	—	EB19/19
AS2721	.	.	.	Washer			2	—	EB19/20
EG4.81.3167	.	.	.	BLOCK, FUSE, ASSEMBLY			1	—	EB19/21
	.	.	.	Spares for:—					
703-1-00416	.	.	.	BLOCK, fuse			1	—	EB19/22
EG4.81.3177	.	.	.	LABEL			1	—	EB19/23
	.	.	.	Attaching parts for EG4.81.3167:—					
A31B10	.	.	.	Screw, 4BA			2	—	EB19/24
1206	.	.	.	Washer, lock			2	—	EB19/25
EG4.81.3169	.	.	.	BLOCK, FUSE, ASSEMBLY			1	—	EB19/26
	.	.	.	Spares for:—					
703-1-00416	.	.	.	BLOCK, fuse			1	—	EB19/76
EG4.81.3179	.	.	.	LABEL			1	—	EB19/77
	.	.	.	Attaching parts for EG4.81.3169:—					
A31B10	.	.	.	Screw, 4BA			2	—	EB19/78
1206	.	.	.	Washer, lock			2	—	EB19/79
EG4.81.3171	.	.	.	BLOCK, FUSE, ASSEMBLY			1	—	EB19/27
	.	.	.	Spares for:—					
703-1-00416	.	.	.	BLOCK, fuse			1	—	EB19/80
EG4.81.3181	.	.	.	LABEL			1	—	EB19/81
	.	.	.	Attaching parts for EG4.81.3171:—					
A31B10	.	.	.	Screw, 4BA			2	—	EB19/82
1206	.	.	.	Washer, lock			2	—	EB19/83
EG4.81.3173	.	.	.	BLOCK, FUSE, ASSEMBLY			1	—	EB19/28
	.	.	.	Spares for:—					
703-1-00416	.	.	.	BLOCK, fuse			1	—	EB19/84
EG4.81.3183	.	.	.	LABEL			1	—	EB19/85
	.	.	.	Attaching parts for EG4.81.3173:—					
A31B10	.	.	.	Screw, 4BA			2	—	EB19/86
1206	.	.	.	Washer, lock			2	—	EB19/87
EG4.81.3175	.	.	.	BLOCK, FUSE, ASSEMBLY			1	—	EB19/29
	.	.	.	Spares for:—					
703-1-00416	.	.	.	BLOCK, fuse			1	—	EB19/88
EG4.81.3185	.	.	.	LABEL			1	—	EB19/89
	.	.	.	Attaching parts for EG4.81.3175:—					
A31B10	.	.	.	Screw, 4BA			2	—	EB19/90
1206	.	.	.	Washer, lock			2	—	EB19/91
PLESSEY									
703-1-00249	.	.	.	BLOCK, terminal, 20-way			3	—	EB19/30
	.	.	.	Attaching parts for 703-1-00249:—					
703-2-00267	.	.	.	Pillar, fixing			QR	—	EB19/31
703-2-00268	.	.	.	Pillar, fixing			QR	—	EB19/32
AGS2035B	.	.	.	Washer, 4BA, shakeproof			QR	—	EB19/33
EB6.81.2943	.	.	.	BUS-BAR, P10			1	—	EB19/34
EG4.81.851	.	.	.	BUS-BAR, P10			1	—	EB19/35
EA1.81.542	.	.	.	CARRIER, spare fuse			1	—	EB19/36
	.	.	.	Attaching parts for EA1.81.542:—					
AGS2002A1	.	.	.	Nut, 6BA			2	—	EB19/37
A31A14	.	.	.	Screw, 6BA			2	—	EB19/38

AP101B-0415-3A

Page EB.37

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
EB7.81.1013	.	.	.	CLEAT			2	—	EB19/39
A25/158	.	.	.	Attaching parts for EB7.81.1013 :—			2	—	EB19/40
SP15B	.	.	.	Bolt, 4BA			2	—	EB19/41
EB6.81.1627	.	.	.	Washer, 4BA				—	
EB6.81.1625	.	.	.	CONNECTOR, bus-bar			1	—	EB19/42
	.	.	.	CONNECTOR, bus-bar			1	—	EB19/43
A25/7E	.	.	.	Attaching parts for EB6.81.1625 :—			2	—	EB19/44
AGS2001E4	.	.	.	Bolt, 1/4" BSF			2	—	EB19/45
SP13E	.	.	.	Nut, 1/4" BSF			2	—	EB19/46
	.	.	.	Washer, 1/4"				—	
PLESSEY									
703-1-00266	.	.	.	COVER, terminal block			2	—	EB19/47
AS2655	.	.	.	COVER, connector block			1	—	EB19/48
EB6.81.3083	.	.	.	COVER, ASSEMBLY			1	—	EB19/49
	.	.	.	Spares for :—					
EB6.81.1633	.	.	.	BLOCK, cover			5	—	EB19/50
EB6.81.3085	.	.	.	COVER			1	—	EB19/51
EB6.81.1635	.	.	.	SCREW, cover			5	—	EB19/52
AGS2035B	.	.	.	WASHER, shakeproof			5	—	EB19/53
EB6.81.3001	.	.	.	COVER, assembly			1	—	EB19/54
	.	.	.	Spares for :—					
EB6.81.3091	.	.	.	COVER			1	—	EB19/55
EB6.81.3095	.	.	.	PILLAR			1	—	EB19/56
EB6.81.3097	.	.	.	PILLAR			1	—	EB19/57
	.	.	.	Attaching parts for EB6.81.3001 :—					
AS4566/5B	.	.	.	Bolt			1	—	EB19/58
AS4566/9B	.	.	.	Bolt			1	—	EB19/59
AS3180/12C	.	.	.	CLIP, 'P'			1	—	EB19/60
	.	.	.	Attaching parts for AS3180/12C :—					
AGS2001B1	.	.	.	Nut, 4BA			1	—	EB19/61
A32B16	.	.	.	Screw, 4BA			1	—	EB19/62
10H1047920	.	.	.	FUSE, dummy			11	—	
TFP160	.	.	.	FUSE, 160 amp			2	—	
AP19266	.	.	.	FUSE, type HRC, 80 amp			2	—	
AP19265	.	.	.	FUSE, type HRC, 60 amp			1	—	
AP19264	.	.	.	FUSE, type HRC, 40 amp			2	—	
115/111/T	.	.	.	FUSE, type HRC, 115 amp			1	—	
10H1043046	.	.	.	FUSE, type AS, 20 amp			3	—	
10H9718191	.	.	.	FUSE, type AS, 10 amp			7	—	
10H9463981	.	.	.	FUSE, type AS, 5 amp			7	—	
AS19275	.	.	.	FUSE, type HRC, 100 amp			2	—	
EG4.81.3165	.	.	.	LABEL, 'fuse No. 4'			1	—	
EG4.81.3159	.	.	.	LABEL, 'inverter No. 5 fuse No. 171'			1	—	
EG4.81.3161	.	.	.	LABEL, 'inverter No. 6 fuse No. 172'			1	—	
EG4.81.3163	.	.	.	LABEL, 'fuse No. 170'			1	—	
EB6.81.1621	.	.	.	LABEL, '20 amp - 10 amp - 5 amp'			1	—	
EB6.81.3719	.	.	.	LABEL, '5 - 20, 173 - 176'			1	—	
EB7.81.1017	.	.	.	LABEL, 'E.C.P. supply fuse No. 1'			1	—	
EB7.81.1019	.	.	.	LABEL, 'E.C.P. supply fuse No. 2'			1	—	
EB6.81.2981	.	.	.	LABEL, 'inverter No. 8 - fuse No. 187'			1	—	
EB6.81.2979	.	.	.	LABEL, 'radio - fuse No. 188'			1	—	
EB6.81.3353	.	.	.	LABEL, 'radio - fuse No. 189'			1	—	
EB7.81.1021	.	.	.	LABEL, 'tail trim fuse No. 3'			1	—	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EB7.81.1039	. . .	LINK, copper	2	—	
EB7.81.1041	. . .	LINK, copper	10	—	
AGS2001E4	. . .	NUT, 1/4" BSF	16	—	EB19/63
AGS2001G4	. . .	NUT, 5/16" BSF	23	—	EB19/64
EB6.81.3347	. . .	PANEL, BUS-BAR, SUB-ASSEMBLY	1	—	EB19/65
		Spares for :-			
EB6.81.2987	. . .	PANEL, bus-bar	1	—	EB19/66
EB6.81.2969	. . .	PLATE, insulating	1	—	EB19/67
EB7.81.1009	. . .	STUD, 5/16"	20	BS249	EB19/68
EB7.81.1011	. . .	STUD, 1/4"	16	BS249	EB19/69
EB6.81.4787	. . .	STUD, 5/16"	2	BS249	EB19/70
EEAS28/32/DW	. . .	WASHER	2	—	EB19/71
AS2721	. . .	WASHER, 5/16" contact	19	—	EB19/72
EB7.81.1035	. . .	WASHER, 1/4"	16	—	EB19/73
		Attaching parts for EG4.81.2891:-			
A25/4C	. . .	Bolt, 2BA	8	—	EB19/74
SP13C	. . .	Washer	8	—	EB19/75
EG4.81.479	. . .	PANEL, AUXILIARY BUS-BAR, ASSEMBLY	1	—	EB16/28
		Spares for :-			
EA3.81.1771	. . .	PACKING	2	—	EB16/29
EG4.81.477	. . .	PANEL, auxiliary bus-bar	1	—	EB16/30
EG4.81.483	. . .	PLATE, insulating	1	—	EB16/31
		Attaching parts for EG4.81.479 :-			
AS1248/4C	. . .	Bolt, 2BA	2	—	EB16/32
EEAS146A	. . .	SLEEVE, 3/8"	QR	—	
EEAS146A	. . .	SLEEVE, 1/2"	QR	—	
EEAS146A1	. . .	SLEEVE, 3/4"	QR	—	
EEAS146C	. . .	SLEEVE, 1/2"	QR	—	
EEAS146G	. . .	SLEEVE, 3/4"	QR	—	
AS2696	. . .	SOCKET, adaptor	2	—	
AS2697	. . .	SOCKET, adaptor	2	—	
NY18007A	. . .	STRAP	QR	—	
NY3342	. . .	STUD	QR	—	
HELLERMANN					
HC510	. . .	TAG, QR, 24 amp	QR	—	
HC500	. . .	TAG, QR, 12 amp	QR	—	
HC490	. . .	TAG, QR, 6 amp	QR	—	
HC312	. . .	TAG, RT, 2BA	1	—	
EG4.81.139	. . .	PANEL, STARTER, ASSEMBLY	1	—	EB20/1
		Spares for :-			
PLESSEY					
703/2/00244	. . .	BLOCK, terminal 10 - way	1	—	EB20/2
		Attaching parts for 703/2/00244:-			
AGS2001B1	. . .	Nut, 4BA	2	—	EB20/3
A32B44	. . .	Screw, 4BA, round head	2	—	EB20/4
AS2810/4/05	. . .	Tube, distance	2	—	EB20/5
SP13B	. . .	Washer, 4BA	2	—	EB20/5A
Unipren 6	. . .	CABLE, unipren 6	QR	—	
Unipren 12	. . .	CABLE, unipren 12	QR	—	
HELVYN					
HV3710	. . .	CAP, dolly	2	—	EB20/25
HV3711	. . .	CAP, dolly	3	—	EB20/26
Z1719	. . .	GROMMET	1	—	EB20/58

AP1018-0415-3A

Page EB.39

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Mati. Spec.	Plate No.
	1 2 3 4 5 6			
703-2-00252	. . LINK, connecting, 3 - way	1	-	
HC304C	. . LUG	2	-	
or				
5X9462745	. . LUG, pren cable, Mk.4, 12 amp	2	-	
R 508-1-06399	. . PLUG, size 'B'	2	-	EB20/6
R 508-1-06413	. . PLUG, size 'D'	1	-	EB20/7
R Type FKX/A1	. . RESISTOR, 10 ohm	2	-	EB20/8
	Attaching parts for Type FKX/A1 :-			
R AGS2001C1/66	. . Nut, 2BA	3	-	EB20/9
R A31C16	. . Screw, 2BA, cheese head	3	-	EB20/10
R SP13C	. . Washer, 2BA	3	-	EB20/10A
EEAS146A1	. . SLEEVE	QR	-	
508-2-11232-002	. . SLEEVE, 4 - 7 amp	18	-	
508-2-11231-002	. . SLEEVE, 7 - 19 amp	2	-	
R XD789	. . SWITCH, DP C/O	2	-	EB20/11
	Attaching parts for XD789 :-			
R A32B12	. . Screw, 4BA, round head	4	-	EB20/12
R AGS2035B	. . Washer, shakeproof	4	-	EB20/12A
R EEAS28/2EP	. . Washer, packing	8	-	EB20/12B
R FJB/A3	. . SWITCH, cartridge selector, Mk. 2	2	-	EB20/13
	Attaching parts for FJB/A3 :-			
R A32B12	. . Screw, 4BA, round head	4	-	EB20/14
R 1206	. . Washer, shakeproof	4	-	EB20/14A
R FJB/A5	. . SWITCH, cartridge selector (Alternative to FJB/A3)	2	-	EB20/15
R XD778	. . SWITCH, SP C/O	3	-	EB20/16
	Attaching parts for XD778 :-			
R A32B12	. . Screw, 4BA, round head	2	-	EB20/17
R 1206	. . Washer, shakeproof	2	-	EB20/18
R EEAS28/2EP	. . Washer, packing	4	-	EB20/18A
PLESSEY				
703-2-00316-020	. . TAG, QR, 7 amp	8	-	
703-2-00315-020	. . TAG, QR, 4 amp	4	-	
703-2-00340-020	. . THIMBLE, 7 amp	8	-	
703-2-00339-020	. . THIMBLE, 4 amp	4	-	
	Attaching parts for EG4.81.139 :-			
R AGS2001B1	. . Nut, stiff, 4BA	4	-	EB20/23
R A33B12	. . Screw, 4BA	4	-	EB20/24

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EG4.81.3121	. PANEL, NAVIGATOR'S SWITCH ASSEMBLY	1	-	EB25/1
5E1934447	. Spares for :-			
5E1934440	. . CABLE, minyvin 16	QR	-	EB25/2
HV3627	. . CABLE, minyvin 20	QR	-	EB25/3
5CZ4340381	. . GROMMET	2	-	EB25/4
EG4.81.3247	. . INDICATOR	2	-	EB25/5
AS10512M - 1	. . PLATE, switch	1	-	EB25/6
EEAS146/16/1/4	. . SHROUD, terminal	7	-	EB25/7
EEAS146/6/1/4	. . SLEEVE	QR	-	EB25/8
EEAS146/20/1/4	. . SLEEVE	QR	-	EB25/9
508/1/03954	. . SLEEVE	QR	-	EB25/10
508/1/03961	. . SOCKET, size 'C'	1	-	EB25/11
AS10512A - 2	. . SOCKET, size 'D'	1	-	EB25/12
AS10512A - 6	. . SWITCH	2	-	EB25/13
AS10512A - 7	. . SWITCH	3	-	EB25/14
AS10512C - 1	. . SWITCH	2	-	EB25/15
HC294D	. . SWITCH	1	-	EB25/16
HC304D	. . TAG, RT	18	-	EB25/17
HC306	. . TAG, RT	3	-	EB25/18
	. . TAG, RT	2	-	EB25/19

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EG4.81.2879	PANEL, TAKE-OFF, INSTALLATION	—	—	EB22A/1
EG4.81.2881	Spares for :— PANEL, TAKE-OFF, ASSEMBLY	1	—	EB22A/2
HELLERMANN	Spares for :—			
HV3711	CAP, helvin dolly	19	—	EB22A/3
EB7.81.1171	COVER	1	—	EB22A/4
AGS2002B1	Attaching parts for EB7.81.1171 :—			
A32B10	Nut, stiff, 4BA	4	—	EB22A/5
EB7.81.1173	Screw, 4BA	4	—	EB22A/6
	Strip, clamp	1	—	EB22A/7
EB6.81.4911	GUARD, engraved	2	—	EB22A/8
EB6.81.893	LABEL	2	—	EB22A/9
EB6.81.4905	PANEL, take-off, engraved	1	—	EB22A/10
SCB79369	PLATE, engraved (SRIM. 3533)	1	—	EB22A/11
PLESSEY				
CZ50358	PLUG, size B	1	—	EB22A/12
508/1/06413	PLUG, size D	2	—	EB22A/13
508/1/40089/320	PLUG, Mk. 4	1	—	EB22A/14
508/1/06396	PLUG, single, (climatic proof)	1	—	EB22A/15
EEAS146A	SLEEVE, 1/2" long	QR	—	
EEAS146A1	SLEEVE, 1/2" long	QR	—	
EEAS146C	SLEEVE, 1/2" long	QR	—	
508/1/11231/002	SLEEVE, cable, 7 - 19 amp	2	—	
7321B103	SWITCH, single pole	1	—	EB22A/16
7360B102 or	SWITCH, double pole	1	—	EB22A/17
7360K7	SWITCH, double pole	1	—	EB22A/18
8295B109	SWITCH, single pole	6	—	EB22A/19
8375B105	SWITCH, double pole	10	—	EB22A/20
8810B104	SWITCH, N.S.F. (SRIM 3533)	1	—	EB22A/21
HC296	TAG, R.T.	QR	—	
HC306	TAG, R.T.	QR	—	
EEAS43/2	WASHER	1	—	EB22A/22
EB7.81.259	WASHER, packing	19	—	EB22A/23
A25/1C	Attaching parts for EG4.81.2881 :—			
EB7.81.955	Bolt, 2BA	1	—	EB22A/24
EB7.81.957	Packing, langite	1	OTD789	EB22A/25
A32C16	Packing, langite	1	OTD789	EB22A/26
SCC79372	Screw, 4BA	3	—	EB22A/27
EG4.80.1161	PANEL, test socket (SRIM 3533)	1	—	
	PLATE, VOLTAGE REGULATOR MOUNTING, INSTALLATION	—	—	EB24/29
EG4.80.1163	Spares for :— PLATE, mounting	1	—	EB24/30
A25/1C	Attaching parts for EG4.80.1163 :—			
AGS2001C1/66	Bolt, 2BA	4	—	EB24/31
	Nut, stiff, 2BA	4	—	EB24/32
EG4.81.2845	PLUGS, SOCKETS AND BUNGS THROUGH PRESSURE BULKHEAD	—	—	EB21/1
10H9321715	Spares for :— ADAPTOR, bulkhead, type N	1	—	EB21/2
CM0519/4	BLOCK, mounting (Com Mod 0519)	1	—	EB21/3
A25/1B	BOLT, 4BA	32	—	EB21/4
A25/8B	BOLT, 4BA	2	—	EB21/5
AS1246/2B	BOLT, 4BA	40	—	EB21/6
AS1248/2B	BOLT, 4BA	2	—	EB21/7
5X4491582	BUNG, pressure, size D	2	—	EB21/8
5X4491713	BUNG, pressure, size B	2	—	EB21/9
5X4600615	BUNG, pressure, size A	1	—	EB21/10
PLESSEY				
508-1-41036	CAP, protective, Mk. 4 (Mod 5195)	2	—	EB21/11
508-1-41037	CAP, protective, Mk. 4 (Mod 5195)	4	—	EB21/12
10H9514738	CONNECTOR	1	—	EB21/13
EEAS150/1	GASKET	4	—	EB21/14
EEAS150/3	GASKET	2	—	EB21/15
AGS2001B1	NUT, 2BA	76	—	EB21/16
CM0510/5	PLATE, mounting (Com Mod 0519)	1	—	EB21/17

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Mati. Spec.	Plate No.
	1 2 3 4 5 6			
PLESSEY				
5X6008	. . PLUG, bulkhead, size A	1	-	EB21/18
5X6018	. . PLUG, bulkhead, size Z	3	-	EB21/19
5X4500375	. . PLUG, bulkhead, size Z	2	-	EB21/20
5X6038	. . PLUG, bulkhead, size B	2	-	EB21/21
5X6422	. . PLUG, bulkhead, size B	1	-	EB21/22
5X4500384	. . PLUG, bulkhead, size D	3	-	EB21/23
5X6063	. . PLUG, bulkhead, size B	1	-	EB21/24
10H5805326	. . PLUG, co-axial	2	-	EB21/25
508/1/40189/320	. . PLUG, socket, Mk. 4, 12-way	1	-	EB21/26
10H5800517	. . PLUG, socket, Mk. 4	1	-	EB21/27
10H19445	. . PLUG, socket, Mk. 4	1	-	EB21/28
10H6225764	. . PLUG, socket, Mk. 4	1	-	EB21/29
10H19452	. . PLUG, socket, Mk. 4	1	-	EB21/32
10H19457	. . PLUG, socket, Mk. 4	5	-	EB21/30
10AD1079866	. . PLUG, socket, Mk. 4	1	-	EB21/31
10H19475	. . PLUG, socket, Mk. 4	1	-	EB21/33
10AD9116831	. . PLUG, socket, Mk. 4	4	-	EB21/34
10H19458	. . PLUG, socket, Mk. 4	2	-	EB21/35
10H19487	. . PLUG, socket, Mk. 4	2	-	EB21/36
10H9505644	. . PLUG, socket, Mk. 4	1	-	EB21/37
10H19491	. . PLUG, socket, Mk. 4	1	-	EB21/38
10H19493	. . PLUG, socket, Mk. 4	4	-	EB21/39
508/1/07183/223	. . PLUG, socket, Mk. 7	1	-	EB21/40
508/1/05577/003	. . PLUG, filler, size 16	24	-	EB21/41
10H/20735	. . SOCKET, plug, Mk. 4	1	-	EB21/42
10H/20415	. . SOCKET, plug, Mk. 4	1	-	EB21/43
10H/20417	. . SOCKET, plug, Mk. 4	1	-	EB21/44
10H9408599	. . SOCKET, plug, Mk. 4	1	-	EB21/45
508/1/04585/001	. . SOCKET, contact, size 16	24	-	EB21/46
HAN3100E1456S	. . SOCKET	1	-	EB21/47
HAN3100E24/28S	. . SOCKET	1	-	EB21/48
10H0560042	. . SOCKET, co-axial	3	-	EB21/49
10H9323124	. . SOCKET, fixed	2	-	EB21/50
10H0130109	. . SOCKET, fixed	1	-	EB21/51
508/2/15597/002	. . WASHER, panel packing	1	-	EB21/52
SP13B	. . WASHER, 4BA	44	-	EB21/53
418618/14	. . RECEPTACLE, dummy	1	-	
BS115.B1.B-1C2	. . RELAY	1	-	
	Attaching parts for BS115.B1-1C2 :-			
AS1246/1B	. Bolt, 4BA, round head	4	-	
AGS2001B1	. Nut, stiff 4BA	4	-	
SP15B	. Washer, 4BA	4	-	
EL26326	. . SUPPRESSOR, type B4	1	-	EB20/19
	Attaching parts for EL26326 :-			
AGS2001B1	. Nut, stiff, 4BA	2	-	EB20/20
5CY4376043	. . SUPPRESSOR, type P	2	-	EB20/21
	Attaching parts for 5CY/4376043 :-			
A31B16	. . Screw, 4BA	2	-	EB20/22
27N4526464	. . SWITCH, inertia piston type Mk. 1	2	-	
	Attaching parts for 27N/4526464 :-			
AGS2001C1/66	. Nut, stiff 2BA	4	-	
EB6.81.2417	. Piece, packing	1	-	
A31C36	. . Screw, 2BA	4	-	
5CW7118389	. . SWITCH, magnetic relay type Q, No. 1	1	-	
	Attaching parts for 5CW/7118389			
AS1246/1B	. Bolt, 4BA	2	-	
SP15B	. Washer, 4BA	2	-	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EAP2340	. SWITCH, torque	1	-	EB8/34
AGS2001B1	Attaching parts for EAP2340 :-	4	-	EB8/35
A31B20	. Nut, stiff 4BA	4	-	EB8/36
	. Screw, 4BA			
EG4.82.917	. TUNER, R.F. BONDING	-	-	
	Spares for :-			
EG4.82.919	. . STRIP, bonding	1	-	
	Attaching parts for EG4.82.919 :-			
A25/1C	. . Bolt, 2BA	1	-	
AGS2001C1/66	. . Nut, stiff, 2BA	1	-	
SP124C	. . Washer	3	-	
EG4.81.2877	. WIRING AND CLIPPING IN CABIN, ASSEMBLY	-	-	
	Spares for :-			
EB6.81.10149	. . BAG, EXTENSION LEAD STOWAGE, AND LABEL, INSTALLATION	-	-	
	Spares for :-			
5CX4350464	. . . BAG, extension lead, stowage	1	-	
	Attaching parts for Ref. 5CX/370 :-			
AS1248/1B	. . . Bolt, 4BA	3	-	
AGS2001B1	. . . Nut, stiff, 4BA	3	-	
SP15B	. . . Washer	6	-	
EA3.81.1875	. . . LABEL, extension lead stowage	1	-	
EB6.81.5189	. . . BAG, stowage, assembly	1	-	
EB6.81.5455	. . . BAG, stowage, assembly	1	-	
SIS1564	. . . BLOCK, terminal, type B	1	-	
	Attaching parts for SIS1564 :-			
AGS2001A1	. . . Nut, stiff, 6BA	1	-	
A33A24	. . . Screw, 6BA	1	-	
EB6.81.4005	. . . BRACKET	1	-	
EEAS136	. . . BRACKET	14	-	
EA1.81.252	. . . BRACKET, cable	2	-	
EA1.81.265	. . . BRACKET, cable	1	-	
EB6.81.769	. . . BRACKET, strap	2	-	
EB7.81.1543	. . . BRACKET, strap	1	-	
EG4.81.2859	. . . CANOPY AND HATCH JETTISON SYSTEM	-	-	
	Spares for :-			
5J9101543	. . . ACCUMULATOR, 12V, 4 amp	2	-	
WARD BROOKE	. . . BLOCK, terminal, 6-way	1	-	
WBUN1146D3W	. . . BOX, FILTER, ASSEMBLY (SRIM 3533)	10	-	
EG7.81.3111	(MOD 4799)			
	Spares for :-			
EG7.81.3125	 LID, ASSEMBLY	1	-	
	Spares for :-			
EEAS250/6	 BOLT, special, 4BA	4	-	
EG7.81.3167	 LID, sub-assembly	1	-	
EG7.81.3135	 PIECE, insulating	1	-	
SP13B	 WASHER	4	-	
EB2.81.1525	 WASHER, retaining	4	-	
EG7.81.3113	 MODULE, ASSEMBLY	1	-	
	Spares for :-			
WBUN1146S2W	 BLOCK, terminal	1	-	
	Attaching parts for WBUN1146S2W :-			
AGS2001B1	 Nut, stiff, 4BA	2	-	
WB1114/28	 Pillar, fixing	2	-	
SP15B	 Washer	2	-	

AP101B-0415-3A

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EG7.81.1571	.	.	.	.	.	BLOCK, terminal	1	—	
AGS2002B1	.	.	.	.	.	Attaching parts for EG7.81.1571 :-			
A32B40	.	.	.	.	.	Nut, stiff, 4BA	4	—	
A44B6	.	.	.	.	.	Screw, 4BA	4	—	
AS2810/4/070	.	.	.	.	.	Screw, 4BA	2	—	
AGS2037B	.	.	.	.	.	Tube, distance	4	—	
	.	.	.	.	.	Washer, shakeproof	6	—	
EG7.81.1523	.	.	.	.	.	BRACKET, mounting	1	—	
AGS2002B4	.	.	.	.	.	Attaching parts for EG7.81.1523 :-			
A33B12	.	.	.	.	.	Nut, stiff, 4BA	2	—	
SP15B	.	.	.	.	.	Screw, 4BA	2	—	
	.	.	.	.	.	Washer	2	—	
EG7.81.1531	.	.	.	.	.	CHASSIS ASSEMBLY	1	—	
EG7.81.1539	.	.	.	.	.	Spares for :-			
EG7.81.1533	.	.	.	.	.	BUSBAR	1	—	
SP93C4	.	.	.	.	.	CHASSIS	1	—	
OXLEY	.	.	.	.	.	GROMMET	1	—	
10H0120202	.	.	.	.	.	PATTERN, terminal, 8A, BARB 156 PR	8	—	
EG7.81.1537	.	.	.	.	.	PLATE, insulation	1	—	
5UC0113276	.	.	.	.	.	RESISTOR, 15 ohms, 6W, style RWV4J	8	—	
or									
10W0140413	.	.	.	.	.	RESISTOR	8	—	
WARD BROOKE	.	.	.	.	.				
WBNY1110B2	.	.	.	.	.	COVER, terminal block	1	—	
ERIE	.	.	.	.	.				
ELECTRONICS	.	.	.	.	.				
1215/000	.	.	.	.	.	FILTER, suppression	2	—	
or									
1215/025	.	.	.	.	.	FILTER, suppression	2	—	
or									
9215/300/0025	.	.	.	.	.	FILTER, suppression	2	—	
SP93B8	.	.	.	.	.	GROMMET	1	—	
AGS2002C4	.	.	.	.	.	NUT, stiff, 2BA	12	—	
EG7.81.3121	.	.	.	.	.	PLATE, end, assembly	1	—	
EG7.81.3029	.	.	.	.	.	RESISTOR, assembly	2	—	
EG7.81.3197	.	.	.	.	.	SCREW, terminal	12	—	
A43B8	.	.	.	.	.	SCREW, 4BA	12	—	
EEAS146/20	.	.	.	.	.	SLEEVE, 3/4" long	QR	—	
WB1114/23	.	.	.	.	.	SPACER, cable	2	—	
EG7.81.1585	.	.	.	.	.	STRIP, connector	1	—	
HC294	.	.	.	.	.	TAG, R.T.	2	—	
SP25C	.	.	.	.	.	WASHER	12	—	
10AC9469795	.	.	.	.	.	WASHER	12	—	
	.	.	.	.	.	Attaching parts for EG7.81.3113 :-			
A32A12	.	.	.	.	.	Screw, 6BA	4	—	
A32B12	.	.	.	.	.	Screw, 4BA	1	—	
A33A10	.	.	.	.	.	Screw, 6BA	2	—	
SP13A	.	.	.	.	.	Washer	4	—	
SP13B	.	.	.	.	.	Washer	1	—	
EG7.81.3115	.	.	.	.	.	SHELL, box, assembly	1	—	
AS1242/1C	.	.	.	.	.	Attaching parts for EG7.81.3111 :-			
AGS2001C1/66	.	.	.	.	.	Bolt, 2BA	2	—	
SCB79264	.	.	.	.	.	Nut, stiff, 2BA	6	—	
EA1.81.943	.	.	.	.	.	Plate, adaptor (SRIM. 3533) (Mod 4799)	1	L72	
SP15C	.	.	.	.	.	Stud, assembly	4	—	
	.	.	.	.	.	Washer	6	—	

R

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EG7.81.3139	.	.	.	.	BOX, FILTER, ASSEMBLY (SRIM.3533)		1	—	
EG7.81.3143	.	.	.	.	Spares for:— LID, ASSEMBLY		1	—	
EEAS250/6	.	.	.	.	Spares for:— BOLT, special, 4BA		4	—	
EG7.81.3165	.	.	.	.	LID, sub-assembly		1	—	
EG7.81.3155	.	.	.	.	PIECE, insulating		1	—	
SP13B	.	.	.	.	WASHER		4	—	
EB2.81.1525	.	.	.	.	WASHER, retaining		4	—	
EG7.81.3141	.	.	.	.	MODULE, ASSEMBLY		1	—	
WARD BROOKE	.	.	.	.	Spares for:—				
WBUN1146S2W	.	.	.	.	BLOCK, terminal, 2-way		1	—	
AGS2001B1	.	.	.	.	Attaching parts for WBUN1146S2W:—		—	—	
WB1114/28	.	.	.	.	Nut, stiff, 4BA		2	—	
SP15B	.	.	.	.	Pillar, fixing		2	—	
EG7.81.1581	.	.	.	.	Washer		2	—	
AGS2001B1	.	.	.	.	BLOCK, terminal		1	—	
A32B40	.	.	.	.	Attaching parts for EG7.81.1581:—		2	—	
AS2810/4/070	.	.	.	.	Nut, stiff, 4BA		2	—	
AGS2037B	.	.	.	.	Screw, 4BA		2	—	
EG7.81.1523	.	.	.	.	Tube, distance		2	—	
AGS2002B4	.	.	.	.	Washer		2	—	
A33B12	.	.	.	.	BRACKET, mounting		1	—	
SP15B	.	.	.	.	Attaching parts for EG7.81.1523:—		2	—	
EG7.81.1547	.	.	.	.	Nut, stiff, 4BA		2	—	
EG7.81.1525	.	.	.	.	Screw, 4BA		2	—	
SP93C4	.	.	.	.	Washer		2	—	
EG7.81.1519	.	.	.	.	CHASSIS, ASSEMBLY		1	—	
OXLEY	.	.	.	.	Spares for:—				
5UC0113276	.	.	.	.	CHASSIS		1	—	
WBN1110B2	.	.	.	.	GROMMET		1	—	
ERIE	.	.	.	.	PANEL, insulation		1	—	
ELECTRONICS	.	.	.	.	PATTERN, terminal, 14A		2	—	
1215/000	.	.	.	.	RESISTOR, 15 ohms, 6W, style RWV4J		1	—	
or	.	.	.	.	COVER, terminal block		1	—	
1215/025	.	.	.	.					
or	.	.	.	.	FILTER, suppression		2	—	
9215/300/0025	.	.	.	.	FILTER, suppression		2	—	
SP93B8	.	.	.	.	FILTER, suppression		2	—	
AGS2002C4	.	.	.	.	GROMMET		1	—	
EG7.81.3121	.	.	.	.	NUT, stiff, 4BA		2	—	
EG7.81.3029	.	.	.	.	PLATE, end, assembly		1	—	
EG7.81.3197	.	.	.	.	RESISTOR, assembly		2	—	
A43B8	.	.	.	.	SCREW, terminal		2	—	
EEAS146/20	.	.	.	.	SCREW, 4BA		2	—	
WB1114/23	.	.	.	.	SLEEVE, ¾" long		QR	—	
	.	.	.	.	SPACER, cable		2	—	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Mtl. Spec.	Plate No.
	1	2	3	4	5	6			
SP25C	.	.	.	.	.	WASHER	2	-	
10AC/9469795	.	.	.	.	.	WASHER	2	-	
						Attaching parts for EG7.81.3141:-			
A32B12	.	.	.	.	.	Screw, 4BA	1	-	
A32A12	.	.	.	.	.	Screw, 6BA	4	-	
A33A10	.	.	.	.	.	Screw, 6BA	2	-	
SP13B	.	.	.	.	.	Washer	1	-	
SP13A	.	.	.	.	.	Washer	4	-	
EG7.81.3151	.	.	.	.	.	SHELL, box, assembly	1	-	
EG7.81.3373	.	.	.	.	.	BOX, FILTER, ASSEMBLY (SRIM.3533)	1	-	
						(MOD 4799)			
						Spares for:-			
EG7.81.3379	.	.	.	.	.	LID, ASSEMBLY	1	-	
						Spares for:-			
EG7.81.3389	.	.	.	.	.	BOLT, special	4	-	
EG7.81.3387	.	.	.	.	.	LID, sub-assembly	1	-	
EG7.81.3135	.	.	.	.	.	PIECE, insulating	1	-	
EB2.81.1525	.	.	.	.	.	WASHER, retaining	4	-	
AGS2037B	.	.	.	.	.	WASHER, shakeproof	4	-	
EG7.81.3375	.	.	.	.	.	MODULE, ASSEMBLY	1	-	
						Spares for:-			
WARD BROOKE									
WBUN1146S2W	.	.	.	.	.	BLOCK, terminal, 2-way	1	-	
						Attaching parts for WBUN1146S2W:-			
AGS2001B4	.	.	.	.	.	Nut, stiff, 4BA	2	-	
WB1114/28	.	.	.	.	.	Pillar, fixing	2	-	
SP15B	.	.	.	.	.	Washer	2	-	
EG7.81.1571	.	.	.	.	.	BLOCK, terminal	1	-	
						Attaching parts for EG7.81.1571:-			
AGS2001B4	.	.	.	.	.	Nut, stiff, 4BA	4	-	
A44B6	.	.	.	.	.	Screw, 4BA	2	-	
A44B40	.	.	.	.	.	Screw, 4BA	4	-	
AS2810/4/070	.	.	.	.	.	Tube, distance	4	-	
AGS2037B	.	.	.	.	.	Washer, shakeproof	6	-	
EG7.81.1523	.	.	.	.	.	BRACKET, mounting	1	-	
						Attaching parts for EG7.81.1523:-			
AGS2002B4	.	.	.	.	.	Nut, stiff, 4BA	2	-	
A45B12	.	.	.	.	.	Screw, 4BA	2	-	
SP15B	.	.	.	.	.	Washer	2	-	
EG7.81.3391	.	.	.	.	.	CHASSIS, ASSEMBLY	1	-	
						Spares for:-			
EG7.81.1539	.	.	.	.	.	BUSBAR	1	-	
EG7.81.3393	.	.	.	.	.	CHASSIS	1	-	
SP93C4	.	.	.	.	.	GROMMET	1	-	
10H/0120202	.	.	.	.	.	PATTERN, terminal, 8A, BARB156 PR	8	-	
EG7.81.1537	.	.	.	.	.	PLATE, insulation	1	-	
5UC/0113276	.	.	.	.	.	RESISTOR, 15 ohms, 6W, style RWV4J	8	-	
or									
10W/0140413	.	.	.	.	.	RESISTOR	8	-	
WARD BROOKE									
W8NY1110B2	.	.	.	.	.	COVER, terminal block	1	-	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
1215/000 or 1215/025 or 9215/300/0025		FILTER, suppression	2	—	
SP93B8		GROMMET	1	—	
AGS2002C4		NUT, stiff, 2BA	12	—	
EG7.81.3381		PLATE, end, assembly	1	—	
EG7.81.3029		RESISTOR, assembly	2	—	
A43B8		SCREW	12	—	
EG7.81.3197		SCREW, terminal	12	—	
EEAS146/20		SLEEVE, $\frac{3}{4}$ " long	QR	—	
WB1114/23		SPACER, cable	2	—	
EG7.81.1571		STRIP, connector	1	—	
HC294		TAG, R.T.	2	—	
SP25C		WASHER	8	—	
10AC/9436077		WASHER	12	—	
		Attaching parts for EG7.81.3375:—			
A44B12		Screw, 4BA	1	—	
A44A12		Screw, 6BA	4	—	
A45A10		Screw, 6BA	2	—	
SP15B		Washer	1	—	
SP15A		Washer	4	—	
EG7.81.3377		SHELL, box, assembly	1	—	
EG7.81.3251		BOX, JUNCTION, ASSEMBLY (SRIM.3533) (MOD 4799)	1	—	
		Spares for:—			
EG7.81.3259		BLOCK, anchor nut	2	—	
SIS1564		BLOCK, terminal, 2-way	1	—	
		Attaching parts for SIS1564:—			
AGS2001A1		Nut, stiff, 6BA	2	—	
A33A28		Screw, 6BA	2	—	
EG7.81.3255		BOX, sub-assembly	1	—	
EG7.81.3253		CLAMP	1	—	
EF3.81.13973		COVER, ASSEMBLY	1	—	
		Spares for:—			
EEAS250/1		BOLT, captive	4	—	
EF3.81.13975		COVER	4	—	
EF3.81.14855		GASKET, R.F.	1	—	
AGS20358		WASHER, shakeproof	4	—	
EB2.81.1525		WASHER, tapped	4	—	
EG7.81.3261		PACKING	1	—	
EG7.81.3263		PIECE, insulating	1	—	
EEAS136		BRACKET	2	—	
SCD79445		BRACKET, navigator's detonator switch mounting (SRIM.3533) (Mod 4799)	1	—	
EB7.81.1251/2		CABLE, ASSEMBLY, F48-B3	1	—	
EB7.81.1253		CABLE, ASSEMBLY, F48-B4	1	—	
EB7.81.1255/2		CABLE, ASSEMBLY, F48-B5	1	—	
EB6.81.1205		CABLE, ASSEMBLY, N48-A1	1	—	
EB6.81.1207		CABLE, ASSEMBLY, N48-A2	1	—	
EG4.81.3243		CABLE, ASSEMBLY, N48-A5 (Alt. R60/61— Mod 5100)	1	—	
EB6.81.4901		CABLE, ASSEMBLY, N48-B3	1	—	
EB6.81.5549		CABLE, ASSEMBLY, N48-B5	1	—	

AP101B-0415-3A

Page EB.47

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EG4.81.3241	. . . CABLE, ASSEMBLY, N59 (Alt. R60/61— Mod 5100)	1	—	
EG7.81.3267	. . . CABLE, ASSEMBLY, flexible, from resistor and filter box to elevator tube detonator terminal block	1	—	
EA1.81.425	. . . CAP, detonator spring retaining	64	—	
EB7.81.1305	. . . CLAMP, assembly Attaching parts for EB7.81.1305:—	1	—	
A25/1C	. . . Bolt, 2BA	2	—	
AGS2001C1/66	. . . Nut, stiff, 2BA	2	—	
SP15C	. . . Washer	2	—	
†	. . . CLEAT, support, 18 SWG	1	L72	
AS3180/6C	. . . CLIP, cable fixing Attaching parts for AS3180/6C:—	1	—	
A31C14	. . . Screw, 2BA	1	—	
AS3180/5B	. . . CLIP, cable fixing	58	—	
AS3180/8B	. . . CLIP, cable fixing	1	—	
AS3181/3B	. . . CLIP, cable fixing	2	—	
AS3181/4B	. . . CLIP, cable fixing Attaching parts for AS3180/5B, AS3180/8B, AS3181/3B and AS3181/4B:—	2	—	
AGS2001B1	. . . Nut, stiff, 4BA	QR	—	
A31B10	. . . Screw, 4BA	QR	—	
A31B14	. . . Screw, 4BA	QR	—	
6R x ¼"	. . . Screw, P.K.	QR	—	
WARD BROOKE				
WBN1110B8	. . . COVER, terminal block Attaching parts for WBN1110B8:—	1	—	
WB1114/28	. . . Pillar, fixing	2	—	
12G9635206	. . . DETONATOR, type 108, Mk. 3	66	—	
12G9635205	. . . DETONATOR, type 109, Mk. 2	1	—	
EB7.81.1321	. . . LEAD, accumulator	1	—	
EG7.81.3199	. . . NUT, blanking (SRIM.3533) (Mod 4799)	22	—	
EA6.10.2181	. . . PACKING	16	—	
—	. . . PACKING, 16 SWG x 1" x 1" (SRIM.3533) (Mod 4799)	1	L72	
—	. . . PACKING, 5/16" x 0.50" x 0.60" (SRIM.3533) (Mod 4799)	2	L65C	
EA6.10.2181	. . . PACKING, cork (SRIM.3533) (Mod. 4799)	8	—	
†	. . . PLATE, 18 SWG x 0.75" x 4.0"	1	L72	
SCB79264	. . . PLATE, adaptor (SRIM.3533) (Mod 4799)	8	—	
†	. . . PLATE, front, 18 SWG (SRIM.3533) (Mod 4799)	1	L72	
†	. . . PLATE, packing, 10 SWG x 0.6" x 5.4" (SRIM.3533) (Mod 4799)	1	L72	
EA1.81.942	. . . PLATE, securing	2	—	
†	. . . PLATE, tie, 18 SWG (SRIM.3533) (Mod 4799)	2	L72	
EA1.81.940	. . . PLUG	2	—	
EEAS146/20	. . . SLEEVE, ¾" long	QR	—	
SCD79402/1	. . . SHEATH, assembly (SRIM.3533) (Mod 4799)	1	—	
SCD79402/2	. . . SHEATH, assembly (SRIM.3533) (Mod 4799)	1	—	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
SCD79402/58	.	.	.	.	SHEATH, assembly (SRIM.3533) (Mod 4799)		1	-	
SCD79402/59	.	.	.	.	SHEATH, assembly (SRIM.3533) (Mod 4799)		1	-	
SCD79402/60	.	.	.	.	SHEATH, assembly (SRIM.3533) (Mod 4799)		1	-	
SCD79402/61	.	.	.	.	SHEATH, assembly (SRIM.3533) (Mod 4799)		1	-	
SCD79402/62	.	.	.	.	SHEATH, assembly (SRIM.3533) (Mod 4799)		1	-	
SCD79402/63	.	.	.	.	SHEATH, assembly (SRIM.3533) (Mod 4799)		1	-	
SCD79402/64	.	.	.	.	SHEATH, assembly (SRIM.3533) (Mod 4799)		1	-	
SCD79402/65	.	.	.	.	SHEATH, assembly (SRIM.3533) (Mod 4799)		1	-	
SCD79402/66	.	.	.	.	SHEATH, assembly (SRIM.3533) (Mod 4799)		1	-	
EG7.81.3265	.	.	.	.	SHEATH, ELEVATOR, ASSEMBLY		1	-	
					Spares for:-				
EG7.81.2675	.	.	.	.	NUT, clamping		1	-	
EG7.81.2335	.	.	.	.	NUT, detonator securing		1	-	
EA1.81.938	.	.	.	.	SPRING, detonator		66	-	
HELLERMANN									
HV3254	.	.	.	.	STRAP		QR	-	
TY8-S	.	.	.	.	STRAPPING, TYTON: (Natural, 8mm wide) (Mod 5442)		QR	-	
TY8-C1	.	.	.	.	STUD, TYTON'		QR	-	
NY3255	.	.	.	.	STUD		QR	-	
EA1.81.943	.	.	.	.	STUD, mounting, assembly (SRIM.3533) (Mod 4799)		8	-	
EG4.80.263	.	.	.	.	SWITCH, DETONATOR, ASSEMBLY, INSTALLATION		-	-	
					Spares for:-				
EB6.80.6089	.	.	.	.	UNIT, DETONATOR SWITCH, ASSEMBLY		1	-	
					Spares for:-				
EA3.81.6517	.	.	.	.	FLAP, assembly		1	-	
EA3.81.6519	.	.	.	.	FLAP, spring, assembly		1	-	
EA6.81.369	.	.	.	.	PIN, hinge		1	-	
EA1.81.929	.	.	.	.	SPRING, torsion		1	-	
DOWTY									
AS105/2C1	.	.	.	.	SWITCH		2	-	
EA3.81.6497	.	.	.	.	UNIT, detonator switch sub-assembly		1	-	
					Attaching parts for EB6.80.6089:-				
A31A10	.	.	.	.	Screw, 6BA		4	-	
SP15A	.	.	.	.	Washer, 6BA		4	-	
HC294	.	.	.	.	TAG, R.T.		6	-	
T102 BLACK	.	.	.	.	TERMINAL, black		1	-	
T102 RED	.	.	.	.	TERMINAL, red		1	-	
5X6240	.	.	.	.	TERMINAL, earth (SRIM.3533) (Mod 4799)		1	-	
EB7.81.1177	.	.	.	.	TRAY, ACCUMULATOR MOUNTING, ASSEMBLY		1	-	
					Spares for:-				
EB7.81.1185	.	.	.	.	ANGLE		2	-	
EB7.81.1186	.	.	.	.	ANGLE		2	-	
EB7.81.1397	.	.	.	.	ANGLE		4	-	
					Attaching parts for EB7.81.1185, EB7.81.1186 and EB7.81.1397:-				
A25/48	.	.	.	.	Bolt, 4BA		2	-	
A27BT	.	.	.	.	Nut, thin, 4BA		2	-	
EB7.81.1189	.	.	.	.	Packing		QR	-	
A25/6B	.	.	.	.	BOLT, 4BA		2	-	
EB7.81.1181	.	.	.	.	BUNGEE, assembly		2	-	
					Attaching parts for EB7.81.1181:-				
A25/15B	.	.	.	.	Bolt, 4BA		1	-	
AGS2001B1	.	.	.	.	Nut, stiff, 4BA		1	-	
EB7.81.1385	.	.	.	.	Piece, distance		1	-	
SP16B	.	.	.	.	Washer		1	-	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EB7.81.1183	.	.	.	.	LUG		4	—	
AGS2001B1	.	.	.	.	NUT, stiff, 4BA		2	—	
EB7.81.1179	.	.	.	.	TRAY, mounting, sub-assembly		1	—	
E & I 659	.	.	.	.	TUBING, P.V.C., 0.75" i/d, 2" long		1	—	
	.	.	.	.	(Com Mod 0344) (Mod 5183)				
SP16B	.	.	.	.	WASHER		2	—	
	.	.	.	.	Attaching parts for EB7.81.1177 :—				
A25/1C	.	.	.	.	Bolt, 2BA		4	—	
SP15C	.	.	.	.	Washer		4	—	
EA1.81.426	.	.	.	.	TUBE, distance		34	—	
EA1.81.427	.	.	.	.	TUBE, distance		30	—	
EA1.81.941	.	.	.	.	TUBE, distance		2	—	
EB7.81.1069	.	.	.	.	UNIT, DETONATOR SWITCH, ASSEMBLY		1	—	
	.	.	.	.	Spares for :—				
HV3711	.	.	.	.	CAP, helvin dolly		1	—	
EB7.81.1067	.	.	.	.	FLAP		1	—	
EA6.81.369	.	.	.	.	PIN, hinge		1	—	
EA1.81.929	.	.	.	.	SPRING, torsion		1	—	
EB7.81.5157	.	.	.	.	STOP, angle		1	—	
D5405	.	.	.	.	SWITCH, single pole, c/o No. 3		1	—	
	.	.	.	.	Attaching parts for Ref. 5CW/1047692 :—				
A31B12	.	.	.	.	Screw, 4BA		2	—	
EEAS28/2EP	.	.	.	.	Washer		4	—	
SP47B	.	.	.	.	Washer, spring		2	—	
EB7.81.1071	.	.	.	.	UNIT, detonator switch, sub-assembly		1	—	
	.	.	.	.	Attaching parts for EB7.81.1069 :—				
A31A10	.	.	.	.	Screw, 6BA		4	—	
SP15A	.	.	.	.	Washer		4	—	
EG5.80.447	.	.	.	.	UNIT, DETONATOR SWITCH, INSTALLATION		—	—	
	.	.	.	.	(SRIM.3533) (MOD 4799)				
	.	.	.	.	Spares for :—				
EB6.80.6089	.	.	.	.	UNIT, DETONATOR SWITCH, ASSEMBLY		1	—	
	.	.	.	.	Spares for :—				
EA3.81.6517	.	.	.	.	FLAP, assembly		1	—	
EA3.81.6519	.	.	.	.	FLAP, spring, assembly		1	—	
EA6.81.369	.	.	.	.	PIN, hinge		1	—	
EA1.81.929	.	.	.	.	SPRING, torsion		1	—	
DOWTY	.	.	.	.					
AS10512C1	.	.	.	.	SWITCH		2	—	
EA3.81.6497	.	.	.	.	UNIT, detonator switch, sub-assembly		—	—	
	.	.	.	.	Attaching parts for EB6.80.6089 :—				
A32A12	.	.	.	.	Screw, 6BA		4	—	
SP15A	.	.	.	.	Washer		4	—	
EG4.81.3151	.	.	.	.	UNIT, JETTISON RELAY, ASSEMBLY		1	—	
	.	.	.	.	(SRIM.3533) (MOD 4799)				
	.	.	.	.	Spares for :—				
703/1/00238	.	.	.	.	BLOCK, terminal, 5 - way		1	—	
	.	.	.	.	Attaching parts for 703/1/00238				
A43B28	.	.	.	.	Screw, 4BA		2	—	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EB7.81.1273	.	.	.	.	LID, assembly		1	—	
EEAS117/1	.	.	.	.	Attaching parts for EB7.81.1273 :—				
EEAS28/2CU	.	.	.	.	Screw		3	—	
EEAS42	.	.	.	.	Washer		3	—	
	.	.	.	.	Washer, leather		3	—	
EB7.81.1393	.	.	.	.	LID, assembly		1	—	
EEAS117/1	.	.	.	.	Attaching parts for EB7.81.1393 :—				
EEAS28/2CU	.	.	.	.	Screw		4	—	
EEAS42	.	.	.	.	Washer		4	—	
	.	.	.	.	Washer, leather		4	—	
703/2/00251	.	.	.	.	LINK, 2-way		1	—	
508-1-06402	.	.	.	.	PLUG, size B		3	—	
508/1/06399	.	.	.	.	PLUG, size B		1	—	
5CW9729122	.	.	.	.	RELAY, type S, No. 1		2	—	
EB7.81.1271	.	.	.	.	SHELL, box, assembly		1	—	
EEAS146/1/ 3/8	.	.	.	.	SLEEVE		QR	—	
EEAS146/12/%	.	.	.	.	SLEEVE		QR	—	
EEAS146/20/%	.	.	.	.	SLEEVE		QR	—	
508/2/11232/002	.	.	.	.	SLEEVE, 4 - 7 amp		1	—	
508/2/11230/002	.	.	.	.	SLEEVE, 12 - 19 amp		8	—	
703/2/00320	.	.	.	.	TAG, closed eye		2	—	
703/2/00316/020	.	.	.	.	TAG, QR		1	—	
703/2/00317/020	.	.	.	.	TAG, QR		3	—	
703/2/00340/020	.	.	.	.	THIMBLE, 7 amp		2	—	
703/2/00341/020	.	.	.	.	THIMBLE, 19 amp		3	—	
	.	.	.	.	Attaching parts for EG4.81.3151 :—				
A25/1C	.	.	.	.	Bolt, 2BA		4	—	
SP15C	.	.	.	.	Washer		4	—	
EB6.81.705	.	.	.	.	UNIT, mounting, assembly		1	—	
	.	.	.	.	Attaching parts for EB6.81.705 :—				
A25/1C	.	.	.	.	Bolt, 2BA		6	—	
SP15C	.	.	.	.	Washer		6	—	
EB6.81.10219	.	.	.	.	CLIP, assembly		2	—	
	.	.	.	.	Attaching parts for EB6.81.10219 :—				
AGS2001C1/66	.	.	.	.	Nut, stiff, 2BA		1	—	
SP13C	.	.	.	.	Washer		1	—	
AS3180/3B	.	.	.	.	CLIP, cable fixing		12	—	
AS3180/4B	.	.	.	.	CLIP, cable fixing		5	—	
AS3180/5B	.	.	.	.	CLIP, cable fixing		2	—	
AS3180/6B	.	.	.	.	CLIP, cable fixing		5	—	
AS3180/7B	.	.	.	.	CLIP, cable fixing		12	—	
AS3180/8B	.	.	.	.	CLIP, cable fixing		12	—	
AS3180/10B	.	.	.	.	CLIP, cable fixing		8	—	
AS3180/11B	.	.	.	.	CLIP, cable fixing		4	—	
AS3180/12B	.	.	.	.	CLIP, cable fixing		6	—	
AS3180/13B	.	.	.	.	CLIP, cable fixing		1	—	
AS3180/14B	.	.	.	.	CLIP, cable fixing		2	—	
AS3180/15B	.	.	.	.	CLIP, cable fixing		3	—	
AS3180/16B	.	.	.	.	CLIP, cable fixing		5	—	
AS3180/18B	.	.	.	.	CLIP, cable fixing		1	—	
AS3180/20B	.	.	.	.	CLIP, cable fixing		1	—	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
AS3181/4B	. .	CLIP, cable fixing	1	—	
AS3181/5B	. .	CLIP, cable fixing	1	—	
AS3181/12B	. .	CLIP, cable fixing	2	—	
AS3181/14B	. .	CLIP, cable fixing	6	—	
AS3181/16B	. .	CLIP, cable fixing	2	—	
AS3181/18B	. .	CLIP, cable fixing	1	—	
AS3181/28B	. .	CLIP, cable fixing	3	—	
AS3181/32B	. .	CLIP, cable fixing	1	—	
		Attaching parts for AS3180/3B, AS3180/4B, AS3180/5B, AS3180/6B, AS3180/7B, AS3180/8B, AS3180/10B, AS3180/11B, AS3180/12B, AS3180/13B, AS3180/14B, AS3180/15B, AS3180/16B, AS3180/18B, AS3180/20B, AS3181/4B, AS3181/5B, AS3181/12B, AS3181/14B, AS3181/16B, AS3181/18B, AS3181/28B and AS3181/32B :—			
A25/1/8	. .	Bolt, 4BA	QR	—	
A25/1B	. .	Bolt, 4BA	QR	—	
AGS2001B1	. .	Nut, stiff, 4BA	QR	—	
A31B16	. .	Screw, 4BA	QR	—	
A32B10	. .	Screw, 4BA	QR	—	
A32B16	. .	Screw, 4BA	QR	—	
6R X 3/8"	. .	Screw, P.K.	QR	—	
6R X 3/4"	. .	Screw, P.K.	QR	—	
SP15B	. .	Washer	QR	—	
EEAS21/2ER	. .	Washer, 'D'	QR	—	
AS3180/7C	. .	CLIP, cable fixing	1	—	
AS3181/6C	. .	CLIP, cable fixing	3	—	
AS3181/28C	. .	CLIP, cable fixing	1	—	
		Attaching parts for AS3180/7C, AS3181/6C and AS3181/28C :—			
AGS2001B1	. .	Nut, stiff, 4BA	QR	—	
A32B16	. .	Screw, 4BA	QR	—	
EB6.81.729	. .	CLIP, cable and stiffener	2	—	
		Attaching parts for EB6.81.729 :—			
A25/1C	. .	Bolt, 2BA	1	—	
EB6.81.5401	. .	CLIPS, INTERCOM SOCKET TERRY, INSTALLATION Spares for :—	—	—	
AS2294/6	. . .	CLIP	2	—	
		Attaching parts for AS2294/6 :—			
AGS2001A1	. . .	Nut, stiff, 6BA	1	—	
A32B10	. . .	Screw	1	—	
SP13A	. . .	Washer	1	—	
EB6.81.4355	. .	CLIP, saddle	1	—	
		Attaching parts for EB6.81.4355 :—			
A25/1B	. .	Bolt	1	—	
AGS2001B1	. .	Nut, stiff, 4BA	1	—	
SP15B	. .	Washer	1	—	

AP101B-0415-3A

Page EB.53

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EB6.81.4361	.	.	.	CLIP, saddle			1	-	
EB6.81.4363	.	.	.	CLIP, saddle			1	-	
A25/1C	.	.	.	Attaching parts for EB6.81.4361 and EB6.81.4363 :-			1	-	
AGS2001C1/66	.	.	.	Bolt, 2BA			1	-	
SP15C	.	.	.	Nut, stiff, 2BA			1	-	
	.	.	.	Washer			1	-	
TERRY LTD. 81/2	.	.	.	CLIP, spring			2	-	
A32A12	.	.	.	Attaching parts for 81/2 :-			-	-	
	.	.	.	Screw, 6BA			-	-	
TERRY LTD. 257	.	.	.	CLIP, 1/2" dia			3	-	
	.	.	.	Attaching parts for 257 :-			2	-	
6C X 1/2"	.	.	.	Screw, P.K.			2	-	
EG4.81.2867	.	.	.	EQUIPMENT AND WIRING ON PILOT'S CONSOLE			-	-	
	.	.	.	Spares for :-					
HV3710	.	.	.	CAP, helvin			2	-	
AS3180/5B	.	.	.	CLIP, cable fixing			3	-	
AS3180/12B	.	.	.	CLIP, cable fixing			1	-	
	.	.	.	Attaching parts for AS3180/5B and AS3180/12B :-					
A25/1B	.	.	.	Bolt, 4BA			1	-	
AGS2001B1	.	.	.	Nut, stiff, 4BA			1	-	
SP15B	.	.	.	Washer			1	-	
5CZ4340430	.	.	.	INDICATOR, magnetic			2	-	
EB6.80.263	.	.	.	PANEL, indicator			1	-	
	.	.	.	Attaching parts for EB6.80.263 :-					
A40B14	.	.	.	Screw			4	-	
EG4.80.1413	.	.	.	PANEL, REMOVABLE, PILOT'S CONSOLE ASSEMBLY (SRIM.3533) (MOD 4799)			1	-	
	.	.	.	Spares for :-					
EB7.81.705	.	.	.	BLOCK, fuse			1	-	
EB6.80.4725	.	.	.	BLOCK, fuse			1	-	
	.	.	.	Attaching parts for EB7.81.705 and EB6.80.4725 :-					
A31B8	.	.	.	Screw, 4BA			2	-	
AGS2035B	.	.	.	Washer, shakeproof, 4BA			2	-	
703/1/00238	.	.	.	BLOCK, terminal, 5 - way			2	-	
	.	.	.	Attaching parts for 703/1/00238 :-					
AGS2001B1	.	.	.	Nut, stiff, 4BA			2	-	
A32B28	.	.	.	Screw			QR	-	
A32B40	.	.	.	Screw			QR	-	
AS2810/4/05	.	.	.	Tube, distance			QR	-	
SCC79471	.	.	.	BRACKET, mounting (SRIM.3533) (Mod 4799)			1	-	
EA9.81.3375	.	.	.	BRACKET, SWITCH, ASSEMBLY			1	-	
	.	.	.	Spares for :-					
EA3.81.2085	.	.	.	BRACKET, switch locking			1	-	
EA3.81.2079	.	.	.	PLATE, bearing			2	-	
AS2810/3/122	.	.	.	TUBE, distance			2	-	
or	.	.	.						
AS2809/3/122	.	.	.	TUBE, distance			2	-	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EB6.80.8019	.	.	.	.	.	BRACKET, plug, assembly Attaching parts for EB6.80.8019 :-	1	-	
A31B16	.	.	.	.	.	Screw, 4BA	6	-	
SE1934449	.	.	.	.	.	CABLE, uniminyvin 12	QR	BS.G 195	
SE1934448	.	.	.	.	.	CABLE, uniminyvin 14	QR	BS.G 195	
SE1934447	.	.	.	.	.	CABLE, uniminyvin 16	QR	BS.G 195	
SE1934440	.	.	.	.	.	CABLE, uniminyvin 20	QR	BS.G 195	
EB7.80.75	.	.	.	.	.	COVER, FUSE, ASSEMBLY Spares for :-	1	-	
EA1.81.542	.	.	.	.	.	CARRIER Spares for :-	1	-	
AS2294/1	.	.	.	.	.	CLIP, spring	1	-	
EA1.81.542A	.	.	.	.	.	PLATE, base Attaching parts for EA1.81.542 :-	8	-	
AGS2002A1	.	.	.	.	.	Nut, stiff, 6BA	2	-	
A31A10	.	.	.	.	.	Screw, 6BA	2	-	
EB7.80.77	.	.	.	.	.	COVER	1	-	
ODDIE	.	.	.	.	.	STUD	2	-	
PT213	.	.	.	.	.	WASHER	2	-	
PT214	.	.	.	.	.				
10H4709559	.	.	.	.	.	FUSE, 2.5 amp, HRC type AS	4	-	
10H4709560	.	.	.	.	.	FUSE, 5 amp, HRC type AS	8	-	
10H4709561	.	.	.	.	.	FUSE, 10 amp, HRC type AS	4	-	
10H4308164	.	.	.	.	.	FUSE, 20 amp, HRC type AS	2	-	
10H2073169	.	.	.	.	.	HOLDER, fuse	3	-	
5CZ4340430	.	.	.	.	.	INDICATOR, electro magnetic	1	-	
EA3.81.2077	.	.	.	.	.	KNOB, switch Attaching parts for EA3.81.2077 :-	1	-	
A31B28	.	.	.	.	.	Screw, 4BA	1	-	
AGS2035B	.	.	.	.	.	Nut, stiff, 4BA	1	-	
SCA79473	.	.	.	.	.	LABEL, 'I.L.S. on/off' (SRIM.3533) (Mod 4799)	1	-	
703/2/00254	.	.	.	.	.	LINK, 5-way	1	-	
EEAS71/2	.	.	.	.	.	LINK, fuse connecting	2	-	
SCC79475	.	.	.	.	.	PANEL (SRIM.3533) (Mod 4799)	1	-	
EG4.80.481	.	.	.	.	.	PANEL, CONSOLE SWITCH Spares for :-	1	-	
EG4.80.97	.	.	.	.	.	LABEL, 'emergency bomb jettison'	1	-	
EG4.80.483	.	.	.	.	.	PANEL, console, sub-assembly	1	-	
EG4.80.123	.	.	.	.	.	PLATE, blanking	1	-	
EG4.80.719	.	.	.	.	.	PLATE, blanking	1	-	
EG6.80.8007	.	.	.	.	.	PLATE, mounting	1	-	
EG4.81.3215	.	.	.	.	.	PLATE, switch	1	-	
508/1/06394	.	.	.	.	.	PLUG, size A	1	-	
508/1/06413	.	.	.	.	.	PLUG, size D	3	-	
2CZ85945	.	.	.	.	.	PLUG, size Z	1	-	
5CW4405754	.	.	.	.	.	RELAY, type 9B, No. 2A Attaching parts for Ref. 5CW/6453 :-	1	-	
AGS2002B1	.	.	.	.	.	Nut, stiff, 4BA	2	-	
A32B24	.	.	.	.	.	Screw, 4BA	2	-	
AS2810/4/020	.	.	.	.	.	Tube, distance	2	-	
SP13B	.	.	.	.	.	Washer	2	-	
AS10512M1	.	.	.	.	.	SHROUD, terminal	8	-	
AS10512M2	.	.	.	.	.	SHROUD, terminal	2	-	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EEAS146/6/ 3/8	.	.	.	.	SLEEVE		QR	-	
EEAS146/12/¼	.	.	.	.	SLEEVE		QR	-	
EEAS146/12/¾	.	.	.	.	SLEEVE		QR	-	
EEAS146/16/¼	.	.	.	.	SLEEVE		QR	-	
EEAS146/16/¾	.	.	.	.	SLEEVE		QR	-	
EEAS146/20/¼	.	.	.	.	SLEEVE		QR	-	
EEAS146/20/¾	.	.	.	.	SLEEVE		QR	-	
508/2/11232/002	.	.	.	.	SLEEVE		22	-	
HV3254	.	.	.	.	STRAP		QR	-	
NY3255	.	.	.	.	STUD		QR	-	
AS10512A2	.	.	.	.	SWITCH, single pole		4	-	
AS10512A6	.	.	.	.	SWITCH, single pole		1	-	
AS10512C1	.	.	.	.	SWITCH, double pole		1	-	
AS10512E1	.	.	.	.	SWITCH, 3 - way, single and double pole		1	-	
EA9.81.3379	.	.	.	.	SWITCH, ASSEMBLY		1	-	
					Spares for :-				
ROTAX									
D10001	.	.	.	.	SWITCH, type 8B, No. 1		1	-	
EA3.81.2073	.	.	.	.	TOGGLE		1	-	
					Attaching parts for EA3.81.2073 :-				
A33A6	.	.	.	.	Screw, 6BA		2	-	
EK5.81.923	.	.	.	.	SWITCH, LEVER OPERATED, RUDDER TRIM ASSEMBLY		2	-	
					Spares for :-				
DOWTY									
DN1260Z74	.	.	.	.	CAP, dolly		1	-	
1260Z165	.	.	.	.	KNOB		1	-	
					Attaching parts for 1260Z165 :-				
A35Z24	.	.	.	.	Screw, 8BA		1	-	
AS10512A1	.	.	.	.	SWITCH		1	-	
EK5.81.927	.	.	.	.	SWITCH, LEVER OPERATED, AILERON TRIM ASSEMBLY		1	-	
					Spares for :-				
DOWTY									
DN1260Z74	.	.	.	.	CAP, dolly		1	-	
1260Z163	.	.	.	.	KNOB		1	-	
					Attaching parts for 1260Z163 :-				
A35Z28	.	.	.	.	Screw, 8BA		1	-	
AS10512A1	.	.	.	.	SWITCH		-	-	
HC294D	.	.	.	.	TAG, R.T.		QR	-	
HC304D	.	.	.	.	TAG, R.T.		QR	-	
HC314A	.	.	.	.	TAG, R.T.		QR	-	
HC296	.	.	.	.	TAG, R.T.		QR	-	
HC1187RH	.	.	.	.	TAG, R.T.		QR	-	
HC490	.	.	.	.	TAG, Q.R.		QR	-	
HC510	.	.	.	.	TAG, Q.R.		QR	-	
HC500	.	.	.	.	TAG, Q.R.		QR	-	
					Attaching parts for EG4.80.1413 :-				
A25/2C	.	.	.	.	Bolt, 2BA		QR	-	
SP13C	.	.	.	.	Washer		QR	-	
EEAS132/9	.	.	.	.	STRAP, cable		4	-	
					Attaching parts for EEAS132/9 :-				
AS1248/1B	.	.	.	.	Bolt, 4BA		1	-	
AGS2001B1	.	.	.	.	Nut, stiff		1	-	
EEAS73	.	.	.	.	Plate, clamp		1	-	

R

R
R
R

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
R HV3254	. . .	STRAPPING	QR	—	
NY3255	. . .	STUD	QR	—	
5CW1047697	. . .	SWITCH, double pole (Pre-Alt R60/61) Attaching parts for Ref. 5CW/1047697 :—	2	—	
A4088	. . .	Screw, 4BA	4	—	
SP478	. . .	Washer, spring	4	—	
R AS10512C-1	. . .	SWITCH, double pole (Alt R60/61) Attaching parts for AS10512C-1 :—	2	—	
R A31B16	. . .	Screw, 4BA, cheese head	4	—	
R SP108	. . .	Washer, 4BA	4	—	
R 5CW4327	. . .	TRANSFER, 'on'	2	—	
R 5CW4402855	. . .	TRANSFER, 'off'	2	—	
EA3.81.791	. . .	GUARD, cable Attaching parts for EA3.81.791 :—	1	—	
R 6R X 1/4"	. . .	Screw, P.K.	8	—	
EB6.81.10207	. . .	GUARD, clip Attaching parts for EB6.81.10207 :—	1	—	
R 4C X 3/4"	. . .	Screw, P.K.	9	—	
EA1.81.251	. . .	GUIDE, STRAP, ASSEMBLY Spares for :—	22	—	
EA1.81.260	. . .	GUIDE, strap	1	—	
EA1.81.250	. . .	STRIP, clamping	1	—	
SIS2407	. . .	HORN, electric type C Attaching parts for SIS2407 :—	1	—	
A25/17E	. . .	Bolt, 1/4" BSF	2	—	
AGS2001E1/66	. . .	Nut, stiff, 1/4" BSF	2	—	
SP15E	. . .	Washer	2	—	
AS3360B3C	. . .	LEAD, bonding Attaching parts for AS3360B3C :—	3	—	
AGS2002C3	. . .	Nut, stiff, 2BA	1	—	
A39C12	. . .	Screw, 2BA	1	—	
R EG4.81.2857	. . .	LIGHTING, GENERAL, FRONT FUSELAGE, ASSEMBLY Spares for :—	1	—	
EA3.81.971	. . .	ANGLE	1	—	
EA3.81.2191	. . .	ANGLE	1	—	
EA3.81.2306	. . .	ANGLE	1	—	
EB6.81.2457	. . .	ANGLE, assembly	1	—	
EB6.81.5361	. . .	ANGLE, mounting Attaching parts for EB6.81.5361 :—	1	—	
AGS2001B1	. . .	Nut, stiff, 4BA	1	—	
A31B6	. . .	Screw, 4BA	1	—	
SP15B	. . .	Washer	1	—	
WARD BROOKE WBUN1146S3W	. . .	BLOCK, terminal, 3-way (SRIM.3533) (Mod.4864) Attaching parts for WBUN1146S3W :—	1	—	
EB6.81.5349	. . .	Pillar, fixing	2	—	
A33B20	. . .	Screw, 4BA	1	—	
A40B10	. . .	Screw, 4BA	1	—	
SP15B	. . .	Washer	2	—	
AGS2037B	. . .	Washer	1	—	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
†	.	.	.	BLOCK, terminal, 5-way (SRIM.3538)			2	—	
	.	.	.	(Mod 4864)					
703/2/00267	.	.	.	Attaching parts for 5-way t/b :—			2	—	
	.	.	.	Pillar, fixing					
703/2/00244	.	.	.	BLOCK, terminal, 10-way			1	—	
AGS2001B1	.	.	.	Attaching parts for 703/2/00244 :—					
703/2/00267	.	.	.	Nut, stiff, 4BA			1	—	
	.	.	.	Pillar, fixing			2	—	
703/1/00249	.	.	.	BLOCK, terminal, 20-way			3	—	
AGS2001B1	.	.	.	Attaching parts for 703/1/00249 :—					
703/2/00267	.	.	.	Nut, stiff, 4BA			QR	—	
A32B28	.	.	.	Pillar, fixing			QR	—	
	.	.	.	Screw, 4BA			QR	—	
A25/1C	.	.	.	BOLT, starter panel earthing, frame 2			1	—	
EB7.81.1545	.	.	.	BRACKET			2	—	
	.	.	.	Attaching parts for EB7.81.1545 :—					
AGS2001A1	.	.	.	Nut, stiff, 6BA			2	—	
EB7.81.1561	.	.	.	Packing			1	—	
A31A16	.	.	.	Screw, 6BA			2	—	
SP15A	.	.	.	Washer			2	—	
EA3.81.2189	.	.	.	BRACKET, assembly			1	—	
EB6.81.2319	.	.	.	BRACKET, assembly			1	—	
	.	.	.	Attaching parts for EB6.81.2319 :—					
A25/1B	.	.	.	Bolt, 4BA			1	—	
AGS2001B1	.	.	.	Nut, stiff, 4BA			1	—	
SP15B	.	.	.	Washer			1	—	
EB6.81.5405	.	.	.	BRACKET, assembly			1	—	
EB7.81.1549	.	.	.	BRACKET, assembly			1	—	
EB6.81.5315	.	.	.	BRACKET, dimmer switch, assembly			1	—	
	.	.	.	Attaching parts for EB6.81.5315 :—					
A25/1B	.	.	.	Bolt, 4BA			4	—	
AGS2001B1	.	.	.	Nut, stiff, 4BA			4	—	
EB6.81.10159	.	.	.	Packer			1	—	
EB6.81.2461	.	.	.	Strip, packing			1	—	
SP15B	.	.	.	Washer			4	—	
EB6.81.10031	.	.	.	BRACKET, lamp mounting			1	—	
	.	.	.	Attaching parts for EB6.81.10031 :—					
6R X ¾"	.	.	.	Screw, P.K.			2	—	
EG4.81.3191	.	.	.	BRACKET, lamp (SRIM.3533) (Mod 4864)			2	—	
EG4.81.3189	.	.	.	BRACKET, lamp angle (SRIM.3533) (Mod 4864)			1	—	
EB6.81.5831	.	.	.	CABLE, ASSEMBLY, E25, from 40-way terminal			1	—	
	.	.	.	block to earth terminal on frame 2					
EB7.81.1083	.	.	.	CABLE, ASSEMBLY, F36, from main electrical			1	—	
	.	.	.	panel to equipment bay lamp					
EB6.81.5319	.	.	.	CABLE, ASSEMBLY, L1A, from 40-way terminal			1	—	
	.	.	.	block to port lights dimmer					
EB6.81.5053	.	.	.	CABLE, ASSEMBLY, L1A1, from 40-way terminal			1	—	
	.	.	.	block to centre light					

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EB6.81.5057	. . .	CABLE, ASSEMBLY, L1A2, from 40-way terminal block to port outer light	1	—	
EB6.81.5059	. . .	CABLE, ASSEMBLY, L1A3, from 40-way terminal block to port inner light	1	—	
EB6.81.5061	. . .	CABLE, ASSEMBLY, L1B, from 40-way terminal block to starboard red lights dimmer	1	—	
EB6.81.5065	. . .	CABLE, ASSEMBLY, L1B2, from 40-way terminal block to starboard outer light No. 1	1	—	
EB6.81.5067	. . .	CABLE, ASSEMBLY, L1B3, from 40-way terminal block to starboard outer light No. 2	1	—	
EB6.81.5069	. . .	CABLE, ASSEMBLY, L1B4, from 40-way terminal block to centre light	1	—	
EB6.81.5311	. . .	CABLE, ASSEMBLY, L1B5, from 40-way terminal block to 10-way terminal block	1	—	
EB6.81.5071	. . .	CABLE, ASSEMBLY, L1C, from 40-way terminal block to console lights dimmer	1	—	
EB6.81.5073	. . .	CABLE, ASSEMBLY, L1C1, from 40-way terminal block to ILS/UHF controller light	1	—	
EB6.81.5075	. . .	CABLE, ASSEMBLY, L1C2, from 40-way terminal block to forward console light	1	—	
EB6.81.5077	. . .	CABLE, ASSEMBLY, L1C3, from 40-way terminal block to centre take-off panel light	1	—	
EB6.81.5079	. . .	CABLE, ASSEMBLY, L1C4, from 40-way terminal block to 10-way terminal block	1	—	
EB6.81.5081	. . .	CABLE, ASSEMBLY, L1D, from 40-way terminal block to starboard inboard ultra violet light and dimmer	1	—	
EB6.81.5083	. . .	CABLE, ASSEMBLY, L1D1, from 40-way terminal block to starboard outboard and inboard ultra violet lights	1	—	
EB6.81.5107	. . .	CABLE, ASSEMBLY, L1D2, from 40-way terminal block to centre light and dimmer	1	—	
EB6.81.5169	. . .	CABLE, ASSEMBLY, L1D3, from 10-way terminal block to prone position ultra violet light	1	—	
EB6.81.5171	. . .	CABLE, ASSEMBLY, L1D4, from 40-way terminal block to 10-way terminal block	1	—	
EB6.81.5085	. . .	CABLE, ASSEMBLY, L1E, from 40-way terminal block to port outboard ultra violet light and dimmer	1	—	
EB6.81.5087	. . .	CABLE, ASSEMBLY, L1E1, from 40-way terminal block to port in board and outboard, ultra violet lights	1	—	
EB6.81.5089	. . .	CABLE, ASSEMBLY, L1F, from 40-way terminal block to take-off panel lights	1	—	
EB6.81.5091	. . .	CABLE, ASSEMBLY, L1F1, from 40-way terminal block to forward take-off panel lights	1	—	
EB6.81.5093	. . .	CABLE, ASSEMBLY, L1F2, from 40-way terminal block to aft take-off panel lights	1	—	
EB6.81.5309	. . .	CABLE, ASSEMBLY, L1F4, from 40-way terminal block to aft console light	1	—	
EB6.81.5097	. . .	CABLE, ASSEMBLY, L1G, from 40-way terminal to E2B compass light dimmer	1	—	
EB6.81.5101	. . .	CABLE, ASSEMBLY, L1H, from 40-way terminal block to pilot's console	1	—	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description					No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5 6			
EB6.81.5103	.	.	.	CABLE, ASSEMBLY, L2A, from 10-way terminal block to dimmer		1	-	
EB6.81.5105	.	.	.	CABLE, ASSEMBLY, L2A1, from 10-way terminal block to wander lamp		1	-	
EB6.81.5109	.	.	.	CABLE, ASSEMBLY, L2A2, from 10-way terminal block to lamp type, Mk.1A		1	-	
EB6.81.5111	.	.	.	CABLE, ASSEMBLY, L2B, from 20-way terminal block to navigator's instrument panel lamps		1	-	
EB6.81.5303	.	.	.	CABLE, ASSEMBLY, L3A, from 40-way terminal block to blind flying panel instrument lights dimmer		1	-	
EG4.81.2677	.	.	.	CABLE, ASSEMBLY, L3A1, from 40-way terminal block to blind flying panel terminal block (SRIM.3533) (Mod 4864)		1	-	
EB6.81.5177	.	.	.	CABLE, ASSEMBLY, L3B, from 20-way terminal block to navigator's angle poise light dimmer		1	-	
EB6.81.5179	.	.	.	CABLE, ASSEMBLY, L3B1, from 20-way terminal block to navigator's angle poise light		1	-	
EB6.81.5307	.	.	.	CABLE, ASSEMBLY, L4B, from 20-way terminal block to Tacan lights dimmer		1	-	
EB6.81.5125	.	.	.	CABLE, ASSEMBLY, N79A, from 40-way terminal block to E.M. light switch (Pre-Mod 5100)		1	-	
EG4.81.3235	.	.	.	CABLE, ASSEMBLY, N79A (Alt. R60/61 - Mod 5100)		1	-	
EB6.81.5127	.	.	.	CABLE, ASSEMBLY, N79A1, from 40-way terminal block to starboard EM light		1	-	
EB6.81.5129	.	.	.	CABLE, ASSEMBLY, N79A2, from 40-way terminal block to port EM light		1	-	
EB6.81.5131	.	.	.	CABLE, ASSEMBLY, N79A3, from 40-way terminal block to 10-way terminal block		1	-	
R EB6.81.5133	.	.	.	CABLE, ASSEMBLY, N79A4, from 10-way terminal block to amber EM light (Pre-Mod 5423)		1	-	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description					No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5			
R EB6.81.5099	. . .	CABLE, ASSEMBLY, N79A9, from 10-way terminal block to prone position EM light switch (Pre-Mod 5423)				1	-	
R EG4.81.3229	. . .	CABLE, ASSEMBLY, N79A9 (Pre-Mod 5423)				1	-	
EB6.81.5175	. . .	CABLE, ASSEMBLY, N79A10, from 40-way terminal block to 5-way terminal block				1	-	
EB6.81.5141	. . .	CABLE, ASSEMBLY, N123, from electrical control panel and 40-way terminal block to pilot's anti-dazzle switch (Pre-Mod 5100)				1	-	
EG4.81.3245	. . .	CABLE, ASSEMBLY, N123 (Alt. R60/61-Mod 5100)				1	-	
EB6.81.5143	. . .	CABLE, ASSEMBLY, N125 from pilot's anti-dazzle switch and navigator's anti-dazzle switch to port anti-dazzle lamp resistance (Pre-Mod 5100)				1	-	
EG4.81.3227	. . .	CABLE, ASSEMBLY, N125 (Alt. R60/61-Mod 5100)				1	-	
EB6.81.5145	. . .	CABLE, ASSEMBLY, N126, from pilot's anti-dazzle switch to starboard anti-dazzle lamp resistance (Pre-Mod 5100)				1	-	
EG4.81.3237	. . .	CABLE, ASSEMBLY, N126 (Alt. R60/61-Mod 5100)				1	-	
EB7.81.5147	. . .	CABLE, ASSEMBLY, N127, from port anti-dazzle lamp resistance to starboard anti-dazzle lamp resistance				1	-	
EB6.81.5149	. . .	CABLE, ASSEMBLY, N128, from starboard anti-dazzle lamp resistance to starboard anti-dazzle lamp				1	-	
EB6.81.5151	. . .	CABLE, ASSEMBLY, N129, from port anti-dazzle lamp resistance to port anti-dazzle lamp				1	-	
EB6.81.5295	. . .	CABLE, ASSEMBLY, 13F, 13G, and 13N, all from JB13, 13F to 20-way terminal block, 13G to lamp type 1A and 13N to 20-way terminal block				1	-	
EB6.81.5297	. . .	CABLE, ASSEMBLY, 14F, from JB14 to second navigator's angle poise light dimmer				1	-	
EB6.81.5193	. . .	CABLE, ASSEMBLY, 14F1, from second navigator's angle poise dimmer to angle poise light				1	-	
EB6.81.5419	. . .	CABLE, ASSEMBLY, 16L, from JB16 to 10-way terminal block and 40-way terminal block				1	-	
5E1934440	. . .	CABLE, uniminyvin 20				QR	-	
AS3180/3B	. . .	CLIP, 'P'				2	-	
AS3180/4B	. . .	CLIP, 'P'				1	-	
AS3180/5B	. . .	CLIP, 'P'				6	-	
AS3180/6B	. . .	CLIP, 'P'				1	-	
AS3180/8B	. . .	CLIP, 'P'				4	-	
AS3180/10B	. . .	CLIP, 'P'				3	-	
AS3180/12B	. . .	CLIP, 'P'				1	-	
A25/1B	. . .	Attaching parts for clips :-						
AGS2001B1	. . .	Bolt, 4BA				QR	-	
6R X 1/4"	. . .	Nut, stiff, 4BA				QR	-	
A3186	. . .	Screw, P.K.				QR	-	
A32B16	. . .	Screw, 4BA				QR	-	
SP15B	. . .	Screw, 4BA				QR	-	
	. . .	Washer				QR	-	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
8757/2		COVER, terminal	1	—	
5L9951263		FILAMENT	1	—	
5CY1085825		LAMPHOLDER	1	—	
		Attaching parts for 5CY1085825:—			
A25/2B		Bolt, 4BA	2	—	
AGS2001B1		Nut, stiff, 4BA	2	—	
SP13B		Washer	2	—	
SP55B		Washer, double spring	2	—	
SIS3008		SCREEN	1	—	
EA3.81.2297		SPRING	1	—	
EA3.81.2301		STRIP, cork	2	—	
EA3.81.2291		WASHER, FRICTION, ASSEMBLY	1	—	
		Spares for:—			
EA3.81.2293		PLATE, key	1	—	
EA3.81.2299		WASHER, friction	1	—	
5CX1143867		LAMP, pillar	2	—	
5CX1057219		LAMP, type C, No. 2	15	—	
		Attaching parts for Ref. 5CX/1057219:—			
AGS2001A1		Nut, stiff, 6BA	QR	—	
A31A12		Screw, 6BA	QR	—	
A31A16		Screw, 6BA	QR	—	
A31A20		Screw, 6BA	QR	—	
A31A24		Screw, 6BA	QR	—	
A38A26		Screw, 6BA	QR	—	
4R x 1/2"		Screw, P.K.	QR	—	
AS2304/030		Tube, distance	QR	—	
SP13A		Washer	QR	—	
SP15A		Washer	QR	—	
SIS6281		LAMP, type D, amber (Pre—Mod 5423)	8	—	
SIS6281		LAMP, type D, amber (Mod 5423)	7	—	
		Attaching parts for SIS6281:—			
AGS2001B1		Nut, stiff, 4BA	2	—	
A31B6		Screw, 4BA	2	—	
SP15B		Washer	2	—	
5CX4330060		LAMP, ultra violet, type B No. 2	5	—	
		Attaching parts for Ref. 5CX/4330060:—			
A25/1B		Bolt, 4BA	QR	—	
AGS2001A1		Nut, stiff, 6BA	QR	—	
AGS2001B1		Nut, stiff, 4BA	QR	—	
EB6.81.10151		Packer	QR	—	
A31A24		Screw, 6BA	QR	—	
A31B6		Screw, 4BA	QR	—	
6R x 3/4"		Screw, P.K.	QR	—	
SP13A		Washer	QR	—	
SP15B		Washer	QR	—	
EB6.81.5301		LIGHT, EQUIPMENT BAY, INSTALLATION	—	—	
		Spares for:—			
5L9952254		FILAMENT, 24V, 6W	1	—	
5CX4330002		LAMP, cockpit, Mk. 1A	1	—	
		Attaching parts for Ref. 5CX/4330002:—			
AS1246/1B		Bolt, 4BA	3	—	
AGS2001B1		Nut, 4BA	3	—	
SP13B		Washer	3	—	

R
R
R

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EB6.81.5299	.	.	.	.	PLATE, mounting		1	—	
A25/2B	.	.	.	.	Attaching parts for EB6.81.5299 :—		2	—	
AGS200181	.	.	.	.	Bolt, 48A		2	—	
SP13B	.	.	.	.	Nut, stiff, 48A		2	—	
	.	.	.	.	Washer		2	—	
703/2/00251	.	.	.	.	LINK, 2-way		9	—	
703/2/00252	.	.	.	.	LINK, 3-way		4	—	
703/2/00253	.	.	.	.	LINK, 4-way		1	—	
703/2/00259	.	.	.	.	LINK, 10-way		1	—	
703/2/00260	.	.	.	.	LINK, transverse		2	—	
AGS200181	.	.	.	.	NUT, starter panel earthing, fr. 2		1	—	
EB6.81.10159	.	.	.	.	PACKER		1	—	
EA3.81.2329	.	.	.	.	PACKING		2	—	
EA3.81.2335	.	.	.	.	PACKING		2	—	
EA3.81.2337	.	.	.	.	PACKING		2	—	
EA3.81.2341	.	.	.	.	PACKING		2	—	
EB7.80.911	.	.	.	.	PACKING		1	—	
EB7.81.1561	.	.	.	.	PACKING		2	—	
EG4.80.1409	.	.	.	.	PANEL, DIMMER SWITCH, ASSEMBLY		Ref.	—	
					(SRIM.3533) (MOD 4799)				
					(See Chapter GA)				
EG4.80.1333	.	.	.	.	PANEL, NAVIGATOR'S SIDE, ASSEMBLY		Ref.	—	
					(SRIM.3533) (MOD 4799)				
					(See Chapter GA)				
R SCD 79451	.	.	.	.	PLATE, MOUNTING, (SRIM.3533)		1	—	
EB7.80.897	.	.	.	.	PLATE, resistance mounting, assembly		1	—	
5CZ4335518	.	.	.	.	RESISTANCE, type A No. 3		2	—	
EG4.81.2673	.	.	.	.	RESISTOR ASSEMBLY (SRIM.3533)		1	—	
					(MOD 4864)				
					Spares for :—				
HSA5/80±5%	.	.	.	.	RESISTOR, 80 ohms		1	—	
EEAS146/20/%	.	.	.	.	SLEEVE		QR	—	
HC294	.	.	.	.	TAG, R.T.		2	—	
					Attaching parts for EG4.81.2673 :—				
A47Z	.	.	.	.	Nut, 8BA		2	—	
A31212	.	.	.	.	Screw, 8BA		2	—	
SP47Z	.	.	.	.	Washer, spring		2	—	
5CX1057503	.	.	.	.	SCREEN		15	—	
EEAS146/12/%	.	.	.	.	SLEEVE		QR	—	
EEAS126/16/%	.	.	.	.	SLEEVE		QR	—	
EEAS146/6/ 3/8	.	.	.	.	SLEEVE		QR	—	
EEAS146/20/%	.	.	.	.	SLEEVE		QR	—	
EEAS146/20/1	.	.	.	.	SLEEVE		QR	—	
WARD 8BROOKE	.	.	.	.	SPACER		2	—	
WB1114/22	.	.	.	.	STRIP, packing		1	—	
EB6.81.2459	.	.	.	.	SWITCH (See Chapter GA)		Ref.	—	
8396B114	.	.	.	.	SWITCH, dimmer, type R		5	—	
5CW4405521	.	.	.	.	SWITCH, dimmer, type R		2	—	
5CW4405515	.	.	.	.	SWITCH, dimmer, type R		5	—	
5CW4405516	.	.	.	.	SWITCH, 'on-off'		1	—	
5CW1047690	.	.	.	.					
N.S.F.	.	.	.	.					
8396/B114	.	.	.	.	SWITCH		1	—	
5CW4405514	.	.	.	.	SWITCH, dimmer, type R		1	—	
5CW4405519	.	.	.	.	SWITCH, dimmer, type R		1	—	
5CW4405520	.	.	.	.	SWITCH, dimmer, type R		3	—	
5CW5767	.	.	.	.	SWITCH, dimmer, type R		1	—	
HC294	.	.	.	.	TAG, R.T.		22	—	
HC490	.	.	.	.	TAG, Q.R.		2	—	
SP15B	.	.	.	.	WASHER, starter panel earthing, frame 2		1	—	

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EB6.81.4313	.	.	.	MOUNTING, CABLE DUCT, PORT, ASSEMBLY			1	—	
EA3.81.2265	.	.	.	Spares for :—			2	—	
EB6.81.4315	.	.	.	BRACKET, angle, assembly			1	—	
AS1248/1C	.	.	.	COVER, cable mounting duct			6	—	
SP15C	.	.	.	Attaching parts for EB6.81.4315 :—			6	—	
EB6.81.4317	.	.	.	Bolt, 2BA			1	—	
AS1248/1C	.	.	.	Washer			4	—	
SP15C	.	.	.	DUCT, cable mounting, sub-assembly			4	—	
EB6.81.4001	.	.	.	Attaching parts for EB6.81.4317 :—			1	—	
EB6.81.5779	.	.	.	Bolt, 2BA			3	—	
EEAS73	.	.	.	Washer			4	—	
AS1248/1/2B	.	.	.	PACKING			1	—	
AGS2001B1	.	.	.	PLATE, attachment			1	—	
SP15B	.	.	.	PLATE, clamp			1	—	
5CW4405754	.	.	.	Attaching parts for EEAS73 :—			1	—	
A25/3B	.	.	.	Bolt, 4BA			2	—	
SP15B	.	.	.	Nut, stiff, 4BA			2	—	
EEAS132/7	.	.	.	Washer			12	—	
EEAS132/9	.	.	.	RELAY, magnetic, pressure warning			5	—	
EEAS132/12	.	.	.	Attaching parts for Ref. 5CW/4405754 :—			4	—	
EEAS132/15	.	.	.	Bolt, 4BA			6	—	
EEAS132/18	.	.	.	Nut, stiff, 4BA			2	—	
HV3254	.	.	.	Washer			QR	—	
HV3341	.	.	.	STRAP, cable			QR	—	
NY3342	.	.	.	STRAP, cable			QR	—	
NY3255	.	.	.	STRAP, cable			QR	—	
	.	.	.	STRAPPING			—	—	
	.	.	.	STRAPPING					
	.	.	.	STUD					
	.	.	.	STUD					
	.	.	.	WIRING AND CLIPPING UNDER PILOT'S FLOOR					
	.	.	.	Spares for :—					
703/1/00249	.	.	.	BLOCK, terminal, 20-way			1	—	
AGS2002B1	.	.	.	Attaching parts for 703/1/00249 :—			2	—	
703/2/00267	.	.	.	Nut, stiff, 4BA			2	—	
SP13B	.	.	.	Pillar, fixing			2	—	
EA3.81.2611	.	.	.	Washer			1	—	
AGS2001B1	.	.	.	BRACKET			1	—	
A32B10	.	.	.	Attaching parts for EA3.81.2611 :—			1	—	
AS3180/8B	.	.	.	Nut, stiff, 4BA			1	—	
AS3180/10B	.	.	.	Screw, 4BA			2	—	
AS3181/10B	.	.	.	CLIP			1	—	
	.	.	.	CLIP			2	—	
	.	.	.	CLIP			1	—	
	.	.	.	Attaching parts for AS3180/8B, AS3180/10B and AS3181/10B :—					
A25/1B	.	.	.	Bolt, 4BA			QR	—	
AGS2001B1	.	.	.	Nut, stiff, 4BA			QR	—	
A32B10	.	.	.	Screw			QR	—	
SP47B	.	.	.	Washer, spring			QR	—	
703/1/00266	.	.	.	COVER, terminal block			1	—	
703/2/00251	.	.	.	LINK, commoning, 2-way			2	—	
5X9450393	.	.	.	LUG, cable			2	—	
A26CT	.	.	.	NUT, thin, 2BA, earthing			2	—	
AGS2001C1/66	.	.	.	NUT, stiff, 2BA, earthing			2	—	

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Mtrl. Spec.	Plate No.
	1	2	3	4	5	6			
A31C28	.	.	.	.	SCREW, 2BA, earthing		1	-	
EEAS146A1	.	.	.	.	SLEEVE, 3/8" long		4	-	
EEAS146C	.	.	.	.	SLEEVE, 3/8" long		22	-	
HV3254	.	.	.	.	STRAPPING		QR	-	
HV3255	.	.	.	.	STUD		QR	-	
703/2/00315/020	.	.	.	.	TAG, 4A		1	-	
703/2/00339/020	.	.	.	.	THIMBLE, 4BA		1	-	
EEAS28/4EPH	.	.	.	.	WASHER, earthing		2	Alum.	
EEAS28/20EPH	.	.	.	.	WASHER, earthing		2	Alum.	
EG4.81.61	.	.	.	.	WIRING, PRESSURE BULKHEAD TO FRAME 12		-	-	
EG4.81.861	.	.	.	.	Spares for :- BLOCK, FUSE, ASSEMBLY		1	-	
EB6.81.1049	.	.	.	.	Spares for :- BASE, fuse block		1	-	
EB6.81.1043	.	.	.	.	BOLT		2	-	
EG4.81.863	.	.	.	.	COVER, fuse block, sub-assembly		1	-	
AS4565/7C	.	.	.	.	Attaching parts for EG4.81.863 :- Bolt, 2BA		2	-	
EB6.81.1047	.	.	.	.	END, fuse block		2	-	
A41B16	.	.	.	.	Attaching parts for EB6.81.1047 :- Screw, 4BA		2	-	
A41B20	.	.	.	.	Screw, 4BA		1	-	
A14GB	.	.	.	.	NUT, 5/16" BSF		2	-	
AGS2002G4	.	.	.	.	NUT, stiff, 5/16" BSF		2	-	
A33B16	.	.	.	.	SCREW, 4BA		2	-	
AS2721	.	.	.	.	WASHER, contact		4	-	
A31C24	.	.	.	.	Attaching parts for EG4.81.861 :- Screw, 2BA		2	-	
SP13C	.	.	.	.	Washer		2	-	
EG4.81.867	.	.	.	.	BLOCK, FUSE, ASSEMBLY		1	-	
EB6.81.1049	.	.	.	.	Spares for :- BASE, fuse block		1	-	
EB6.81.1043	.	.	.	.	BOLT		2	-	
EB6.81.1045	.	.	.	.	COVER, fuse, sub-assembly		1	-	
AS4565/7C	.	.	.	.	Attaching parts for EB6.81.1045 :- Bolt, 2BA		2	-	
EB6.81.1047	.	.	.	.	END, fuse block		2	-	
A41B16	.	.	.	.	Attaching parts for EB6.81.1047 :- Screw, 4BA		1	-	
A41B20	.	.	.	.	Screw, 4BA		1	-	
A14GB	.	.	.	.	NUT, 5/16" BSF		2	-	
AGS2002G4	.	.	.	.	NUT, stiff, 5/16" BSF		2	-	
A33B16	.	.	.	.	SCREW, 4BA		2	-	
AS2721	.	.	.	.	WASHER, contact		5	-	
EEAS136	.	.	.	.	BRACKET		12	-	
EB7.81.2389	.	.	.	.	BRACKET		1	-	
AS3180/3C	.	.	.	.	CLIP, cable fixing		2	-	
AS3180/4C	.	.	.	.	CLIP, cable fixing		2	-	
AS3180/6C	.	.	.	.	CLIP, cable fixing		1	-	
AS3180/8C	.	.	.	.	CLIP, cable fixing		3	-	
AS3180/14C	.	.	.	.	CLIP, cable fixing		1	-	
AGS2001C1/66	.	.	.	.	Attaching parts for AS3180/3C, AS3180/4C, AS3180/6C, AS3180/8C and AS3180/14C :- Nut, stiff, 2BA		QR	-	
A32C16	.	.	.	.	Screw, 2BA		QR	-	
SP15C	.	.	.	.	Washer		QR	-	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Mtl. Spec.	Plate No.
	1	2	3	4	5	6			
AS491/15	.	.	CLIP, cable fixing				2	—	
AS491/18	.	.	CLIP, cable fixing				2	—	
AS491/20	.	.	CLIP, cable fixing				2	—	
AS491/22	.	.	CLIP, cable fixing				9	—	
AS491/23	.	.	CLIP, cable fixing				7	—	
AS491/28	.	.	CLIP, cable fixing				4	—	
AS491/30	.	.	CLIP, cable fixing				4	—	
AS491/35	.	.	CLIP, cable fixing				1	—	
AS491/40	.	.	CLIP, cable fixing				1	—	
AS1900C	.	.	CLIP, cable fixing				4	—	
AS3180/3B	.	.	CLIP, cable fixing				6	—	
AS3180/4B	.	.	CLIP, cable fixing				4	—	
AS3180/5B	.	.	CLIP, cable fixing				1	—	
AS3180/6B	.	.	CLIP, cable fixing				19	—	
AS3180/7B	.	.	CLIP, cable fixing				2	—	
AS3180/8B	.	.	CLIP, cable fixing				8	—	
AS3180/10B	.	.	CLIP, cable fixing				4	—	
AS3180/11B	.	.	CLIP, cable fixing				8	—	
AS3180/12B	.	.	CLIP, cable fixing				2	—	
AS3180/14B	.	.	CLIP, cable fixing				1	—	
AS3180/16B	.	.	CLIP, cable fixing				1	—	
AS3180/18B	.	.	CLIP, cable fixing				1	—	
AS3181/6B	.	.	CLIP, cable fixing				1	—	
AS3181/8B	.	.	CLIP, cable fixing				2	—	
AS3181/10B	.	.	CLIP, cable fixing				6	—	
AS3181/18B	.	.	CLIP, cable fixing				1	—	
			Attaching parts for AS491/5, AS491/18, AS491/20, AS491/22, AS491/23, AS491/28, AS491/30, AS491/35, AS491/40, AS1900C, AS3180/3B, AS3180/4B, AS3180/5B, AS3180/6B, AS3180/7B, AS3180/8B, AS3180/10B, AS3180/11B, AS3180/12B, AS3180/14B, AS3180/16B, AS3180/18B, AS3181/6B, AS3181/8B, AS3181/10B and AS3181/18B :—						
A25/1/8	.	.	Bolt, 4BA				QR	—	
A25/1B	.	.	Bolt, 4BA				QR	—	
AGS2001B1	.	.	Nut, stiff, 4BA				QR	—	
A27BP	.	.	Nut, 4BA				QR	—	
A31B12	.	.	Screw, 4BA				QR	—	
A31B14	.	.	Screw, 4BA				QR	—	
A31B16	.	.	Screw, 4BA				QR	—	
A31B20	.	.	Screw, 4BA				QR	—	
A32B16	.	.	Screw, 4BA				QR	—	
SP15B	.	.	Washer				QR	—	
SP47B	.	.	Washer, spring				QR	—	
EA1.81.251	.	.	GUIDE, strap, assembly				9	—	
AP19264	.	.	FUSE, 40 amp, HRC				1	—	
EB6.81.835	.	.	PLATE, attachment				4	—	
EEAS30/28DR	.	.	PLATE				1	—	
			Attaching parts for EEAS30/28DR :—						
AS1248/2C	.	.	Bolt, 4BA				1	—	
AGS2001C1/66	.	.	Nut, stiff, 4BA				1	—	
SP13C	.	.	Washer				1	—	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
EEAS73	.	.	.	PLATE, clamp			14	—	
	.	.	.	Attaching parts for EEAS73:—					
AS1248/1/2B	.	.	.	Bolt, 4BA			QR	—	
AS1248/1B	.	.	.	Bolt, 4BA			QR	—	
AGS2001B1	.	.	.	Nut, stiff, 4BA			QR	—	
HV3254	.	.	.	STRAP			QR	—	
HV3341	.	.	.	STRAP			QR	—	
EEAS132/7	.	.	.	STRAP			QR	—	
EEAS132/9	.	.	.	STRAP			QR	—	
EEAS132/12	.	.	.	STRAP			QR	—	
EEAS132/15	.	.	.	STRAP			QR	—	
EEAS132/18	.	.	.	STRAP			QR	—	
HV3255	.	.	.	STUD			QR	—	
NY3255	.	.	.	STUD			QR	—	
OP3255	.	.	.	STUD			QR	—	
HV3342	.	.	.	STUD			QR	—	
EA3.81.295	.	.	.	WIRING, NOSE UNDERCARRIAGE			—	—	
	.	.	.	Spares for:—					
E&I 7049	.	.	.	BLOCK, terminal, type B, No. 1			1	—	
	.	.	.	Attaching parts for E&I 7049:—					
A27AP	.	.	.	Nut, 6BA			2	—	
A33A20	.	.	.	Screw, 6BA			2	—	
SP47A	.	.	.	Washer, spring			2	—	
AS3180/3C	.	.	.	CLIP, cable fixing			1	—	
	.	.	.	Attaching parts for AS3180/3C:—					
AGS2001C1/86	.	.	.	Nut, stiff, 2BA			1	—	
A32C16	.	.	.	Screw, 2BA			1	—	
AS3180/3B	.	.	.	CLIP, cable fixing			9	—	
AS3180/4B	.	.	.	CLIP, cable fixing			1	—	
AS3180/9B	.	.	.	CLIP, cable fixing			3	—	
	.	.	.	Attaching parts for AS3180/3B, AS3180/4B and AS3180/9B:—					
A25/1B	.	.	.	Bolt, 4BA			QR	—	
A27BP	.	.	.	Nut, 4BA			QR	—	
A32B12	.	.	.	Screw, 4BA			QR	—	
SP47B	.	.	.	Washer, spring			QR	—	
DN1322Z Mk. 2 or DN1322Z Mk. 3	.	.	.	SWITCH, micro			1	—	
	.	.	.	SWITCH, micro			1	—	

R
R

CHAPTER EB
FIGURES TO BE ISSUED LATER

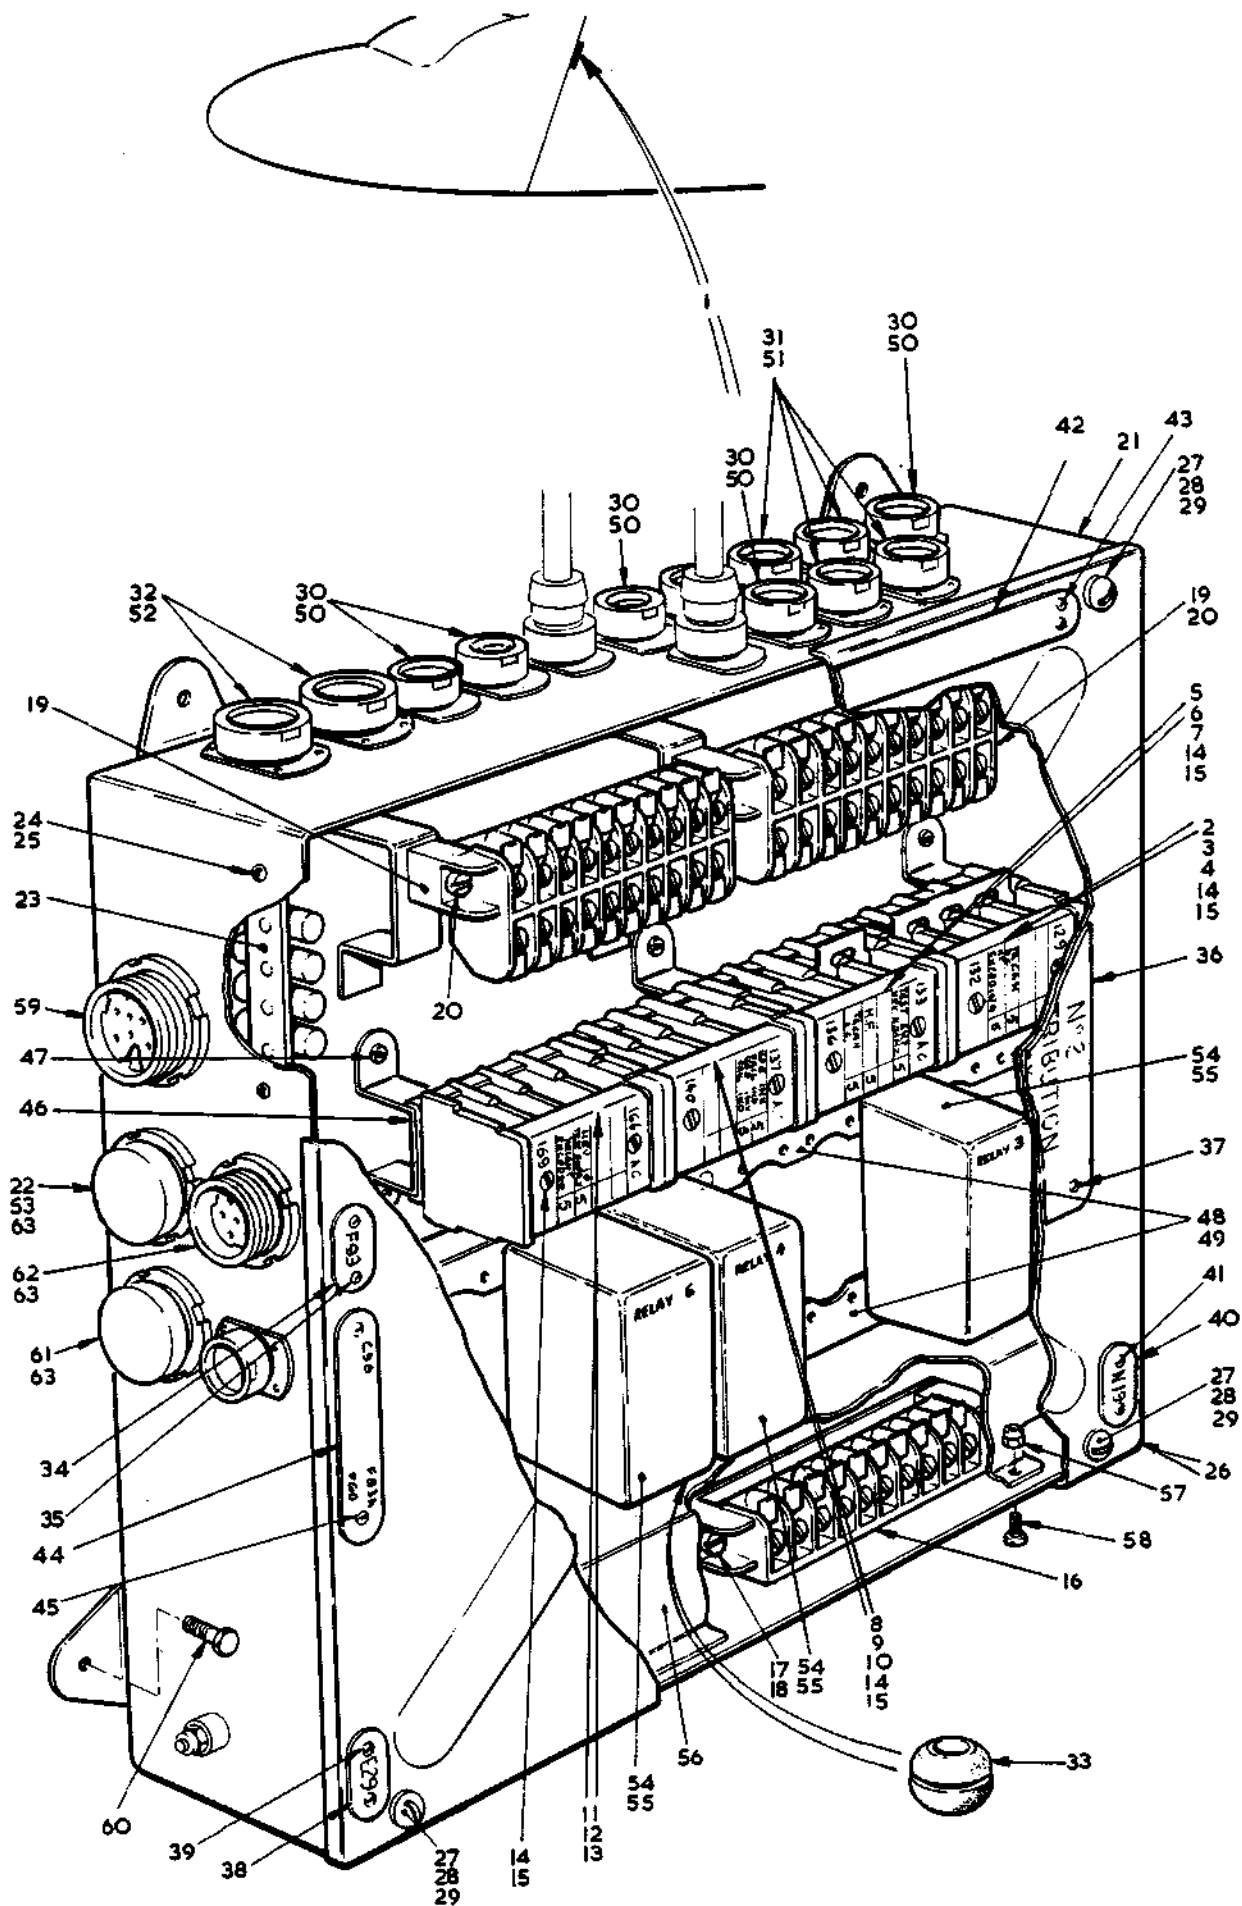


FIG. 1 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE Z

SECT.EB

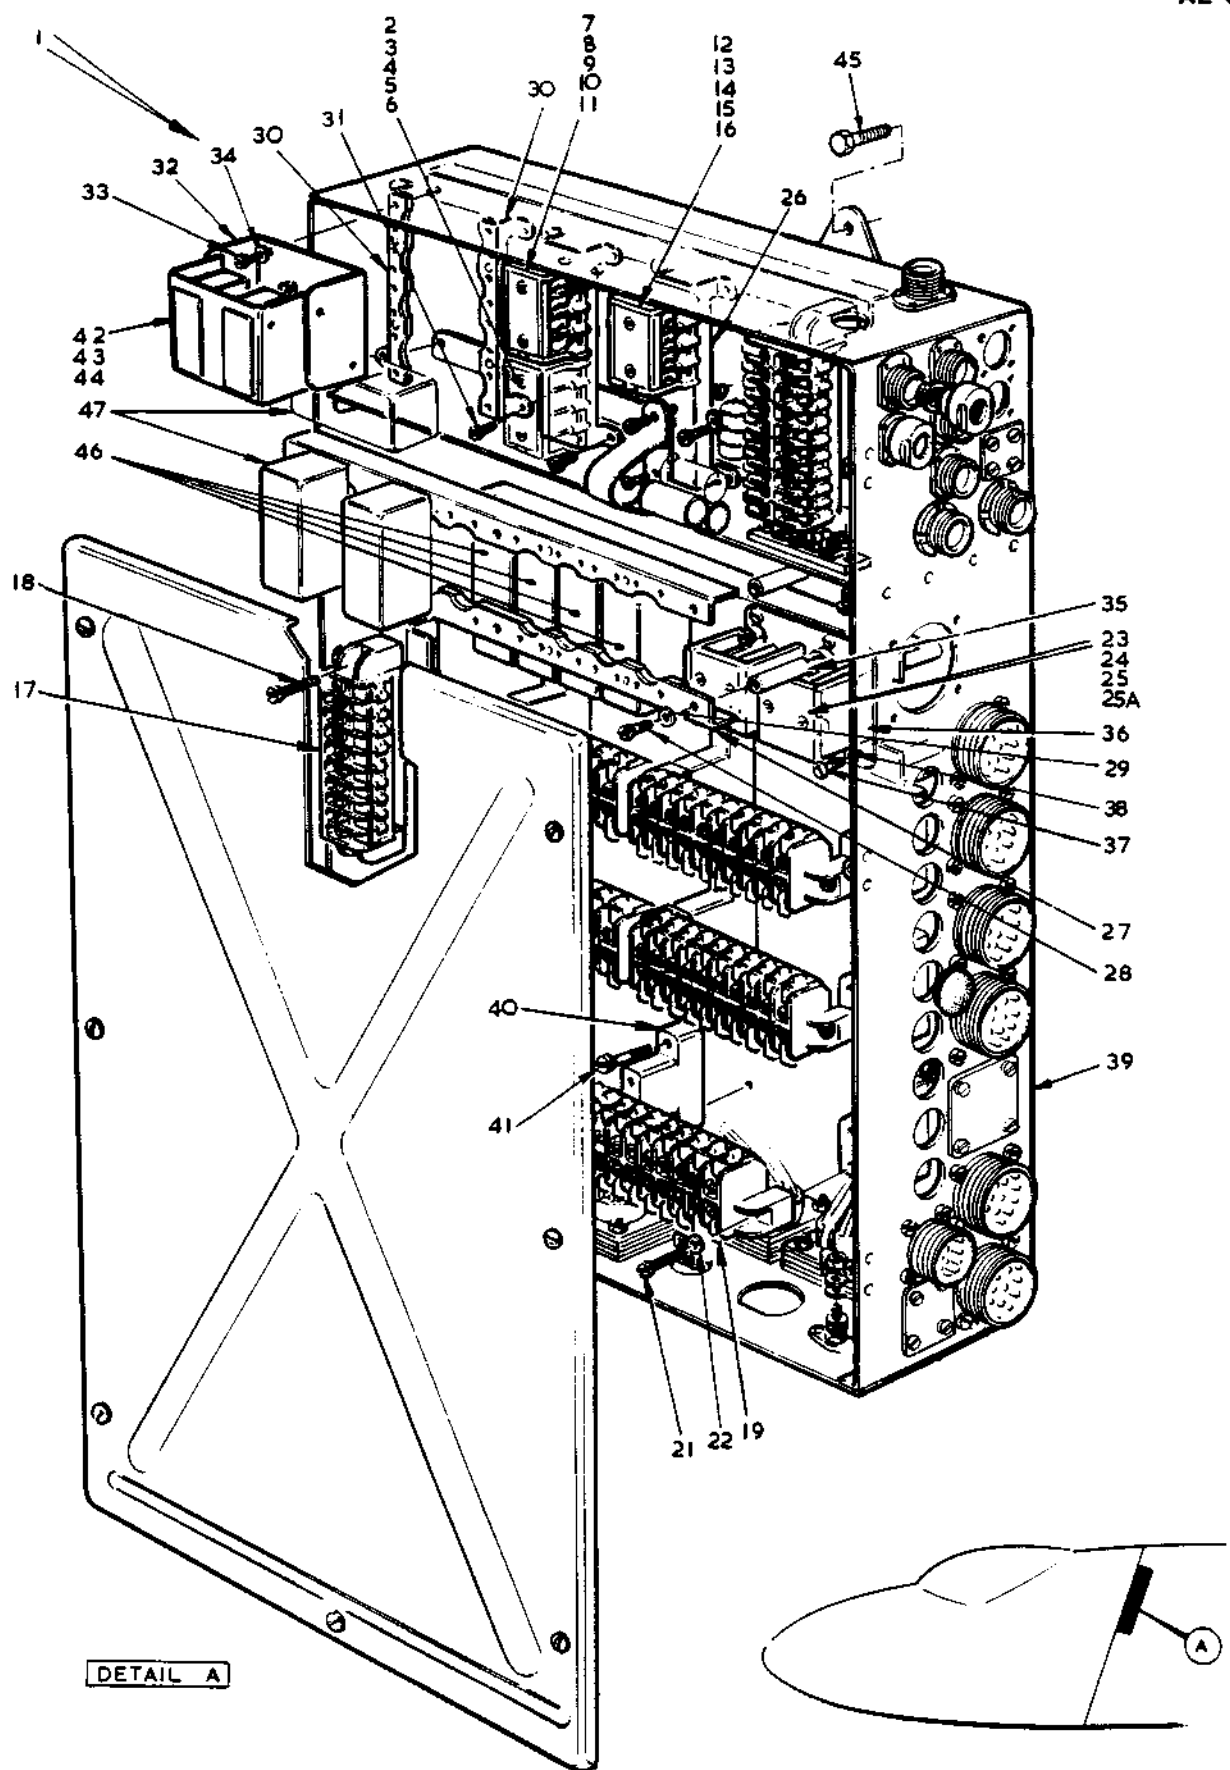


FIG. 2 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE Z

SECT. EB

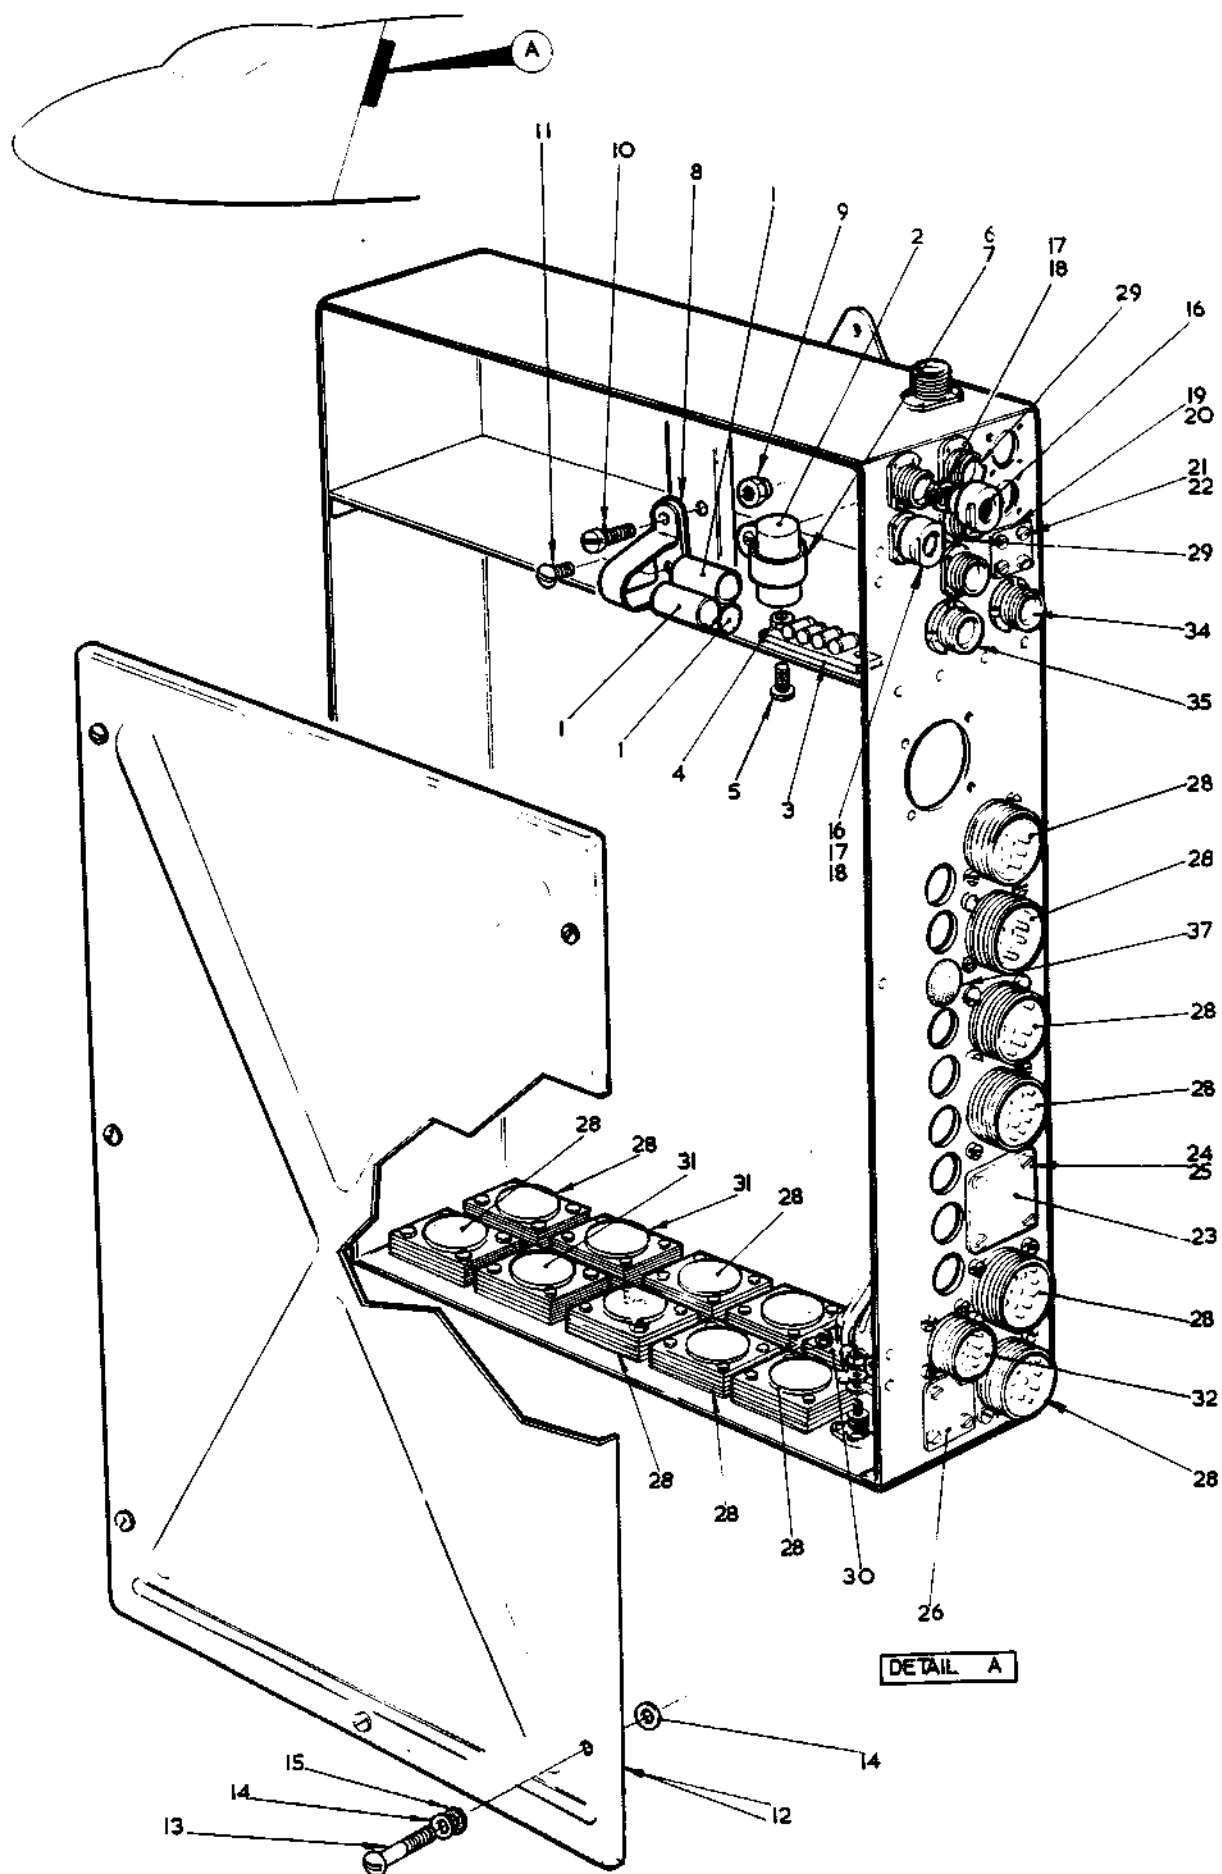


FIG. 3 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE Z

SECT.EB

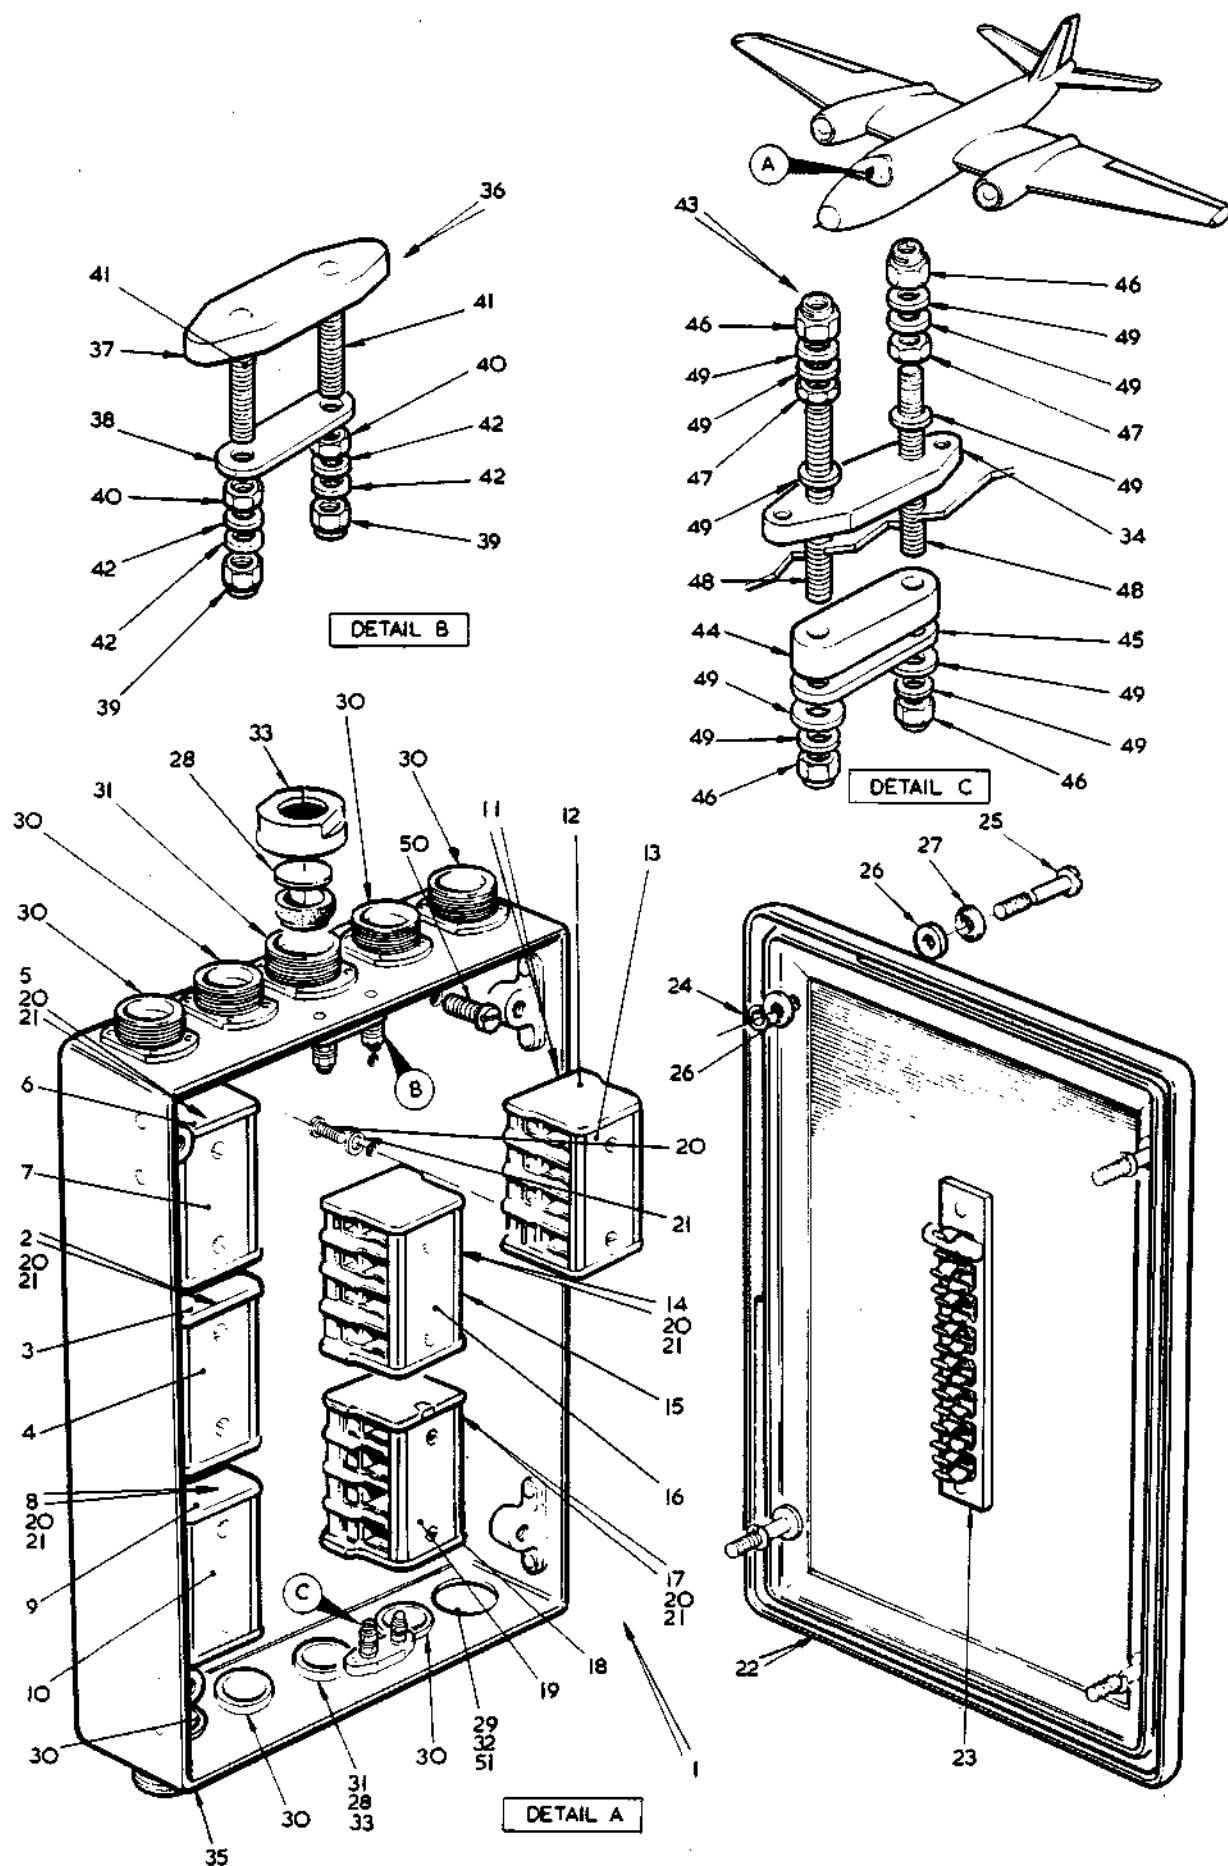


FIG. 4 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE Z

SECT. EB

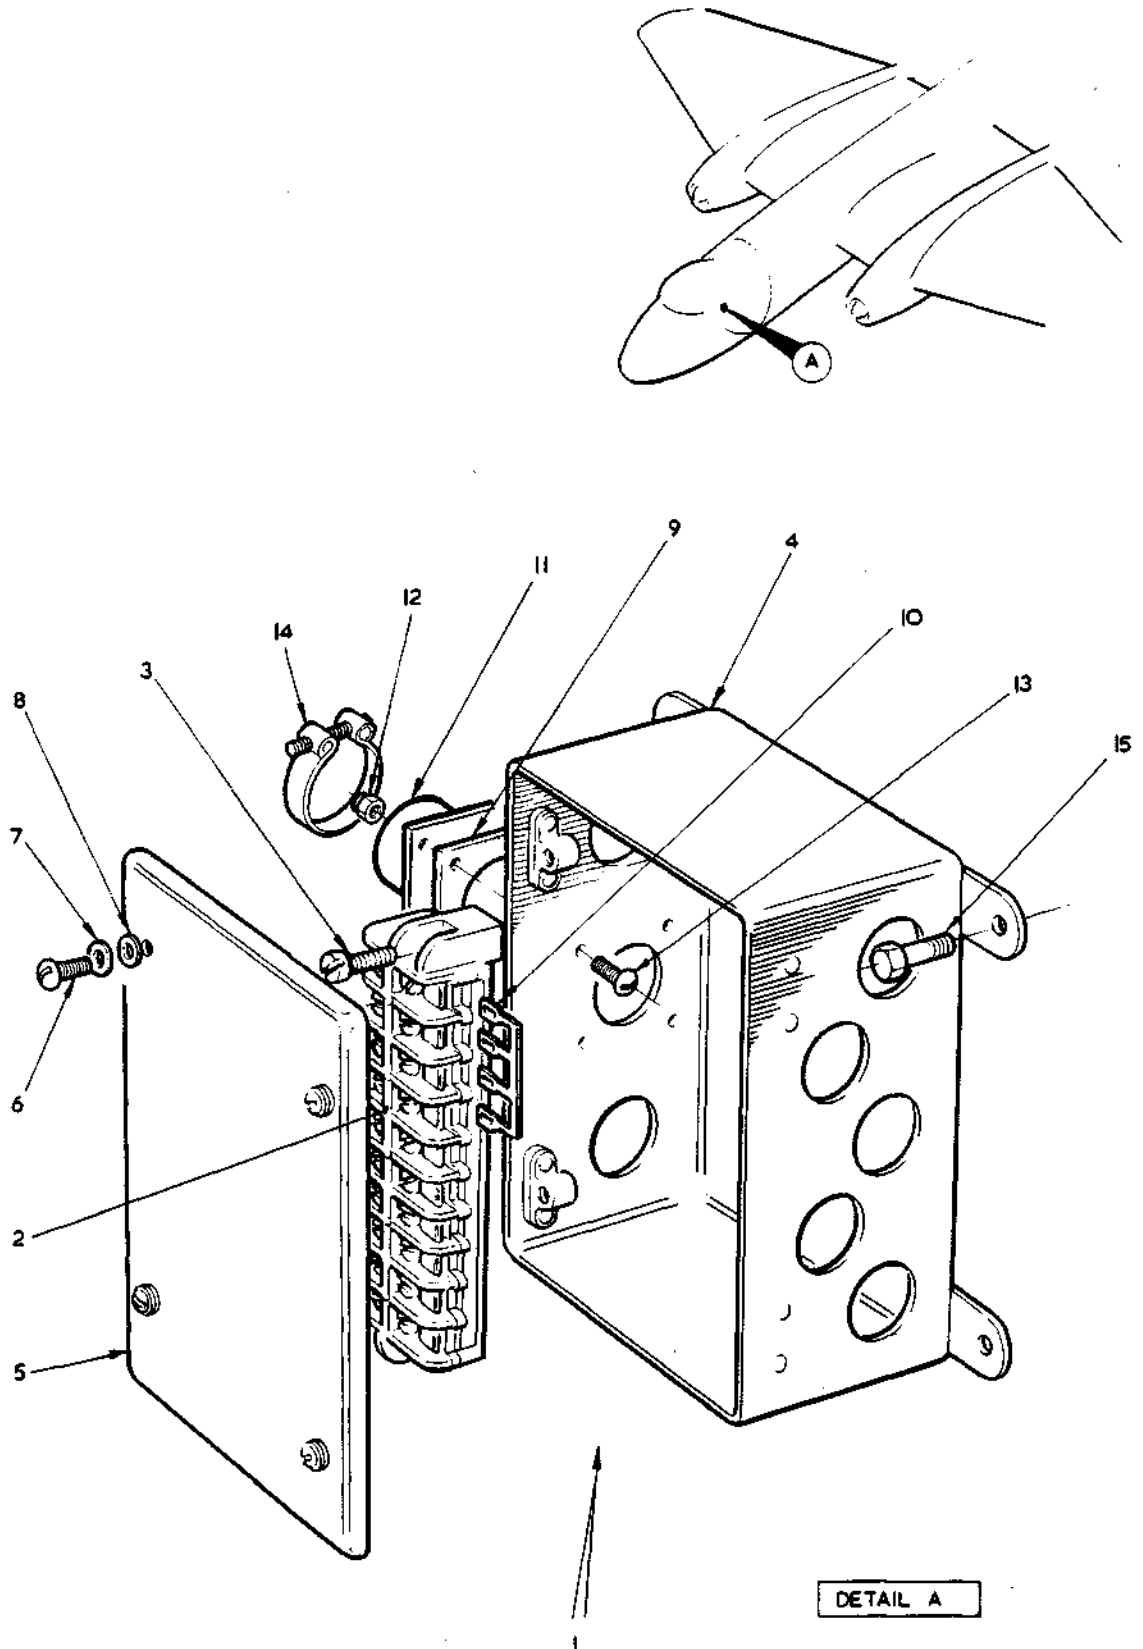


FIG. 5 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

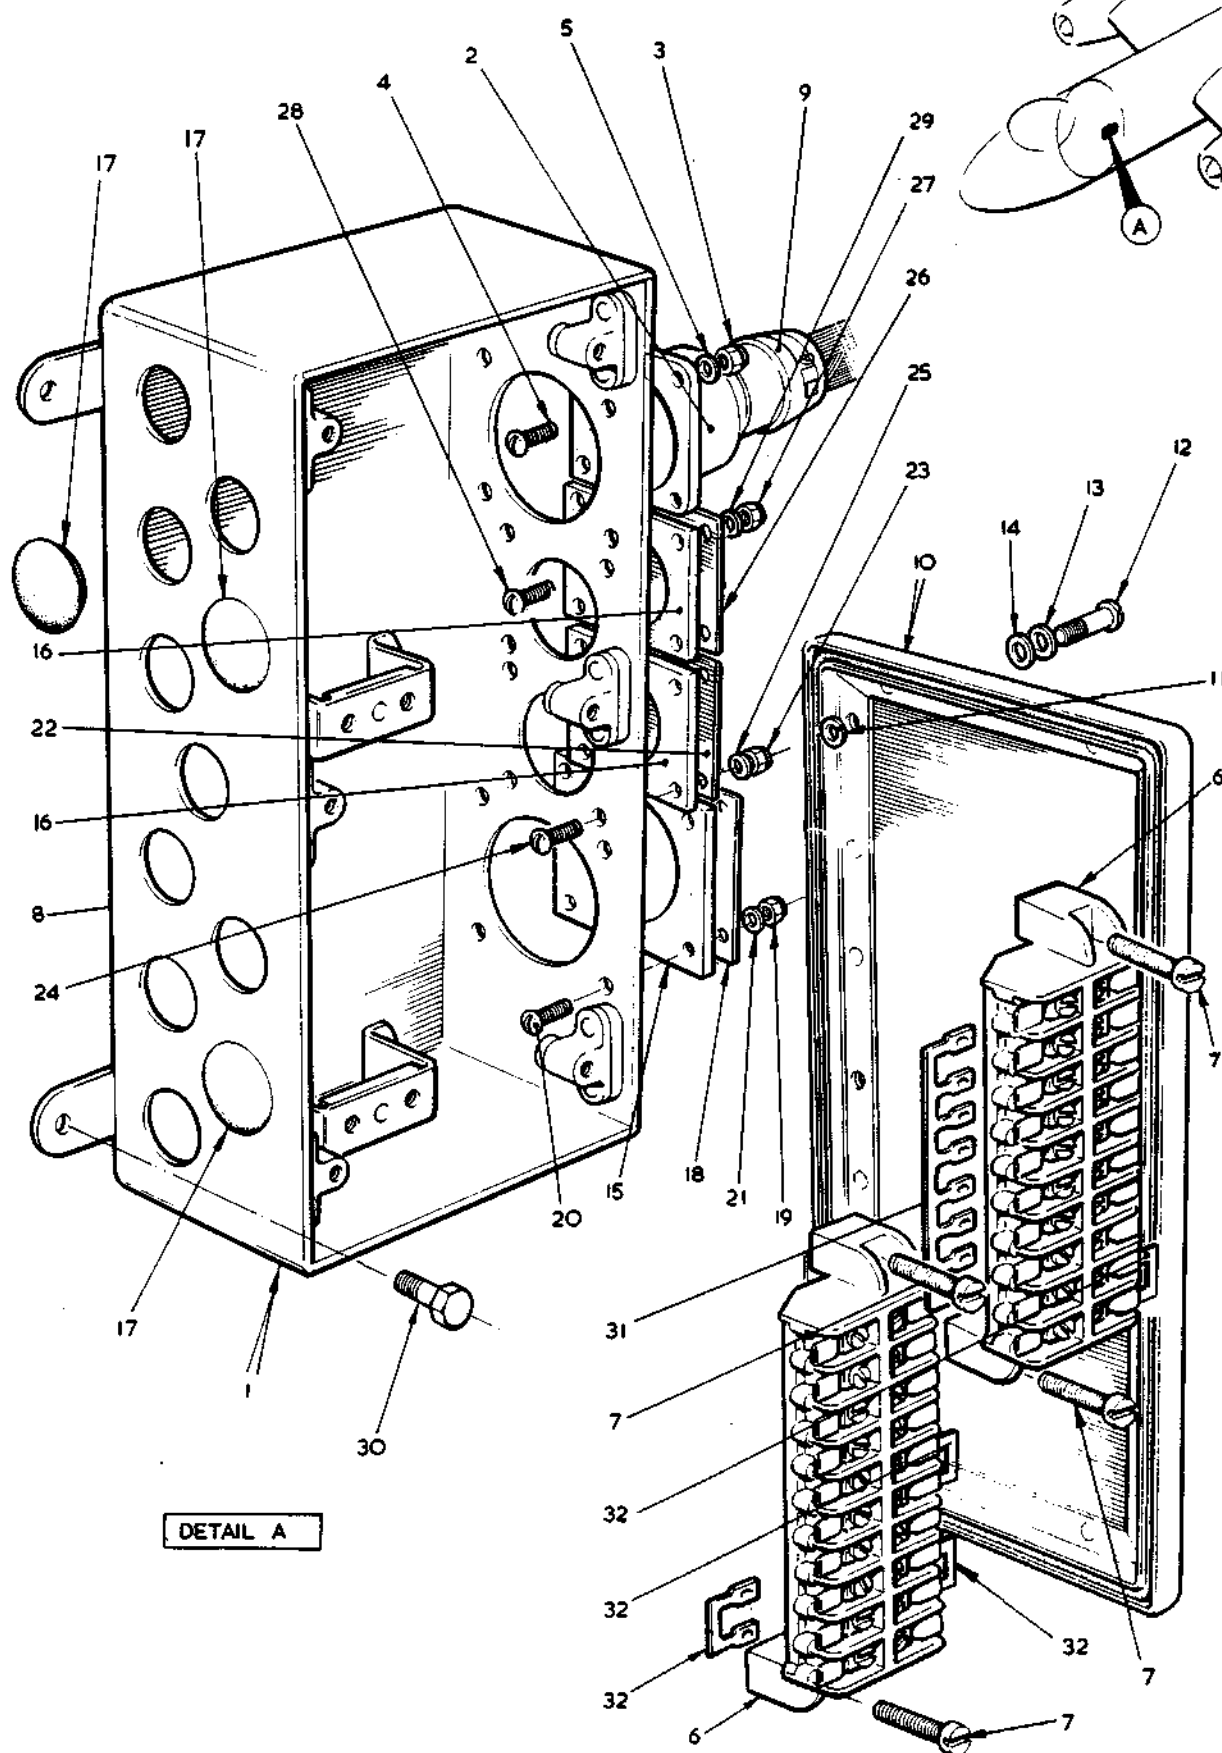


FIG. 6 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE
CODE Z

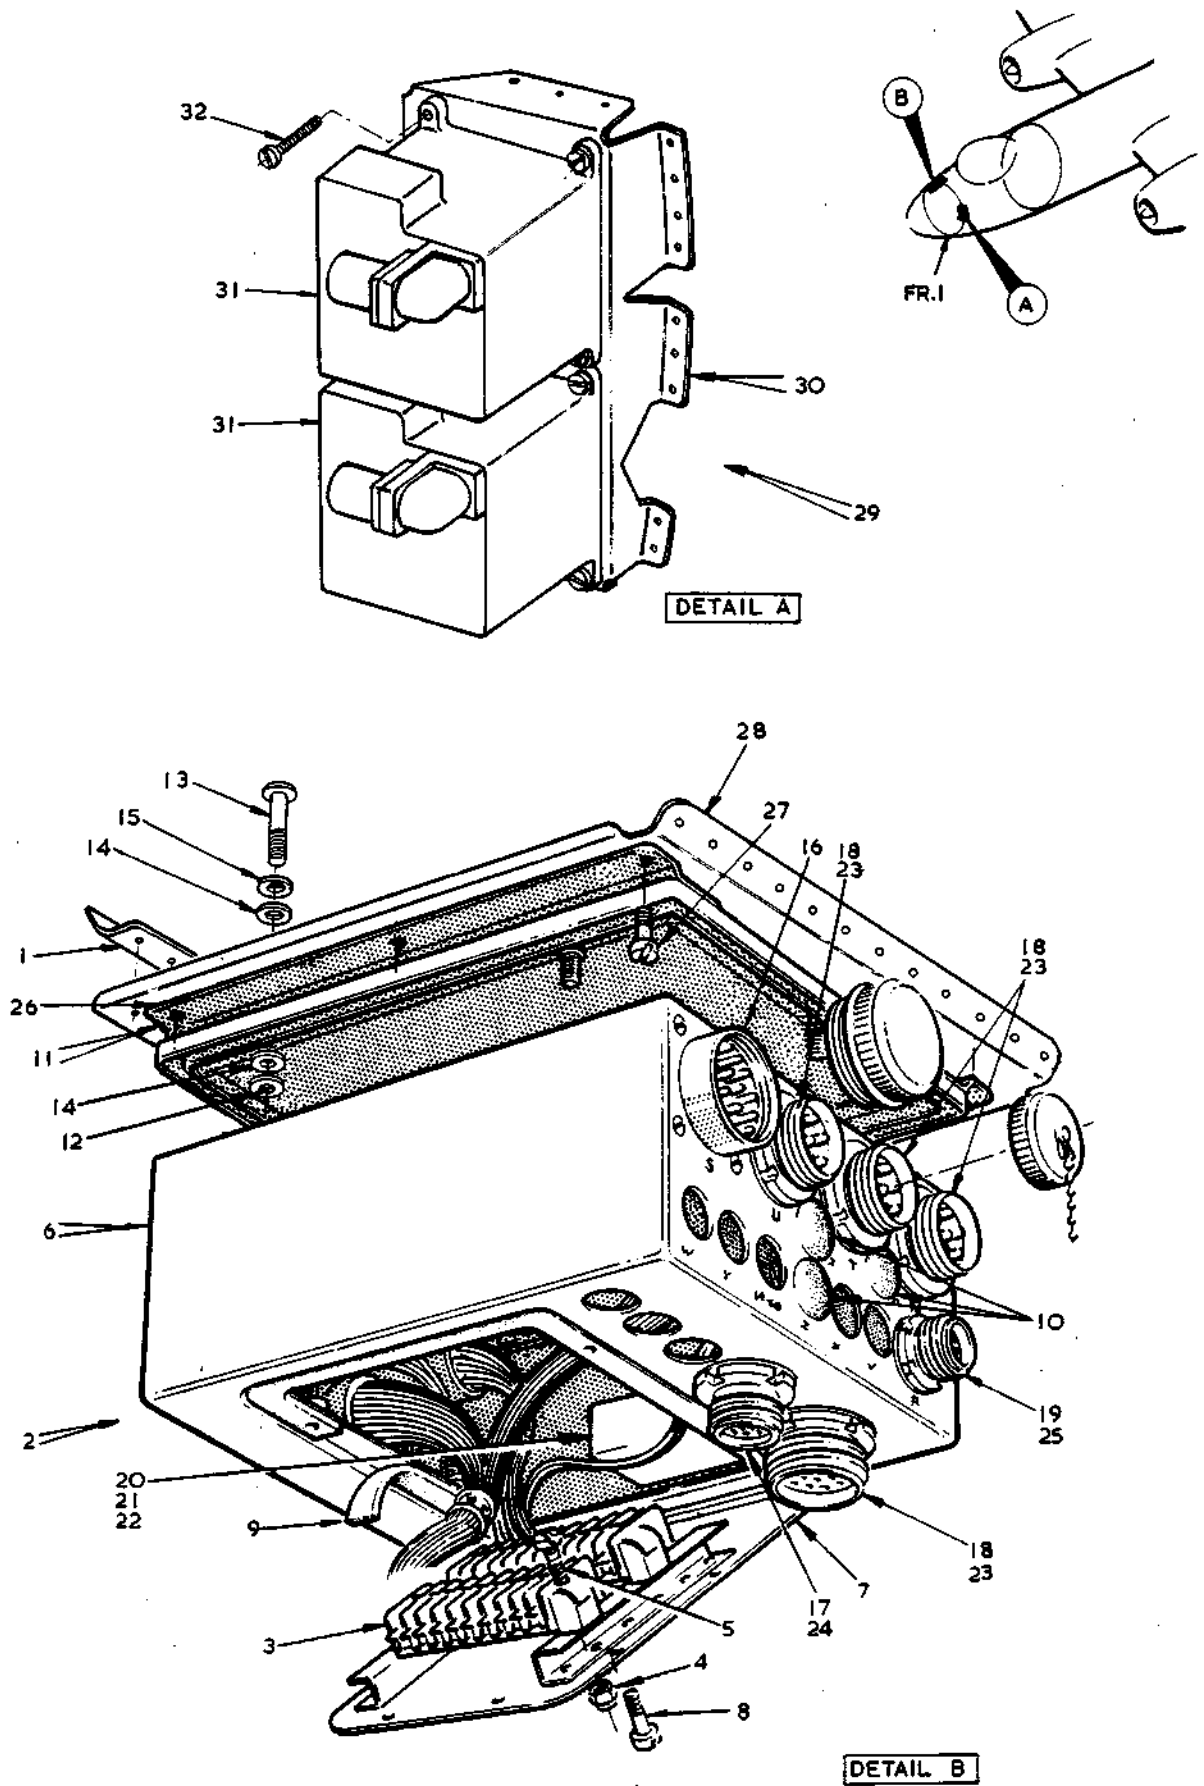


FIG. 7 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE Z

SECT.EB

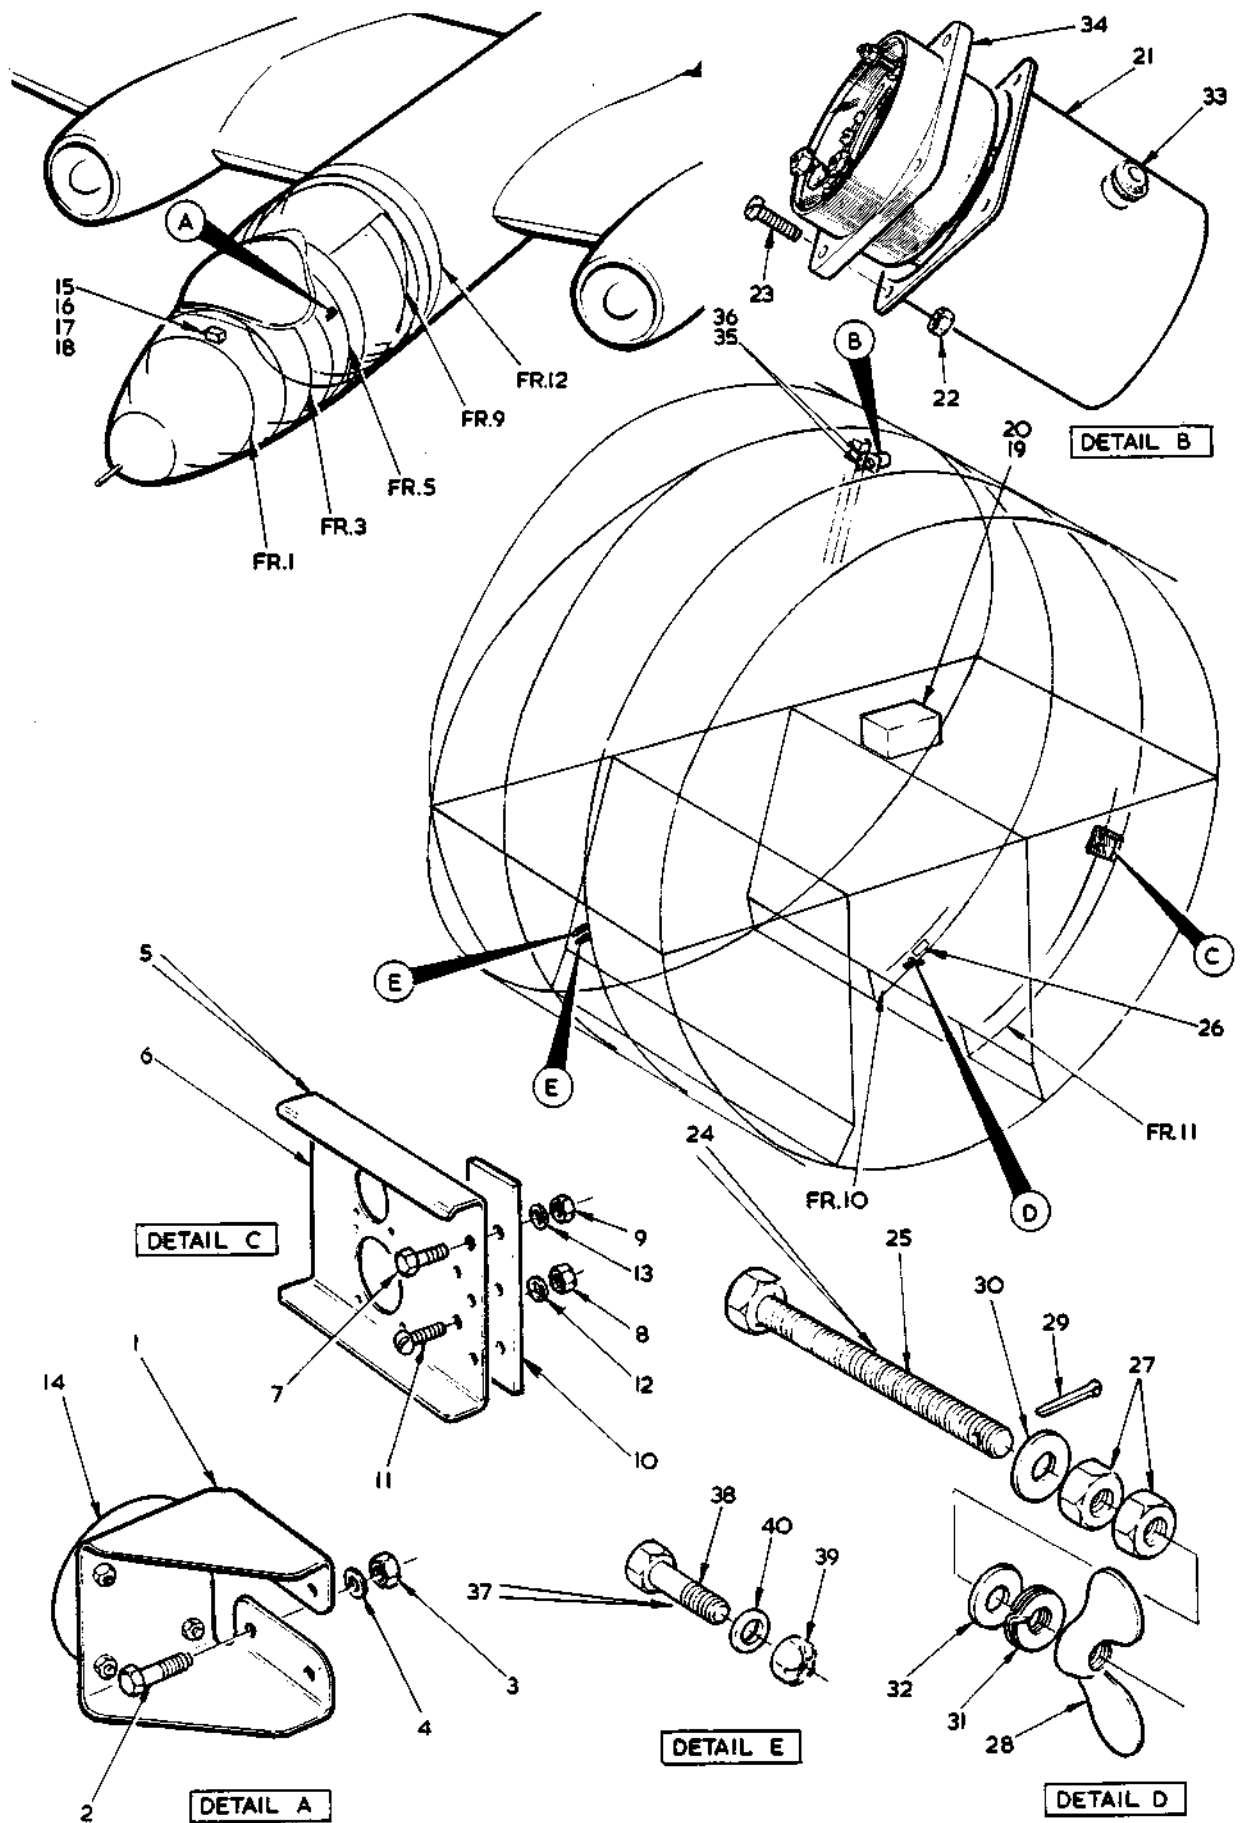


FIG. 8 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE Z

SECT.EB

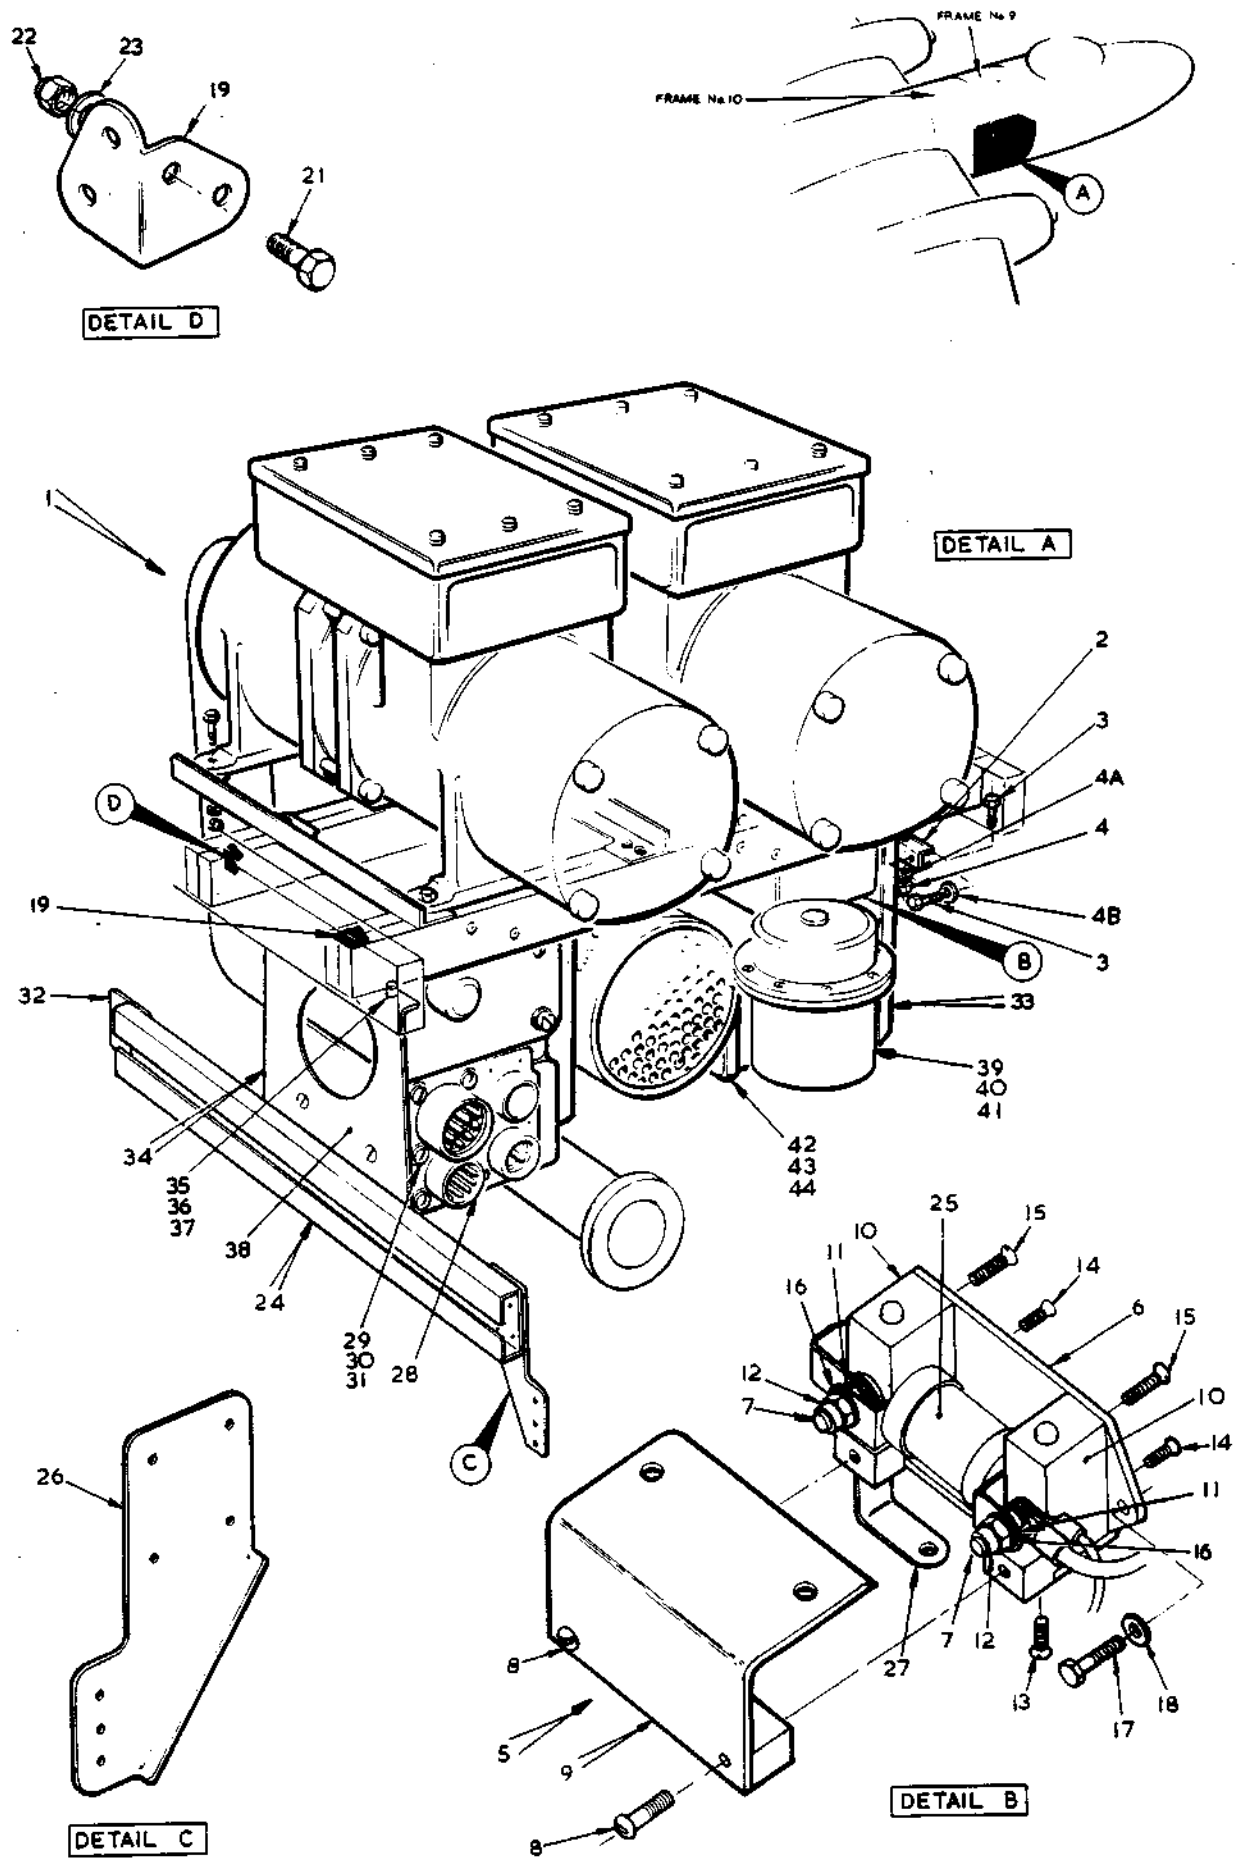


FIG. 9 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE Z

SECT.EB

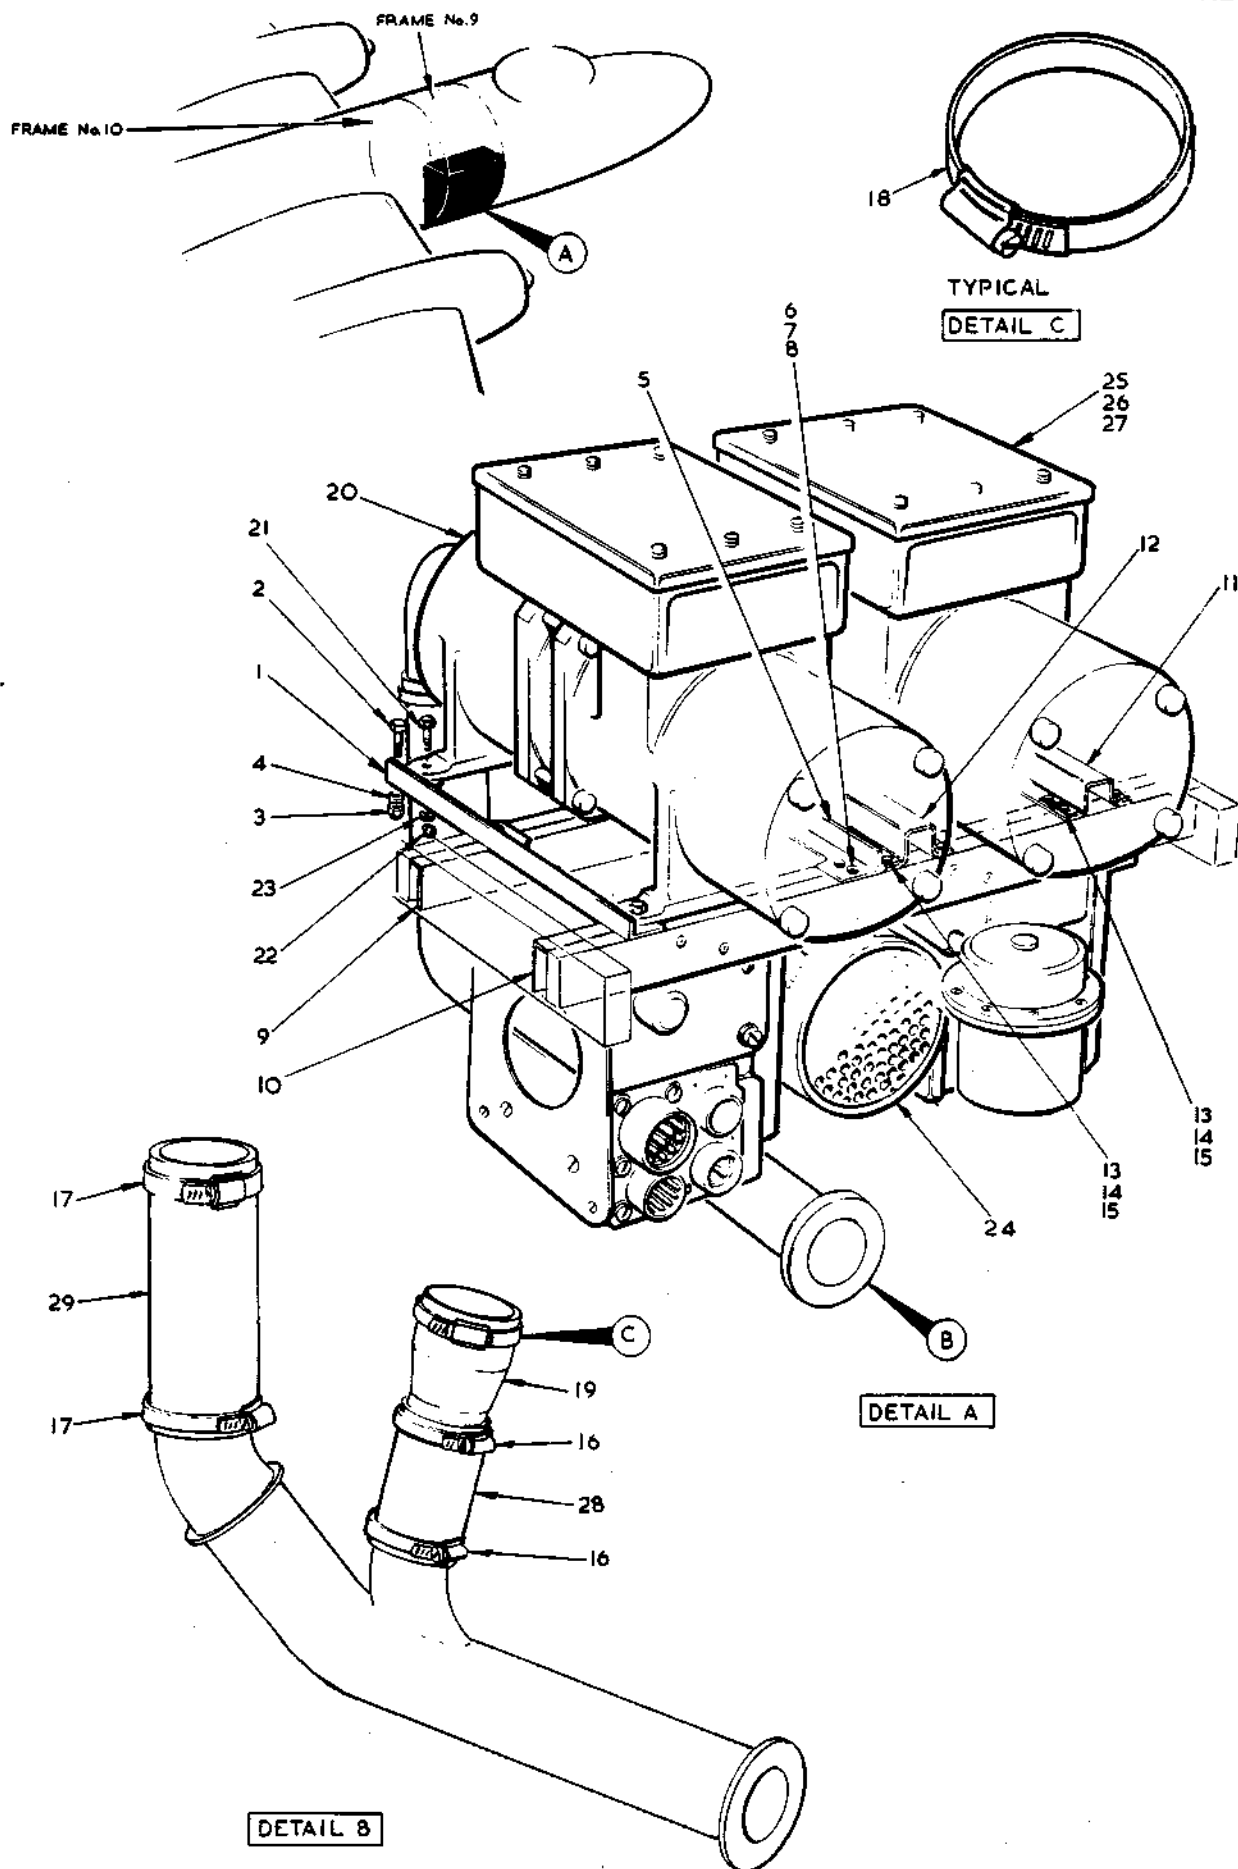


FIG. 10 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE Z

SECT. EB

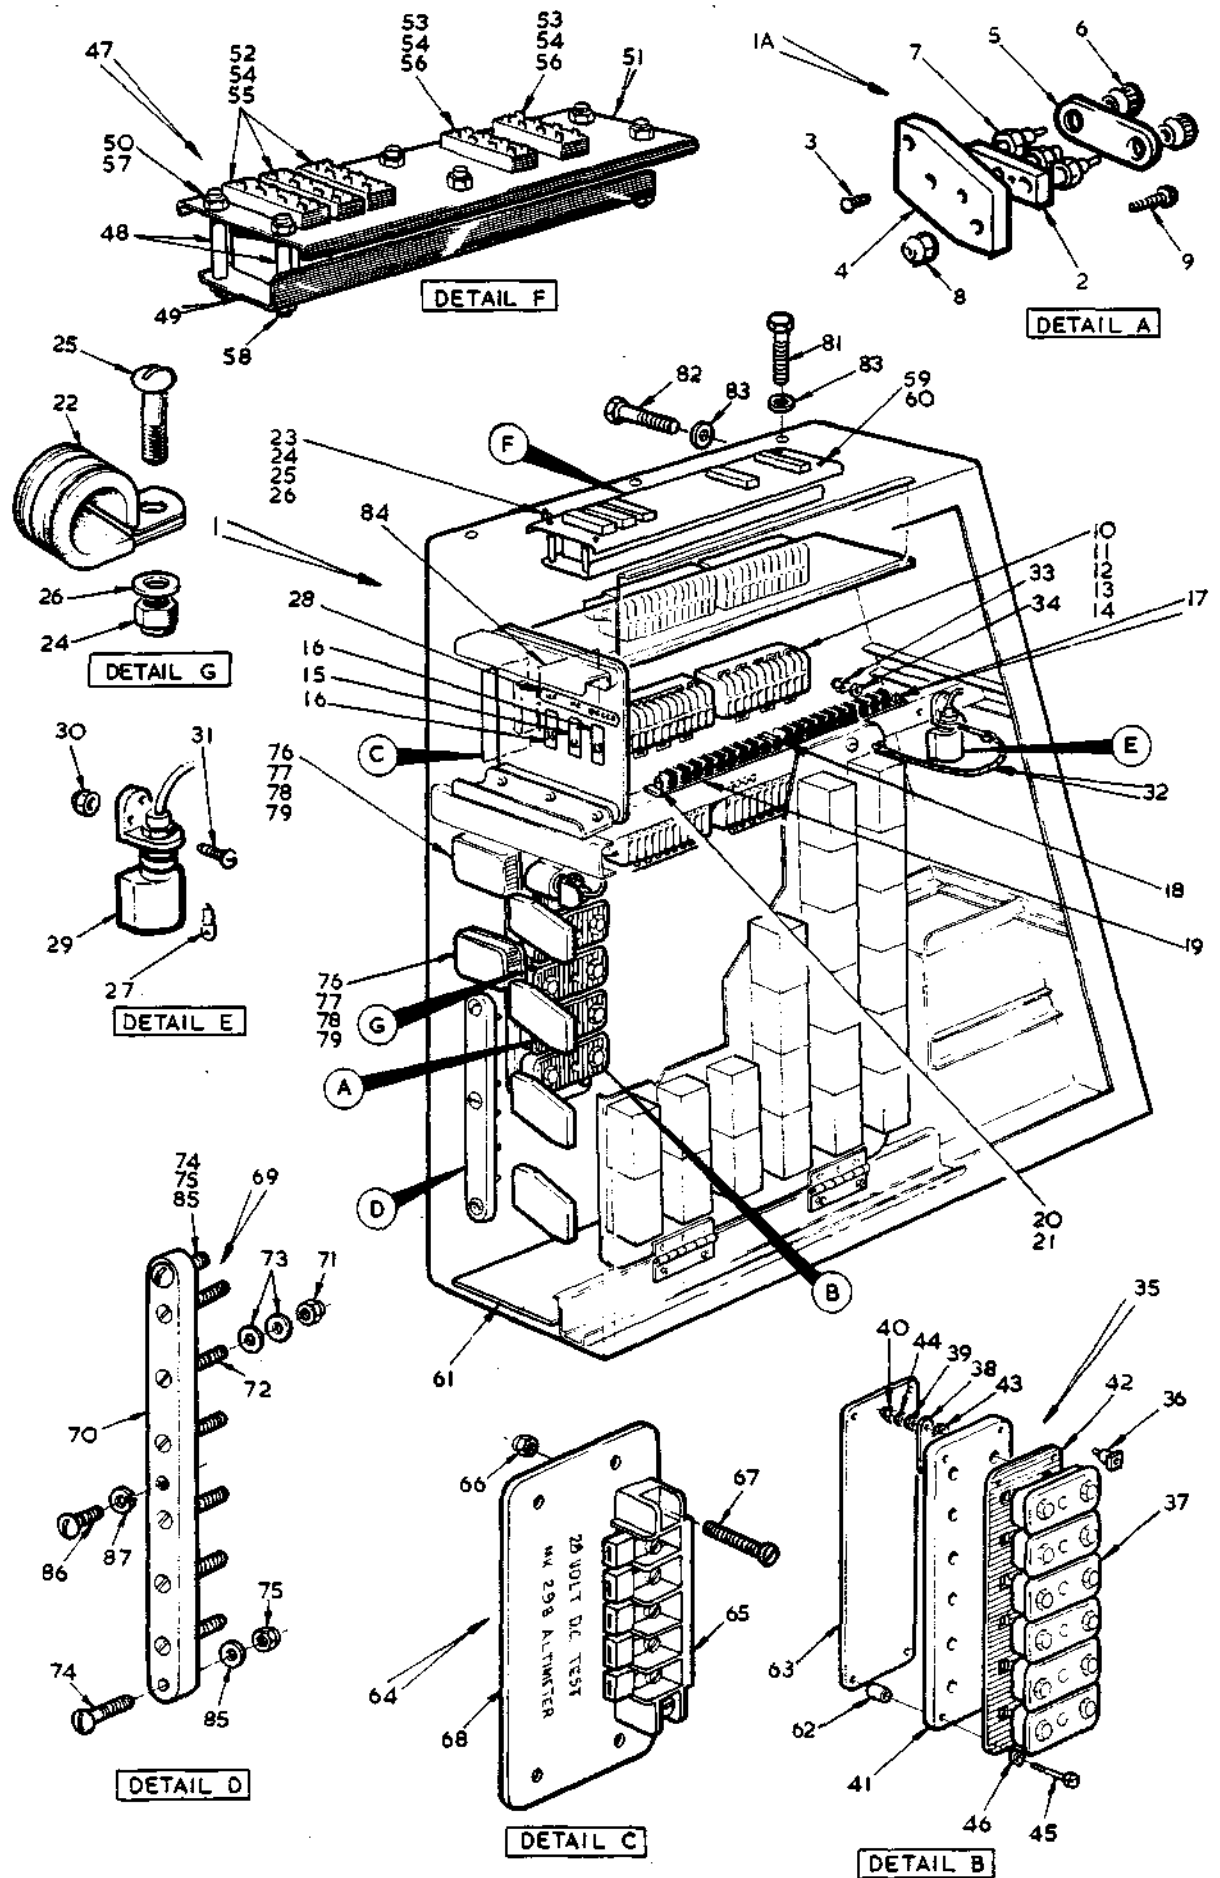


FIG. 12 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE Z

SECT. EB

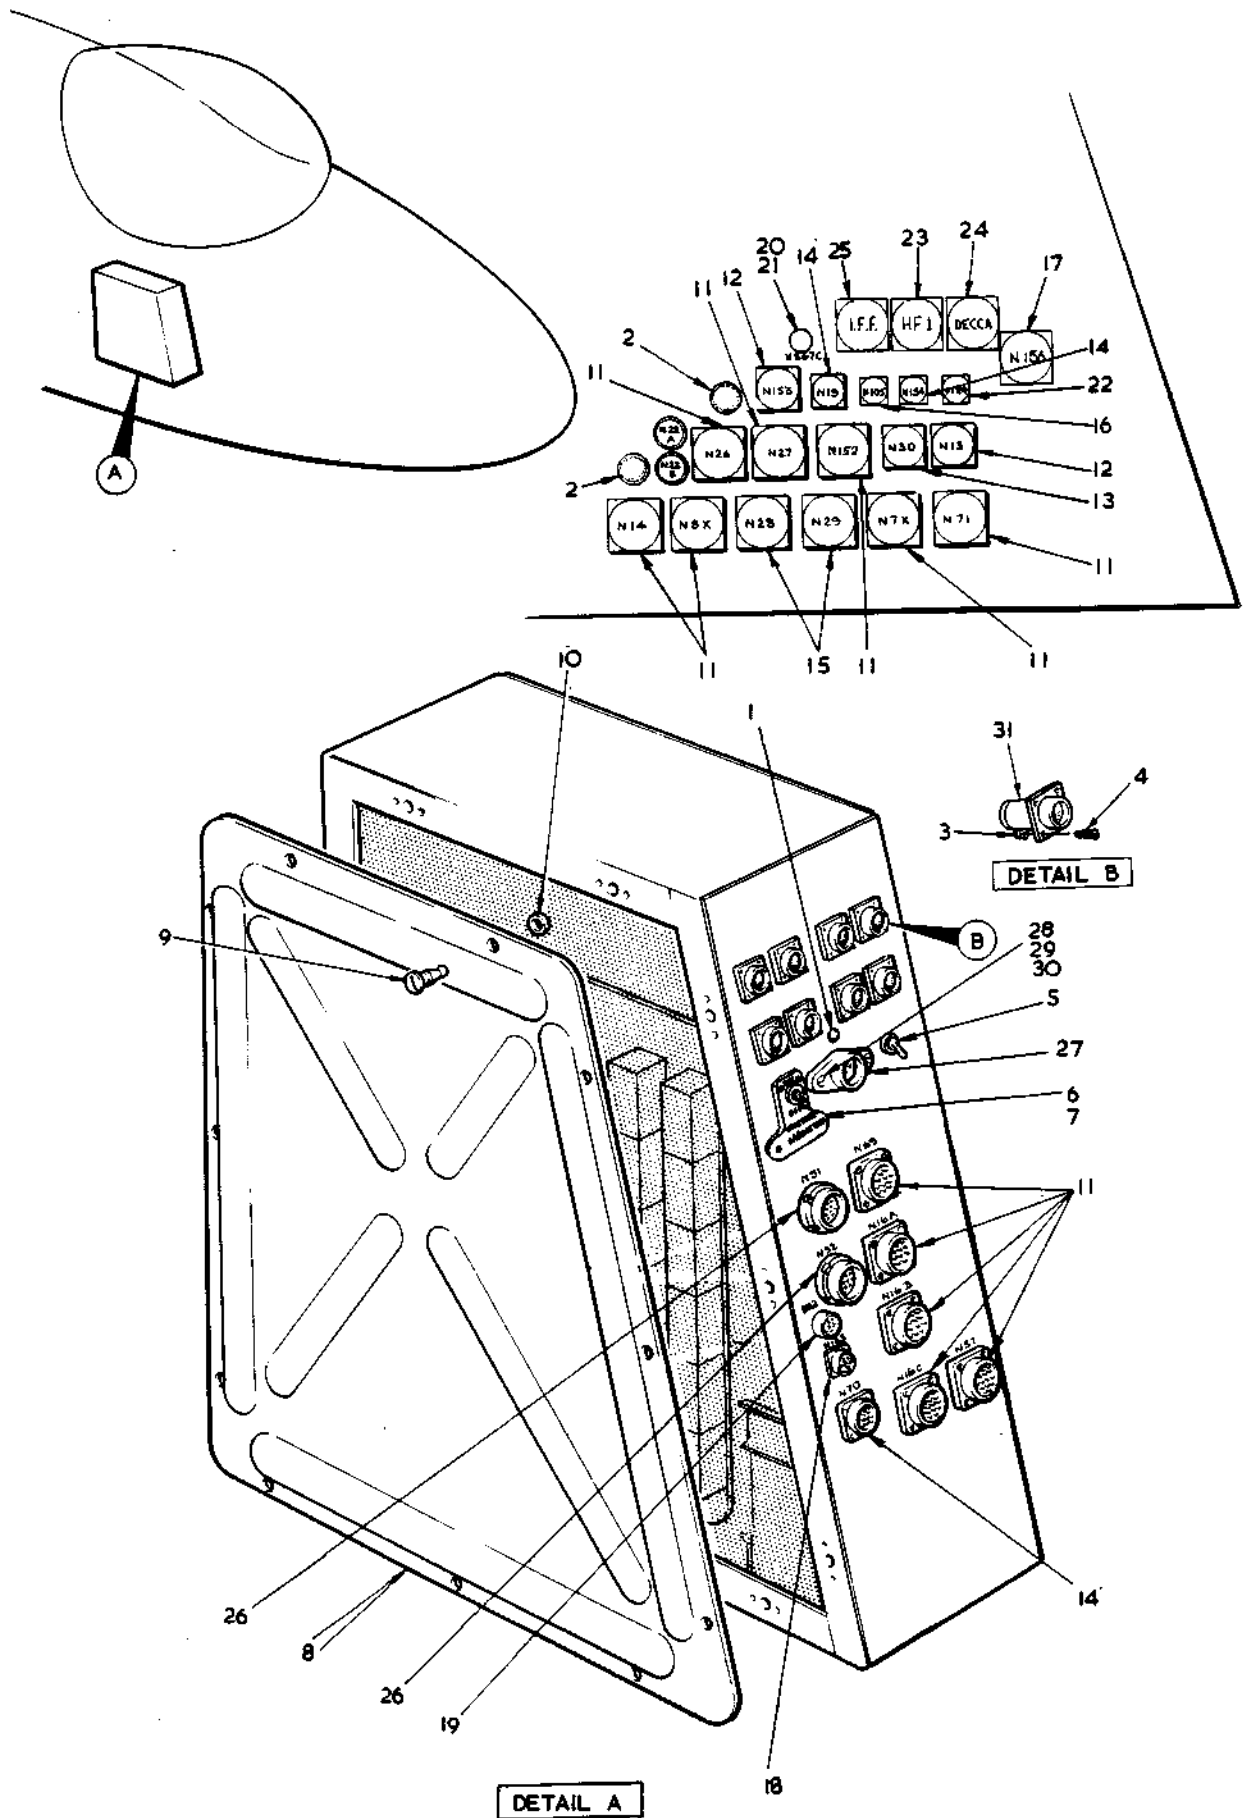


FIG. 13 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE
 CODE Z SECT. EB

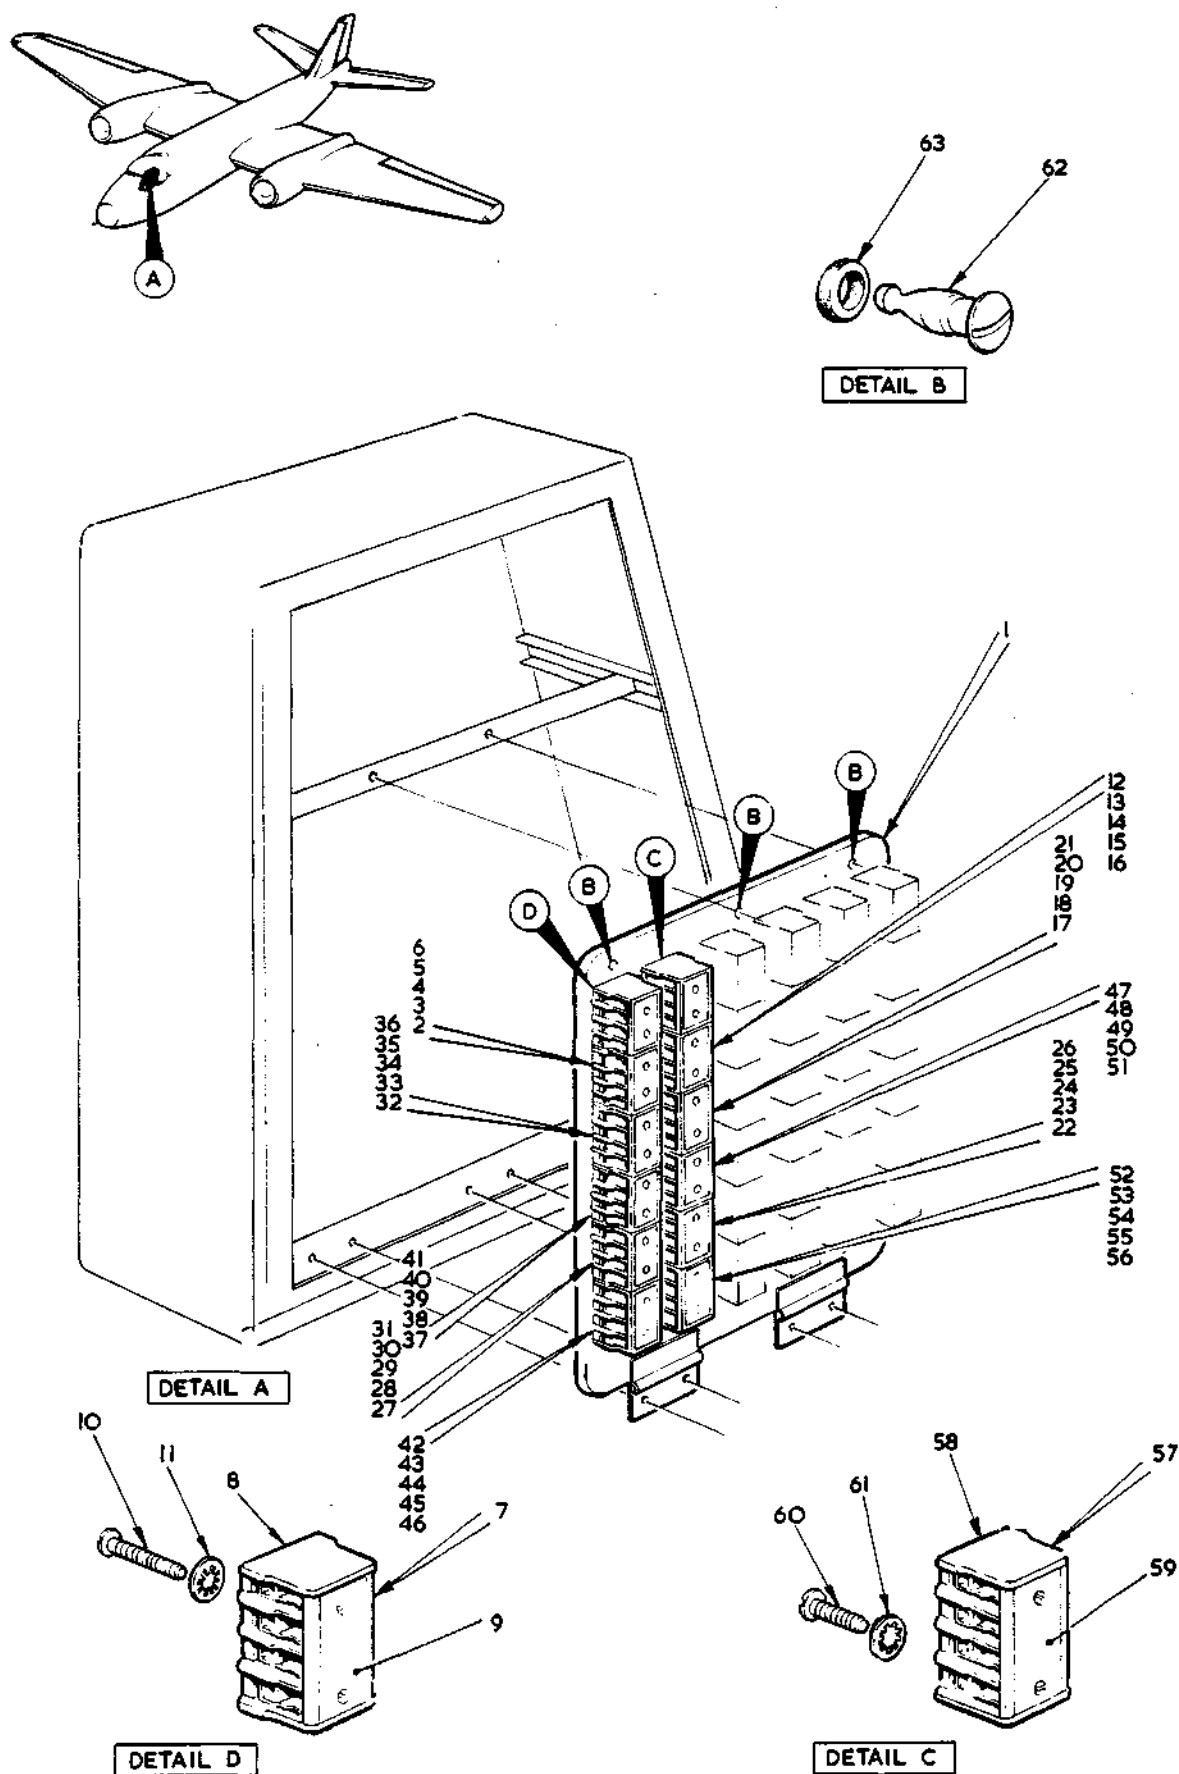


FIG. 14 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE Z

SECT. EB

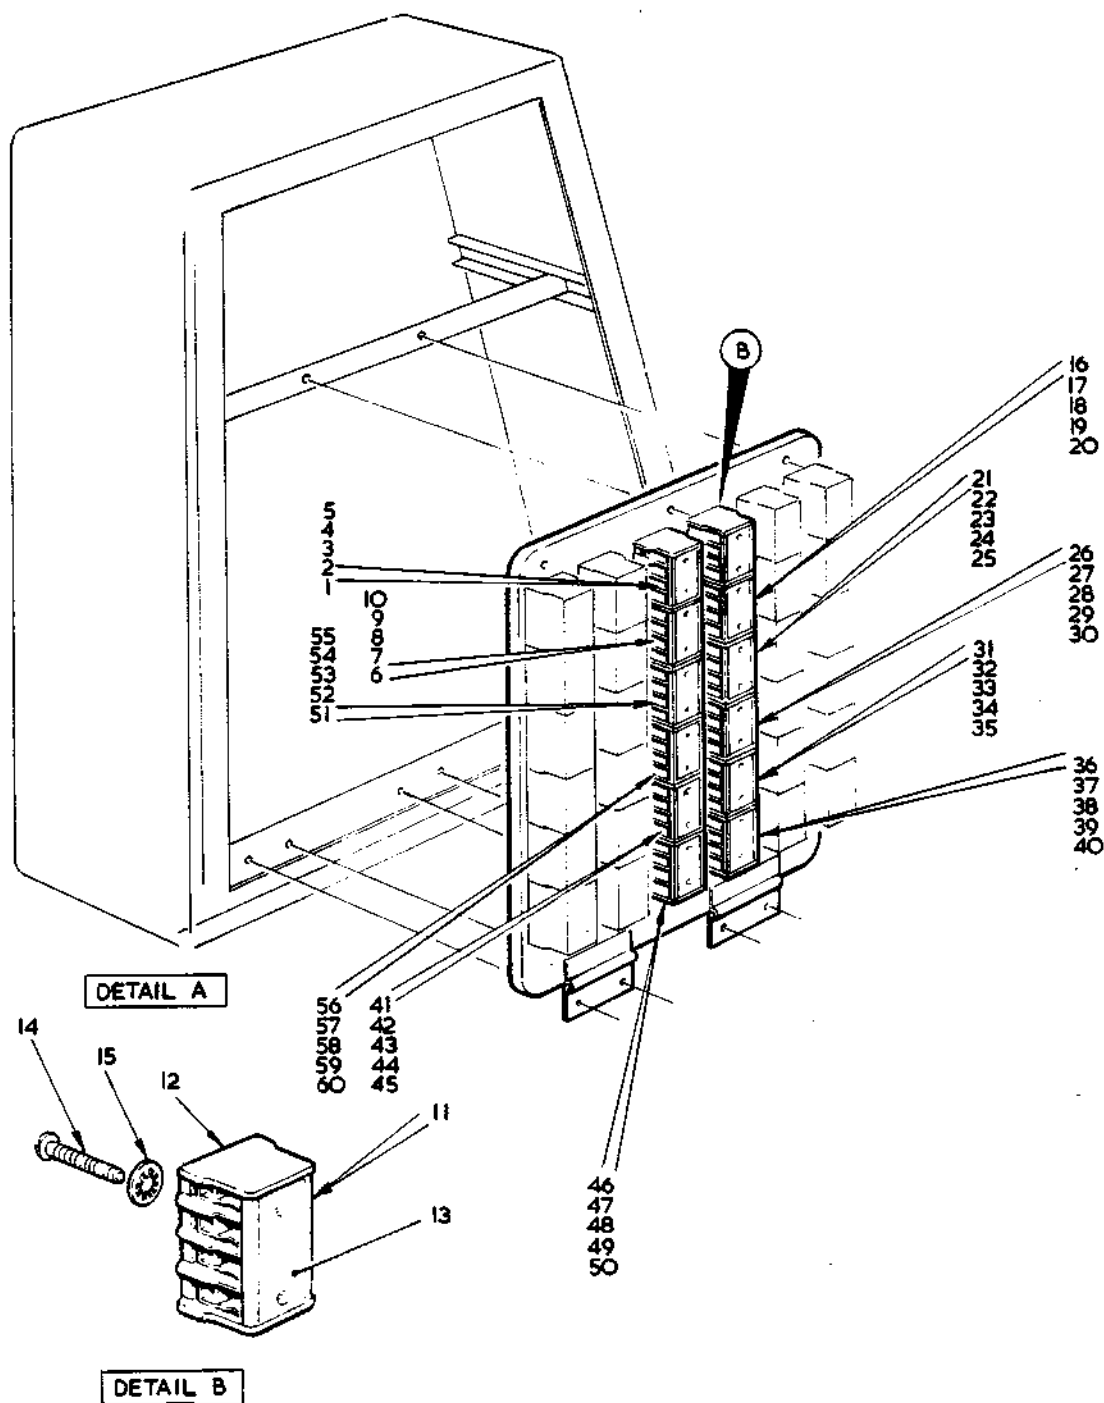
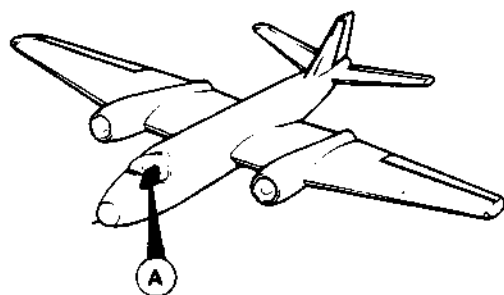


FIG. 14A ELECTRICAL EQUIPMENT IN FRONT FUSELAGE
 CODE Z SECT.EB

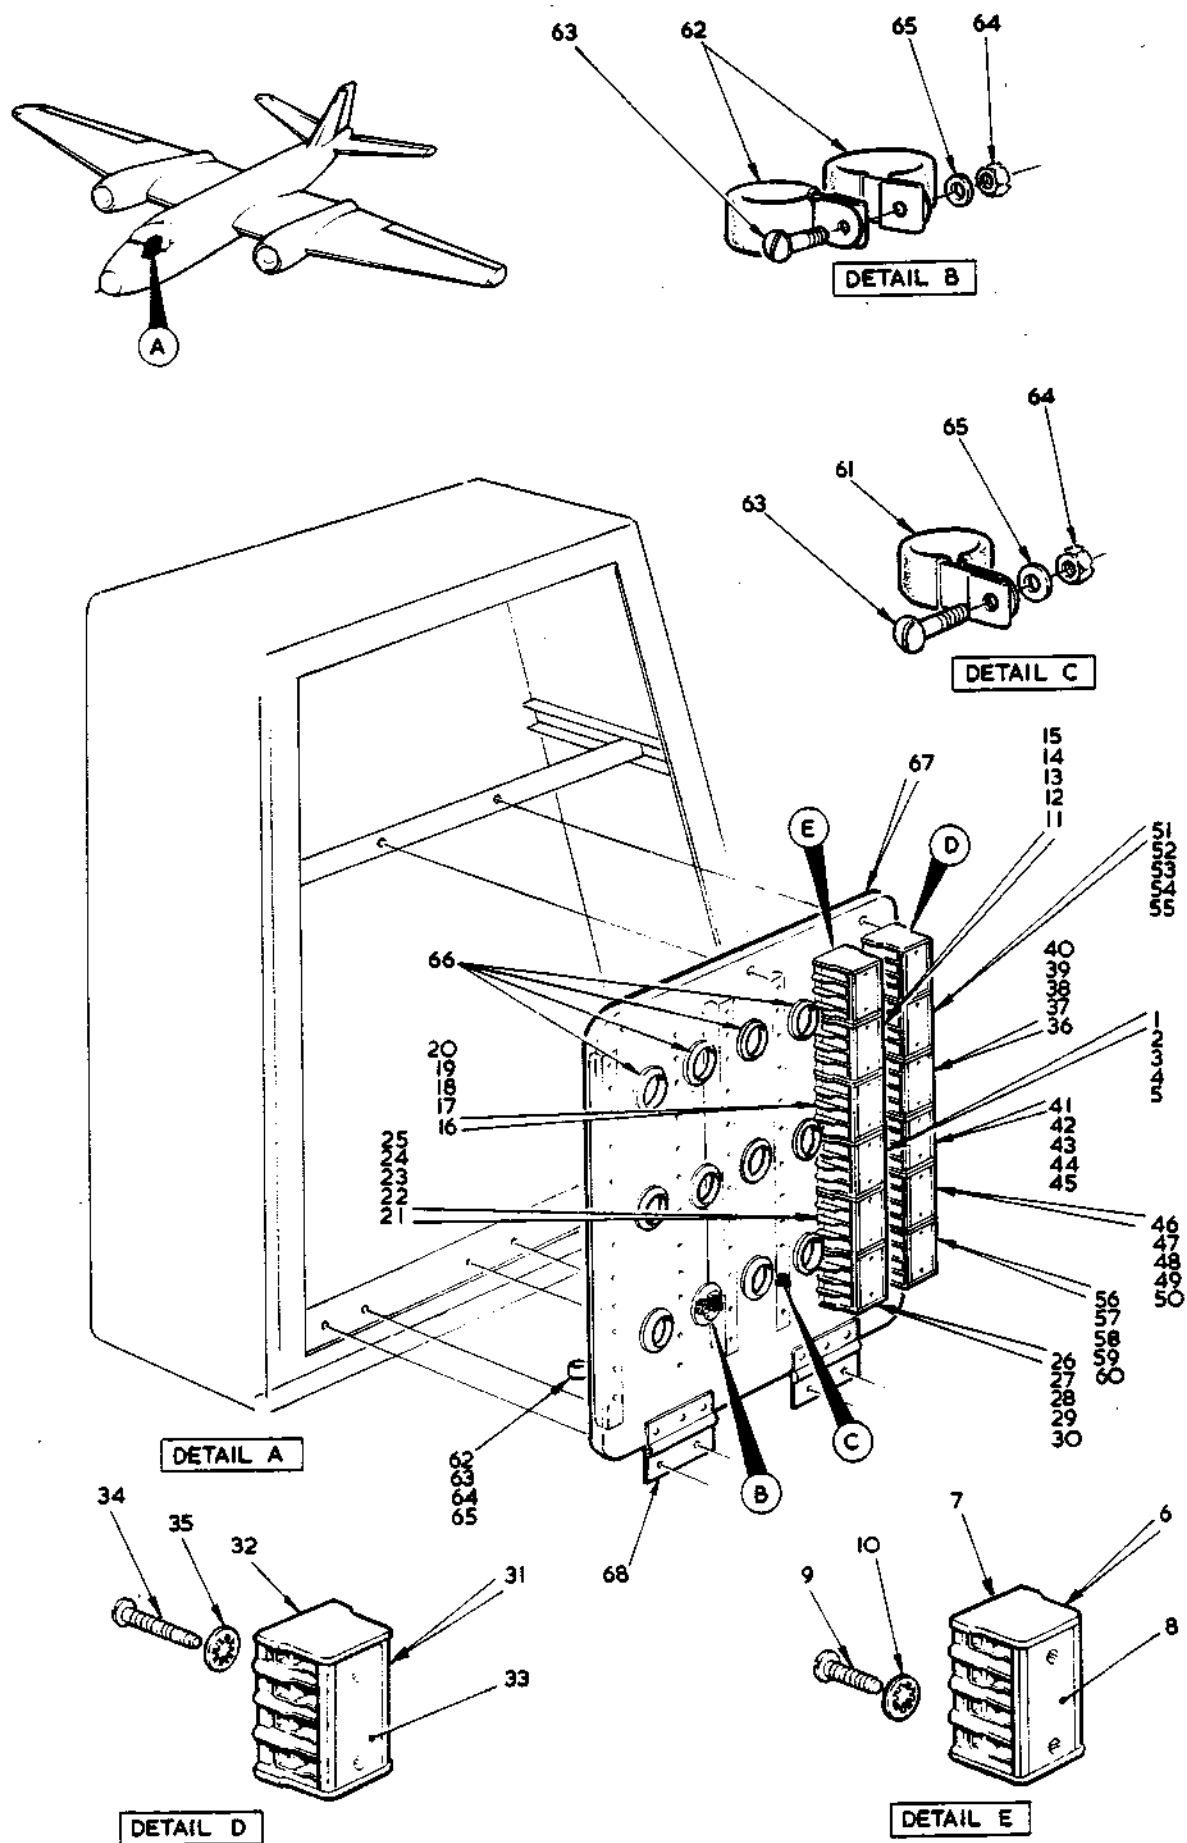


FIG.14B ELECTRICAL EQUIPMENT IN FRONT FUSELAGE
 CODE Z SECT.EB

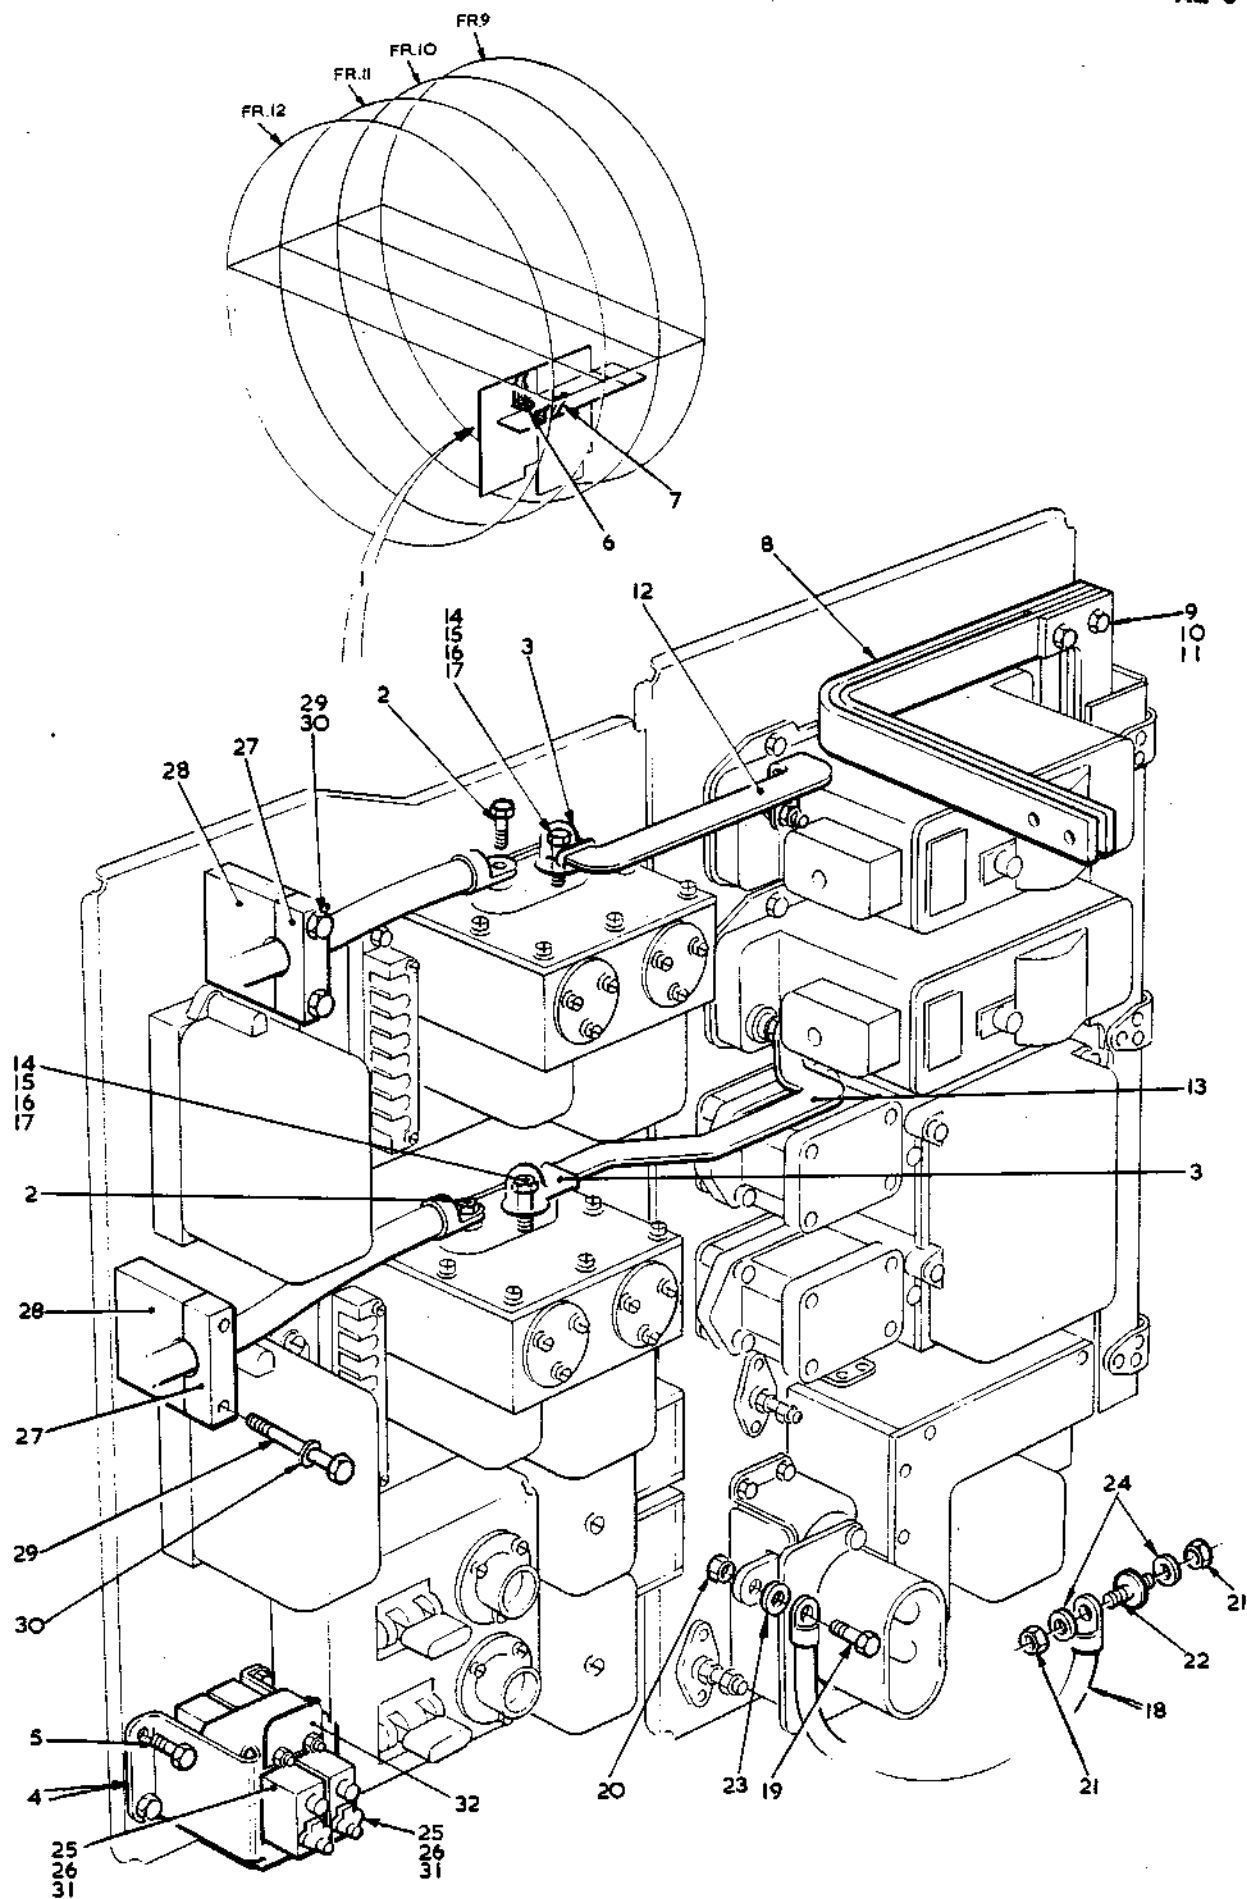


FIG. 15 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE Z

SECT. EB

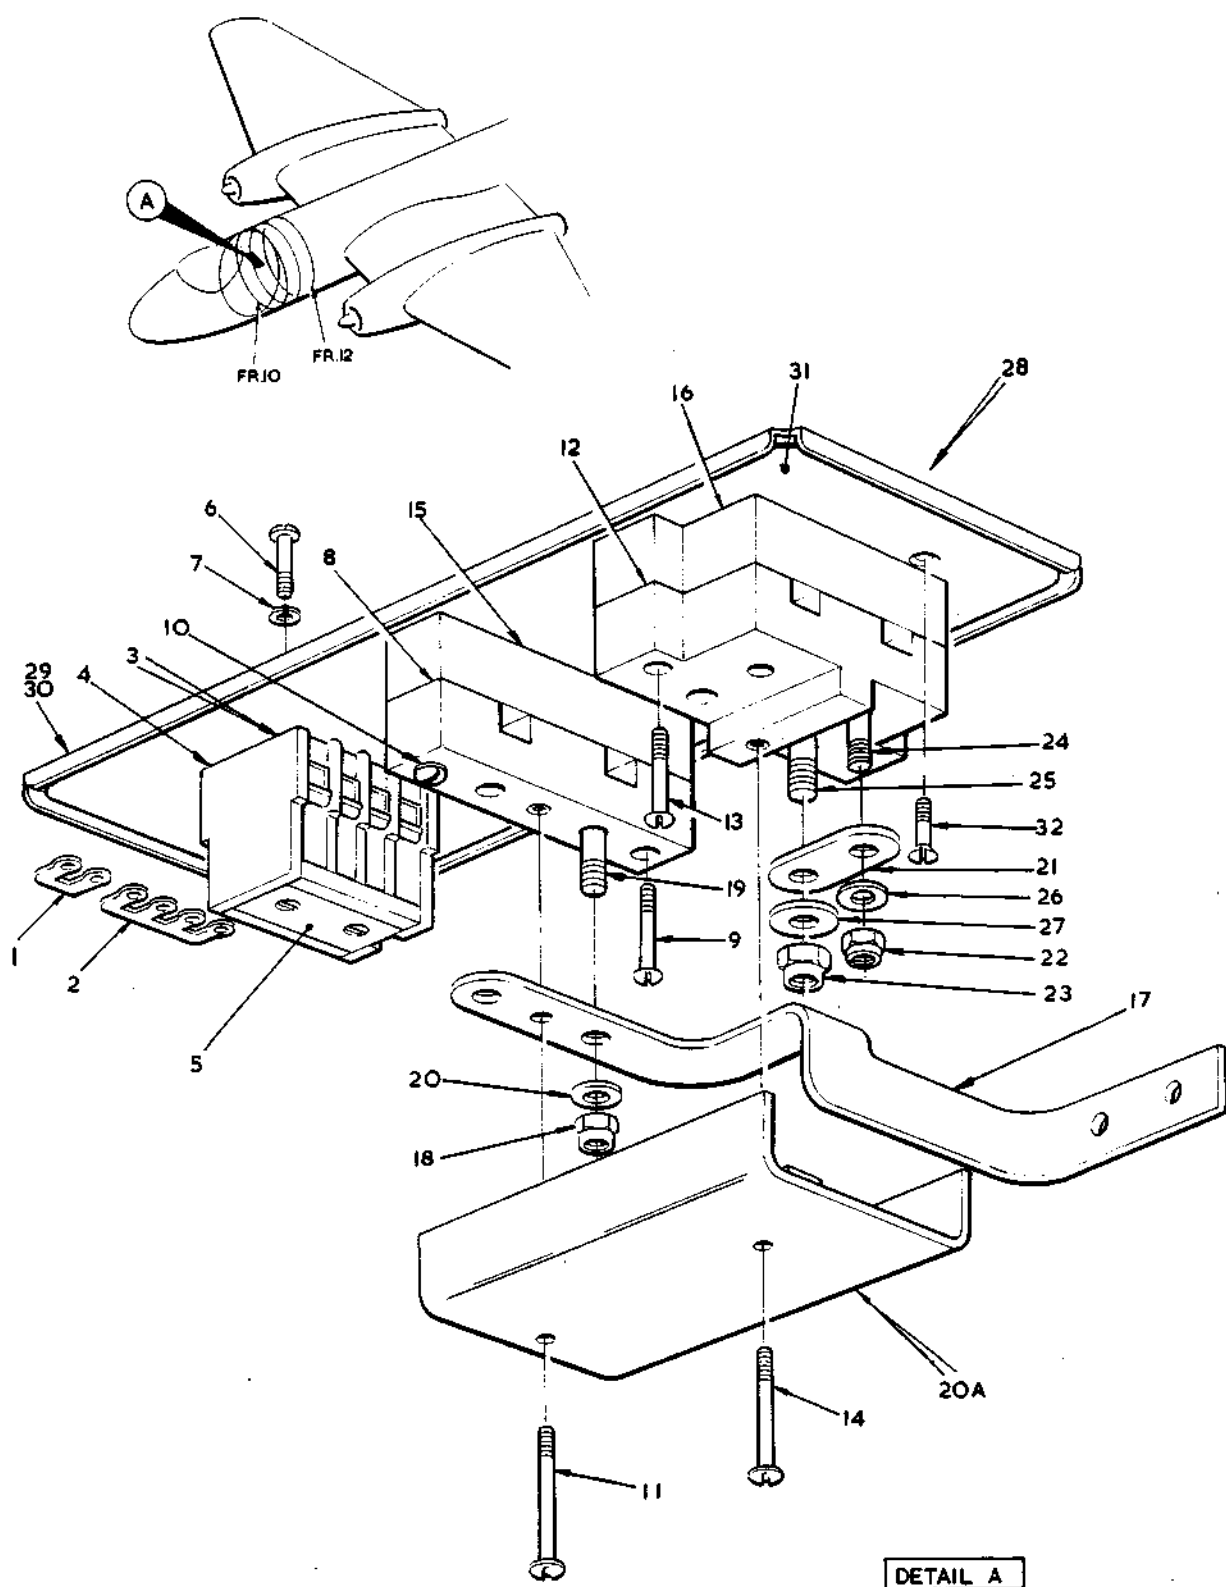


FIG. 16 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE Z

SECT.EB

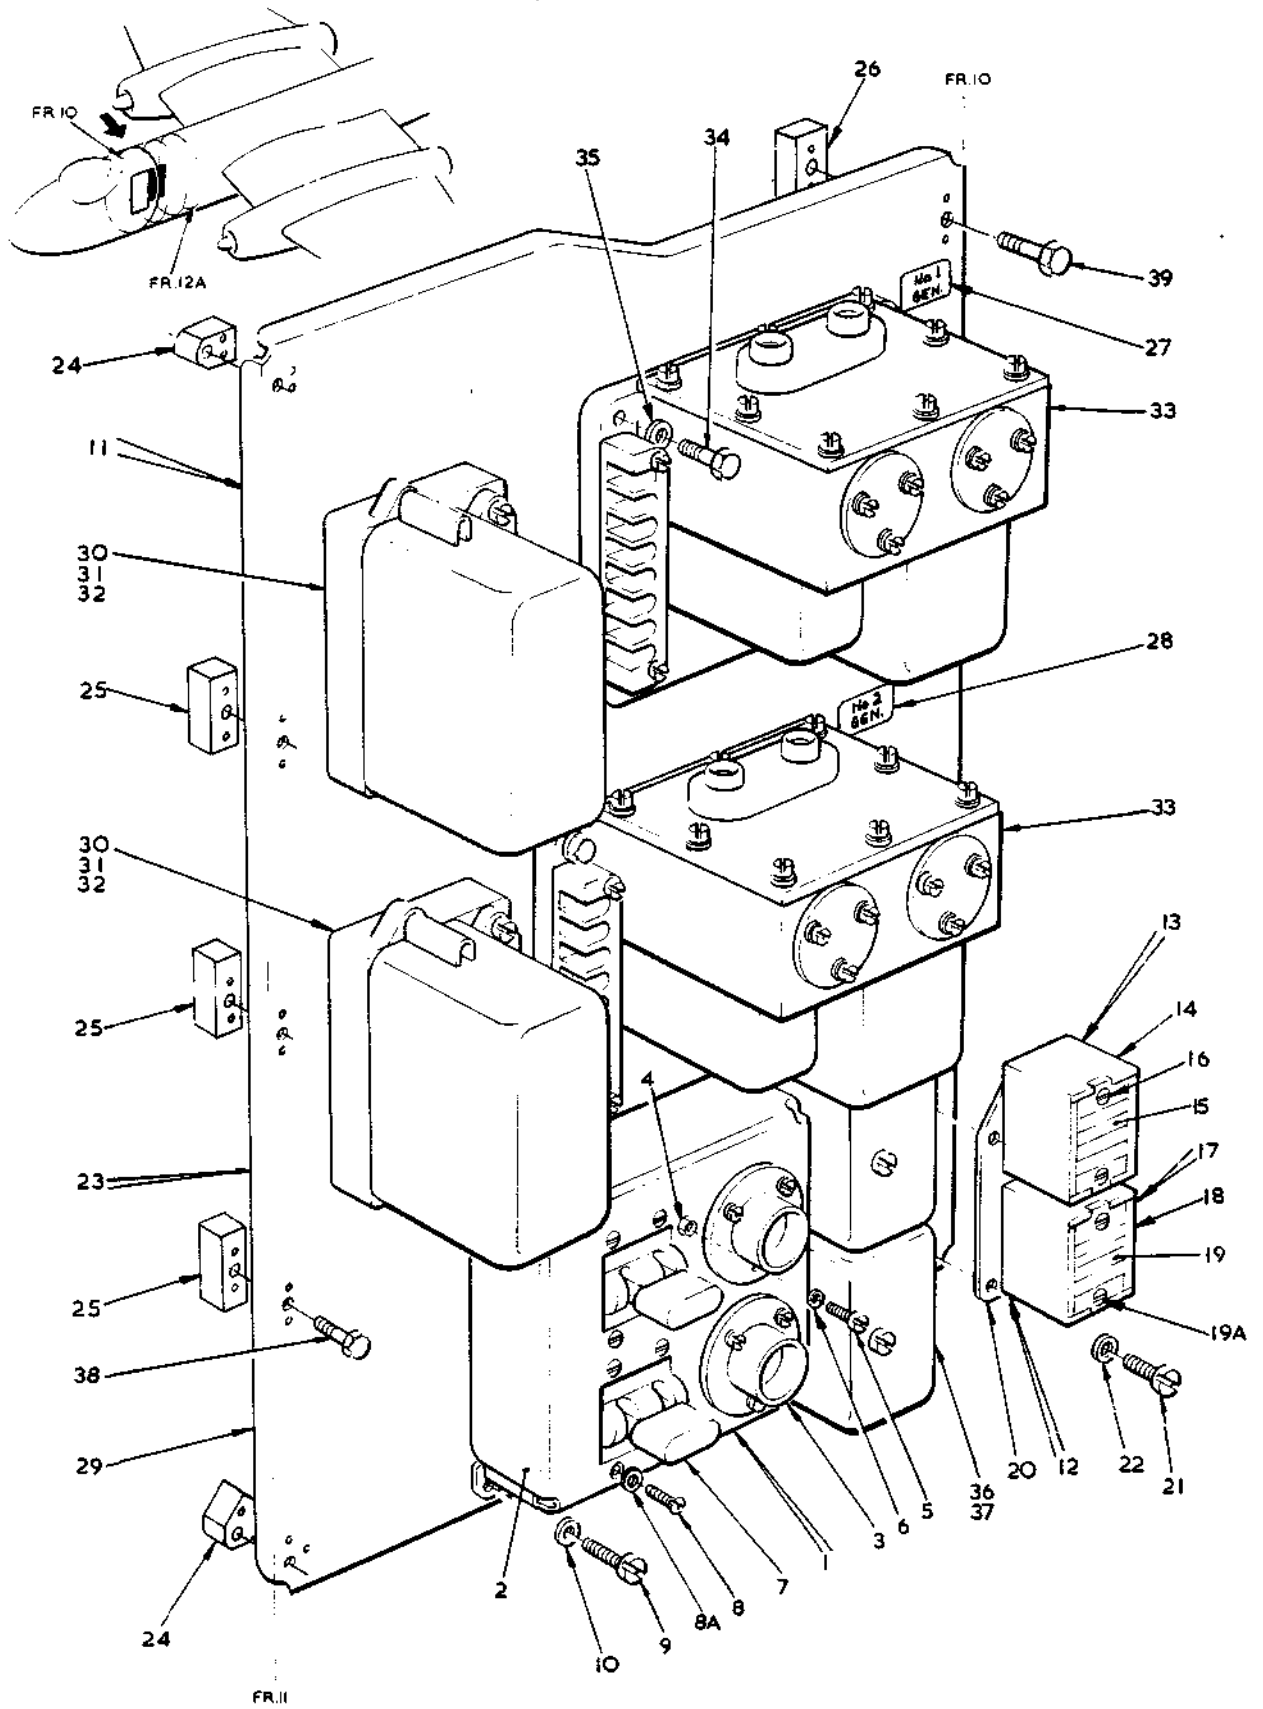


FIG. 17 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE
 CODE Z SECT.EB

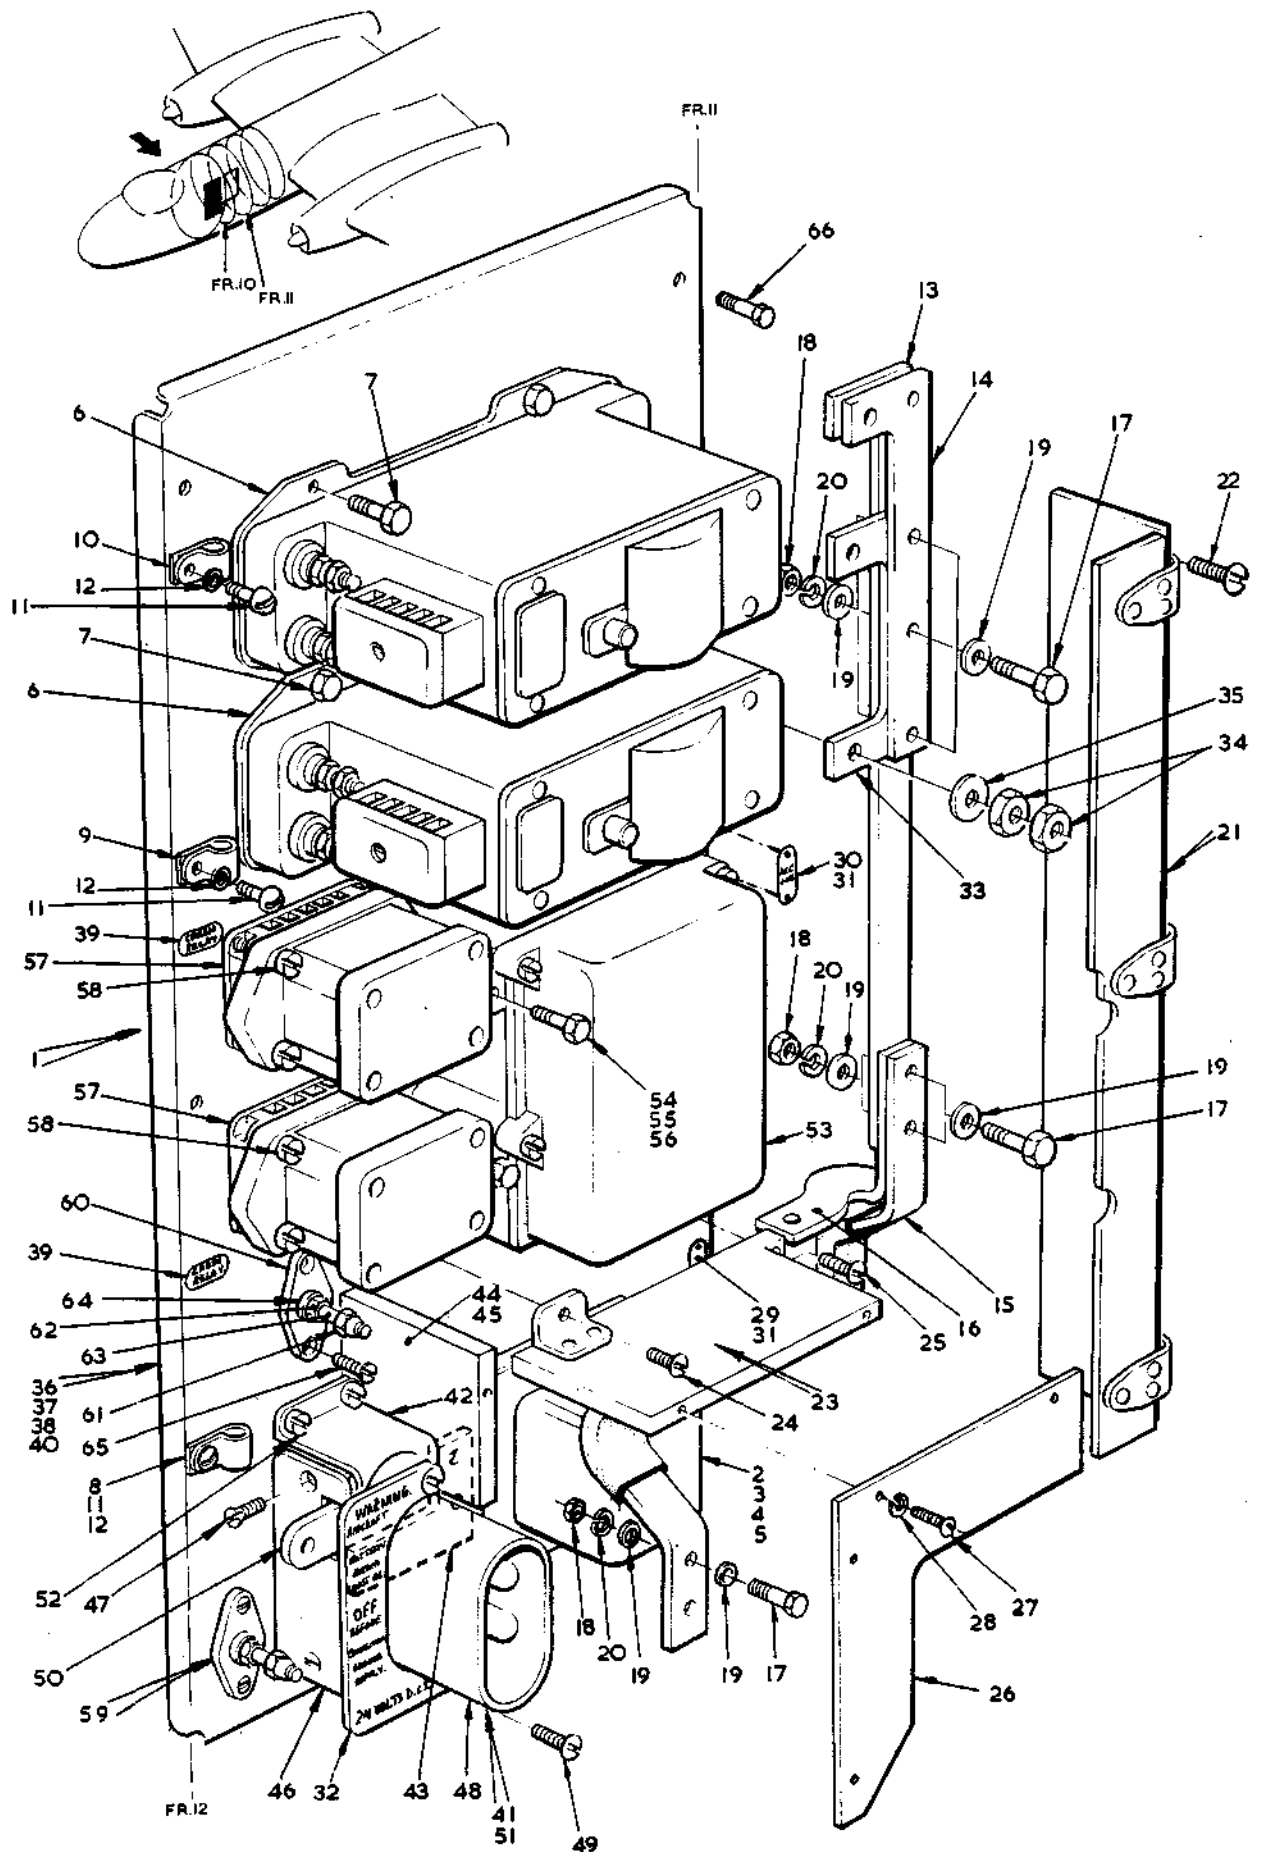


FIG. 18 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE
 CODE Z SECT. EB

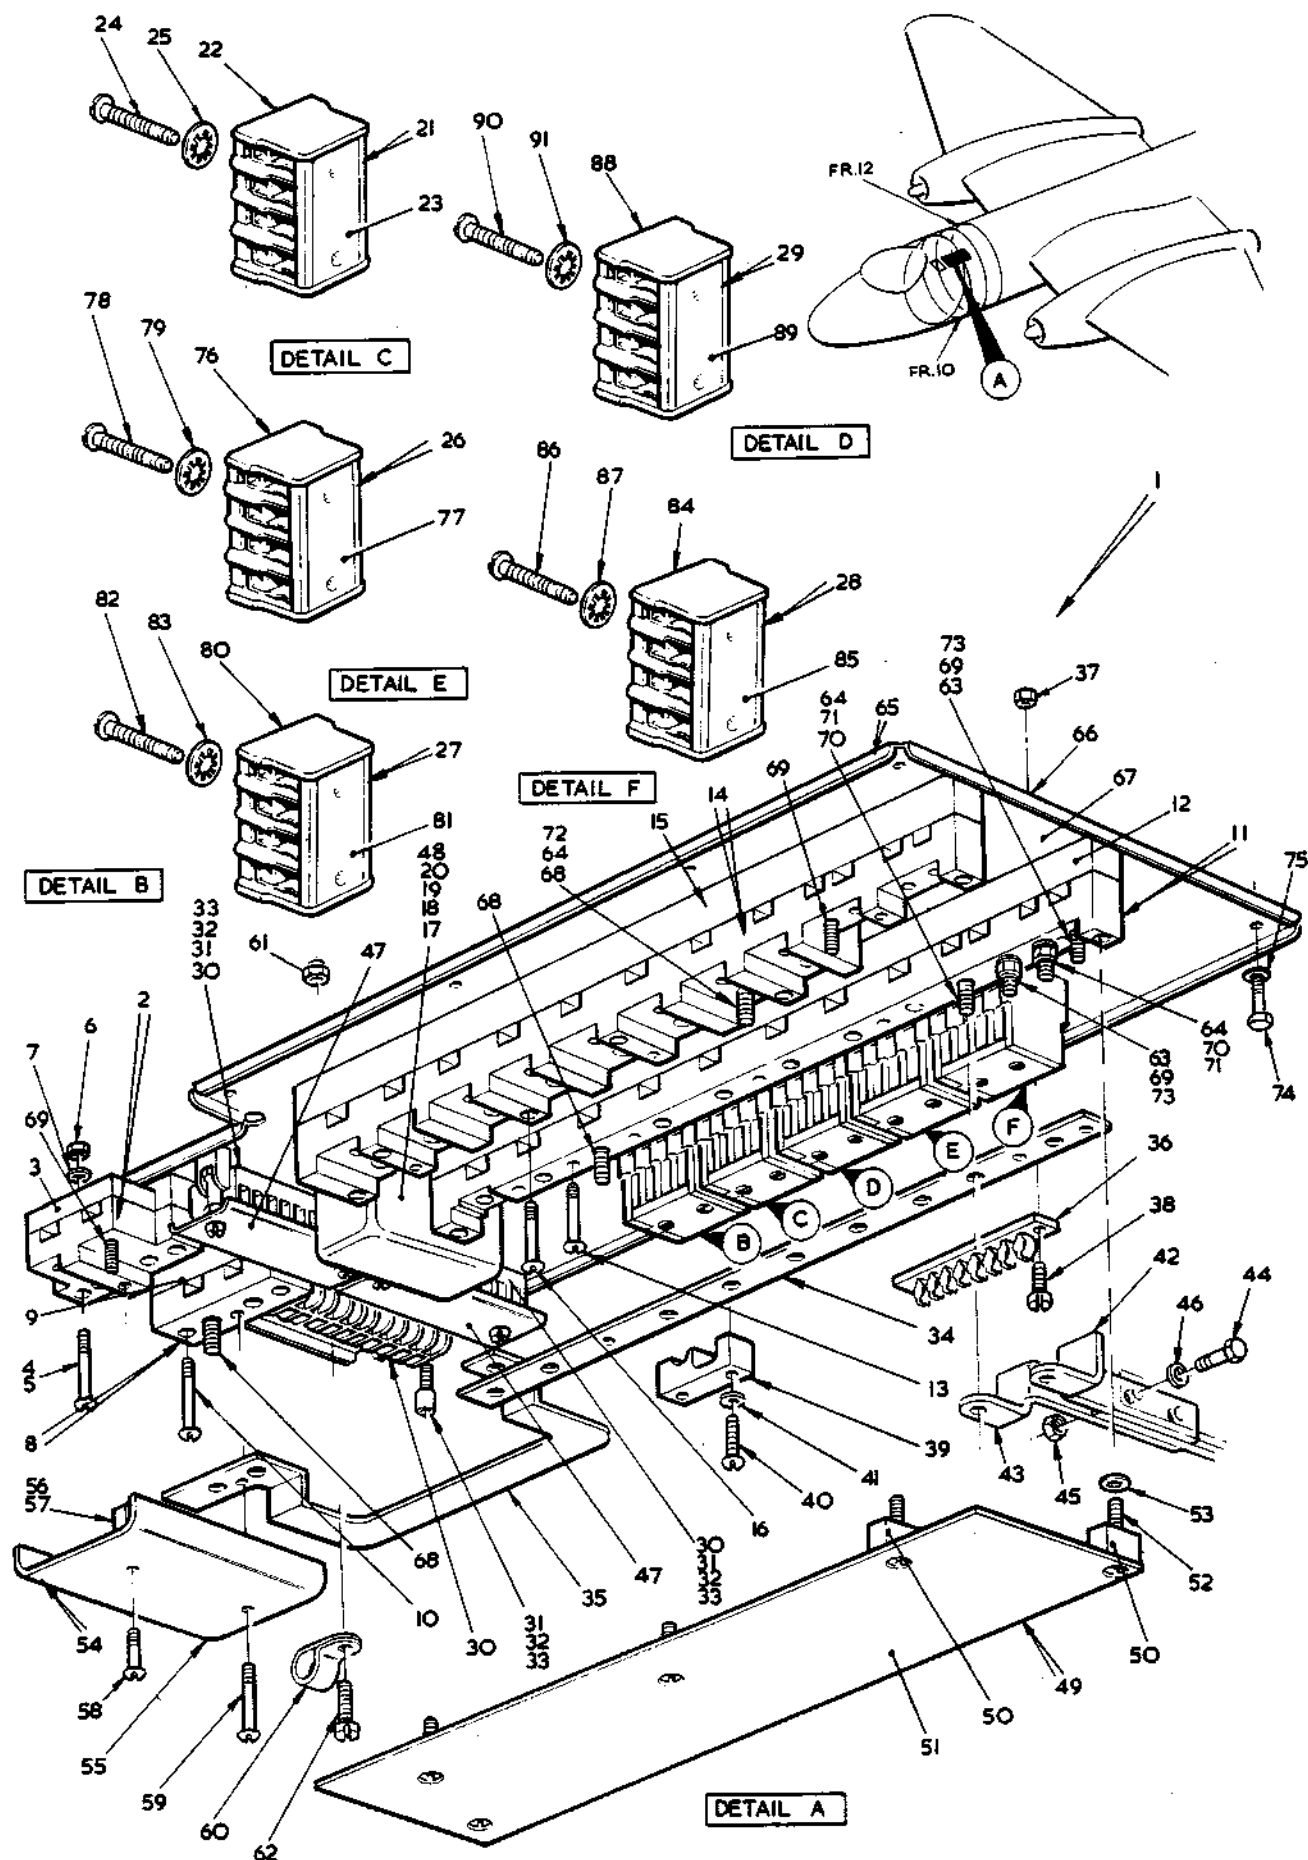


FIG. 19 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE Z

SECT. EB

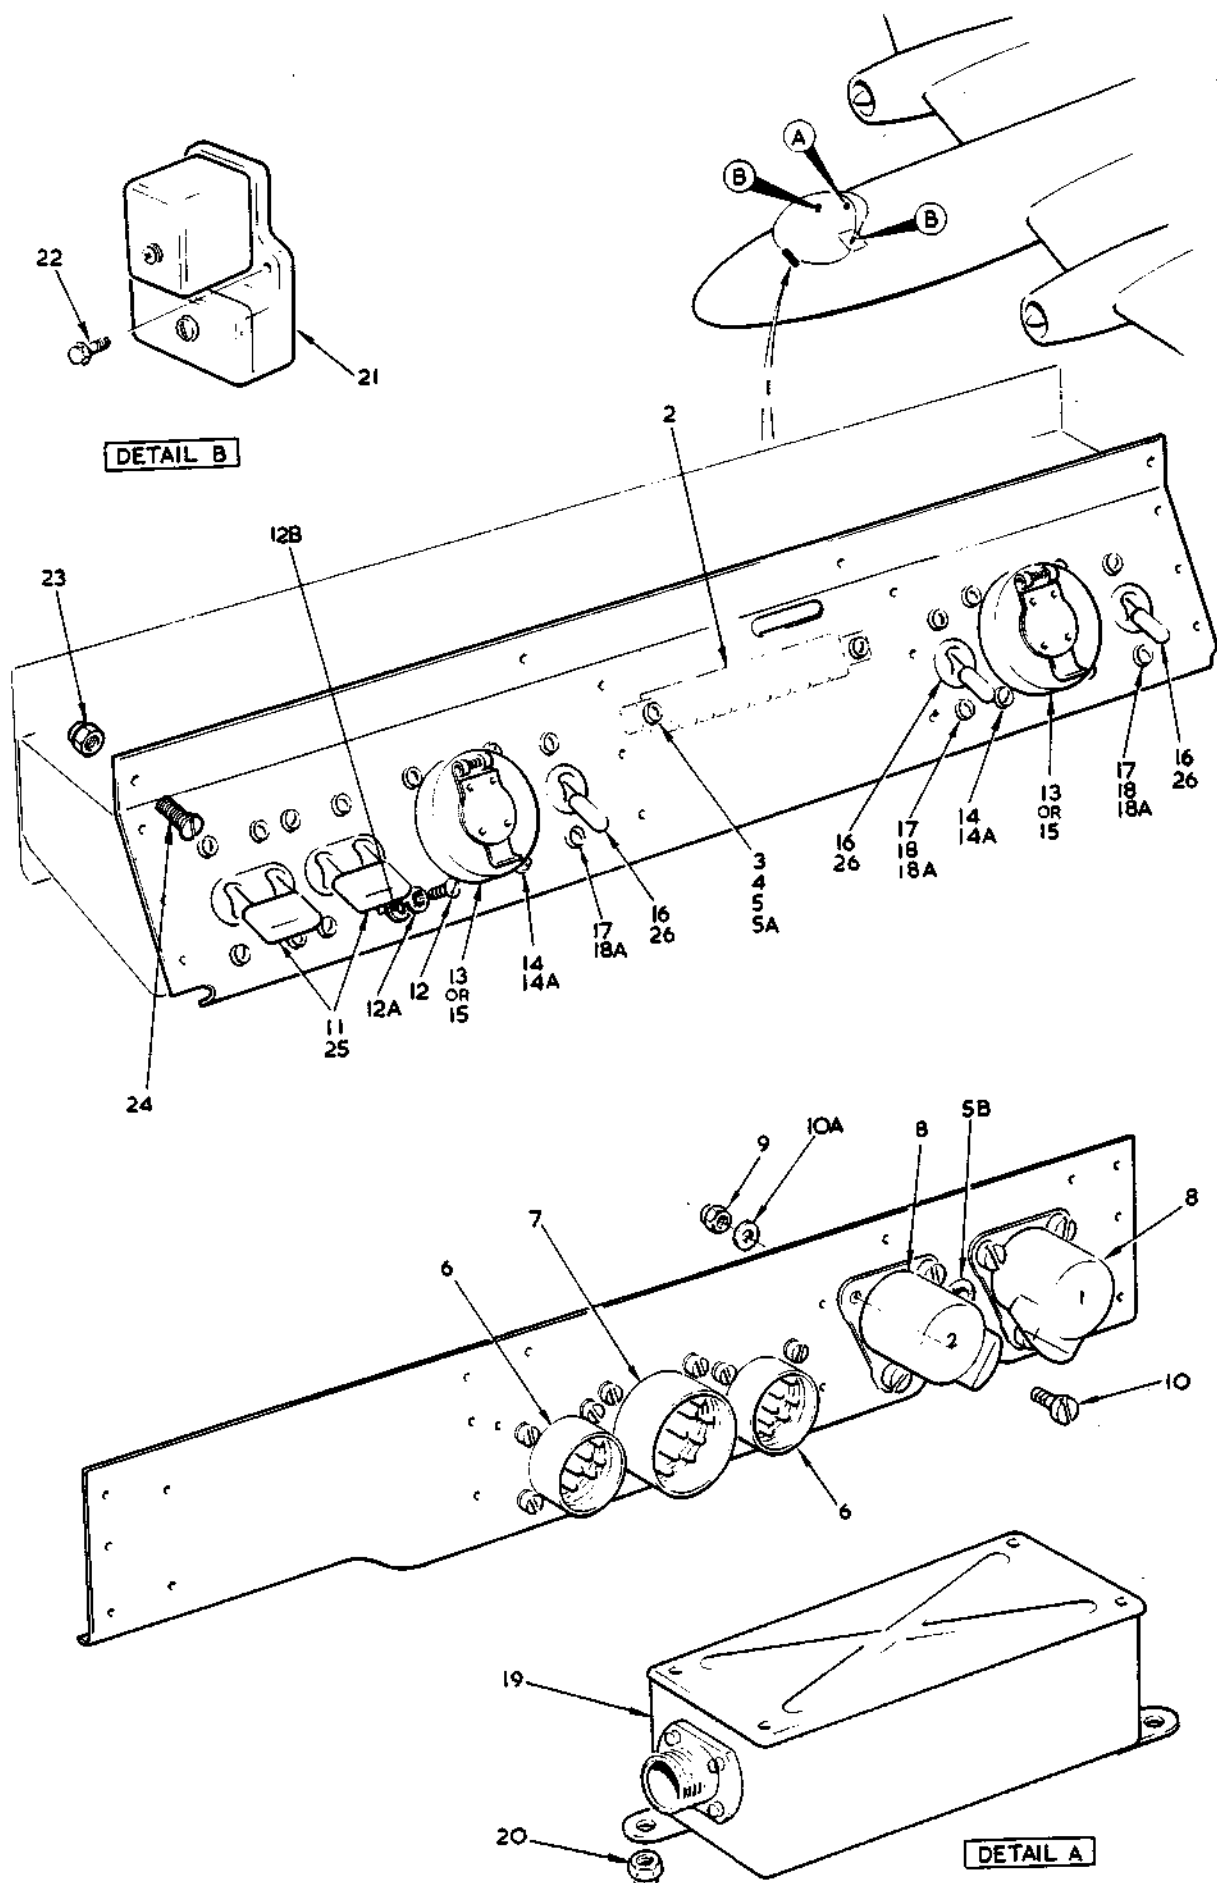


FIG. 20 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE Z

SECT.EB

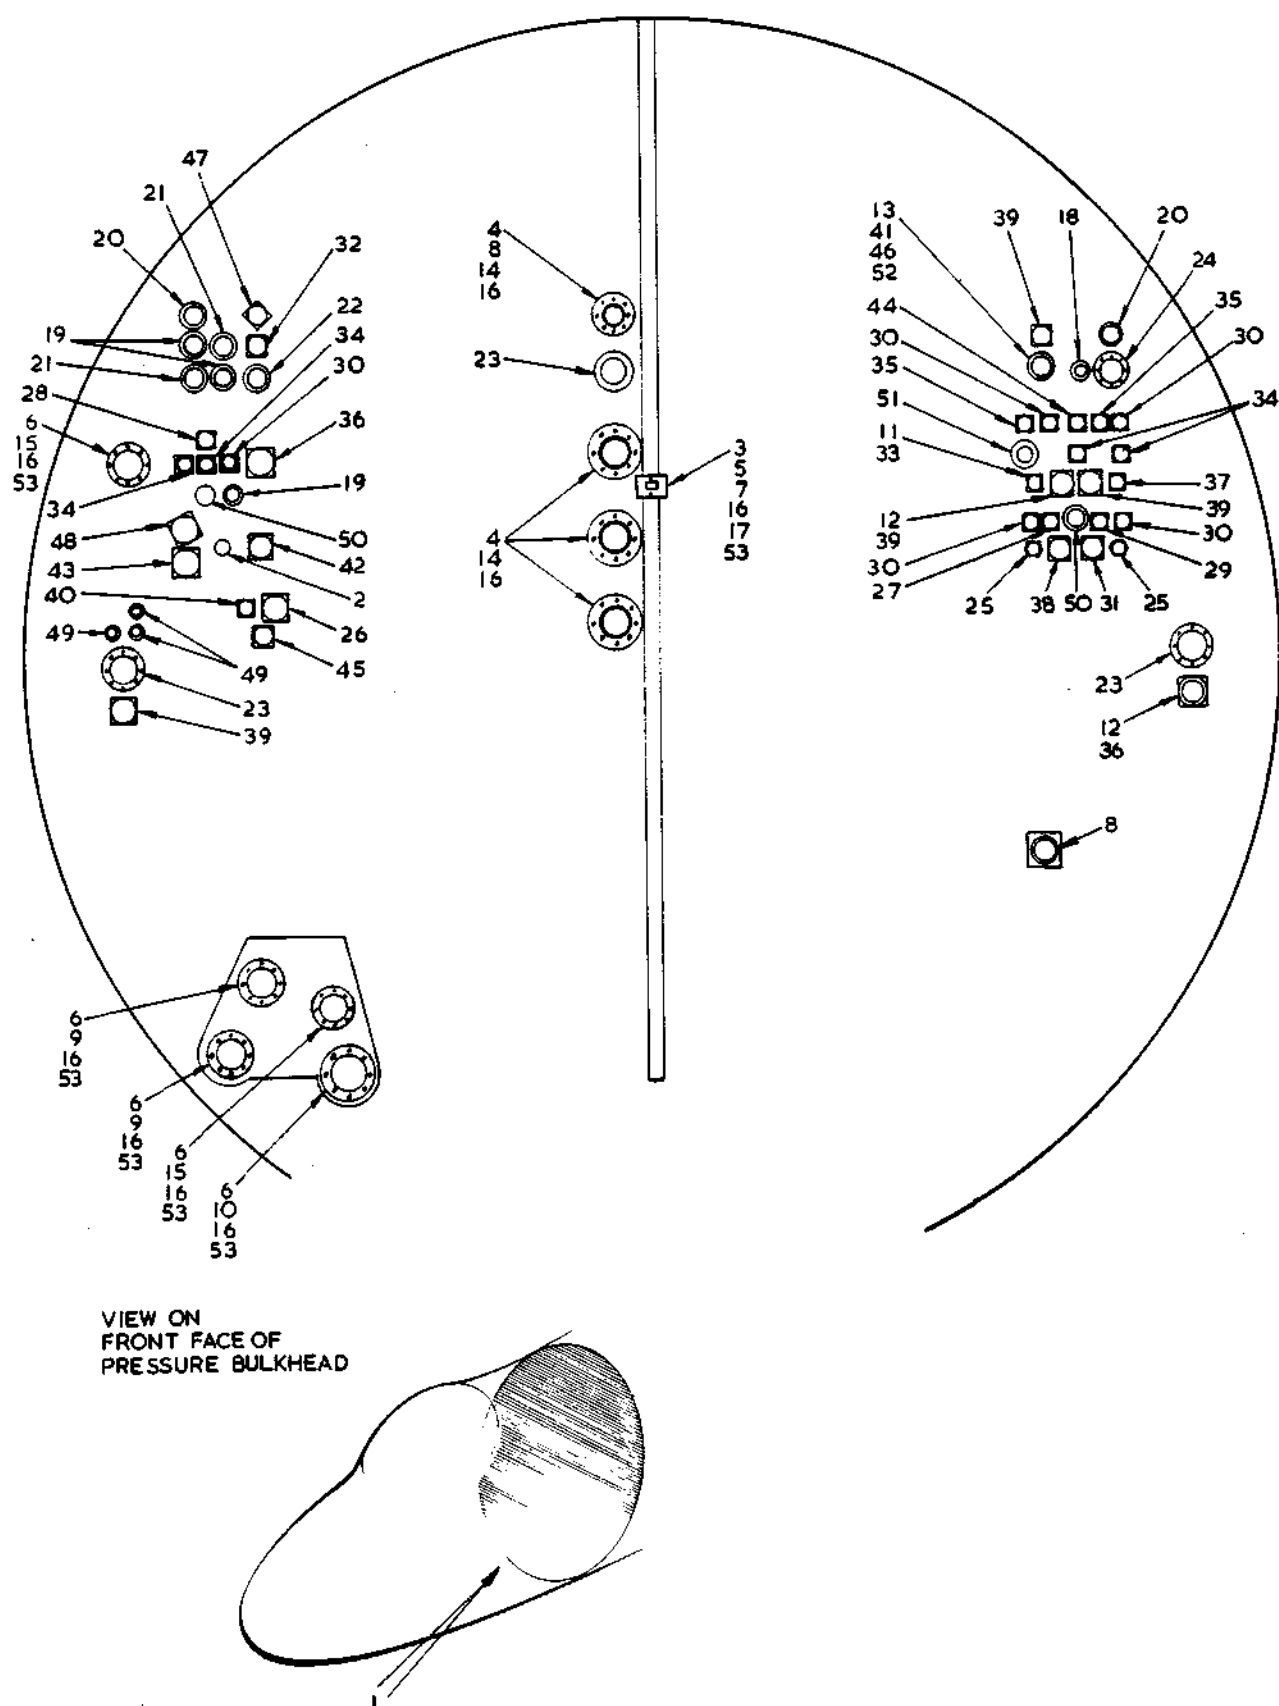


FIG. 21 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE Z

SECT.EB

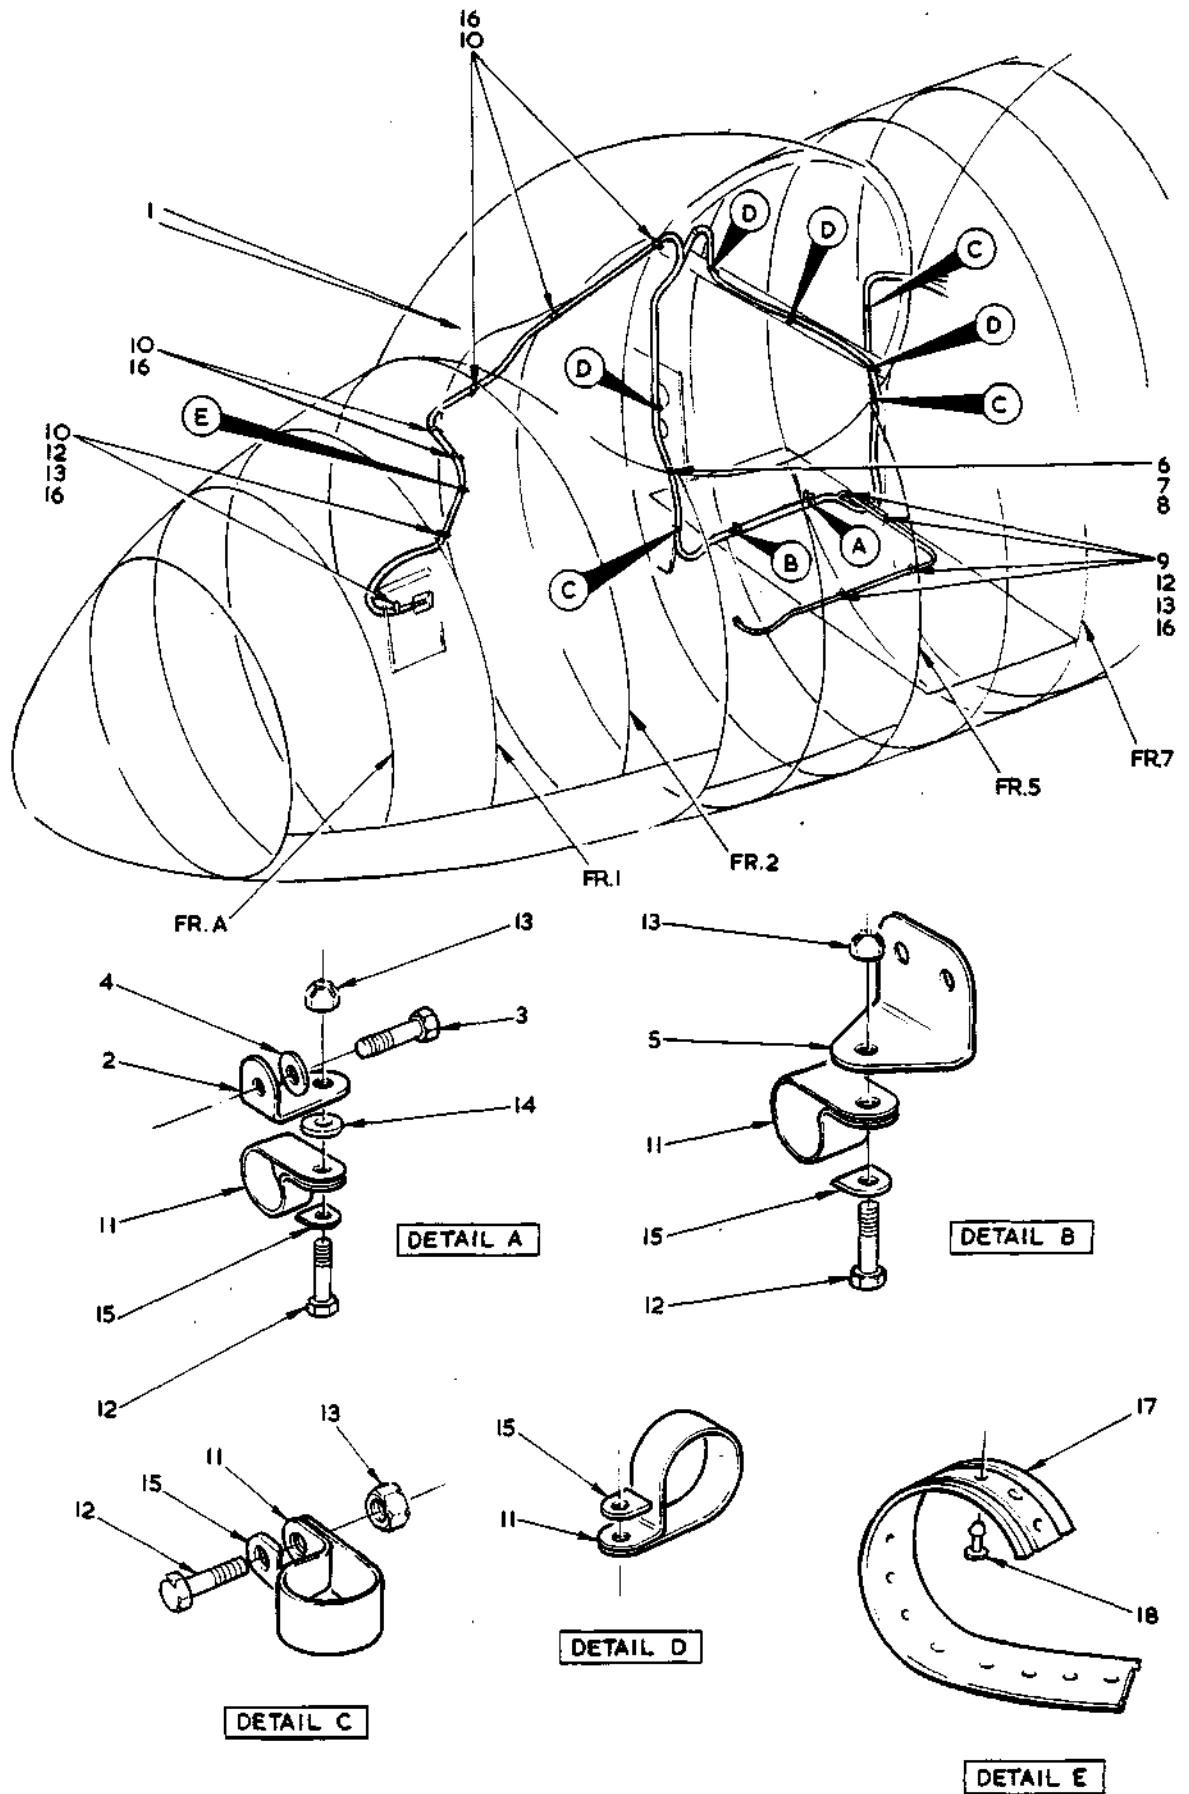


FIG.22 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE Z

SECT.EB

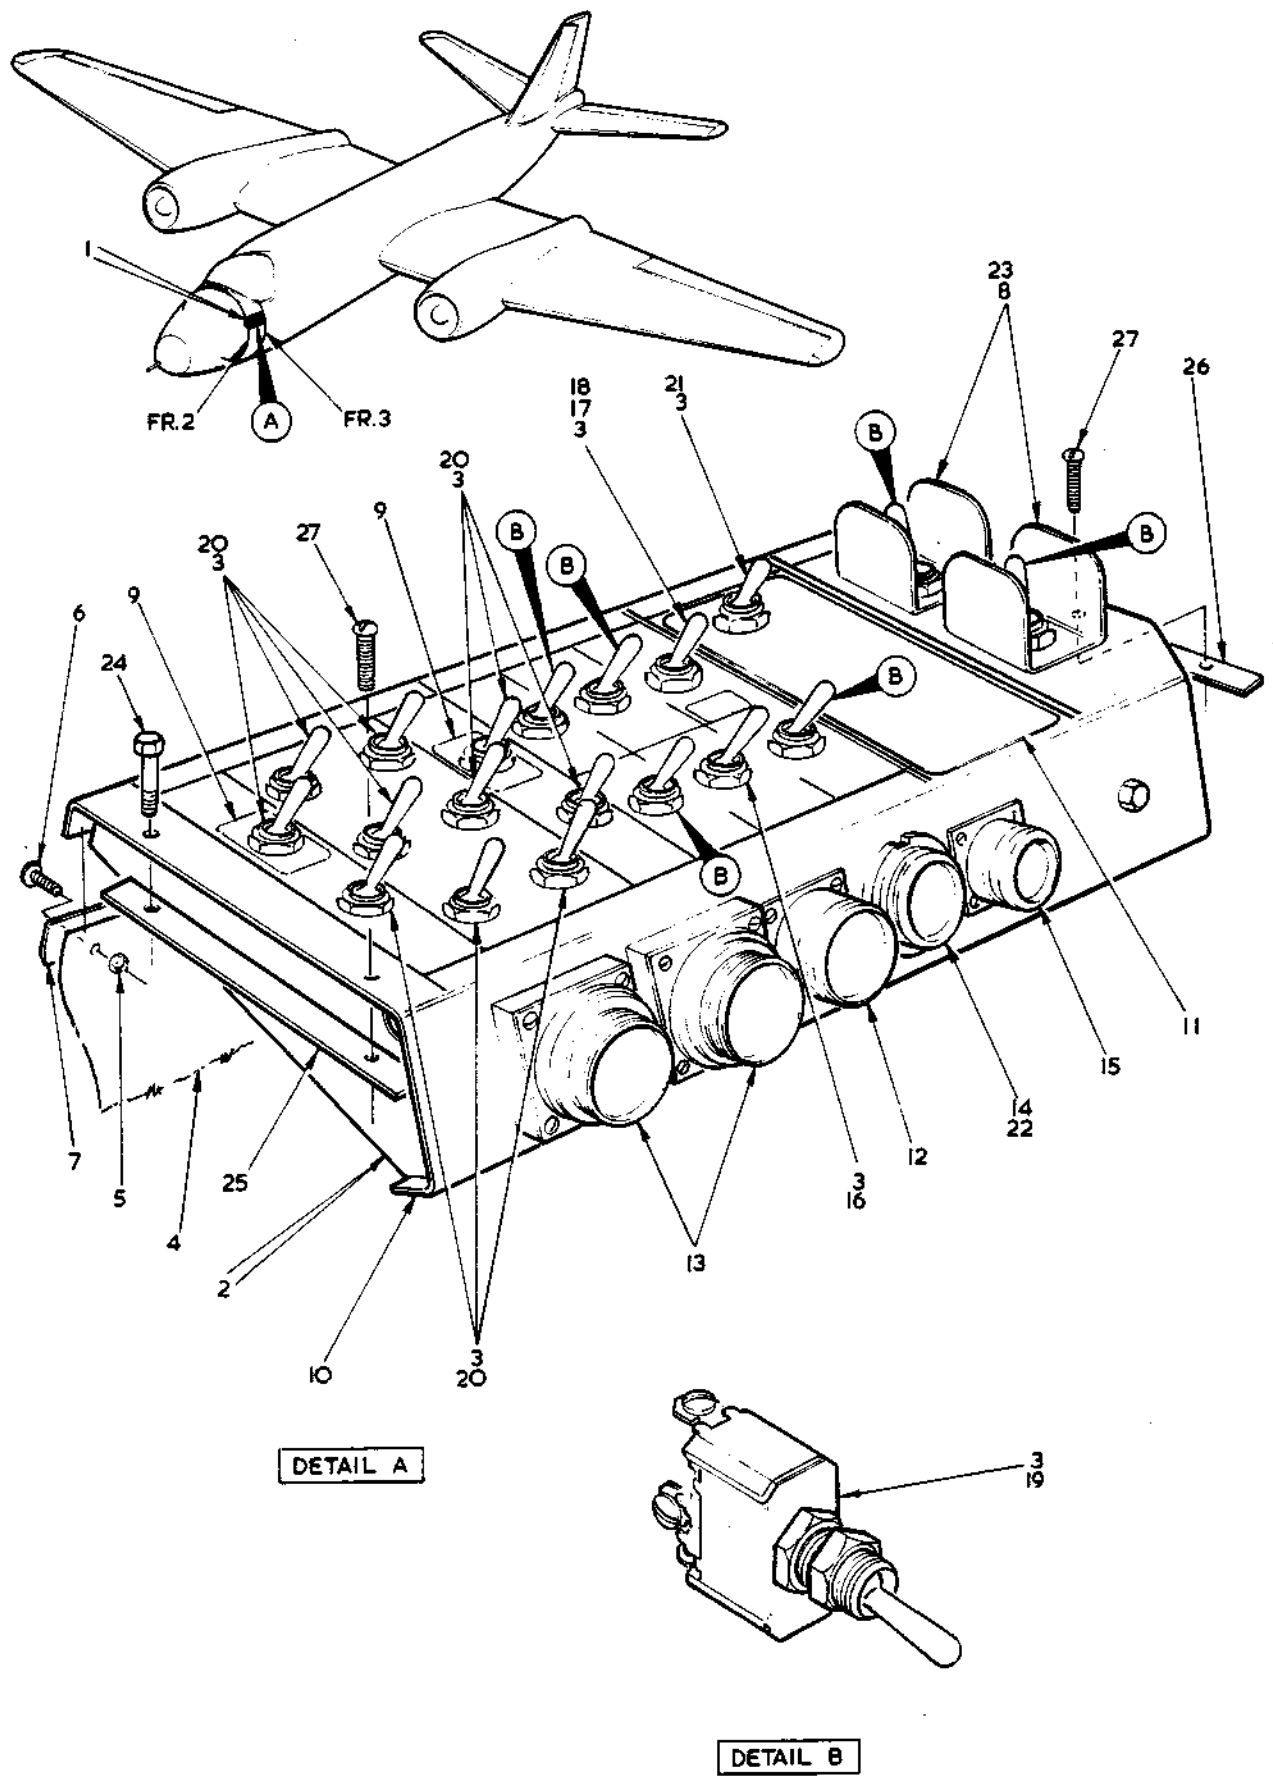


FIG. 22A ELECTRICAL EQUIPMENT IN FRONT FUSELAGE
 CODE Z SECT. EB

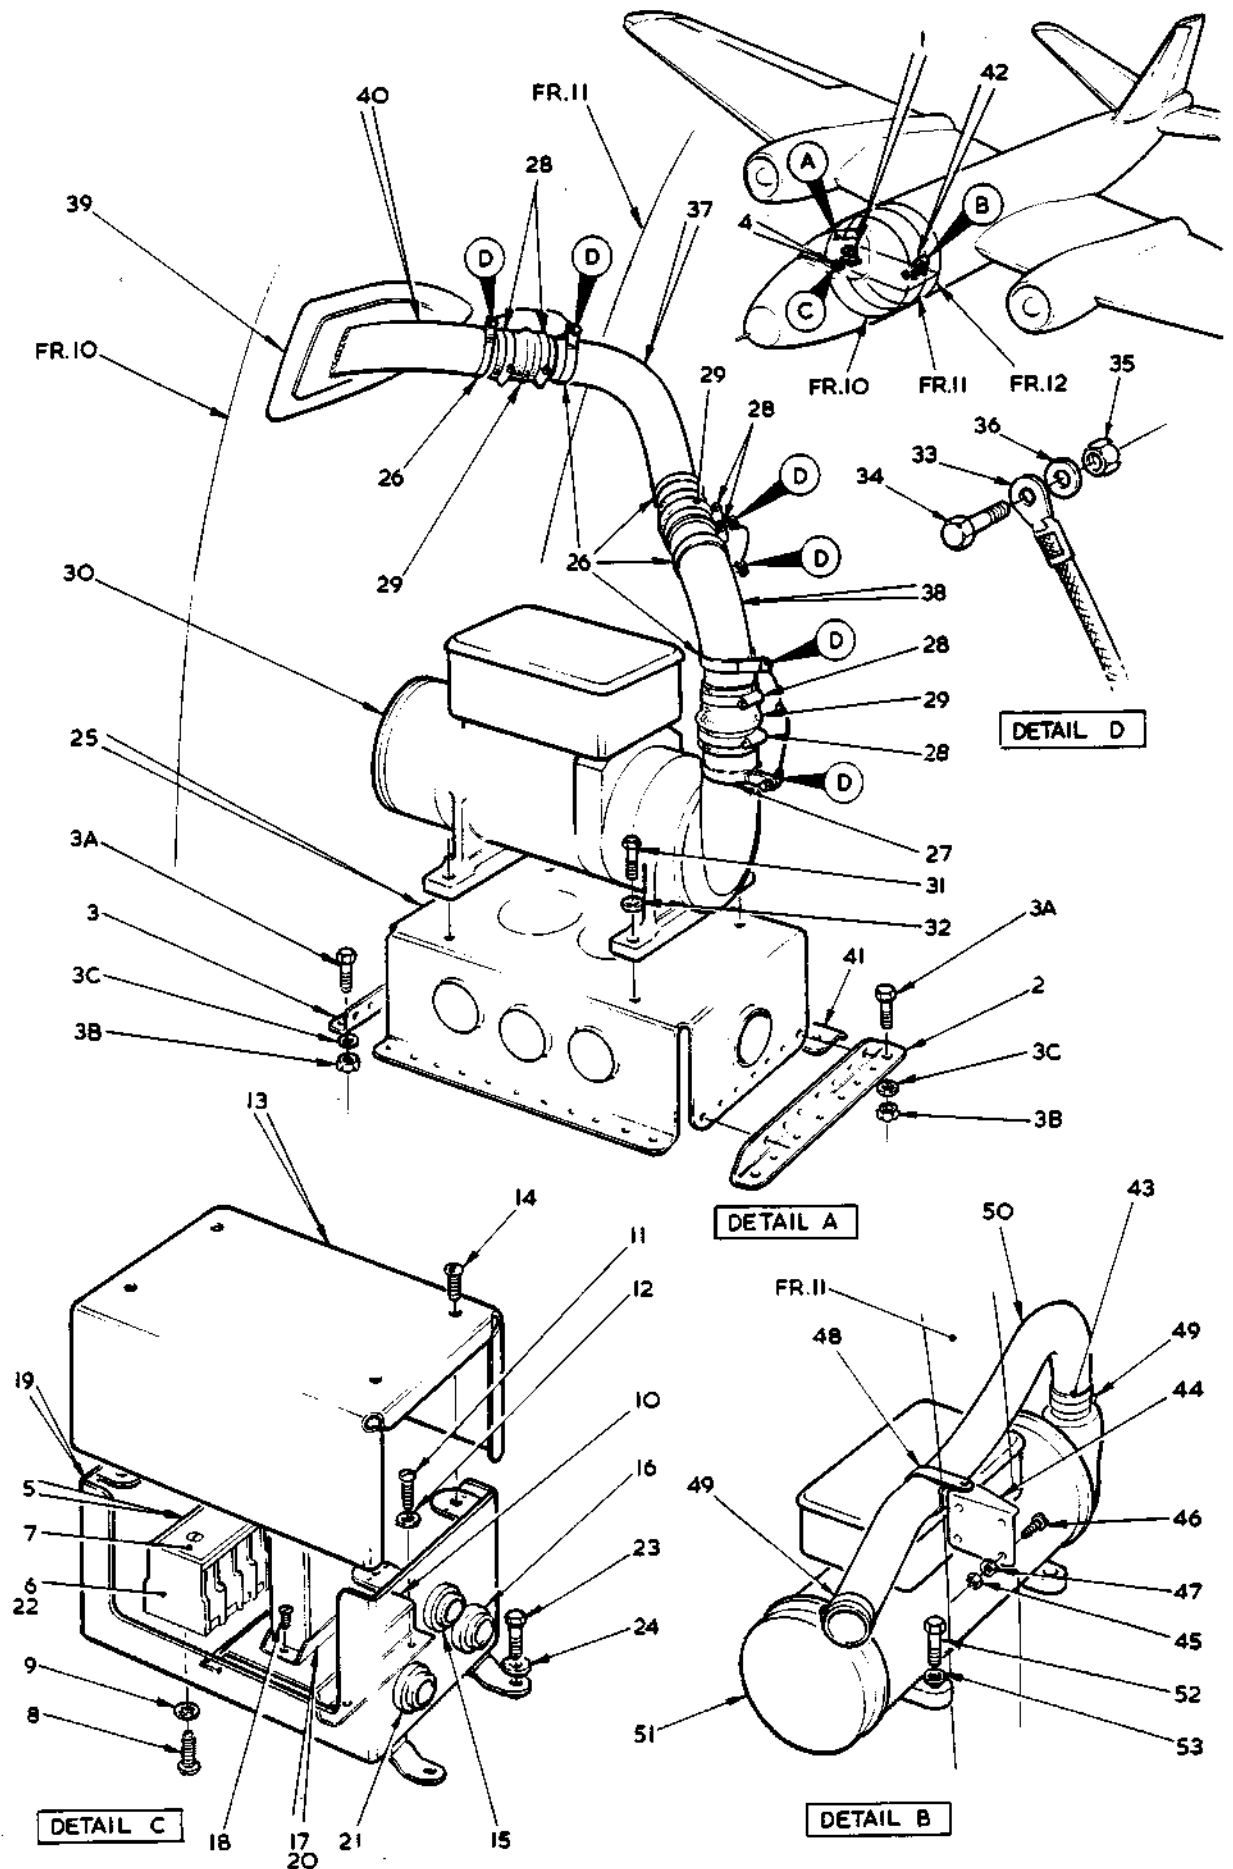


FIG. 23 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE
 CODE Z SECT.EB

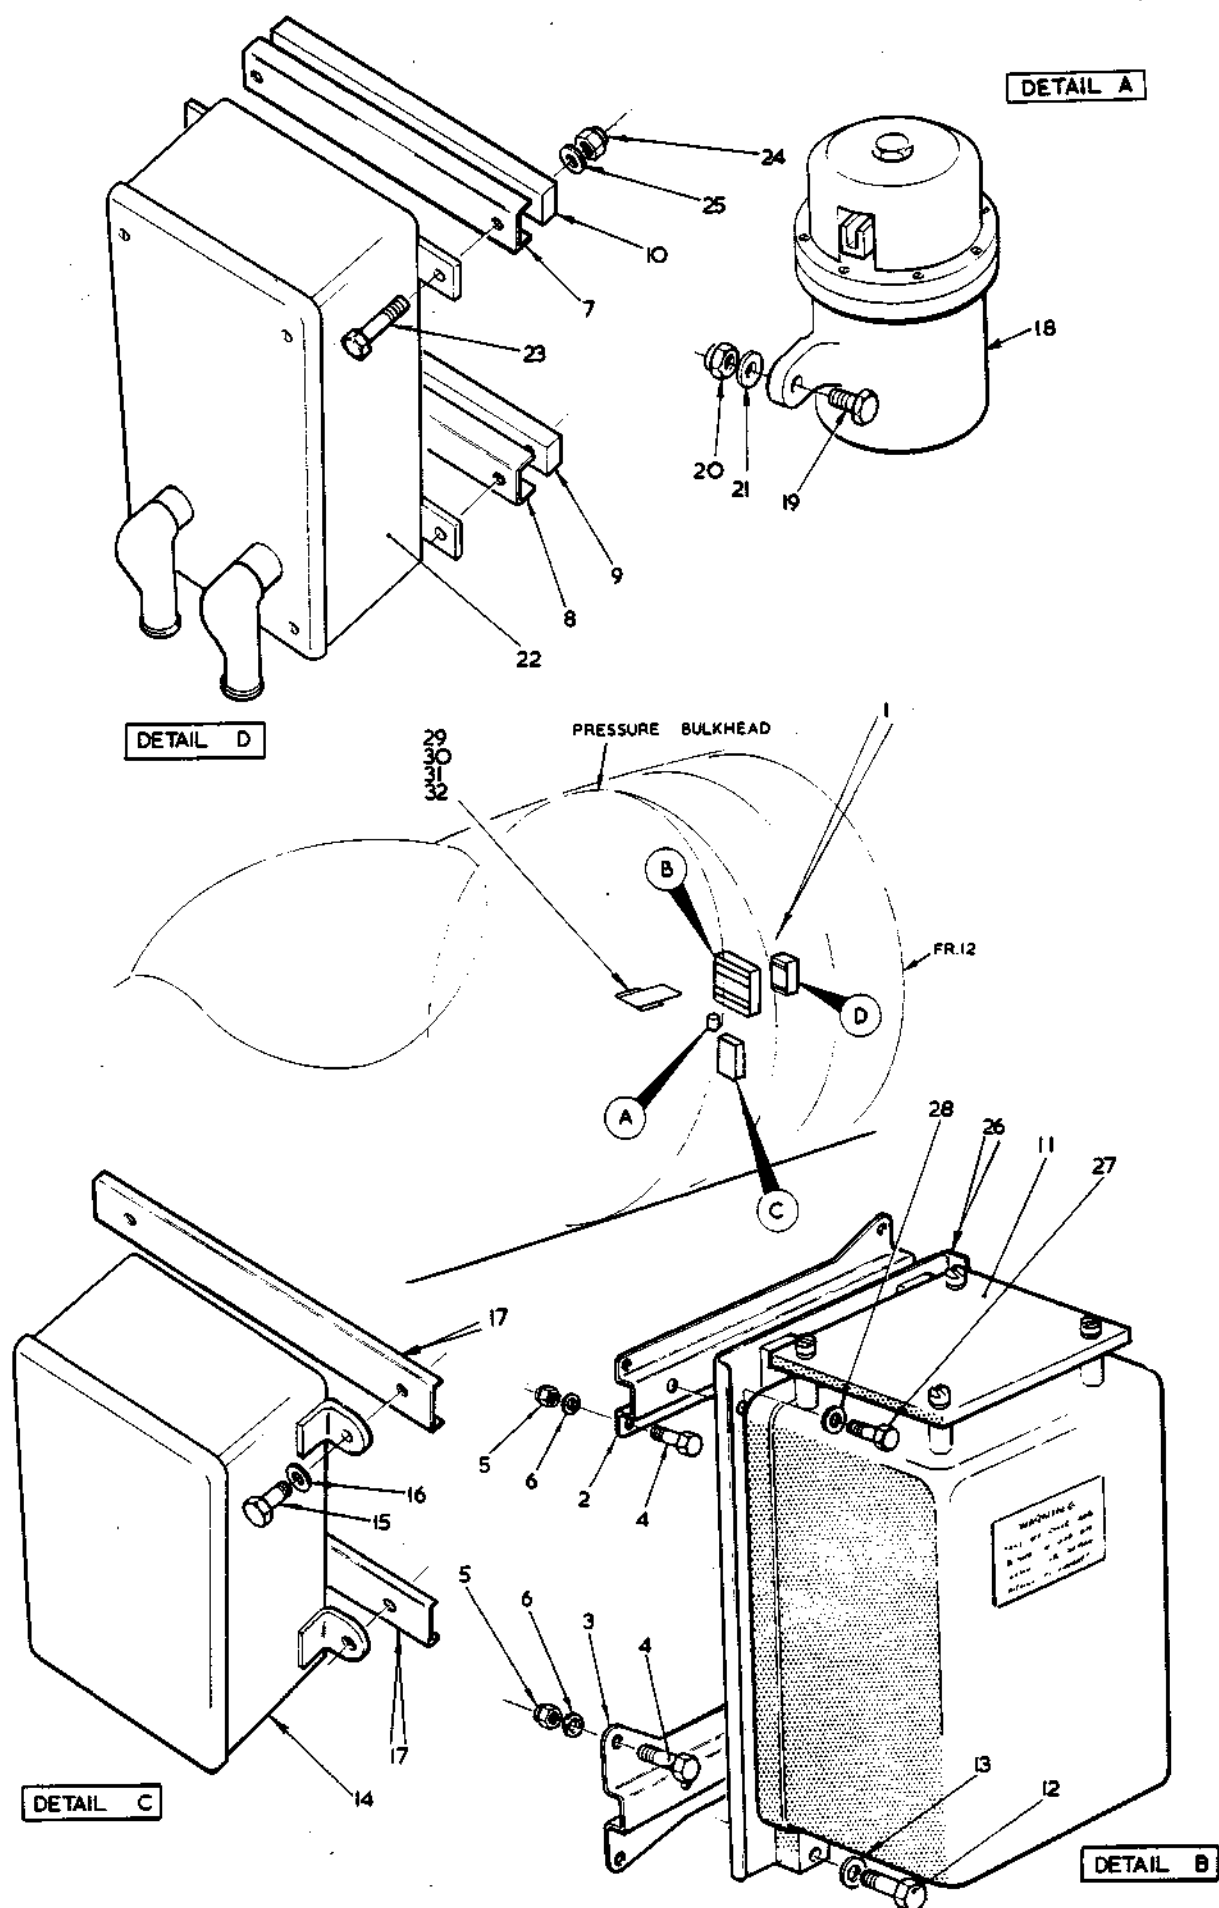


FIG. 24 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE
 CODE 2 SECT. EB

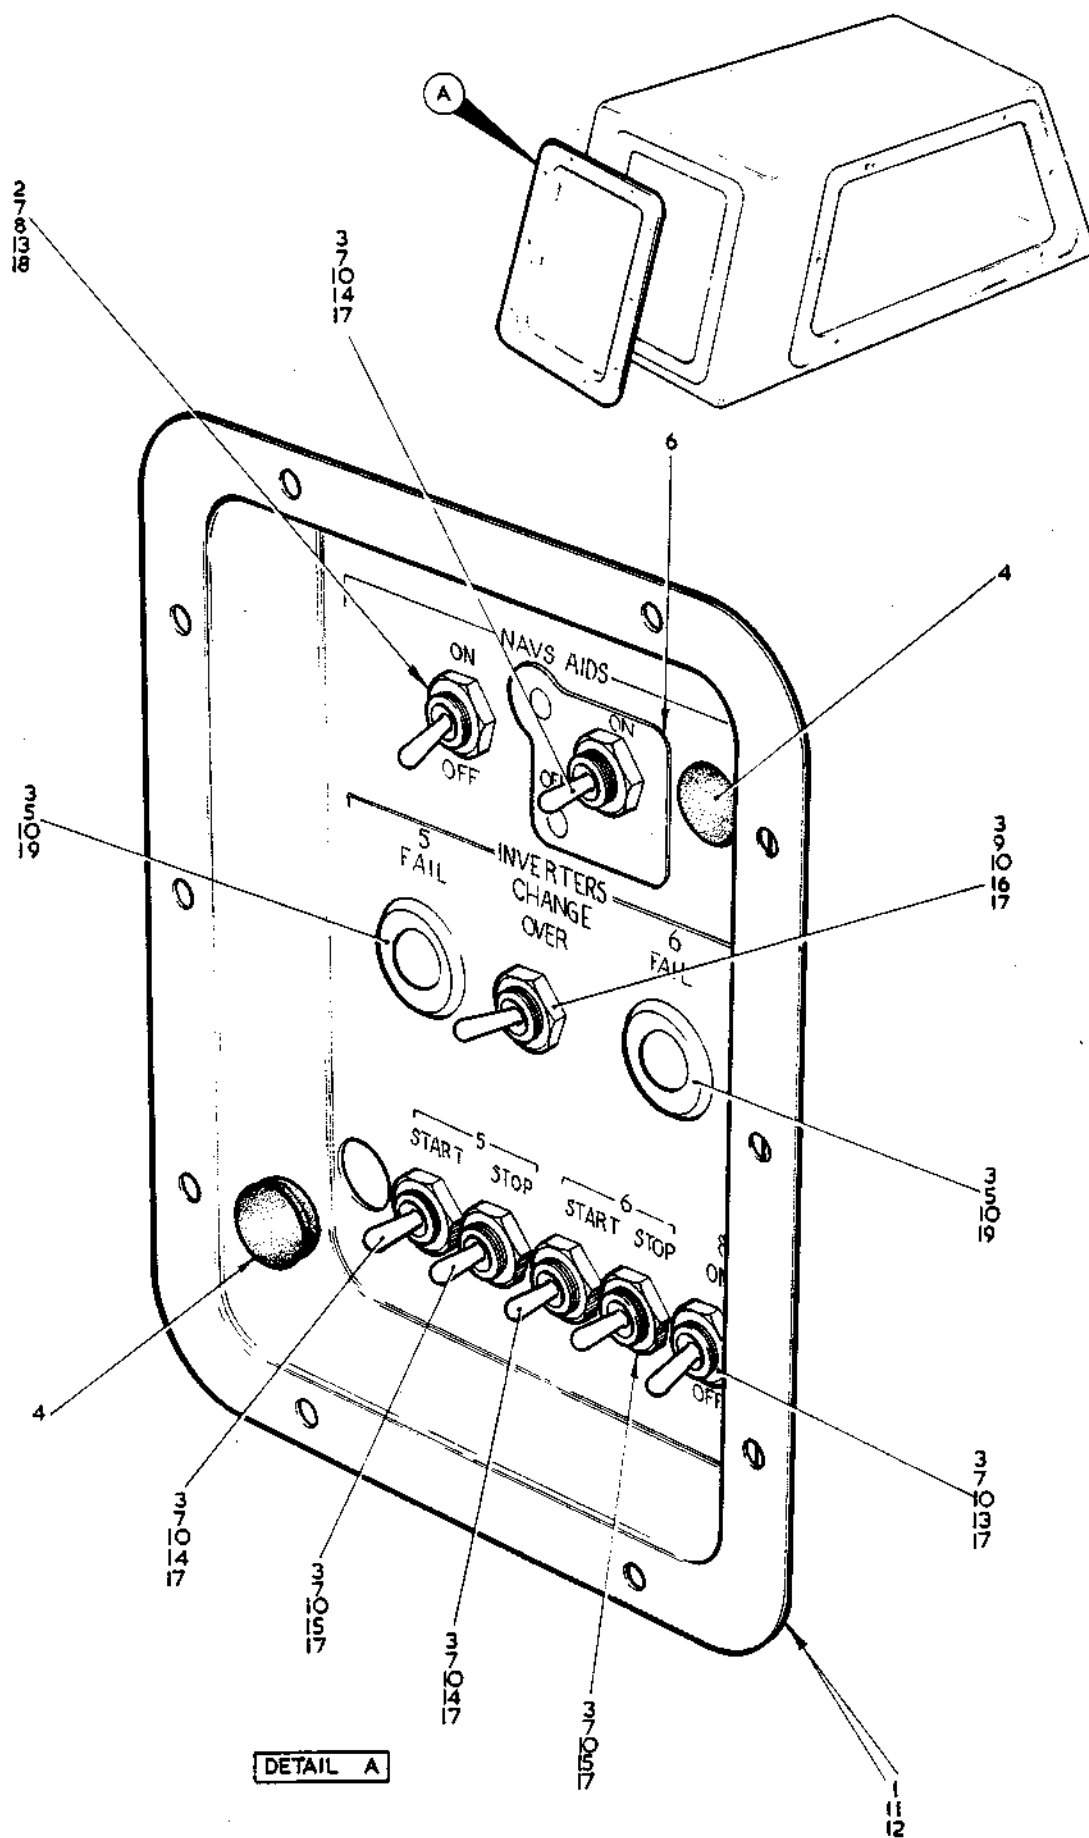


FIG. 25 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE
 CODE Z SECT. EB