

**CONTROLS**  
**ENGINE CONTROLS IN CENTRE FUSELAGE**

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
	E.B6.74.297	<b>CONTROLS, ENGINE, IN CENTRE FUSELAGE, ASSEMBLY</b>	—	—	—	
	E.A1.47.203	<b>CONTROLS, AT FRAME 13, ASSEMBLY ...</b> Spares for:—	1	—	—	
7748	E.A1.47.177	<b>BRACKET</b> , fairlead attachment, L.H. ...	1	—	C	
7749	E.A1.47.179	<b>BRACKET</b> , fairlead attachment, R.H. ...	1	—	C	
7755	E.A3.47.61	<b>BRACKET</b> , lever attachment, L.H., upper ...	1	—	C	
7754	E.A3.47.63	<b>BRACKET</b> , lever attachment, L.H., lower ...	1	—	C	
7756	E.A3.47.57	<b>BRACKET</b> , lever attachment, R.H., upper ...	1	—	C	
7757	E.A3.47.59	<b>BRACKET</b> , lever attachment, R.H., lower ...	1	—	C	
3209	E.A1.47.309	<b>FAIRLEAD</b> , half, for transverse control tubes ... Attaching parts for E.A1.47.309 (per pair):—	4	BS.2572	C	C.3
28D/9140645	A25/10C	Bolt, 2 BA ...	2	—	C	
28M/9403520	A27/CP	Nut, 2 BA ...	2	—	C	
3208	E.A1.47.307	<b>FAIRLEAD</b> , half, for L.H. control tubes ... Attaching parts for E.A1.47.307 (per pair):—	2	BS.2572	C	C.3
28D/9140645	A25/10C	Bolt, 2 BA ...	2	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA ...	2	—	C	
2040	E.A3.47.65	<b>LEVER</b> , throttle control, L.H. (Pre-Mod. 5028) ...	1	—	B	C.3
6119125	E.A3.47.119	<b>LEVER</b> , throttle control, L.H. (Mod. 5028) ...	1	—	B	
2038	E.A3.47.67	<b>LEVER</b> , cut out valve control, L.H. (Pre-Mod. 5028) ...	1	—	B	C.3
6119127	E.A3.47.121	<b>LEVER</b> , cut out valve control, L.H. (Mod. 5028) ... Attaching parts for E.A3.47.65 and E.A3.47.67 or E.A3.47.119 and E.A3.47.121 (per pair):—	1	—	B	
3088	EEAS.13/5	Bolt, special ...	1	S.96	C	C.3
28M/1011467	A27/ES	Nut, 3" BSF ...	1	—	C	
28P/9527619	SP.90/C7	Pin, split ...	1	—	C	
28W/9419487	SP.16/E	Washer ...	1	—	C	
2041	E.A3.47.66	<b>LEVER</b> , throttle control, R.H. (Pre-Mod. 5028) ...	1	—	B	C.3
6119126	E.A3.47.120	<b>LEVER</b> , throttle control, R.H. (Mod. 5028) ...	1	—	B	
2039	E.A3.47.68	<b>LEVER</b> , cut out valve control, R.H. (Pre-Mod. 5028) ...	1	—	B	C.3
6119128	E.A3.47.122	<b>LEVER</b> , cut out valve control, R.H. (Mod. 5028) ... Attaching parts for E.A3.47.66 and E.A3.47.68 or E.A3.47.120 and E.A3.47.122 (per pair):—	1	—	B	
2042	E.A3.47.73	Bolt, special ...	1	S.96	C	C.3
28M/1011467	A27/ES	Nut, 3" BSF ...	1	—	C	
28P/9419528	SP.9/C8	Pin, split ...	1	—	C	
28W/9419487	AS.2811/6/020 SP.16/E	Tube, distance ... Washer ...	2 1	L.62 —	LM C	
3210	E.A1.47.305	<b>FAIRLEAD</b> , half, for control tubes ... Attaching parts for E.A1.47.305 (per pair):—	16	BS.2572	C	C.3
28D/9419397	A25/12C	Bolt, 2 BA (as required) ...	2	—	C	
28D/1214037	AS.1242/15C	Bolt, 2 BA (as required) ...	2	—	C	
28M/1278190	AGS.2001/C/1	Nut, 1 BA ...	2	—	C	
7738	E.A1.47.535	Packing (as required) ...	1	—	C	
7739	E.A1.47.537	Packing (as required) ...	1	—	C	
7740	E.A1.47.539	Packing (as required) ...	1	—	C	
28W/9419475	SP.15/C	Washer ...	2	—	C	

**CONTROLS**  
**ENGINE CONTROLS IN CENTRE FUSELAGE**

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.		Plate No.
					M.R.	L.M.	
		1 2 3 4 5 6					
	E.B6.47.299	LEVER, CONTROL, AT FRAME 16, L.H., ASSEMBLY (PRE-MOD. 5028) Spares for:—	1	—	—		
2A/9500412	HOFFMANN CS.3	BEARING, ballrace ... ..	2	—	C	C.3	
7743	E.A1.47.105	BRACKET, top ... ..	1	L.72	C	C.3	
7745	E.A1.47.107	BRACKET, bottom ... ..	1	DTD.160	C	C.3	
7747	E.A1.47.123	HOUSING, ballrace ... ..	2	—	C	C.3	
22760	E.A9.47.131	LEVER, SUB-ASSEMBLY ... .. Spares for:—	1	—	B	C.3	
28N/13510	HOFFMANN CJ.0	BEARING, spherical ... ..	2	—	C	C.3	
25772	E.A3.47.151	EYE-END, assembly ... ..	2	—	C	C.3	
28M/1007404	A27/JT	NUT, 1/2" BSF ... ..	2	—	C	C.3	
	E.B6.47.31	LEVER, CONTROL, AT FRAME 16, L.H. ASSEMBLY (MOD. 5028) Spares for:—	1	—	—		
2A/9500412	HOFFMANN CS.3	BEARING, ballrace ... ..	2	—	C	C.3	
7743	E.A1.47.105	BRACKET, top ... ..	1	L.72	C	C.3	
7745	E.A1.47.107	BRACKET, bottom ... ..	1	DTD.160	C	C.3	
6119183	E.A3.47.125	HOUSING, ballrace ... ..	2	—	C		
	E.A9.47.211	LEVER, SUB-ASSEMBLY ... .. Spares for:—	1	—	—		
28N/13510	HOFFMANN CJ.0	BEARING, spherical ... ..	2	—	C	C.3	
6119130	E.A3.47.123	EYE-END, assembly ... ..	2	—	C	C.3	
28M/1007404	A27/JT	NUT, 1/2" BSF ... ..	2	—	C	C.3	
	E.B6.47.300	LEVER, CONTROL, AT FRAME 16, R.H., ASSEMBLY (PRE-MOD. 5028) Spares for:—	1	—	—		
2A/9500412	HOFFMANN CS.3	BEARING, ballrace ... ..	2	—	C	C.3	
7744	E.A1.47.106	BRACKET, top ... ..	1	L.72	C	C.3	
7746	E.A1.47.108	BRACKET, bottom ... ..	1	DTD.160	C	C.3	
7747	E.A1.47.123	HOUSING, ballrace ... ..	2	—	C	C.3	
22761	E.A9.47.132	LEVER, SUB-ASSEMBLY ... .. Spares for:—	1	—	B	C.3	
28N/13510	HOFFMANN CJ.0	BEARING, spherical ... ..	2	—	C	C.3	
25772	E.A3.47.151	EYE-END, assembly ... ..	2	—	C	C.3	
28M/1007404	A27/JT	NUT, 1/2" BSF ... ..	2	—	C	C.3	
	E.B6.47.32	LEVER, CONTROL, AT FRAME 16, R.H., ASSEMBLY (MOD. 5028) Spares for:—	1	—	—		
2A/9500412	HOFFMANN CS.3	BEARING, ballrace ... ..	2	—	C	C.3	
7744	E.A1.47.106	BRACKET, top ... ..	1	L.72	C	C.3	
7746	E.A1.47.108	BRACKET, bottom ... ..	1	DTD.160	C	C.3	
6119183	E.A3.47.125	HOUSING, ballrace ... ..	2	—	C		
	E.A9.47.212	LEVER, SUB-ASSEMBLY ... .. Spares for:—	1	—	—		
28N/13510	HOFFMANN CJ.0	BEARING, spherical ... ..	2	—	C	C.3	
6119130	E.A3.47.123	EYE-END, assembly ... ..	2	—	C	C.3	
28M/1007404	A27/JT	NUT, 1/2" BSF ... ..	2	—	C	C.3	

**CONTROLS  
ENGINE CONTROLS IN CENTRE FUSELAGE**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
226	E.A1.47.223	TUBE,	CONTROL,	SHUT OFF	COCK AND	THROTTLE,	ASSEMBLY (PRE-MOD. 2621)	2	—	C	
32390	E.A9.47.209	TUBE,	CONTROL,	SHUT OFF	COCK AND	THROTTLE,	ASSEMBLY (MOD. 2621)	2	—	C	C.3
	E.A1.47.219	Spares for:—									
	E.A1.47.219	EYE-END	...	...	...	...	...	1	—	—	C.3
		Attaching parts for E.A1.47.219:—									
28P/9524884	SP.28/G6	Pin, taper	...	...	...	...	...	2	—	C	
34096	E.A3.47.53	FORK-END	...	...	...	...	...	1	—	C	C.3
32079	EEAS.234	PLUG-END	...	...	...	...	...	1	—	C	C.3
		Attaching parts for EEAS.234:—									
28P/9524884	SP.28/G6	Pin, taper	...	...	...	...	...	2	—	C	
227	E.A1.47.225	TUBE,	CONTROL,	INTERMEDIATE,	AFT OF	FRAME 13,	ASSEMBLY (PRE-MOD. 5028)	2	—	C	C.3
6119119	E.A3.47.115	TUBE,	CONTROL,	INTERMEDIATE,	AFT OF	FRAME 13,	ASSEMBLY (MOD. 5028)	2	—	C	
		Spares for:—									
	E.A1.47.219	EYE-END	...	...	...	...	...	1	—	—	C.3
1118	EEAS.53	EYE-END,	assembly (Pre-Mod. 5028)	...	...	...	...	1	—	C	C.3
	E.A3.47.163	EYE-END,	assembly (Mod. 5028)	...	...	...	...	1	—	MR	
		Attaching parts for eye-end:—									
28P/9524884	SP.28/G6	Pin, taper	...	...	...	...	...	2	—	C	
228	E.A1.47.227	TUBE,	CONTROL,	INTERMEDIATE,	THROTTLE	AND SHUT-OFF	COCK, ASSEMBLY (PRE-MOD. 5028)	4	—	C	C.3
6119120	E.A3.47.117	TUBE,	CONTROL,	INTERMEDIATE,	THROTTLE	AND SHUT-OFF	COCK, ASSEMBLY (MOD. 5028)	4	—	C	
		Spares for:—									
1118	EEAS.53	EYE-END,	assembly (Pre-Mod. 5028)	...	...	...	...	1	—	C	C.3
	E.A3.47.163	EYE-END,	assembly (Mod. 5028)	...	...	...	...	1	—	MR	
1116	EEAS.51	FORK END	...	...	...	...	...	1	—	C	C.3
		Attaching parts for eye/fork-end:—									
28P/9524884	SP.28/G6	Pin, taper	...	...	...	...	...	2	—	C	
229	E.A1.47.229	TUBE,	CONTROL,	CONNECTING,	AT FRAME 16,	ASSEMBLY (PRE-MOD. 2621)		4	—	C	
32391	E.A4.47.535	TUBE,	CONTROL	CONNECTING,	TO LEVER AT	FRAME 16,	ASSEMBLY (MOD. 2621)	4	—	C	C.3
		Spares for:—									
1115	EEAS.50	FORK-END,	adjustable	...	...	...	...	1	—	C	C.3
1116	EEAS.51	FORK-END,	fixed	...	...	...	...	1	—	C	C.3
32079	EEAS.234	PLUG, end	...	...	...	...	...	1	—	C	C.3
		Attaching parts for EEAS.51 and EEAS.234:—									
28P/9524884	SP.28/G6	Pin, taper	...	...	...	...	...	2	—	C	
230	E.A1.47.231	TUBE,	CONTROL,	TRANSVERSE,	LEVER CON-	NECTING (PRE-MOD. 2621)		4	—	C	
32392	E.A4.47.529	TUBE,	CONTROL,	TRANSVERSE,	LEVER CON-	NECTING (MOD. 2621) (PRE-MOD. 5028)		4	—	C	C.3
6119133	E.A4.47.575	TUBE,	CONTROL,	TRANSVERSE,	LEVER CON-	NECTING (MOD. 5028)		4	—	C	
		Spares for:—									
1118	EEAS.53	EYE-END	(Pre-Mod. 5028)	...	...	...	...	1	—	C	C.3
	E.A3.47.163	EYE-END	(Mod. 5028)	...	...	...	...	1	—	MR	
		Attaching parts for EEAS.53 or E.A3.47.163:—									
28P/9524884	SP.28/G6	Pin, taper	...	...	...	...	...	2	—	C	

**CONTROLS**  
**ENGINE CONTROLS IN CENTRE FUSELAGE**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
1115	EEAS.50	<b>FORK-END</b> ... ..						1	—	C	C.3
32079	EEAS.234	<b>PLUG, end</b> ... ..						1	—	C	C.3
28P/9524884	SP.28/G6	Attaching parts for EEAS.234:— Pin, taper ... ..						2	—	C	
231	E.A1.47.233	<b>TUBE, CONTROL, TRANSVERSE, CENTRE, AT FRAME 13, ASSEMBLY</b> Spares for:—						2	—	C	C.3
1116	EEAS.51	<b>FORK-END</b> ... ..						2	—	C	C.3
28P/9524884	SP.28/G6	Attaching parts for EEAS.51:— Pin, taper ... ..						2	—	C	
232	E.A1.47.249	<b>TUBE, CONTROL, BETWEEN OPERATING LEVER AND INTERMEDIATE CONTROL TUBE (PRE-MOD. 2621)</b>						2	—	C	
32393	E.A4.47.531	<b>TUBE, CONTROL, BETWEEN OPERATING LEVER AND INTERMEDIATE CONTROL TUBE (MOD. 2621) (PRE-MOD. 5028)</b>						2	—	C	C.3
6119134	E.A4.47.577	<b>TUBE, CONTROL, BETWEEN OPERATING LEVER AND INTERMEDIATE CONTROL TUBE (MOD. 5028)</b> Spares for:—						2	—	C	
1118	EEAS.53	<b>EYE-END (Pre-Mod. 5028)</b> ... ..						1	—	C	C.3
	E.A3.47.163	<b>EYE-END (Mod. 5028)</b> ... ..						1	—	MR	
28P/9524884	SP.28/G6	Attaching parts for EEAS.53 or E.A3.47.163:— Pin, taper ... ..						2	—	C	
34096	E.A3.47.53	<b>FORK-END, adjustable</b> ... ..						1	—	C	C.3
32079	EEAS.234	<b>PLUG, end</b> ... ..						1	—	C	C.3
28P/9524884	SP.28/G6	Attaching parts for EEAS.234:— Pin, taper ... ..						2	—	C	
220	EEAS.12/1	Attaching parts for control tubes:— Bolt, special ... ..						2	S.96	C	C.3
1122	EEAS.63	Nut, special ... ..						2	S.96	C	C.3
28P/9486478	SP.90/C5	Pin, split ... ..						2	—	C	
7732	EEAS.28/3DU	Washer ... ..						2	—	C	C.3
28W/9419475	SP.15/C	Washer ... ..						2	—	C	

**CONTROLS**  
**ENGINE CONTROLS IN NOSE FUSELAGE**

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.G4.47.103	<b>CONTROLS, ENGINE IN NOSE FUSELAGE ASSEMBLY (MOD. 4799)</b>	—	—	—	
	E.G4.47.113	<b>BOX, THROTTLE CONTROL (MOUNTING) (MOD. 4799)</b>	—	—	—	
	E.G4.47.105	<b>BOX, THROTTLE CONTROL, ASSEMBLY (SRIM 3533) (MOD. 4799)</b> (Make from E.B7.47.29 Ref. 32917)	1	—	—	
20622	E.B7.81.1589	<b>BRACKET, cable clip</b> ... .. Attaching parts for E.B7.81.1589:—	1	—	C	C.2
28D/1010658	A25/1B	Bolt, 4 BA ... ..	2	—	C	
28M/1278189	AGS.2001/B/1	Nut, 4 BA ... ..	2	—	C	
6197	E.A1.47.165	<b>BRACKET, microswitch</b> ... .. Attaching parts for E.A1.47.165:—	1	—	C	
28D/1008149	A25/2B	Bolt, 4 BA ... ..	4	—	C	
28M/1278189	AGS.2001/B/1	Nut, 4 BA ... ..	4	—	C	
28W/9419474	SP.15/B	Washer ... ..	4	—	C	
121	E.A1.47.173	<b>BUSH, tapped, shut off cock, lever locking</b> ...	1	DTD.126A	C	C.2
122	E.A1.47.293	<b>BUSH, tapped, throttle, lever locking</b> ...	1	DTD.126A	C	C.2
	—	<b>CABLE, FROM RELIGHT AND U/C WARNING SWITCHES ASSEMBLY</b>	1	—	—	
		Consisting of:—				
5E/4182	†	<b>CABLE, Uninyvin 22</b> ... ..	QR	—	C	
5E/4183	†	<b>CABLE, Uninyvin 20</b> ... ..	QR	—	C	
5617	EEAS.111/4	<b>FERRULE</b> ... ..	1	—	C	
10H/0970060	†	<b>GASKET</b> ... ..	1	—	C	
10H/0560400	†	<b>PLUG, Mk. 4, 25-way</b> ... ..	1	—	C	
10H/0970067	†	<b>OUTLET, straight</b> ... ..	1	—	C	
5X/6488	CZ.23144/B	<b>RING, clamp</b> ... ..	1	—	C	
10H/0970090	†	<b>RING, sealing</b> ... ..	1	—	C	
	E.A1.47.137	<b>CASTING, throttle box</b> ... ..	1	Mag. Alloy	—	C.2
28E/1201828	AS.3180/11B	<b>CLIP, cable</b> ... ..	1	—	C	
		Attaching parts for AS.3180/11B:—				
28M/1278189	AGS.2001/B/1	Nut, 4 BA ... ..	1	—	C	
28S/9419435	A31/B12	Screw, 4 BA ... ..	1	—	C	
6195	E.A1.47.159	<b>KNOB, shut off, cock lever, locking</b> ...	1	L.62	C	C.2
6194	E.A1.47.157	<b>KNOB, throttle lever, locking</b> ...	1	L.62	C	C.2
20124	E.A3.81.1971	<b>KNOB, shut off, cock lever, L.H. (Red)</b> ...	1	—	C/MR	C.2
20125	E.A3.81.1972	<b>KNOB, shut off, cock lever, R.H. (Green)</b> ...	1	—	C/MR	C.2
		Attaching parts for E.A3.81.1971 and E.A3.81.1972:—				
28S/9535715	A33/B16	Screw, 4 BA ... ..	1	—	C	
28S/9435717	A33/C20	Screw, 2 BA ... ..	1	—	C	
21309	AS.1908/C	<b>KNOB, throttle control lever, R.H. (Red)</b> ...	1	—	C	C.2
		Attaching parts for AS.1908/C:—				
28M/1006473	A27/CT	Nut, 2 BA ... ..	1	—	C	
28S/9135205	A33/C2B	Screw, 2 BA ... ..	1	—	C	
3373	E.A3.47.99	<b>LEVER, shut off cock, control, L.H. (Pre-Mod. 5028)</b>	1	—	C	
	E.A3.47.139	<b>LEVER, shut off cock, control, L.H. (Mod. 5028)</b>	1	—	MR	C.2
3374	E.A3.47.100	<b>LEVER, shut off cock, control, R.H. (Pre-Mod. 5028)</b>	1	—	C	
	E.A3.47.140	<b>LEVER, shut off cock, control, R.H. (Mod. 5028)</b>	1	—	MR	C.2

## CONTROLS

### ENGINE CONTROLS IN NOSE FUSELAGE

Ref. No.	Part No.							Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
		1	2	3	4	5	6				M.R. L.M.	
3371	E.A3.47.77							LEVER, throttle control, L.H. (Pre-Mod. 5028)	1	—	C	
6119129	E.A3.47.137							LEVER, throttle control, L.H. (Mod. 5028) ...	1	—	C	C.2
3372	E.A3.47.78							LEVER, throttle control, R.H. (Pre-Mod. 5028)	1	—	C	
6119153	E.A3.47.138							LEVER, throttle control, R.H. (Mod. 5028) ...	1	—	C	C.2
28M/9403520	A27/CP							NUT, 2 BA, for lever stop screw ...	8	—	C	
5618	E.A1.47.295							PIN, special, shut off, cock control lever clamp	1	L.65	C	C.2
								Attaching parts for E.A1.47.295:—				
28M/1011477	A27/NP							Nut, 1/2" BSF (Drill for split pin) ...	1	—	C	
28P/9560929	SP.90/E8							Pin, split ...	1	—	C	
28W/9419479	SP.15/N							Washer ...	1	—	C	
6198	E.A1.47.297							PIN, special, throttle lever control clamp ...	1	L.65	C	C.2
25923	E.A1.47.303							PLATE, guard ...	1	—	C	C.2
								Attaching parts for E.A1.47.303:—				
28S/1200080	A32/B8							Screw, 4 BA ...	6	—	C	
28S/9992522	A32/B16							Screw, 4 BA ...	3	—	C	
28W/9416642	SP.47/B							Washer, spring ...	9	—	C	
3380	E.A3.47.91							PLATE, reaction, shut off cock, assembly ...	1	—	C	C.2
3381	E.A3.47.93							PLATE, reaction, shut off cock ...	1	—	C	C.2
3379	E.A3.47.87							PLATE, reaction, throttle control, assembly ...	1	—	C	C.2
3382	E.A3.47.101							PLATE, reaction, throttle control ...	1	—	C	C.2
								Attaching parts for E.A3.47.91, E.A3.47.93, E.A3.47.87 and E.A3.47.101:—				
28D/1010658	A25/1B							Bolt, 4 BA ...	1	—	C	
28M/1278189	AGS.2001/B/1							Nut, 4 BA ...	1	—	C	
28W/9419474	SP.15/B							Washer ...	1	—	C	
21233	E.A3.47.145							PLATE, locking, for bush ...	1	—	MR	C.2
								Attaching parts for E.A3.47.145:—				
28D/1007319	AS.1242/4B							Bolt, 4 BA ...	2	—	C	
28M/1086618	AGS.2002/B/1							Nut, 4 BA ...	2	—	C	
28W/9419465	SP.13/B							Washer ...	2	—	C	
20126	E.A3.81.1997							PLATE, switch protection ...	2	—	C	C.2
								Attaching parts for E.A3.81.1997:—				
28S/1013103	A44/Z8							Screw, 8 BA ...	3	—	C	
27C/1206039	AGS.2035/AA							Washer, shakeproof ...	3	—	C	
28S/1011492	A32/C28							SCREW, stop for levers ...	6	—	C	
28S/1220007	A32/C40							SCREW, stop for levers ...	2	—	C	
3377	E.A3.47.85							SHIM, at throttle levers (As required) ...	2	Lam. Alum.	C	C.2
3378	E.A3.47.103							SHIM, at shut off cock levers (As required) ...	2	Lam. Alum.	C	C.2
6173	E.A3.81.1995							SLEEVE, at relight switches ...	2	—	C	C.2
5CW/2007871	C.5162Y							SWITCH, relight, shut off cock levers ...	2	—	B	C.2
								Attaching parts for C.5162Y:—				
28S/1006961	A33/Z10							Screw, 8 BA ...	2	—	C	
29C/1206039	AGS.2035/AA							Washer, shakeproof ...	2	—	C	
5CW/9438275	†							SWITCH, micro, type 1A (Pre-Mod. 3562) ...	1	—	C	
5CW/9504373	†							SWITCH, micro (Mod. 3562) (Pre-Mod. 4080)	1	—	C	
5CW/1085884	†							SWITCH, limit, type 1.HY.1 (Mod. 4080) ...	1	—	B	
								Attaching parts for micro or limit switch:—				
28D/1011011	A25/8B							Bolt, 4 BA ...	2	—	C	
28M/1278189	AGS.2001/B/1							Nut, 4 BA ...	2	—	C	
29W/9419474	SP.15/B							Washer ...	2	—	C	

**CONTROLS  
ENGINE CONTROLS IN NOSE FUSELAGE**

Ref. No.	Part No.	Description						No. off	Mati Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	—	<b>SWITCH, INTER-COM., ASSEMBLY, ON INBOARD THROTTLE LEVER</b>						—	—	—	
		Spares for:—									
12819	E.B6.81.2345	<b>COVER</b> , switch ... ..						1	—	C	C.2
28D/1007319	AS.1242/4B	Attaching parts for E.B6.81.2345:— Bolt, 4 BA ... ..						1	—	C	C.2
	SCC.78702/1	<b>HOUSING</b> , switch (SRIM.3533) (Mod. 4799) (Make from E.B6.81.2343 Ref. 12820)						1	—	—	C.2
	SCC.78702/2	<b>PLATE</b> , end (SRIM.3533) (Mod. 4799) ...						1	—	—	C.2
28S/9435715	A33/B16	Attaching parts for SCC.78702/2:— Screw, 4 BA ... ..						2	—	C	C.2
5CW/1933296	PAGE ENG. B1640	<b>SWITCH</b> , push (SRIM.3533) (Mod. 4799) ...						1	—	C	C.2
28S/9435715	A33/B16	Attaching parts for switch assembly:— Screw, 4 BA ... ..						1	—	C	C.2
28S/1200053	A33/C16	Screw, 2 BA ... ..						1	—	C	C.2
6206	E.A3.47.83	<b>TUBE</b> , bearing, at throttle levers ... ..						1	—	C	C.2
3375	E.A3.47.89	<b>WASHER</b> , special, friction, at shut off cock levers						2	Ferodo F.F.	C	C.2
3376	E.A3.47.81	<b>WASHER</b> , special, friction, at throttle levers ...						2	Ferodo F.F.	C	C.2
		Attaching parts for E.G4.47.105:—									
28D/9133011	A25/2C	Bolt, 2 BA ... ..						3	—	C	
28D/9137409	AS.1246/2C	Bolt, 1 BA ... ..						2	—	C	
28D/9140203	AS.1246/3C	Bolt, 2 BA ... ..						9	—	C	
28D/9710453	AS.1246/4C	Bolt, 2 BA ... ..						2	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA ... ..						5	—	C	
115	E.A1.47.245	<b>CLAMP</b> , grommet retaining, at pressure bulkhead						4	L.65	C	C.1
		Attaching parts for E.A1.47.245:—									
28D/9133012	A25/3C	Bolt, 2 BA ... ..						2	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA ... ..						2	—	C	
1023	E.A1.47.357	<b>CLEAT</b> , engine control support ... ..						2	L.65	C	C.1
		Attaching parts for E.A1.47.357:—									
28D/1010030	A25/7C	Bolt, 2 BA ... ..						3	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA ... ..						3	—	C	
2142	SIMMONDS CORSEY SP.15/7	<b>CLIP</b> , rigid, engine controls ... ..						28	—	C	C.1
		Attaching parts for SP.15/7:—									
28D/9140644	A25/9C	Bolt, 2 BA ... ..						1	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA ... ..						1	—	C	
8552	E.B6.47.5	Packing (at frame 10 only) ... ..						1	—	C	
8553	E.B6.47.7	Packing (at frame 10 only) ... ..						1	—	C	
2143	SIMMONDS CORSEY SP.15/10	<b>CLIP</b> , rigid, engine controls ... ..						2	—	C	C.1
		Attaching parts for SP.15/10:—									
28D/1011245	A25/10E	Bolt, 1" BSF ... ..						1	—	C	
28M/9480017	AGS.2001/E/1/66	Nut, 1" BSF ... ..						1	—	C	
116	E.A1.47.251	<b>CONTROL</b> , engine, fuel, shut off cock, L.H. (Simmonds Corsey, No. 7)						1	—	C	C.1
117	E.A1.47.253	<b>CONTROL</b> , engine, throttle, L.H. (Simmonds Corsey, No. 7)						1	—	C	C.1

**CONTROLS  
ENGINE CONTROLS IN NOSE FUSELAGE**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
118	E.A1.47.255	<b>CONTROL</b> , engine, fuel, shut off cock, R.H. (Simmonds Corsey, No. 7)						1	—	C	C.1
119	E.A1.47.257	<b>CONTROL</b> , engine, throttle, R.H. (Simmonds Corsey, No. 7)						1	—	C	C.1
		Attaching parts for E.A1.47.251, E.A1.47.253, E.A1.47.255 and E.A1.47.257:—									
28N/9153393	AGS.899/4	Collar	...	...	...	...	...	1	—	C	
28P/867	SP.4Y/D9	Pin, shackle	...	...	...	...	...	1	—	C	
28P/9527619	SP.90/C7	Pin, split	...	...	...	...	...	1	—	C	
5X/4491348	Z.11809	<b>GROMMET</b> , at pressure bulkhead ... ..						4	—	C	C.1
	E.A1.47.217	<b>SUPPORT</b> , engine control, frame 12 ... ..						1	—	C	C.1

**CONTROLS  
ENGINE CONTROLS IN WING, PORT**

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.B6.47.293	<b>CONTROLS, ENGINE, IN WING, PORT, ASSEMBLY</b>	—	—	—	
		Spares for:—				
27275	E.B7.47.41	<b>LEVER, CONTROL, CONNECTING, ENGINE CONTROLS, ASSEMBLY (PRE-MOD. 5028)</b>	1	—	B	C.4
	E.B7.47.103	<b>LEVER, CONTROL, CONNECTING, ENGINE CONTROLS, ASSEMBLY (MOD. 5028)</b>	1	—	—	
		Spares for:—				
2A/9501177	SKEFKO EE.4	<b>BEARING, ballrace</b> ... ..	1	—	C	
2A/9501178	SKEFKO EE.5	<b>BEARING, ballrace</b> ... ..	1	—	C	
28N/13510	HOFFMANN CJ.0	<b>BEARING, spherical</b> ... ..	2	—	C	C.4
	E.A1.47.61	<b>COVER, bearing</b> ... ..	1	L.64	—	
	E.A1.47.57	<b>CUP, lever mounting</b> ... ..	1	L.64	—	
	E.A1.47.63	<b>CUP, lever mounting</b> ... ..	1	—	—	
	E.B7.47.39	<b>LEVER, control (Pre-Mod. 5028)</b> ... ..	1	L.88	—	C.4
	E.B7.47.107	<b>LEVER, control (Mod. 5028)</b> ... ..	1	—	—	
	E.A9.47.123	<b>LEVER, control (Pre-Mod. 5028)</b> ... ..	1	L.88	—	C.4
	E.B7.47.105	<b>LEVER, control (Mod. 5028)</b> ... ..	1	—	—	
28M/1011467	A27/ES	<b>NUT, 1/4" BSF</b> ... ..	1	—	C	
28P/9527619	SP.90/C7	<b>PIN, split</b> ... ..	1	—	C	
	E.A1.47.55	<b>PLATE, bearing cover</b> ... ..	1	L.64	—	
	E.A1.47.59	<b>SLEEVE, spacing</b> ... ..	1	L.64	—	C.4
21659	E.A1.47.53	<b>SPINDLE, control</b> ... ..	1	L.65	C	C.4
25997	E.A1.47.65	<b>WASHER, clamping</b> ... ..	1	L.64	C	C.4
		Attaching parts for E.B7.47.41 or E.B7.47.103:—				
28P/19241	SP.90/G16	<b>Pin, split</b> ... ..	1	—	C	
	13203	<b>LEVER, CONTROL, CONNECTING, ENGINE CONTROLS, ASSEMBLY (PRE-MOD. 5028)</b>	1	—	B	C.4
	E.B7.47.95	<b>LEVER, CONTROL, CONNECTING, ENGINE CONTROLS, ASSEMBLY (MOD. 5028)</b>	1	—	—	
		Spares for:—				
22754	E.A9.47.103	<b>BOLT, special</b> ... ..	1	DTD.683	C	C.4
22749	E.A9.47.97	<b>BRACKET, mounting</b> ... ..	1	L.53	C	C.4
22756	E.A9.47.107	<b>BUSH, tapped</b> ... ..	1	S.1	C	C.4
27276	E.B7.47.45	<b>LEVER, CONTROL, ASSEMBLY (PRE-MOD. 5028)</b>	1	—	B	C.4
	E.B7.47.97	<b>LEVER, CONTROL, ASSEMBLY (MOD. 5028)</b> ...	1	—	—	
		Spares for:—				
2A/9501178	SKEFKO EE.5	<b>BEARING, ballrace</b> ... ..	2	—	C	C.4
28N/13510	HOFFMANN CJ.0	<b>BEARING, spherical</b> ... ..	2	—	C	C.4
28N/2001691	AGS.2030/23	<b>CIRCLIP, internal</b> ... ..	1	—	C	
	E.A9.47.111	<b>HOUSING, bearing</b> ... ..	1	S.1	—	
	E.A9.47.119	<b>LEVER (Pre-Mod. 5028)</b> ... ..	1	S.514	—	
	E.B7.47.99	<b>LEVER (Mod. 5028)</b> ... ..	1	S.514	—	
	E.B7.47.43	<b>LEVER (Pre-Mod. 5028)</b> ... ..	1	S.514	—	
	E.B7.47.101	<b>LEVER (Mod. 5028)</b> ... ..	1	S.514	—	
28N/9156370	SP.21	<b>NIPPLE, lubrication</b> ... ..	1	—	C	
	E.A9.47.21	<b>PIECE, distance</b> ... ..	1	DTD.683	—	C.4
22750	E.A9.47.99	<b>LEVER, CONTROL, ASSEMBLY (PRE-MOD. 5028)</b>	1	—	B	C.4
	E.B7.47.109	<b>LEVER, CONTROL, ASSEMBLY (MOD. 5028)</b> ...	1	—	—	
		Spares for:—				
2A/9501178	SKEFKO EE.5	<b>BEARING, ballrace</b> ... ..	2	—	C	C.4
28N/13510	HOFFMANN CJ.0	<b>BEARING, spherical</b> ... ..	2	—	C	C.4
28N/2001691	AGS.2030/23	<b>CIRCLIP, internal</b> ... ..	1	—	C	



**CONTROLS**  
**ENGINE CONTROLS IN WING, STARBOARD**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	E.B6.47.295	<b>CONTROLS, ENGINE, IN WING, STARBOARD, ASSEMBLY</b>						—	—	—	
27275	E.B7.47.41	Spares for:— <b>LEVER, CONTROL, CONNECTING, ENGINE CONTROLS, ASSEMBLY (PRE-MOD. 5028)</b>						1	—	B	C.5
	E.B7.47.103	<b>LEVER, CONTROL, CONNECTING, ENGINE CONTROLS, ASSEMBLY (MOD. 5028)</b>						1	—	—	
		Spares for:—									
2A/9501177	SKEFKO EE.4	<b>BEARING, ballrace</b> ... ..						1	—	C	
2A/9501178	SKEFKO EE.5	<b>BEARING, ballrace</b> ... ..						1	—	C	
	HOFFMANN										
28N/13510	CJ.0	<b>BEARING, spherical</b> ... ..						2	—	C	C.5
	E.A1.47.61	<b>COVER, bearing</b> ... ..						1	L.64	—	
	E.A1.47.57	<b>CUP, lever mounting</b> ... ..						1	L.64	—	
	E.A1.47.63	<b>CUP, lever mounting</b> ... ..						1	—	—	
	E.B7.47.39	<b>LEVER, control (Pre-Mod. 5028)</b> ... ..						1	L.88	—	C.5
	E.B7.47.107	<b>LEVER, control (Mod. 5028)</b> ... ..						1	—	—	
	E.A9.47.123	<b>LEVER, control (Pre-Mod. 5028)</b> ... ..						1	L.88	—	C.5
	E.B7.47.105	<b>LEVER, control (Mod. 5028)</b> ... ..						1	—	—	
28M/1011467	A27/ES	<b>NUT, 1/2" BSF</b> ... ..						1	—	C	
28P/9527619	SP.90/C7	<b>PIN, split</b> ... ..						1	—	C	
	E.A1.47.55	<b>PLATE, bearing cover</b> ... ..						1	L.64	—	
	E.A1.47.59	<b>SLEEVE, spacing</b> ... ..						1	L.64	—	C.5
	E.A1.47.53	<b>SPINDLE, control</b> ... ..						1	L.65	—	C.5
25997	E.A1.47.65	<b>WASHER, clamping</b> ... ..						1	L.64	C	C.5
		Attaching parts for E.B7.47.41 or E.B7.47.103:—									
28P/19241	SP.90/G16	<b>Pin, split</b> ... ..						1	—	C	
659	E.A1.47.18	<b>LEVER, ASSEMBLY, CONTROLS, INBOARD ENGINE RIB (PRE-MOD. 5028)</b>						1	—	B	C.5
	E.A3.47.177	<b>LEVER, ASSEMBLY, CONTROLS, INBOARD ENGINE RIB (MOD. 5028)</b>						1	—	—	
		Spares for:—									
2A/9500415	HOFFMANN CS.5	<b>BEARING, ballrace, outboard</b> ... ..						2	—	C	
2A/9500420	HOFFMANN T.21	<b>BEARING, ballrace, inboard</b> ... ..						2	—	C	
	E.A1.47.35	<b>BOSS, throttle lever</b> ... ..						1	—	—	
	E.A1.47.20	<b>BRACKET, assembly</b> ... ..						1	—	—	
28N/13510	HOFFMANN CJ.0	<b>JOINT, self aligning</b> ... ..						4	—	C	
	E.A1.47.25	<b>LEVER, control, shut-off cock (Pre-Mod. 5028)</b> ... ..						1	L.72	—	
	E.A3.47.179	<b>LEVER, control, shut-off cock (Mod. 5028)</b> ... ..						1	L.72	—	
	E.A1.47.27	<b>LEVER, control, shut-off cock (Pre-Mod. 5028)</b> ... ..						1	L.72	—	
	E.A3.47.181	<b>LEVER, control, shut-off cock (Mod. 5028)</b> ... ..						1	L.72	—	
	E.A1.47.21	<b>LEVER, control, throttle (Pre-Mod. 5028)</b> ... ..						1	L.72	—	
	E.A3.47.183	<b>LEVER, control, throttle (Mod. 5028)</b> ... ..						1	L.72	—	
4142	E.A1.47.23	<b>LEVER, control, throttle (Pre-Mod. 5028)</b> ... ..						1	L.72	C	
	E.A3.47.185	<b>LEVER, control, throttle (Mod. 5028)</b> ... ..						1	L.72	—	
	E.A1.47.33	<b>SLEEVE, bearing</b> ... ..						1	—	—	
	E.A1.47.31	<b>SLEEVE, flanged</b> ... ..						1	—	—	
	E.A1.47.29	<b>SPINDLE, main</b> ... ..						1	—	—	
		Attaching parts for E.A1.47.18 or E.A3.47.177:—									
28D/7002428	A25/6C	<b>Bolt, 2 BA</b> ... ..						2	—	C	
28D/1008151	A25/4E	<b>Bolt, 1/2" BSF</b> ... ..						1	—	C	
28D/1011242	A25/7E	<b>Bolt, 1/2" BSF</b> ... ..						1	—	C	
1122	EEAS.63	<b>Nut, special</b> ... ..						2	S.96	C	C.5
28M/1011467	A27/ES	<b>Nut, 1/2" BSF</b> ... ..						2	—	C	
28P/9527619	SP.90/C7	<b>Pin, split</b> ... ..						4	—	C	
28W/9419475	SP.15/C	<b>Washer</b> ... ..						2	—	C	
28W/9419405	SP.15/E	<b>Washer</b> ... ..						2	—	C	


**CONTROLS  
ENGINE CONTROLS IN WING, STARBOARD**

Ref. No.	Part No.							Description	No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6					
22747	E.A9.47.82							LEVER, CONTROL, CONNECTING, ENGINE CONTROLS, ASSEMBLY (PRE-MOD. 5028)	1	—	B	C.5
	E.B7.47.116							LEVER, CONTROL, CONNECTING, ENGINE CONTROLS, ASSEMBLY (MOD. 5028)	1	—	—	
								Spares for:—				
22754	E.A9.47.103							BOLT, special ... ..	1	DTD.683	C	C.5
38050	E.A9.47.98							BRACKET, mounting ... ..	1	DTD.300	C	C.5
22756	E.A9.47.107							BUSH, capped ... ..	1	S.1	C	C.5
22751	E.A9.47.100							LEVER, CONTROL, ASSEMBLY (PRE-MOD. 5028)	1	—	B	C.5
	E.B7.47.110							LEVER, CONTROL, ASSEMBLY (MOD. 5028) ...	1	—	—	
								Spares for:—				
2A/9501178	SKEFKO EE.5							BEARING, ballrace ... ..	2	—	C	C.5
	HOFFMANN											
28N/13510	CJ.0							BEARING, spherical ... ..	2	—	C	C.5
28N/2011691	AGS.2030/23							CIRCLIP, internal ... ..	1	—	C	
	E.A9.47.112							HOUSING, bearing ... ..	1	S.1	—	
	E.A9.47.114							LEVER, control (Pre-Mod. 5028) ... ..	1	S.514	—	
	E.B7.47.112							LEVER, control (Mod. 5028) ... ..	1	S.514	—	
	E.A9.47.116							LEVER, control (Pre-Mod. 5028) ... ..	1	S.514	—	
	E.B7.47.114							LEVER, control (Mod. 5028) ... ..	1	S.514	—	
28N/9156370	SP.21							NIPPLE, lubrication ... ..	1	—	C	
	E.A9.47.121							PIECE, distance ... ..	1	DTD.683	—	C.5
28W/14183	AS.1903/E12							WASHER, saddle ... ..	1	—	C	
22753	E.A9.47.102							LEVER, CONTROL, ASSEMBLY (PRE-MOD. 5028)	1	—	B	C.5
	E.B7.47.118							LEVER, CONTROL, ASSEMBLY (MOD. 5028) ...	1	—	—	
								Spares for:—				
2A/9501178	SKEFKO EE.5							BEARING, ballrace ... ..	2	—	C	C.5
	HOFFMANN											
28N/13510	CJ.0							BEARING, spherical ... ..	2	—	C	C.5
28N/2011691	AGS.2030/23							CIRCLIP, internal ... ..	1	—	C	
	E.A9.47.112							HOUSING, bearing ... ..	1	S.1	—	
	E.A9.47.118							LEVER, control (Pre-Mod. 5028) ... ..	1	S.514	—	
	E.B7.47.120							LEVER, control (Mod. 5028) ... ..	1	S.514	—	
	E.A9.47.120							LEVER, control (Pre-Mod. 5028) ... ..	1	S.514	—	
	E.B7.47.100							LEVER, control (Mod. 5028) ... ..	1	S.514	—	
28N/9156370	SP.21							NIPPLE, lubrication ... ..	1	—	C	
	E.A9.47.121							PIECE, distance ... ..	1	DTD.683	—	C.5
28W/14183	AGS.1903/E12							WASHER, saddle ... ..	1	—	C	
22755	E.A9.47.105							WASHER, clamping ... ..	2	DTD.683	C	C.5
22757	E.A9.47.109							WASHER, distance ... ..	1	DTD.683	C	C.5
								Attaching parts for E.A9.47.82 or E.B7.47.116:—				
28D/1200119	A25/4C							Bolt, 2 BA ... ..	4	—	C	
28M/1278190	AGS.2001/C/1							Nut, 2 BA ... ..	4	—	C	
22765	E.A9.47.169							Washer, packing ... ..	4	—	C	C.5
13201	E.B7.47.31							TUBE, CONTROL, FROM FUSELAGE TO CONTROL LEVER ASSEMBLY AT RIB 2, ASSEMBLY (PRE-MOD. 2621)	2	—	B	
								Spares for:—				
34096	E.A3.47.53							FORK-END, adjustable ... ..	1	—	C	C.5
28M/1007404	A27/JT							NUT, lock, 3/8" BSF ... ..	1	—	C	
32398	E.B7.47.83							TUBE, CONTROL, FROM FUSELAGE TO CONTROL LEVER ASSEMBLY AT RIB 2, ASSEMBLY (MOD. 2621)	2	—	C	C.5
								Spares for:—				
34096	E.A3.47.53							FORK-END, adjustable ... ..	1	—	C	C.5
32079	EEAS.234							PLUG, end ... ..	1	—	C	C.5


**CONTROLS**  
**ENGINE CONTROLS IN WING, STARBOARD**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
12168	E.A9.47.93	TUBE, control, intermediate control lever to engine control						1	—	C	C.5
12169	E.A9.47.95	TUBE, control, intermediate control lever to engine control						1	—	C	C.5
13202	E.B7.47.37	TUBE, CONTROL, FROM CONTROL LEVER ASSEMBLY AT RIB 2 TO INTERMEDIATE CONTROL TUBE, ASSEMBLY (PRE-MOD. 5028)						2	—	B	C.5
	E.B7.47.89	TUBE, CONTROL, FROM CONTROL LEVER ASSEMBLY AT RIB 2 TO INTERMEDIATE CONTROL TUBE, ASSEMBLY (MOD. 5028)						2	—	—	
	HOFFMANN	Spares for:—									
28N/13510	CJ.0	BEARING, spherical ... ..						1	—	C	C.5
	E.A3.47.49	FORK- <del>END</del> , adjustable ... ..						1	—	—	C.5
28M/1007403	A27/ET	NUT, lock, 1/4" BSF ... ..						1	—	C	
		Attaching parts for control tubes:—									
220	EEAS.12/1	Bolt, special (as required) ... ..						2	S.96	C	C.5
12162	E.A9.47.173	Bolt, special (as required) ... ..						2	—	C	C.5
1122	EEAS.63	Nut, special ... ..						2	S.96	C	C.5
28P/9527619	SP.90/C7	Pin, split ... ..						2	—	C	
28W/9419475	SP.15/C	Washer ... ..						2	—	C	
7732	EEAS.28/3/DU	Washer ... ..						2	—	C	C.5

Plate CI

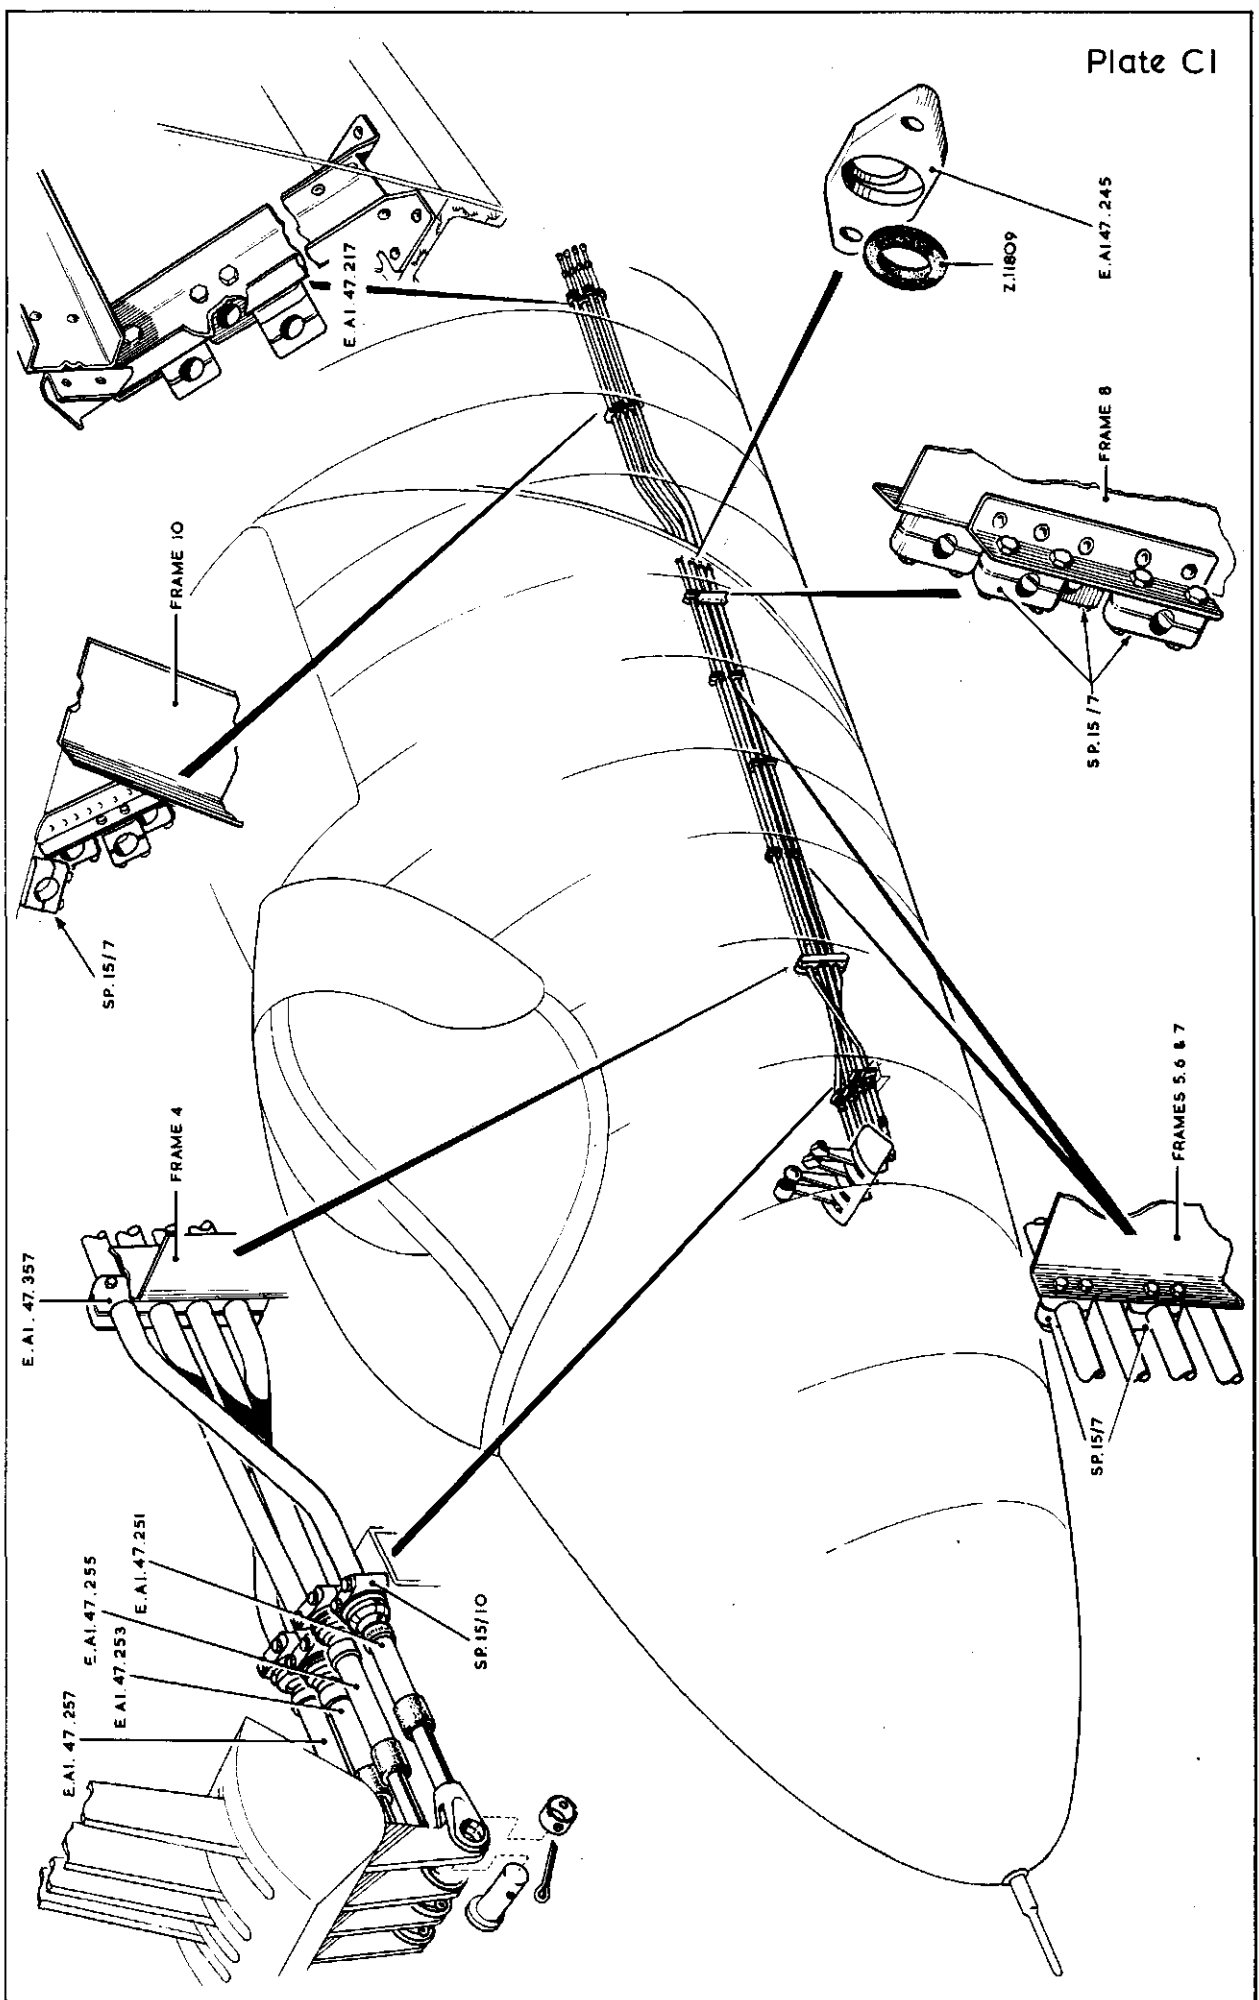

ENGINE CONTROLS - FRONT FUSELAGE

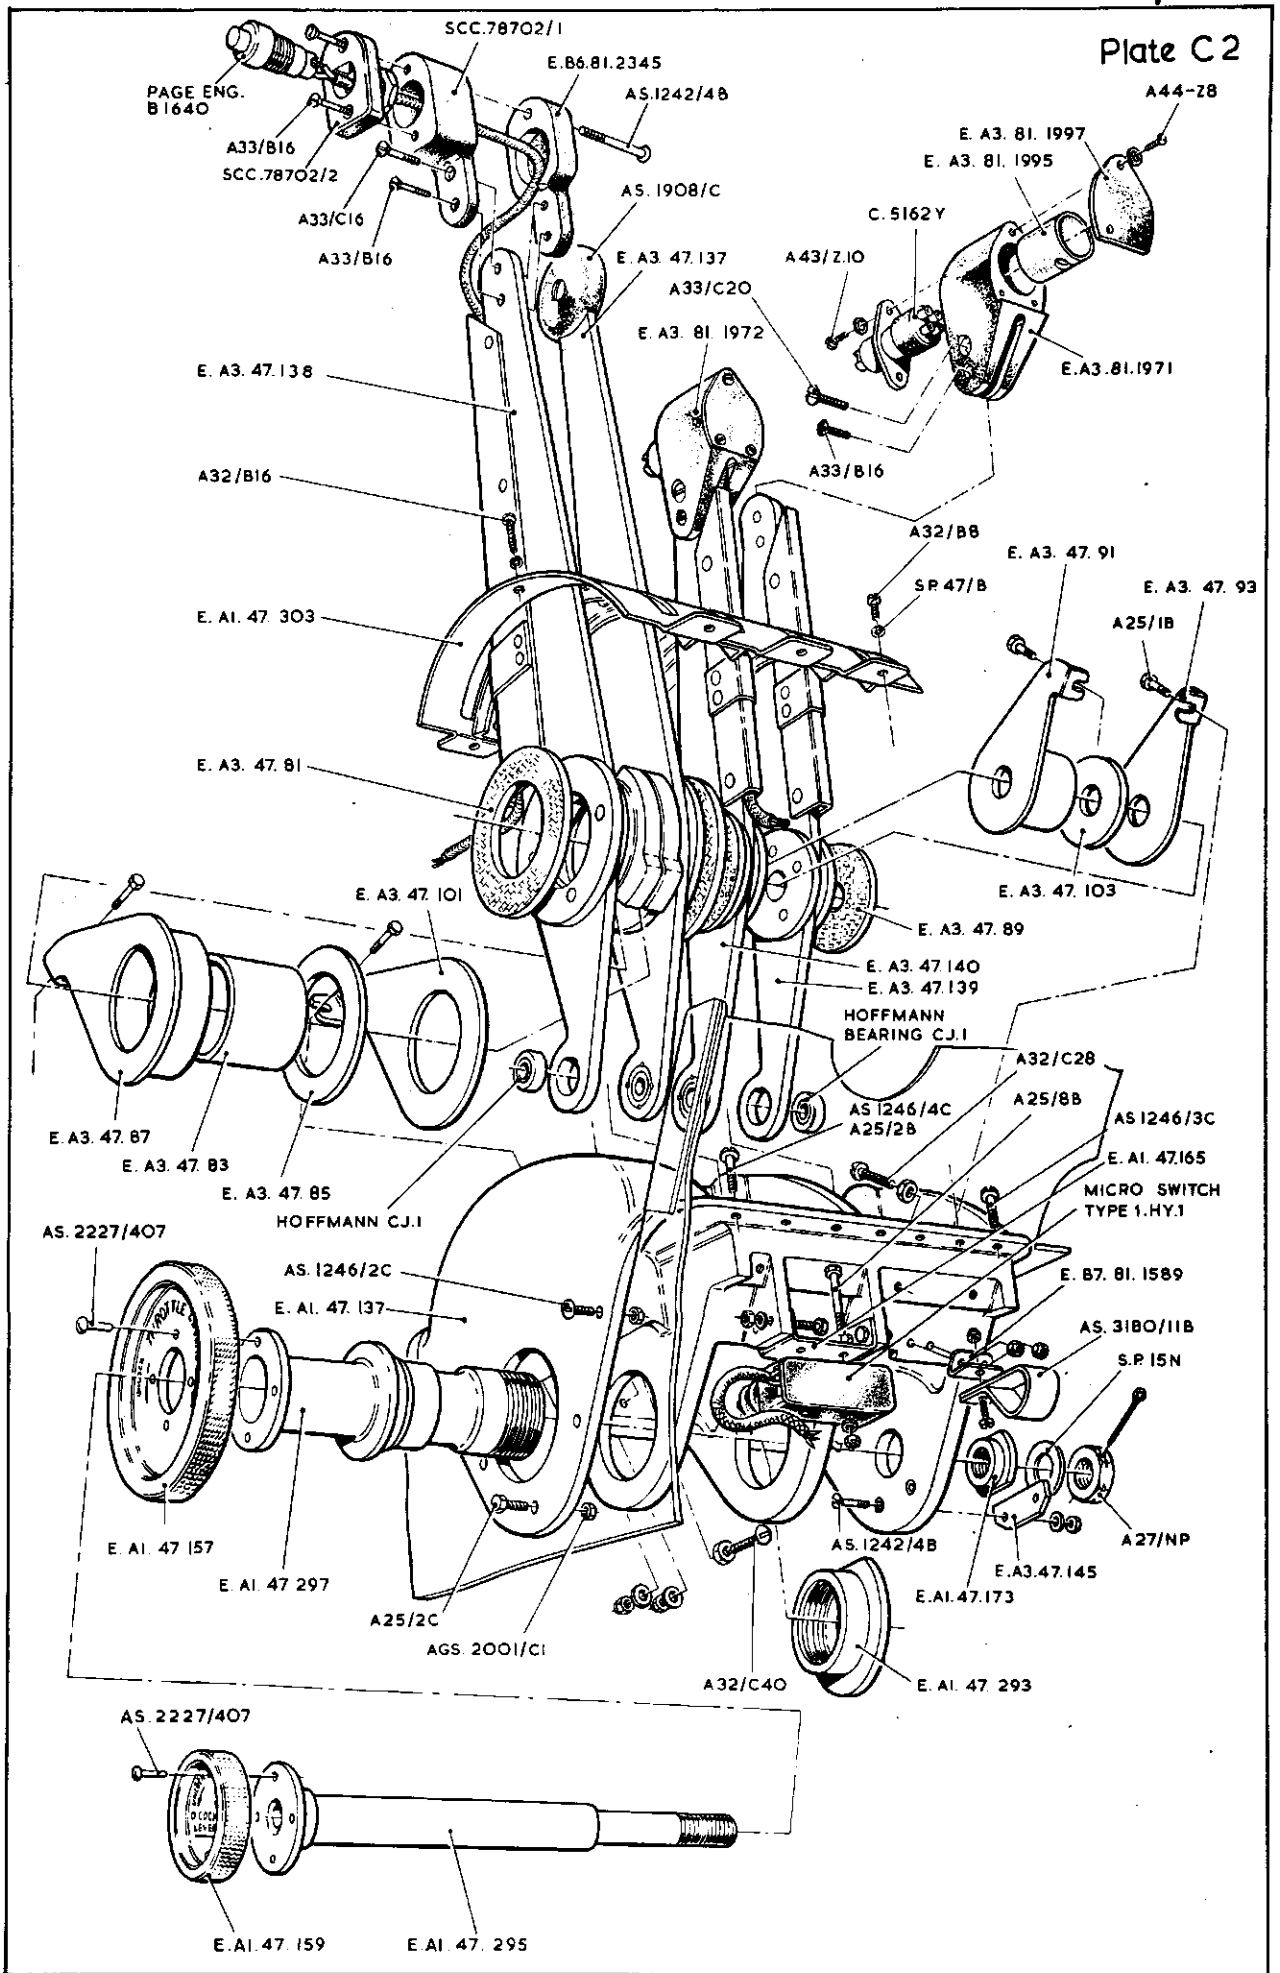

PILOT'S THROTTLE BOX







This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

