

CANBERRA E Mk. 15

Page F.1

EQUIPMENT GROUND AND MAINTENANCE

Ref. No.	Part No.	Description	No. off	Mati Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.A1.88.2	EQUIPMENT, GROUND, ASSEMBLY ...	—	—	—	
		Spares for:—				
4Q/4230826	E.A1.88.77	ADAPTOR, fuselage, jacking ...	1	—	B	
1L/178	†	ADAPTOR, canopy to fuselage torque wrench ...	1	—	B	
4G/6246	†	ADAPTOR, charging oleo ...	2	—	A	
95087	E.A3.88.157	ARM, NOSE WHEEL STEERING, ASSEMBLY ...	1	—	A	
		Spares for:—				
20870	E.A3.88.57	ARM, STEERING, ATTACHMENT ...	1	—	MR	
		Spares for:—				
21123	E.A3.88.47	BAR, release, axle pin ...	2	—	MR	
21124	E.A3.88.49	BAR, release, plunger ...	2	—	MR	
21218	E.A3.88.51	BUSH ...	2	—	MR	
40109	E.A3.88.41	GUIDE, axle pin ...	2	—	MR	
95459	E.A3.88.43	GUIDE, plunger ...	2	—	C	
26190	E.A3.88.55	PIN, adaptor ...	2	—	MR	
22988	E.A3.88.25	PIN, axle, port ...	1	—	MR	
21120	E.A3.88.27	PIN, axle, starboard ...	1	—	MR	
21122	E.A3.88.45	PLUNGER ...	2	—	C	
21219	E.A3.88.69	SPRING ...	2	—	MR	
95460	E.A3.88.53	WASHER, saddle ...	2	—	C	
	FLEXELLO					
95494	633/C1	CASTOR, unit ...	2	—	C	
95022	E.A3.88.15	ATTACHMENTS, NOSE TOWING BAR, ASSEMBLY	1	—	B	
		Spares for this assembly are identical with those for assembly Part No. E.A3.88.57, except for the following deletion and addition				
		Delete:—				
26190	E.A3.88.55	PIN, adaptor ...	2	—	MR	
		Add:—				
25733	E.A3.88.37	PIN, adaptor ...	2	—	MR	
95539	L.F.D.S.4319	ASSISTOR, Avro, triple bomb carrier ...	1	—	B	
4G/2792	†	BAR, towing ...	1	—	A	
95299	E.A3.88.297	BLOCK, for depressing stud ring cover when assembling or withdrawing fuel tanks Nos. 1 and 2	2	—	B	
	DOWTY					
27Q/32596	M.T.1093	BLOCK, split, for air brake ...	1	—	B	
95490	E.A1.88.889	BOLT, canopy, slave (ST8/4833) ...	32	5.97	C	
95413	E.A3.88.307	BRACKET, MAIN WHEEL JACKING, ASSEMBLY	2	—	B	
		Spares for:—				
21870	E.A3.88.219	BOLT, special ...	2	S.94 or S.95	C	
95013	E.A3.88.79	BRIDGE, detachable, for wing slinging ...	1	—	B	
4GB/4139	†	BRIDGE, towing, main undercarriage ...	1	—	A	
95012	E.A1.88.89	CABLE, retaining, bomb door ...	2	—	B	
1971	E.A3.88.91	CLAMP, AILERON LOCKING, ASSEMBLY ...	1	—	B	
		Spares for:—				
6799	E.A3.88.103	PENNANT ...	2	—	C	
6800	E.A3.88.101	STRAP, assembly ...	1	—	C	
1972	E.A3.88.92	CLAMP, AILERON LOCKING, ASSEMBLY ...	1	—	B	
		Spares for:—				
6799	E.A3.88.103	PENNANT ...	2	—	C	
20738	E.A3.88.102	STRAP, assembly ...	1	—	C	

EQUIPMENT GROUND AND MAINTENANCE

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
1867	E.A1.88.73	CLAMP,	ELEVATOR	LOCKING,	STARBOARD,	ASSEMBLY		1	—	B	
		Spares for:—									
20736	E.A1.88.185	PENNANT	...	...	...	...	...	1	—	C	
28FP/4062336	A.617	PIN, "pip"	...	...	...	...	...	2	—	C	
13142	E.A1.88.873	CLAMP,	elevator locking,	port	...	...	...	1	—	B	
2468	E.A3.88.153	CLAMP,	RUDDER	LOCKING,	ASSEMBLY (PRE-	MOD. 5096)		2	—	B	
6119203	E.A3.88.383	CLAMP,	RUDDER	LOCKING,	ASSEMBLY (MOD. 5096)			1	—	B	
		Spares for:—									
20432	E.A3.88.97	PENNANT,	assembly	...	...	...	...	1	—	C	
28FP/9432062	A.413	PIN, "pip"	...	...	...	...	...	1	—	C	
14747	TERRY EX12	SPRING	...	...	...	...	...	1	—	C	
20778	EEAS.20/2ER	TAB, locking	...	...	...	...	...	4	—	C	
95298	E.A3.88.205	COVER,	used for protection and depressing stud rings when assembling or withdrawing tanks Nos. 1 and 2	...	...	...	...	2	—	B	
	E.B6.88.35	COVER,	AIRCRAFT,	ASSEMBLY	...	...	...	—	—	—	
		Spares for:—									
27D/2948	E.A3.88.301	COVER,	nose	...	...	...	...	1	—	B	
27D/2809	E.A1.88.401	COVER,	coupé	...	...	...	...	1	—	B	
27D/2991	E.A9.88.27	COVER,	engine	...	...	...	...	2	—	B	
27D/2811	E.A1.88.405	COVER,	jet pipe	...	...	...	...	2	—	C	
27D/2807	E.A1.88.407	COVER,	main wheel	...	...	...	...	2	—	C	
27D/2806	E.A1.88.409	COVER,	nose wheel	...	...	...	...	2	—	C	
27D/2962	E.A1.88.597	COVER,	pressure head	...	...	...	...	1	—	B	
27D/2878	E.A1.88.787	COVER,	equipment door	...	...	...	...	1	—	B	
95412	GM/C/1776	COVER,	for Avro triple carrier	...	...	...	...	1	—	B	
95109	E.A3.88.211	CRADLE,	for handling jettisonable wing tanks	...	...	...	...	1	—	A	
95037	E.A1.88.417	CRADLE,	retraction test (For use at frame 13)	...	...	...	...	1	—	A	
95038	E.A1.88.419	CRADLE,	retraction test (For use at frame 29)	...	...	...	...	1	—	A	
95072	E.A1.88.551	DISC,	setting engine controls, starboard, 12 SWG	...	...	...	...	2	L.72	B	
95408	E.B6.88.27	DISC,	setting engine controls, port, 12 SWG	...	...	...	...	1	L.72	B	
	—	EQUIPMENT,	SIGHTING,	COMPASS ALIGNMENT,	ASSEMBLY			—	—	—	
		Spares for:—									
95563	E.A9.88.481	CASE,	carrying, assembly	...	...	...	...	1	—	B	
95562	E.A9.88.479	ROD,	SIGHTING, AFT, ASSEMBLY	...	...	...	...	1	—	A	
		Spares for:—									
	E.A9.88.497	BRACKET,	mounting (Spirit level)	...	...	...	...	1	—	—	
	E.A9.88.445	BRACKET,	rod sighting	...	...	...	...	1	—	—	
	E.A9.88.447	JOINT,	ball (inner)	...	...	...	...	1	DEF.131A	—	
	E.A9.88.449	JOINT,	ball (outer)	...	...	...	...	1	DEF.131A	—	
	E.A9.88.467	KNOB	...	...	...	...	...	1	DEF.131A	—	
	COOKE										
	TROUGHTON & SIME LTD.										
	E.985	LEVEL,	spirit, circular	...	...	...	...	1	—	—	
	E.A9.88.495	SHAFT	...	...	...	...	...	1	—	—	
	E.A9.88.469	STUD,	special	...	...	...	...	1	DEF.131A	—	
95561	E.A9.88.477	ROD,	SIGHTING, FORWARD, ASSEMBLY	...	...	...	...	1	—	A	
		Spares for:—									
	E.A9.88.513	BRACKET,	mounting (Spirit level)	...	...	...	...	1	DEF.131A	—	
	E.A9.88.505	CHUCK,	inner portion	...	...	...	...	1	DEF.131A	—	
	E.A9.88.507	CHUCK,	sleeve	...	...	...	...	1	DEF.131A	—	
	E.A9.88.515	CLIP	...	...	...	...	...	2	DEF.131A	—	
	E.A9.88.447	JOINT,	ball (inner)	...	...	...	...	1	DEF.131A	—	
	E.A9.88.449	JOINT,	ball (outer)	...	...	...	...	1	DEF.131A	—	

Ref. No.	Part No.	Description	No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.A9.88.517 COOKE TROUGHTON SIME LTD. E.985	JOINT, ball (rod end)	1	DEF.131A	—	
	E.A9.88.509	LEVEL, spirit, circular	1	—	—	
	E.A9.88.519	PLATE, sighting	1	DEF.131A	—	
	E.A9.88.511	ROD	1	DEF.131A	—	
	E.A9.88.503	TIP, sighting	1	DEF.131A	—	
	A.6300	TUBE, 1½" o/d x 22 SWG	1	—	—	
95292	E.A1.88.359	EXTRACTOR, and assembly tool, for wheels	1	—	B	
95047	E.A1.88.375	EXTRACTOR, wing to fuselage pick-up pins	1	—	A	
95044	E.A1.88.825	EXTRACTOR, for tab torque tube lever	1	—	A	
95104	E.B6.88.103	EXTRACTOR, for aileron hinge pin	1	—	A	
95462	A.10056	EXTRACTOR, rudder blow-back rod	1	—	A	
27G/5105	E.A1.88.91	FIXTURE, hydraulic brake alignment	1	—	B	
		FORMERS, ASSEMBLY, PORT	—	—	—	
		Spares for:—				
95025	E.A1.88.91A	FORMER, wing lifting gantry, forward, port	1	—	B	
95026	E.A1.88.91B	FORMER, wing lifting gantry, centre, port	1	—	B	
95027	E.A1.88.91C	FORMER, wing lifting gantry aft, port	1	—	B	
95028	E.A1.88.91D	FORMER, wing lifting gantry, forward, port	1	—	B	
95029	E.A1.88.91E	FORMER, wing lifting gantry, centre, port	1	—	B	
95030	E.A1.88.91F	FORMER, wing lifting gantry aft, port	1	—	B	
	E.A1.88.92	FORMERS, ASSEMBLY, STARBOARD	—	—	—	
		Spares for:—				
95031	E.A1.88.92A	FORMER, wing lifting gantry, forward, starboard	1	—	B	
95032	E.A1.88.92B	FORMER, wing lifting gantry, centre starboard	1	—	B	
95033	E.A1.88.92C	FORMER, wing lifting gantry, aft, starboard	1	—	B	
95034	E.A1.88.92D	FORMER, wing lifting gantry, forward, starboard	1	—	B	
95035	E.A1.88.92E	FORMER, wing lifting gantry, centre starboard	1	—	B	
95036	E.A1.88.92F	FORMER, wing lifting gantry, aft, starboard	1	—	B	
4Q/2309	†	GANTRY, upright, type A	4	—	A	
4Q/4230656	†	GANTRY, beam, type A	2	—	A	
4Q/4230657	†	GANTRY, beam, type B	2	—	A	
95115	E.A3.88.179	GAUGE, tailplane incidence and dihedral	1	—	A	
95010	E.A1.88.93	GAUGE, wing incidence dihedral	1	—	A	
95040	E.A1.88.447	GAUGE, levelling, cockpit lateral and fuselage longeron	1	—	A	
95093	E.A1.88.747	GAUGE, levelling, cockpit longeron and fuselage lateral	1	—	A	
95100	E.A1.88.823	GAUGE, aileron fixed tab angle checking	1	—	B	
95532	E.A1.88.893	GAUGE, inspection assembly of canopy to fuselage	1	—	B	
95653	†	GAUGES, clearance, aileron, shroud screen (Supplied in set of three)	1 set	—	B	
95273	E.A1.88.785	GEAR, LIFTING, COMPLETE AIRCRAFT, ASSEMBLY (MOD. GE.876)	2	—	A	
		Spares for:—				
95526	E.A3.88.317	BOLT, special shouldered	2	S.97	C	
95527	E.A3.88.319	WASHER, special	2	—	C	

Page F.4

CANBERRA E Mk. 15

EQUIPMENT **GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
95276	E.B7.88.15	GUARD, AIR INTAKE DEBRIS, ASSEMBLY (FOR USE ON A/C NOT EMBODYING AVON MOD. 843) Spares for:—	2	—	B	
95503	E.A3.88.295	BOLT, key	2	—	C	
95538	E.B7.88.205	GUARD, AIR INTAKE DEBRIS, ASSEMBLY (FOR A/C EMBODYING AVON MOD. 843) (MOD. GE.2396) Spares for:—	2	—	B	
33H/	†	ADHESIVE, P.R.C. compound	QR	—	—	
	E.B7.88.207	SEGMENT	3	LFS.21	—	
28S/1214853	4100/8/8"	SCREW, P.K.	21	—	C	
32B/	E.B7.88.209	STRIP, felt, 3/8" x 1"0 x 38" long	1	DTD.590	LM	
1B/4467	†	GUN, lubricating	1	—	A	
95080	AT.81489	HANDLE, crutching	1	—	A	
4Q/4230825	E.A1.88.257	HEAD, 10 ton jack adaptor	2	—	B	
95112	E.A3.88.269	HEAD, jacking, for 15 ton pillar jack	2	—	B	
95449	E.A9.88.39	HEAD, jacking, for 15 ton pillar jack	1	—	B	
4Q/4230661	†	HEAD, adaptor, for 15 ton pillar jack	2	—	C	
95293	E.A1.88.831	INDICATOR, engine control setting disc, 20 SWG	1	DTD.124	A	
95051	E.A1.88.349	INSERTER, piston ring, main undercarriage oleo leg	1	L.72	B	
95048	E.A1.88.363	INSERTER, wing to fuselage pick-up pins	1	—	B	
95052	E.A1.88.383	INSERTER, main oleo pivot point bush	1	—	B	
95050	E.A1.88.389	INSERTER, for bushes in torque links main oleo leg	1	—	B	
95053	E.A1.88.391	INSERTER, and extractor for sealing rings main oleo leg	1	—	B	
95088	E.A1.88.733	INSERTER, main undercarriage pivot pin	1	—	B	
4Q/2232	†	JACK, hydraulic, fuselage, 5 ton, type A	1	—	A	
4Q/1045838	†	JACK, hydraulic, 10 ton pillar	2	—	A	
10AF/598	ED.9/7501	JIG, alignment, blue silk aerial	1	—	A	
95647	FT8/2571	JIG, alignment, for vent mast (Mod. 4112)	1	—	B	
	†	JIG, DRILLING ALIGNMENT, MAIN PLANE, OUTER SPAR, LOWER BOOM (MOD. 5027) Spares for (Per Set):—	1	—	MR	
	E.A3.08.1365	BUSH, drilling	1	—	MR	
	E.A3.08.1367	BUSH, drilling	1	—	MR	
	E.A3.08.1369	BUSH, drilling	1	—	MR	
95063	E.A1.88.395	KEY, hydraulic tank	1	—	B	
1970	E.A1.40.169	LUG, picketing and towing and for T/P sling	6	S.96	C	
27Q/11743	D.26067	NOZZLE, flexible, c/w gauge	1	—	A	
95015	E.A1.88.255	PIN, nose wheel locking	1	—	B	
95491	E.A1.88.891	PIN, locating (ST.8/4842)	6	—	C	
95407	E.B6.88.29	PLATE, setting bellcrank level engine controls, port	1	L.59	B	
95295	E.A1.88.548	PLATE, setting bellcrank lever engine controls, star-board	1	—	C	
95074	E.A1.88.549	PLATE, setting throttle box, 16 SWG	1	—	C	
	E.G4.88.21	PLUG, assembly, for use when cabin pressure testing (Mod. 3799)	1	—	—	
95270	E.A3.88.281	PLUG, BLANKING, CABIN PRESSURE CONTROL VALVE, ASSEMBLY Consisting of:—	1	—	B	
	†	CHAIN, retaining	QR	Brass	—	
21084	E.A2.88.77	PENNANT	1	—	C	
	E.A3.88.283	PLUG	1	L.65	—	
28E/9007825	†	RING, split, 1/2" o/d. x 1/8" thick	2	—	C	

Restricted

CANBERRA E Mk. 15

Page F.5

EQUIPMENT GROUND AND MAINTENANCE

Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
6A/2679	†	PLUG,	protective,	static	vents	...	...	4	—	B	
4G/2764	†	PUMP,	pleo,	type	F	...	...	1	—	A	
95603	T.56015	REAMER,	for	main	u/c	attachment	bushes	1	—	B	
1C/9105853	†	SCREWDRIVER	...	...	...	...	...	1	—	C	
95277	E.B7.88.1	SEAL,	engine	dust	...	...	...	2	—	B	
95619	E.A3.88.5053	SET, TEST, AIR VENTILATED SUIT (MOD. 4047-S.O.O.)	...	...	...	...	...	1	—	A	
		Spares for:—	...	...	...	...	...				
	E.A3.88.5077	ADAPTOR, TEST GAUGE, ASSEMBLY	...	...	...	...	...	1	—	—	
		Spares for:—	...	...	...	...	...				
27F/2241	A102/3	HANDLE, valve	...	...	...	...	...	1	—	C	
32C/	DAS.412/E/10	HOSE, kinkproof	...	...	...	...	...	1	—	—	
	E.A3.88.5085	ORIFICE, test	...	...	...	...	...	1	—	—	
	DUNLOP		...	...	...	...	...				
27VA/3446	A.C.O.6592	PLUG, mating	...	...	...	...	...	1	—	C	
	E.A3.88.5065	TEE-PIECE	...	...	...	...	...	1	—	—	
	SAUNDERS		...	...	...	...	...				
27F/	106/AR/02	VALVE, MK. 3	...	...	...	...	...	1	—	—	
	BELLS		...	...	...	...	...				
	ASBESTOS		...	...	...	...	...				
	OS-8	WASHER, sealing	...	...	...	...	...	1	—	—	
	E.A3.88.5069	ADAPTOR, assembly, test gauge	...	...	...	...	...	1	—	—	
	E.A3.88.5055	CASE, ASSEMBLY	...	...	...	...	...	1	—	—	
		Spares for:—	...	...	...	...	...				
	E.A3.88.5081	BAG, stowage, plugs	...	...	...	...	...	1	—	—	
	6685-420491	GAUGE, test, 0-200 lbs.	...	...	...	...	...	1	—	—	
	6685-420483	GAUGE, test, 0-30 lbs.	...	...	...	...	...	1	—	—	
	E.A3.88.5057	ORIFICE, test	...	...	...	...	...	3	—	—	
	E.A3.88.5059	PLUG, blanking, assembly	...	...	...	...	...	1	—	—	
	E.A3.88.5061	PLUG, blanking, assembly	...	...	...	...	...	1	—	—	
	E.A3.88.5063	PLUG, blanking, assembly	...	...	...	...	...	1	—	—	
95442	E.B6.88.85	SLAVE, cowling, port and starboard	...	...	...	...	...	2	—	A	
95089	E.A1.88.743	SLEEVE, MAIN UNDERCARRIAGE WHEEL LOCKING, ASSEMBLY	...	...	...	...	...	2	—	A	
		Spares for:—	...	...	...	...	...				
21084	E.A2.88.77	PENNANT	...	...	...	...	...	2	—	C	
28FP/9432064	AVDEL A.817	PIN, "pip"	...	...	...	...	...	2	—	C	
95008	E.A1.88.11	SLING and frame, main plane lifting, complete	...	...	...	...	...	1	—	A	
95009	E.A1.88.59	SLING, tailplane	...	...	...	...	...	1	—	A	
95006	E.A1.88.61	SLING, centre fuselage lifting, complete	...	...	...	...	...	1	—	A	
95005	E.A1.88.63	SLING, front fuselage lifting, complete	...	...	...	...	...	1	—	A	
95007	E.A1.88.65	SLING, REAR FUSELAGE LIFTING, COMPLETE	...	...	...	...	...	1	—	A	
		Spares for:—	...	...	...	...	...				
95495	E.A1.88.267A	BOLT	...	...	...	...	...	1	—	C	
95084	E.A1.88.601	SLING, fin and rudder	...	...	...	...	...	1	—	A	
95094	E.A1.88.741	SLING, combined nose and mid fuselage lifting	...	...	...	...	...	1	—	A	
95443	E.B6.88.39	SLING, INTERNAL TANK, ASSEMBLY	...	...	...	...	...	1	—	B	
		Spares for:—	...	...	...	...	...				
95479	E.B6.88.57	BOLT, eye	...	...	...	...	...	1	S.92	C	
1L/9106389	†	SOCKET, 1/8" BSF, for explosive bolts	...	...	...	...	...	1	—	C	
1L/9106397	†	SOCKET, for attachment bolts, 3/8" BSF	...	...	...	...	...	1	—	C	
1L/9106401	†	SOCKET, for attachment bolts, 1" BSF	...	...	...	...	...	1	—	C	
95269	E.A3.88.293	SPANNER, wing tip tank drain plug	...	...	...	...	...	1	—	C	

EQUIPMENT **GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
95064	E.A1.88.263	SPANNER,	integral and drop tank	...	...	...	...	1	DTD.124A	B	
95493	E.A1.88.877	SPANNER,	nosewheel door (Mod.2311)	...	...	...	...	1	—	B	
95054	E.A1.88.345	SPANNER,	torque link main undercarriage	...	...	...	...	1	DTD.124	C	
95056	E.A1.88.347	SPANNER,	special, "C", main undercarriage oleo stop nut	...	...	...	...	1	—	B	
95057	E.A1.88.353	SPANNER,	special, main undercarriage oleo piston	...	...	...	...	1	—	B	
95325	E.A3.88.303	SPANNER,	special, main undercarriage bearing ring	...	...	...	...	1	STEEL	B	
95086	E.A3.88.135	SPANNER,	special, main undercarriage oleo axle clamp	...	...	...	...	1	STEEL	B	
95065	E.A1.88.365	SPANNER,	special, plug forward jacking point	...	...	...	...	1	—	B	
95046	E.A1.88.379	SPANNER,	universal, for attaching aileron to centre hinge bracket	...	...	...	...	1	MS	B	
95059	E.A1.88.385	SPANNER,	special, for undercarriage pivot pin	...	...	...	...	1	MS	B	
95060	E.A1.88.387	SPANNER,	special, for undercarriage pivot nut	...	...	...	...	1	MS	B	
95079	E.A1.88.531	SPANNER,	special, for drop tank, assembly	...	...	...	...	1	MS	C	
1C/9106265	†	SPANNER,	union, main fuel feed	...	...	...	...	2	—	C	
95466	E.B7.88.203	SPANNER,	special, fuel pump pipe integral tank (Mod. GE.1730)	...	...	...	...	1	S.510	B	
95095	E.A1.88.749	SPANNER,	forward bomb crutch	...	...	...	...	1	—	C	
95004	E.A1.88.23	SPIGOT,	forward jacking front fuselage	...	...	...	...	1	S.65	B	
95444	E.B6.88.81	STRAP, INNER INTEGRAL TANK, ASSEMBLY	...	...	...	...	...	1	—	B	
		Spares for:—									
95465	E.B6.88.119	BOLT,	sub-assembly	...	...	...	...	1	—	C	
95464	E.B6.88.121	BOLT,	sub-assembly	...	...	...	...	1	—	C	
95483	E.B6.88.47	BRACKET,	guide, inner	...	...	...	...	1	—	C	
95262	E.A3.88.273	STRAP,	metal, for use with combined nose and centre fuselage sling	...	...	...	...	1	—	B	
95445	E.B6.88.83	STRAP,	outer integral tank, assembly	...	...	...	...	1	—	B	
95090	E.A1.88.799	STRUT,	jury, tailplane	...	...	...	...	1	—	B	
	E.B7.88.53	TEMPLATES, NEUTRAL RIGGING, ASSEMBLY	...	...	...	...	...	—	—	—	
		Spares for:—									
95297	E.B7.88.65	TEMPLATE,	neutral rigging, aileron	...	...	...	...	1	—	A	
95296	E.B7.88.55	TEMPLATE,	neutral rigging, elevator	...	...	...	...	1	—	A	
95265	E.A3.88.247	TEMPLATE,	neutral rigging, rudder	...	...	...	...	1	—	B	
95061	E.A1.88.351	TOOL,	shock absorbing piston centralising	...	...	...	...	1	—	A	
95062	E.A1.88.361	TOOL,	special, combination, main undercarriage oleo insertion and extraction spherical bearing	...	...	...	...	1	—	C	
95101	E.A1.88.821	TOOL,	setting	...	...	...	...	1	—	B	
	MARTIN BAKER										
95082	A/MBEU/70/EE	TOOL,	for cocking and uncocking snatch unit	...	...	...	...	1	—	C	
4Q/4230849	†	TRESTLE,	wing jacking, Mk. 1	...	...	...	...	2	—	A	
4Q/4230643	†	TRESTLE,	fuselage jacking, Mk. 2	...	...	...	...	1	—	A	
	E.A1.88.87	TRESTLE, REAR FUSELAGE, ASSEMBLY	...	...	...	...	...	—	—	—	
		Spares for:—									
95017	E.A1.88.87A	FORMER,	forward	...	...	...	...	1	SPRUCE	B	
95018	E.A1.88.87B	FORMER,	aft	...	...	...	...	1	SPRUCE	B	
4F/1041044	†	TROLLEY,	pressure cabin testing, Mk. 1	...	...	...	...	1	—	A	

CANBERRA E Mk. 15

Page F.7

EQUIPMENT GROUND AND MAINTENANCE

Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
95016	E.A1.88.85	TROLLEY, PRESSURE CABIN GROUND MAINTENANCE, ASSEMBLY						1	—	A	
		Spares for:—									
95487	E.A2.88.53	WHEEL, trolley (Carbowheel T.82)						4	—	A	
95069	ALVIS S.495A	TROLLEY, BOMB LOADING, HYDRAULIC, MK. 1						1	—	A	
95111	18101	TROLLEY, BOMB LOADING, HYDRAULIC, MK. 2						1	—	A	
		Spares for:—									
95239	HC.34501B	ADAPTOR, hose pump, O.S.						1	—	B	
95240	HC.31723	ADAPTOR, hose pump, lines						2	—	B	
95241	HC.24313	ADAPTOR, tank and pump						3	—	B	
95242	HC.4968	ADAPTOR						3	—	B	
95243	HC.27254	ADAPTOR						4	—	B	
95244	HC.33438	ADAPTOR, cylinder to hose						3	—	B	
95155	AS.17986	ADAPTOR, plate, 16½" dia.						8	—	C	
95122	AS.16571	ARM, steering, O.S.						1	—	A	
95123	AS.16572	ARM, steering, N.S.						1	—	A	
95594	AS.16553	AXLE, front stub, N.S.						1	—	B	
	AS.16552	AXLE, front stub, O.S.						1	—	—	
	AS.16554	AXLE, rear stub						2	—	—	
95249	HC.23364	BANJO, fitting						30	—	B	
95250	HC.23367	BANJO, fitting, double, ⅝"						8	—	B	
95251	HC.16297	BANJO, fitting, angle reversing valve						1	—	B	
95252	HC.38058	BANJO, hose, ¼"						10	—	B	
95217	AS.18151	BEARING, roller, cradle, assembly						8	—	A	
95218	AS.1856	BEARING, roller, store, assembly						8	—	A	
95253	HC.1318	BOLT, banjo, ¼"						49	—	B	
95254	No. 1331	BOOT, for reversing valve						1	—	B	
95530	HC.31727/4	BOOT, lifting cylinder						1	—	C	
95531	HC.41447	BOOT, lifting cylinder						1	—	C	
95570	S.3177	BOOT, rubber, for size B, Mk. 3 sockets						4	—	C	
95484	AS.19014	BRACKET, stop						1	—	C	
	GIRLING										
16L/21880	GB.34608	BRAKE, assembly, R.H.						1	—	A	
	GIRLING										
16L/21890	GB.34609	BRAKE, assembly, L.H.						1	—	A	
95118	AS.16555	BRAKE, drum						2	—	B	
95138	AS.16688	BUSH, bellcrank lever						1	—	B	
95144	AS.16687	BUSH, bisector lever						2	—	B	
95133	AS.16716	BUSH, handbrake lever						1	—	B	
95152	AS.16816	BUSH, long transmitter shaft						2	—	B	
95142	AS.16686	BUSH, lower brake lever spindle						2	—	B	
95192	AS.16981	BUSH, reversing lever						1	—	B	
95153	AS.16817	BUSH, short transmitter shaft						2	—	B	
95146	AS.16684	BUSH, spindle brake lever						2	—	B	
95157	AS.16987	BUSH, store roller						4	—	B	
95121	AS.16575	BUSH, stub axle swivel pin and lifting cam stop						8	—	B	
95151	AS.16569	BUSH, lifting cylinder pin						2	—	B	
95128	AS.16591	BUSH, tow bar yoke and plate						4	—	B	
95141	AS.16685	BUSH, upper brake lever spindle and valve handle shaft						6	—	B	
95131	AS.17263	CATCH, trigger tow bar						1	MS	C	
95255	K.20109	CLIP, for boot						1	—	B	
95219	HC.41412	CYLINDER, LIFTING, ASSEMBLY						2	—	B	
		Spares for:—									
95531	HC.41447	BOOT						1	—	C	
95220	HC.31392J	CYLINDER, LIFTING, ASSEMBLY						2	—	B	
		Spares for:—									
95530	HC.31727/4	BOOT						1	—	C	

Page F.8

CANBERRA E Mk. 15

EQUIPMENT **GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip.	Plate No.
		1	2	3	4	5	6			M.R. L.M.	
95221	HC.25220.QC4	CYLINDER, TABLE OPERATING, 4" STROKE, ASSEMBLY						2	—	B	
		Spares for:—									
	HC.26357/8	BOOT , c/w clip and filter, assembly ...						1	—	C	
95222	HC.25220.HJ6	CYLINDER , table operating, 6" stroke ...						2	—	A	
16T/770	No. 6358	EXTENSION , valve ...						4	—	B	
95226	MF.2604	FILTER , micronic ...						1	—	C	
	or										
	MF.2629	FILTER, MICRONIC, ASSEMBLY ...						1	—	—	
		Spares for:—									
27M/9356	MF/HA/36A	ELEMENT ...						1	—	C	
95247	HC.36961	FITTING , bulkhead ...						26	—	B	
16L/8300	15489	FITTING , bulkhead ...						8	—	C	
16L/10800	KL.44524	GASKET , banjo ...						54	—	C	
95257	KL.44521	GASKET ...						70	—	B	
95258	KL.44528	GASKET , $\frac{3}{4}$ " ...						8	—	B	
95259	KL.44535	GASKET , $\frac{1}{2}$ " ...						8	—	B	
95225	HC.2107A	HANDWHEEL ...						2	—	B	
95497	†	HARNESS , safety, for steadying bombs on cradle						1	—	L.M.	
	LOCKHEED										
95230	CM.323.B12	HOSE , pump and tank, N.S. and O.S., 12" long						3	—	B	
	or										
	AVA.323.B12										
95231	CM.374.D18	HOSE , pump and tank, N.S., 18" long ...						1	—	B	
	or										
	AVA.374.D18										
95232	CM.374.D24	HOSE , pump and tank, O.S., 24" long ...						1	—	B	
	or										
	AVA.374.D24										
95233	CM.322.B19	HOSE , lifting cylinder and hydraulic, O.S., 19" long						8	—	B	
	or										
	AVA.322.B19										
95234	CM.323.B24	HOSE , lifting cylinder, 24" long ...						4	—	B	
	or										
	AVA.323.B24										
95235	CM.322.B42	HOSE , table cylinder ...						1	—	B	
	or										
	AVA.322.B42										
95236	CM.322.B34	HOSE , table cylinder ...						1	—	B	
	or										
	AVA.322.B34										
95237	CM.322.B41	HOSE , table cylinder ...						1	—	B	
	or										
	AVA.322.B41										
95238	CM.322.B32	HOSE , table cylinder ...						1	—	B	
	or										
	AVA.322.B32										
95544	CM.323.B27	HOSE , tilting cylinder, $\frac{1}{4}$ " x 27" long ...						2	—	B	
	or										
	AVA.323.B27										
95568	AS.16556	HOUSING , oil sealing hub ...						1	—	C	
95124	AS.16573	KEY , steering arm ...						2	—	B	
95590	AS.19008	LEVER , brake ...						1	—	B	
95577	J.3177/4	LINK , drag ...						1	—	C	
95127	AS.16596	LOCKNUT , steering arm tie rod socket, L.H. ...						2	MS	B	
95126	AS.16595	LOCKNUT , steering arm tie rod socket, R.H. ...						2	MS	B	

Restricted

CANBERRA E Mk. 15

Page F.9

EQUIPMENT GROUND AND MAINTENANCE

Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
95566	AS.17043	NUT,	clamp,	transmitter	bracket	...	...	1	—	C	
16L/9752	18234	NUT,	tube,	$\frac{1}{8}$ "	...	...	...	114	—	C	
95256	No. 19885	NUT,	tube	...	...	...	...	6	—	C	
95117	AS.16438	NUT,	wheel	...	...	...	...	32	—	B	
16M/1478	HC.1787	OUTLET,	straight	...	...	...	...	10	—	C	
95245	HC.14028	OUTLET,	straight,	tank	...	...	...	1	—	B	
95548	AS.19006	PAWL,	hand brake	(Mod. Alvis 1639)	...	...	...	1	—	B	
16L/2460	1234	PIECE,	3-way,	$\frac{1}{8}$ " pipe	...	...	...	5	—	C	
95248	HC.40504	PIECE,	3-way,	pump line, N.S.	...	...	...	1	—	B	
95154	AS.17039	PIN,	hinge,	transmitter	bracket	...	...	2	—	B	
28FP/9243488	AVDEL.A.1013	PIN,	"pip"	...	...	...	...	2	—	C	
95139	AS.16675	PIN,	pivot,	bellcrank	lever	...	...	1	—	B	
95134	AS.16715	PIN,	pivot,	hand brake	lever	...	...	1	—	B	
95148	AS.16892	PIN,	pivot,	22" long,	lifting	lever	...	2	—	B	
95149	AS.16800	PIN,	pivot,	8 $\frac{1}{2}$ " long,	lifting	cylinder	...	2	—	B	
95150	AS.16568	PIN,	pivot,	lifting	cylinder	...	...	2	—	B	
95120	AS.16574	PIN,	stub axle	swivel (front) and	lifting	arm stop	...	4	—	B	
95130	AS.16594	PIN,	swivel,	tow bar	...	...	...	1	—	B	
95129	AS.16592	PIN,	swivel,	tow bar	yoke	...	...	1	—	B	
95455	AS.17990	PIN,	cradle	retaining	...	...	...	1	—	C	
95161	AS.17187	PIPE,	tank to tee	piece, 11 $\frac{1}{2}$ " long	...	...	...	1	COPPER	B	
95162	AS.17188	PIPE,	hose adaptor	to filter, N.S., 21 $\frac{1}{2}$ " long	...	...	...	1	COPPER	B	
95163	AS.17189	PIPE,	tank to hose,	N.S., 16 $\frac{1}{2}$ " long	...	...	...	1	COPPER	B	
95164	AS.17191	PIPE,	3-way,	to pump, 6 $\frac{1}{2}$ " long	...	...	...	1	COPPER	B	
95165	AS.17192	PIPE,	pump to hose,	N.S., 19" long	...	...	...	1	COPPER	B	
95166	AS.17193	PIPE,	pump to hose,	O.S., 14 $\frac{1}{2}$ " long	...	...	...	1	COPPER	B	
95167	AS.17194	PIPE,	reversing	valve to selector	valve, 6 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95168	AS.17195	PIPE,	3-way,	to reversing	valve, N.S., 87 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95169	AS.17196	PIPE,	O.S. pump	hose to 3-way, N.S., 56 $\frac{1}{2}$ " long	...	...	...	1	COPPER	B	
95170	AS.17197	PIPE,	3-way,	to hose adaptor, N.S., 7 $\frac{1}{2}$ " long	...	...	...	1	COPPER	B	
95171	AS.17202	PIPE,	filter to	reversing	valve, 58 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95172	AS.17203	PIPE,	reversing	valve to selector	valve, 9 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95173	AS.17204	PIPE,	bracket to	selector	valve, 94 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95174	AS.17205	PIPE,	bracket to	selector	valve, 97 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95175	AS.17206	PIPE,	bracket to	selector	valve, 97" long	...	...	1	COPPER	B	
95176	AS.17207	PIPE,	bracket to	selector	valve, 97 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95177	AS.17208	PIPE,	O.S. bracket	to N.S. bracket, 72" long	...	...	...	1	COPPER	B	
95178	AS.17209	PIPE,	O.S. bracket	to N.S. bracket, 74 $\frac{1}{2}$ " long	...	...	...	1	COPPER	B	
95179	AS.17210	PIPE,	O.S. bracket	to N.S. bracket, 72 $\frac{1}{2}$ " long	...	...	...	1	COPPER	B	
95180	AS.17211	PIPE,	O.S. bracket	to N.S. bracket, 73 $\frac{1}{2}$ " long	...	...	...	1	COPPER	B	
95181	AS.17212	PIPE,	hydroloc	valve to hydroloc	valve (arm), 24" long	...	...	2	COPPER	B	
95182	AS.17213	PIPE,	hydroloc	valve to hydroloc	valve (arm), 10 $\frac{1}{2}$ " long	...	...	2	COPPER	B	
95183	AS.17216	PIPE,	No. 1,	hydroloc	valve (arm) to bracket, O.S., 18 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95184	AS.17217	PIPE,	No. 2,	hydroloc	valve (arm) to bracket, O.S., 25 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95185	AS.17218	PIPE,	No. 3,	hydroloc	valve (arm) to bracket, O.S., 34 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95186	AS.17219	PIPE,	No. 4,	hydroloc	valve (arm) to bracket, O.S., 29 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95187	AS.17220	PIPE,	No. 1	hydroloc	valve (on arm) to bracket (on arm), O.S., 46" long	...	...	1	COPPER	B	
95188	AS.17221	PIPE,	No. 2	hydroloc	(on arm) to bracket (on arm), O.S., 38 $\frac{1}{2}$ " long	...	...	1	COPPER	B	

EQUIPMENT GROUND AND MAINTENANCE

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip.	Plate No.
		1	2	3	4	5	6			M.R. L.M.	
95189	AS.17222	PIPE	No. 3 hydroloc (on arm) to bracket (on arm), O.S., 30½" long					1	COPPER	B	
95190	AS.17223	PIPE	No. 4 hydroloc (on arm) to bracket (on arm), O.S., 23" long					1	COPPER	B	
95191	AS.17224	PIPE	jack to jack (forward and aft), 64½" long ...					1	COPPER	B	
95192	AS.17225	PIPE	jack to jack (forward and aft), 44½" long ...					1	COPPER	B	
95193	AS.17226	PIPE	jack to jack (lateral), 35½" long ...					1	COPPER	B	
95194	AS.17227	PIPE	jack to jack (lateral), 34½" long ...					1	COPPER	B	
95195	AS.17228	PIPE	hydroloc valve (top) to 3-way rear end, 10½" long					1	COPPER	B	
95196	AS.17229	PIPE	hydroloc valve (top) to 3-way rear end, 5½" long					1	COPPER	B	
95197	AS.17230	PIPE	pump, hose adaptor O.S. to pump hose adaptor N.S., 94½" long					1	COPPER	B	
95198	AS.17231	PIPE	reversing valve to selector valve, 8½" long					1	COPPER	B	
95199	AS.17232	PIPE	bracket to 3-way, 8½" long ...					2	COPPER	B	
95200	AS.17233	PIPE	bracket to 3-way, 3½" long ...					2	COPPER	B	
95201	AS.17234	PIPE	hydroloc valve (top) to bracket N.S., 48½" long					1	COPPER	B	
95202	AS.17235	PIPE	hydroloc valve (top) to bracket N.S., 42½" long					1	COPPER	B	
95203	AS.17236	PIPE	selector to bracket, 10½" long ...					1	COPPER	B	
95204	AS.17237	PIPE	selector valve to bracket, 10½" long ...					1	COPPER	B	
95205	AS.17238	PIPE	centre to bottom hydroloc valve, 8½" long					1	COPPER	B	
95206	AS.17239	PIPE	centre hydroloc valve to 3-way, 19½" long					1	COPPER	B	
95207	AS.17240	PIPE	bracket to 3-way N.S., 39½" long ...					1	COPPER	B	
95208	AS.17241	PIPE	bracket to 3-way N.S., 43" long ...					1	COPPER	B	
95209	AS.17242	PIPE	hydroloc valve (bottom) to bracket N.S., 43½" long					1	COPPER	B	
95210	AS.17243	PIPE	centre to bottom hydroloc valve, 8" long					1	COPPER	B	
95211	AS.17244	PIPE	bottom hydroloc valve to 3-way, 15½" long					1	COPPER	B	
95212	AS.17245	PIPE	bracket O.S. to 3-way, 13½" long ...					1	COPPER	B	
95213	AS.17246	PIPE	bracket O.S. to 3-way, 18½" long ...					1	COPPER	B	
95214	AS.17247	PIPE	hydroloc valve (centre) to bracket N.S., 42½" long					1	COPPER	B	
95215	AS.17248	PIPE	selector valve to bracket N.S., 104" long ...					1	COPPER	B	
95216	AS.17249	PIPE	selector valve to bracket N.S., 105½" long					1	COPPER	B	
95564	AS.16832	PLATE	keeper, lateral table ...					1	MS	C	
95567	AS.17125	PLATE	pipe carrier ...					1	—	C	
95246	HCP.16902	PLUG	pump ...					2	—	B	
95224	HC.26140F	PUMP	transmitter ...					2	—	B	
95547	AS.19003	QUADRANT	handbrake (Mod. Alvis 1639) ...					1	—	B	
95125	AS.16577	ROD	steering, ½" o/d. x 8 SWG x 25½" long ...					2	MS	C	
95550	AS.19004	ROD	(Mod. Alvis 1639) ...					1	—	C	
95467	AS.18003/2	SEAL	felt ...					8	—	C	
95119	†	SEAL	oil, hub (Burtonwood No. 275-350) ...					4	—	B	
95589	HC.24011	SEAL	¼" for one-way valve, low loader trolley					1	—	C	
95569	ADS.4000/30	SEAL	cylinder head elevating cylinder ...					1	—	C	
95158	AS.17006	SHAFT	store roller ...					4	—	C	
95160	AS.17934	SHAFT	valve handle ...					2	—	C	
95260	J.3704 R.H.	SOCKET	assembly steering tie rod, R.H. ...					2	—	B	
95261	J.3705 L.H.	SOCKET	assembly steering tie rod, L.H. ...					2	—	B	
95143	AS.16671	SPINDLE	bisector lever ...					1	—	B	
95140	AS.16678	SPINDLE	brake lever ...					2	—	B	
95145	AS.16683	SPINDLE	brake lever ...					2	—	B	
95147	N.1783	SPRING	brake return ...					2	—	B	

CANBERRA E Mk. 15

Page F-11

EQUIPMENT **GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
95156	AS.3729	SPRING	cradle retaining pin trigger	...	...	...	...	4	—	B	
95137	N.1464	SPRING	handbrake trigger rod	...	...	...	...	1	—	B	
95132	AS.17271	SPRING	tow bar catch	...	...	...	...	1	—	B	
95549	AS.19005	SPRING	handbrake (Mod. Alvis 1639)	...	...	...	...	1	—	C	
95565	AS.16833	STRIP	gib lateral table	...	...	...	...	1	MS	C	
95116	AS.16437	STUD	wheel	...	...	...	...	32	—	C	
95223	HC.42544	TANK	supply	...	...	...	...	1	—	B	
16T/768	†	TUBE	inner	...	...	...	...	4	—	A	
16T/767	†	TYRE	standard tread, 10 ply, 7" x 9"	...	...	...	...	4	—	B	
95227	HC.19694A	VALVE	hydroloc	...	...	...	...	7	—	B	
95228	HC.28085S	VALVE	reversing	...	...	...	...	1	—	A	
95229	HC.42197	VALVE	ROTARY SELECTOR, 4-WAY, ASSEMBLY	...	...	...	...	1	—	B	
		Spares for:—									
95648	HC.42237	SEAL		...	...	...	...	1	—	C	
95467	AS.18003/2	WASHER	felt (Mod. Alvis 1710)	...	...	...	...	8	—	C	
16T/766	W.D.M.685	WHEEL	road, 4"33 x 9"	...	...	...	...	4	—	A	
95263	AS.18152	TROLLEY	POWER PACK (FOR USE WITH REF. 95111)	...	...	...	...	1	—	A	
		Spares for:—									
95356	AS.18126	ADAPTOR	control valve	...	...	...	...	1	—	B	
	LOCKHEED										
95239	HC.34501/B	ADAPTOR	$\frac{1}{4}$ " x $\frac{1}{4}$ "	...	...	...	...	1	—	B	
95373	HC.34501/C	ADAPTOR	$\frac{3}{8}$ " x $\frac{3}{8}$ "	...	...	...	...	1	—	B	
95241	HC.24313	ADAPTOR		...	...	...	...	2	—	B	
95243	HC.27254	ADAPTOR		...	...	...	...	1	—	B	
95387	HC.35563	ADAPTOR	$\frac{3}{8}$ " x $\frac{1}{8}$ "	...	...	...	...	1	—	C	
95388	HC.23709	ADAPTOR	$\frac{9}{16}$ " x $\frac{3}{8}$ "	...	...	...	...	1	—	B	
95389	HC.34502/CB	ADAPTOR	hose, $\frac{3}{8}$ " x $\frac{1}{4}$ "	...	...	...	...	2	—	B	
95383	HC.22379	BANJO	$\frac{3}{8}$ "	...	...	...	...	3	—	B	
95390	No. 236	BANJO	$\frac{1}{4}$ "	...	...	...	...	1	—	B	
95253	HC.1318	BOLT	banjo	...	...	...	...	4	—	B	
95365	ALVIS.AS.18360	BUCKLE-END	strap	...	...	...	...	4	—	B	
	LOCKHEED										
27BA/8826	AVA.63/B	CAP	blanking, $\frac{1}{4}$ "	...	...	...	...	1	—	B	
27BA/8794	AVA.63/C	CAP	blanking, $\frac{3}{8}$ "	...	...	...	...	1	—	B	
95344	AS.18119	CAP	support leg	...	...	...	...	4	—	B	
95394	HC.1000	CLIP	pipe, $\frac{1}{4}$ " double	...	...	...	...	2	—	B	
95395	HC.2449	CLIP	pipe, $\frac{3}{8}$ " single	...	...	...	...	2	—	B	
95348	ALVIS.AS.18143	CLIP	spring roof	...	...	...	...	2	—	B	
	LOCKHEED										
95381	HC.42472	CONNECTION	3-way, $\frac{1}{4}$ "	...	...	...	...	1	—	B	
95385	HC.11835	CONNECTION	3-way, $\frac{3}{8}$ "	...	...	...	...	1	—	B	
27BA/8759	AVA.57/B	COUPLING	Avery, $\frac{1}{4}$ " half union, pressure line	...	...	...	...	1	—	B	
27BA/8760	AVA.57/C	COUPLING	Avery, $\frac{3}{8}$ " half union, return line	...	...	...	...	1	—	B	
95363	ALVIS.AS.18356	COVER	front	...	...	...	...	1	—	C	
95361	AS.18354	COVER	L.H.	...	...	...	...	1	CANVAS	B	
95362	AS.18355	COVER	R.H.	...	...	...	...	1	CANVAS	C	
42L/	†	ENGINE	Villiers Mk. 25, with reduction gear S.3509	...	...	...	...	1	—	A	
	LOCKHEED										
95367	HC.44240	FITTING	bulkhead, $\frac{1}{4}$ "	...	...	...	...	1	—	B	
95368	HC.44242	FITTING	bulkhead, $\frac{3}{8}$ "	...	...	...	...	1	—	B	
16L/10800	KL.44524	GASKET	banjo	...	...	...	...	4	—	B	

EQUIPMENT **GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	LOCKHEED										
95257	KL.44521	GASKET, 1/4" BSP	...	...	...	...	...	9	—	B	
95258	KL.44528	GASKET, 1/8" BSP	...	...	...	...	...	6	—	B	
95259	KL.44535	GASKET, 1/4" BSP	...	...	...	...	...	1	—	B	
95391	KL.44523	GASKET, 1/8" BSF	...	...	...	...	...	1	—	B	
95392	KL.44532	GASKET, 1/4" BSF	...	...	...	...	...	1	—	B	
95393	KL.44543	GASKET, 1/4" ...	...	...	...	...	...	2	—	B	
	WAINE										
95346	WO.1928	HANDLE, roof ...	...	...	...	...	...	2	—	B	
	LOCKHEED										
95379	CM.326B/11	HOSE, 1/2" x 11" long, pump delivery	...	...	...	...	...	1	—	B	
95376	CM.325B/240	HOSE, 1/2" H.P., 20 ft. long, pressure line	...	...	...	...	...	1	—	B	
	or										
	CM.725/000/B/240	HOSE, 1/2" H.P., 20 ft. long, pressure line	...	...	...	...	...	1	—	B	
95377	CM.373/C/240	HOSE, 1/2" 20 ft. long, return line	...	...	...	...	...	1	—	B	
	or										
	AVA.373.C240										
95378	CM.374F/18	HOSE, 1/2" x 18" long, pump suction	...	...	...	...	...	1	—	B	
95354	ALVIS.18113	LUG, and base, assembly foot pedal	...	...	...	...	...	1	—	B	
	LOCKHEED										
95370	KL.46002	NUT, for 1/4" bulkhead fitting	...	...	...	...	...	1	—	B	
95369	HCP.11505	NUT, for 1/4" bulkhead fitting	...	...	...	...	...	1	—	B	
95343	ALVIS.18124	NUT, support leg	...	...	...	...	...	4	—	B	
	LOCKHEED										
95382	HC.2060	OUTLET, straight, 1/4" ...	...	...	...	...	...	1	—	B	
95380	HC.2446	OUTLET, straight, 1/4" ...	...	...	...	...	...	2	—	B	
95384	HC.14027	OUTLET, straight, 1/4" ...	...	...	...	...	...	1	—	B	
95352	ALVIS.AS.18118	PEDAL, foot, assembly, c/w pad	...	...	...	...	...	1	—	B	
95353	AS.18121	PIN, joint, foot pedal and control valve adaptor	...	...	...	...	...	2	—	B	
95347	AS.18139	PIN, roof hinge	...	...	...	...	...	2	—	B	
95399	AS.18326	PIPE, control valve to 3-way, 1/4" o/d. x 20 SWG	...	...	...	...	...	1	—	B	
		x 13" long, c/w nuts	...	...	...	...	...				
95400	AS.18327	PIPE, 3-way, to select valve, 1/4" o/d. x 20 SWG	...	...	...	...	...	1	—	B	
		x 29" long, c/w nuts	...	...	...	...	...				
95401	AS.18328	PIPE, 3-way, to bulkhead fitting, 1/4" o/d. x 20	...	...	...	...	...	1	—	B	
		SWG x 24" long, c/w nuts	...	...	...	...	...				
95402	AS.18329	PIPE, tank to bulkhead fitting, 3/8" o/d. x 18 SWG	...	...	...	...	...	1	—	B	
		x 18 SWG x 22" long, c/w nuts	...	...	...	...	...				
95403	AS.18330	PIPE, tank to relief valve, 3/8" o/d. x 18 SWG x	...	...	...	...	...	1	—	B	
		18" long, c/w nuts	...	...	...	...	...				
95404	AS.18331	PIPE, relief valve to 3-way, 3/8" o/d. x 18 SWG x	...	...	...	...	...	1	—	B	
		29 1/2" long, c/w nuts	...	...	...	...	...				
95405	AS.18332	PIPE, 3-way, to control valve banjo, 3/8" o/d. x	...	...	...	...	...	1	—	B	
		18 SWG, 11" long, c/w nuts	...	...	...	...	...				
95406	AS.18333	PIPE, 3-way, to control valve outlet connection	...	...	...	...	...	1	—	B	
		3/8" o/d. x 18 SWG x 3 1/2" long, c/w nuts	...	...	...	...	...				
95349	AS.18142	PLATE, roof spring clip	...	...	...	...	...	2	—	B	
95345	ALVIS.AS.18133	PLATE, roof assembly, complete	...	...	...	...	...	1	—	C	
	LOCKHEED										
95386	H.C.P.16901	PLUG, 1/4" BSP	...	...	...	...	...	1	—	B	
95360	FA.7508	PUMP, fluid	...	...	...	...	...	1	—	B	

CANBERRA B. Mk. 15

Page F.13

EQUIPMENT **GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip.	Plate No.
		1	2	3	4	5	6			M.R. L.M.	
	LOCKHEED										
95396	K.17603	SCREW	self tapping pipe clip	...	...	...	...	8	—	C	
95350	ALVIS.AS.18144	STOWAGE BIN	...	...	...	...	...	1	—	B	
95364	AS.18357	STRAP	for cover	...	...	...	...	5	—	B	
95342	AS.18125	STUD	support leg	...	...	...	...	4	—	C	
95341	AS.18116	SUPPORT	leg, assembly	...	...	...	...	4	—	B	
	LOCKHEED										
95357	HC.29615	TANK	fluid supply 3 gallons	...	...	...	...	1	—	B	
95359	HC.26260D	VALVE	blow-off	...	...	...	...	1	—	B	
95358	HC.28085U	VALVE	control (Mechanically operated)	...	...	...	...	1	—	B	
95366	ALVIS.AS.18359	WASHER	cup	...	...	...	...	15	—	C	
	LOCKHEED										
95371	K.19210	WASHER	spring for $\frac{1}{4}$ " bulkhead fitting	...	...	...	...	1	—	C	
95372	K.19213	WASHER	spring, for $\frac{3}{8}$ " bulkhead fitting	...	...	...	...	1	—	C	
95340	ALVIS.AS.18120	WHEEL	and axle assembly, c/w tyre 14" x 3"-9	...	...	...	...	2	—	A	
	—	TROLLEY, BOMB LOADING CONVERSION SET	...	...	...	...	...	—	—	—	
		Spares for:—									
	LOCKHEED										
95244	33438	ADAPTOR	...	...	...	...	...	5	—	B	
95249	HC.23364	BANJO, $\frac{1}{8}$ "	pipe	...	...	...	...	4	—	B	
95383	HC.22379	BANJO, $\frac{1}{8}$ "	pipe	...	...	...	...	1	—	B	
95253	HC.1318	BOLT	banjo	...	...	...	...	5	—	C	
95323	ALVIS.AS.18233	BRACKET	Avery coupling	...	...	...	...	1	—	B	
95324	AS.18234	BRIDGE	protector	...	...	...	...	1	—	B	
	AS.18239	BRIDGE	protector (Made from AS.17724 Ref. 95339 with one $\frac{3}{8}$ " dia. hole)	...	...	...	...	1	—	B	
	LOCKHEED										
27M/8832	AVA.64/B	CAP	blanking, $\frac{1}{4}$ "	...	...	...	...	1	—	C	
27M/8775	AVA.64/C	CAP	blanking, $\frac{3}{8}$ "	...	...	...	...	1	—	C	
27M/8899	AVA.58/B	COUPLING	Avery fixed half $\frac{1}{4}$ " pressure line	...	...	...	...	1	—	C	
27M/8750	AVA.55/C	COUPLING	Avery fixed half $\frac{3}{8}$ " return line	...	...	...	...	1	—	C	
	HC.20402	FITTING	outlet, $\frac{1}{8}$ " pipe, $\frac{1}{4}$ " BSP	...	...	...	...	3	—	—	
95257	KL.44521	GASKET	$\frac{1}{4}$ " BSP	...	...	...	...	9	—	C	
16L/10800	KL.44524	GASKET	banjo	...	...	...	...	5	—	C	
27BA/12069	AVX.273	OLIVE, $\frac{1}{4}$ "	...	...	...	...	...	1	—	C	
27BA/8983	AVX.265	OLIVE, $\frac{1}{4}$ "	...	...	...	...	...	1	—	C	
95382	HC.2060	OUTLET	$\frac{1}{4}$ " pipe, $\frac{1}{4}$ " BSP	...	...	...	...	1	—	B	
16L/2460	No. 1234	PIECE	3-way	...	...	...	...	1	—	B	
	ALVIS										
95330	AS.18361	PIPE, $\frac{1}{8}$ "	o/d. x 42" long	...	...	...	...	1	COPPER	B	
95331	AS.18362	PIPE, $\frac{1}{8}$ "	o/d. x 16" long	...	...	...	...	1	COPPER	B	
95332	AS.18363	PIPE, $\frac{1}{8}$ "	o/d. x 13" long	...	...	...	...	1	COPPER	B	
95333	AS.18364	PIPE, $\frac{1}{8}$ "	o/d. x 11" long	...	...	...	...	1	COPPER	B	
95334	AS.18365	PIPE, $\frac{1}{8}$ "	o/d. x 10" long	...	...	...	...	1	COPPER	B	
95335	AS.18366	PIPE, $\frac{1}{8}$ "	o/d. x 5" long	...	...	...	...	1	COPPER	B	
95336	AS.18367	PIPE, $\frac{1}{4}$ "	o/d. x 12 $\frac{1}{2}$ " long	...	...	...	...	1	COPPER	B	
95337	AS.18368	PIPE, $\frac{1}{4}$ "	o/d. x 13 $\frac{1}{2}$ " long	...	...	...	...	1	COPPER	B	
	LOCKHEED										
95338	HC.44871	RESTRICTOR	...	...	...	...	...	2	—	A	
16L/9752	18234	TUBE, nut, $\frac{1}{8}$ "	...	...	...	...	...	14	—	C	
27M/4699	ADS.174A	TUBE, nut, $\frac{1}{4}$ "	...	...	...	...	...	1	—	C	
	239	TUBE, nut, $\frac{1}{4}$ "	...	...	...	...	...	1	—	—	

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
27M/4310	LOCKHEED ADS.174E 31385	TUBE, nut, $\frac{3}{8}$ "	1	—	C	
95326	HC.44213	TUBE, nut, $\frac{3}{8}$ "	1	—	—	
95327	HC.26907	VALVE, changeover	1	—	A	
4F/3229	†	VALVE, non-return	1	—	A	
1C/6239	†	TROLLEY, servicing hydraulics, Mk. 2D	2	—	A	
	JENKS BROS.	WRENCH, torque for attachment bolts	1	—	A	
1L/156	EVT.360	WRENCH, torque for explosive bolts canopy to F/U attachment	1	—	A	
1C/6447	†	WRENCH, torque, pilot's canopy	1	—	A	
95633	ALVIS.AS.17026	YOKE, bar towing	1	—	B	

CANBERRA B. MK. 15

Page F.15

EQUIPMENT GROUND AND MAINTENANCE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
		TRANSPORTATION EQUIPMENT				
95279	—	BEAM , transportation, fuselage, nose (43G/SAL/180)	1	Deal	B	
95280	—	BEAM , transportation, mid-section, front fuselage (43G/SAL/180)	1	Deal	B	
95281	—	BEAM , transportation, fuselage, rear section (rear) (43G/SAL/181)	1	Deal	B	
95282	—	BEAM , transportation, fuselage, rear section (front) (43G/SAL/181)	1	Deal	B	
95285	—	BEAM , transportation, fuselage, mid-section (rear) (43G/SAL/182)	1	Ash	B	
95289	—	BEAM , transportation, mainplane outer, port (43G/SAL/194)	1	Ash	B	
95290	—	BEAM , transportation, mainplane outer, starboard (43G/SAL/194)	1	Ash	B	
95291	—	BEAM , transportation (support blocks), mainplane (43G/SAL/195)	2	R.S.J.	B	
95286	—	BLOCK , transportation, mainplane, front (43G/SAL/185)	2	Ash	B	
95287	—	BLOCK , transportation, mainplane, rear (43G/SAL/185)	2	Ash	B	
95288	—	BLOCK , transportation, mainplane, centre (43G/SAL/185)	2	Ash	B	
95598	—	CLAMP-PLATE , front, No. 2 universal trestle, front and mid-section transportation (41G/SAL/297)	1 set	M.S.	B	
95599	—	CLAMP-PLATE , rear, No. 2 universal trestle, front and mid-section transportation (41G/SAL/298)	1 set	M.S.	B	
95283	—	PEDESTAL , transportation, tailplane (43G/SAL/183)	1	M.S.	B	
95284	—	PEDESTAL , transportation, tailplane (43G/SAL/184)	2	M.S.	B	
		NOTE:—The number off shown is the quantity required for the transportation of one aircraft				