

A.P.101B-0417-3A

CONTROLS

Page D1

AILERON CONTROLS IN WING, PORT

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
—	CONTROLS, AILERON, IN WING, PORT ASSEMBLY (EA1.45.13) Consisting of:—	—	—	11/39
R EA3.45.655	. TUBE, CONTROL AILERON ASSEMBLY (Mod.4930) (Pre-Mod.5473)	1	—	11/41
EA3.45.731	. TUBE, CONTROL, AILERON ASSEMBLY (Mod.5473) Spares for:—	1	—	
EA1.45.201	. . FORK-END	1	DTD126	11/7
A27/NT	. . NUT, 1/2" BSF thin	1	—	11/6
EEAS.13/1	. Attaching parts for EA3.45.321, EA3.45.655 or EA3.45.731:—			
EEAS.14	. Bolt, special	2	S96	11/1
EEAS.63/E	. Bush, bearing	2	S96	11/3
EAS.127	. Nut, special	2	S96	11/8
SP90/C7	. Piece, distance	2	S96	11/2
	. Pin, split	2	—	11/9
R EA3.45.687	. TUBE, CONTROL, AT CENTRE WING, ASSEMBLY (Mod.4930) (Pre-Mod.5473)	1	—	11/4
EA3.45.757	. TUBE, CONTROL, AT CENTRE WING, ASSEMBLY (Mod.5473) Spares for:—	1	—	
EEAS.47/2	. . FITTING, adjuster	1	L40	11/10
EEAS.131/2	. . FORK-END (Pre-Mod.5473)	1	L40	11/18
EA3.45.765	. . FORK-END (Mod.5473) Attaching parts for EEAS.131/2 or EA3.45.765:—	1	—	
EEAS.37/13A	. . Nipple	6	S96	11/5
EEAS.38/1A	. . Spoke (Make from Ref. No. 28R/6123)	3	S94	11/15
A29/NP	. . NUT, 1/2" BSF Attaching parts for EA3.45.397, EA3.45.687 or EA3.45.757:—	1	—	11/11
EEAS.13/1	. Bolt, special	1	S96	11/16
EEAS.14	. Bush, bearing	1	S96	11/17
EEAS.63/E	. Nut, special	1	S96	11/14
EEAS.127	. Piece, distance	1	S96	11/12
SP90/C7	. Pin, split	1	—	11/13
R EA3.45.689	. TUBE, CONTROL, AT CENTRE WING, ASSEMBLY (Mod.4930) (Pre-Mod.5473)	1	—	11/22
EA3.45.759	. TUBE, CONTROL, AT CENTRE WING, ASSEMBLY (Mod.5473) Spares for:—	1	—	
EEAS.131/2	. . FORK-END (Pre-Mod.5473)	2	L40	11/37
EA3.45.765	. . FORK-END (Mod.5473) Attaching parts for EEAS.131/2 or EA3.45.765:—	2	—	
EEAS.37/13A	. . Nipple	6	S96	11/25
EEAS.38/1A	. . Spoke (Make from Ref. No. 28R/6123)	3	S94	11/26

CONTROLS

AILERON CONTROLS IN WING, PORT

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
EEAS.13/1	Attaching parts for EA3.45.401, EA3.45.689 or EA3.45.759:—						2	S96	11/35
EEAS.14	. Bolt, special						2	S96	11/36
EEAS.63/E	. Bush, bearing						2	S96	11/38
EEAS.127	. Nut, special						2	S96	11/28
SP90/C7	. Piece, distance						2	—	11/27
	. Pin, split						2	—	11/27
R EA3.45.691	. TUBE, CONTROL, OUTER WING, ASSEMBLY (Mod.4930) (Pre-Mod.5473)						1	—	11/23
EA3.45.761	. TUBE, CONTROL, OUTER WING, ASSEMBLY (Mod.5473)						1	—	11/23
	Spares for:—								
EEAS.131/2	. . FORK-END (Pre-Mod.5473)						2	L40	11/37
EA3.45.765	. . FORK-END (Mod.5473)						2	—	11/37
	Attaching parts for EEAS.131/2 or EA3.45.765:—								
EEAS.37/13A	. . Nipple						6	S96	11/25
EEAS.38/1A	. . Spoke (Make from Ref. No.28R/6123)						3	S94	11/26
	Attaching parts for EA3.45.405, EA3.45.691 or EA3.45.761:—								
EEAS.13/1	. Bolt, special						2	S96	11/35
EEAS.14	. Bush, bearing						2	S96	11/36
EEAS.63/E	. Nut, special						2	S96	11/38
EEAS.127	. Piece, distance						2	S96	11/28
SP90/C7	. Pin, split						2	—	11/27
R EA3.45.693	. TUBE, CONTROL, OUTER WING, ASSEMBLY, PORT (Mod.4930) (Pre-Mod.5473)						1	—	11/19
EA3.45.763	. TUBE, CONTROL, OUTER WING, ASSEMBLY (Mod.5473)						1	—	11/19
	Spares for:—								
EEAS.131/2	. . FORK-END (Pre-Mod.5473)						2	L40	11/31
EA3.45.765	. . FORK-END (Mod.5473)						2	—	11/31
	Attaching parts for EEAS.131/2 or EA3.45.765:—								
EEAS.37/13A	. . Nipple						6	S96	11/29
EEAS.38/1A	. . Spoke (Make from Ref. No. 28R/6123)						3	S94	11/30
	Attaching parts for EA3.45.409:—								
EEAS.13/1	. Bolt, special						2	S96	11/21
EEAS.14	. Bush, bearing						2	S96	11/24
EEAS.63/E	. Nut, special						2	S96	11/33
EEAS.127	. Piece, distance						2	S96	11/32
SP90/C7	. Pin, split						2	—	11/34

AILERON CONTROLS IN WING, STARBOARD

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
—	CONTROLS, AILERON, IN WING, STARBOARD ASSEMBLY (EA1.45.14) Consisting of:—						—	—	11/40
R EA3.45.655	. TUBE, CONTROL, AILERON, ASSEMBLY (Mod.4930) (Pre-Mod.5473)						1	—	11/41
EA3.45.731	. TUBE, CONTROL, AILERON ASSEMBLY (Mod.5473) Spares for:—						1	—	
EA1.45.201	. . FORK-END						1	DTD126	11/7
A27/NT	. . NUT, 1/2" BSF thin Attaching parts for EA3.45.321, EA3.45.655 or EA3.45.731:—						1	—	11/6
EEAS.13/1	. Bolt, special						2	S96	11/1
EEAS.14	. Bush, bearing						2	S96	11/3
EEAS.63/E	. Nut, special						2	S96	11/8
EEAS.127	. Piece, distance						2	S96	11/2
SP90/C7	. Pin, split						2	—	11/9
R EA3.45.687	. TUBE, CONTROL, AT CENTRE WING, ASSEMBLY (Mod.4930) (Pre-Mod.5473)						1	—	11/4
EA3.45.757	. TUBE, CONTROL, AT CENTRE WING, ASSEMBLY (Mod.5473) Spares for:—						1	—	
EEAS.47/2	. . FITTING, adjuster						1	L40	11/10
EEAS.131/2	. . FORK-END (Pre-Mod.5473)						1	L40	11/18
EA3.45.765	. . FORK-END (Mod.5473) Attaching parts for EEAS.131/2 or EA3.45.765:—						1	—	
EEAS.37/13A	. . Nipple						6	S96	11/5
EEAS.38/1A	. . Spoke (Make from Ref. No. 28R/6123)						3	S94	11/15
A29/NP	. . NUT, 1/2" BSF plain Attaching parts for EA3.45.397, EA3.45.687 or EA3.45.757:—						1	—	11/11
EEAS.13/1	. Bolt, special						1	S96	11/16
EEAS.14	. Bush, bearing						1	S96	11/17
EEAS.63/E	. Nut, special						1	S96	11/14
EEAS.127	. Piece, distance						1	S96	11/12
SP90/C7	. Pin, split						1	—	11/13
R EA3.45.689	. TUBE, CONTROL, AT CENTRE WING, ASSEMBLY (Mod.4930) (Pre-Mod.5473)						1	—	11/22
EA3.45.759	. TUBE, CONTROL, AT CENTRE WING, ASSEMBLY (Mod.5473) Spares for:—						1	—	
EEAS.131/2	. . FORK-END (Pre-Mod.5473)						2	L40	11/37
EA3.45.765	. . FORK-END (Mod.5473) Attaching parts for EEAS.131/2 or EA3.45.765:—						2	—	
EEAS.37/13A	. . Nipple						6	S96	11/25
EEAS.38/1A	. . Spoke (Make from Ref. No.28R/6123)						3	S94	11/26

CONTROLS

AILERON CONTROLS IN WING, STARBOARD

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1	2 3 4 5 6			
EEAS.13/1	Attaching parts for EA3.45.401, EA3.45.689 or EA3.45.759:—	2	S96	11/35
EEAS.14	. Bolt, special	2	S96	11/36
EEAS.63/E	. Bush, bearing	2	S96	11/38
EEAS.127	. Nut, special	2	S96	11/28
SP90/C7	. Piece, distance	2	S96	11/27
	. Pin, split	2	—	11/27
R EA3.45.691	. . TUBE, CONTROL, OUTER WING, ASSEMBLY (Mod.4930) (Pre-Mod.5473)	1	—	11/23
EA3.45.761	. TUBE, CONTROL, OUTER WING, ASSEMBLY (Mod.5473)	1	—	
	Spares for:—			
EEAS.131/2	. . FORK-END (Pre-Mod.5473)	2	L40	11/37
EA3.45.765	. . FORK-END (Mod.5473)	2	—	
	Attaching parts for EEAS.131/2 or EA3.45.765:—			
EEAS.37/13A	. . Nipple	6	S96	11/25
EEAS.38/1A	. . Spoke (Make from Ref. No. 26R/6123)	3	S95	11/26
	Attaching parts for EA3.45.405, EA3.45.691 or EA3.45.761:—			
EEAS.13/1	. Bolt, special	2	S96	11/35
EEAS.14	. Bush, special	2	S96	11/36
EEAS.63/E	. Nut, special	2	S96	11/38
EEAS.127	. Piece, distance	2	S96	11/28
SP90/C7	. Pin, split	2	—	11/27
R EA3.45.694	. TUBE, CONTROL, OUTER WING, ASSEMBLY (Mod.4930) (Pre-Mod.5473)	1	—	11/20
EA3.45.764	. TUBE, CONTROL, OUTER WING ASSEMBLY (Mod.5473)	1	—	
	Spares for:—			
EEAS.131/2	. . FORK-END (Pre-Mod.5473)	2	L40	11/31
EA3.45.765	. . FORK-END (Mod.5473)	2	—	
	Attaching parts for EEAS.131/2:—			
EEAS.37/13A	. . Nipple	6	S96	11/29
EEAS.38/1A	. . Spoke (Make from Ref. No.28R/6123)	3	S94	11/30
	Attaching parts for EA3.45.410:—			
EEAS.13/1	. Bolt, special	2	S96	11/21
EEAS.14	. Bush, bearing	2	S96	11/24
EEAS.63/E	. Nut, special	2	S96	11/33
EEAS.127	. Piece, distance	2	S96	11/32
SP90/C7	. Pin, split	2	—	11/34

AP101B-0417-3A

CONTROLS

Page DB 1

ENGINE CONTROLS IN NOSE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
—	CONTROLS ENGINE IN NOSE FUSELAGE ASSEMBLY (EG7.47.41) Spares for:-	—	—	
—	. BOX THROTTLE CONTROL MOUNTING ASSEMBLY (EG7.47.45) Spares for:-	—	—	2/25
EG7.47.1	. . BOX THROTTLE CONTROL GROUP Spares for:-	1	—	2/26
EG7.47.25	. . . BRACKET retaining Attaching parts for EG7.47.25:	1	L72	2/57
A25/1B	. . . Bolt, 4BA hex head	4	—	2/55
AGS2001B1	. . . Nut, stiff 4BA	4	—	2/61
SP15B	. . . Washer, 4BA plain	4	—	2/59
EA1.47.165	. . . BRACKET, micro switch mounting Attaching parts for EA1.47.165:	1	L72	2/56
A25/2B	. . . Bolt, 4BA hex head	4	—	2/51
AGS2001B1	. . . Nut, stiff 4BA	4	—	2/52
SP15B	. . . Washer, 4BA plain	4	—	2/53
EB7.81.1589	. . . BRACKET, cable clip assembly Attaching parts for EB7.81.1589	1	L72	2/60
A25/1B	. . . Bolt, 4BA hex head	2	—	2/63
AGS2001B1	. . . Nut, stiff 4BA	2	—	2/62
EA1.47.173	. . . BUSH tapped shut-off cock lever locking	1	DTD126A	2/71
EA1.47.293	. . . BUSH, tapped, throttle lever locking	1	DTD126A	2/80
EA3.81.2645	. . . CABLE, ASSEMBLY N76A FROM U/C WARNING MICRO SWITCH PITOT SWITCH AND PORT STARBOARD RELIGHT SWITCHES TO SOCKET FORWARD ON CONSOLE, GROUP Consisting of:-	1	—	2/79
R UNIPREN4	 CABLE, unipren 4	QR	—	
EEAS111/3	 FERRULE	1	L59	
508/2/07706/200	 GASKET, outlet	1	—	
508/1/07633/003	 OUTLET, angle	1	—	
508/1/40029/320	 PLUG, MK.4	1	—	
508/1/11778/002	 RING, clamp	1	—	
508/2/07709/200	 RING, sealing	1	—	
5K/9455173	 SLEEVE, helsyn 3/4" long, white	2	—	
5K/9455173	 SLEEVE, helsyn 3/4" long, red	2	—	
5K/9455173	 SLEEVE, helsyn 3/4" long, blue	2	—	
EEAS146A	 SLEEVE, 1" long, yellow, identification	10	—	
EEAS146B	 SLEEVE, 1" long, yellow	1	—	
EEAS146C	 SLEEVE, 1" long, yellow, identification	2	—	
EEAS146H	 SLEEVE, identification	2	—	
R HELLERMANN				
R SIZE B.P.	 TUBING, synthetic, (Black)	QR	—	
R E AND 1 659 ISS2	 TUBING, PVC, 12.7mm (Black)	QR	—	
R DURAWIRE "S"	 WIRE, PVC, insulated flex, 7/36" gauge	QR	—	

CONTROLS

ENGINE CONTROLS IN NOSE FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA1.47.137	.	.	.	.	CASTING, throttle box		1	Mag Alloy	2/70
AS3180/11B	.	.	.	.	CLIP		1	—	2/64A
	.	.	.	.	Attaching parts for AS3180/11B				
A25/1B	.	.	.	.	Bolt, 4BA		1	—	2/64B
EEAS237-6A	.	.	.	.	Washer 'D'		1	—	2/64
EA1.47.157	.	.	.	.	KNOB, throttle lever locking		1	L40	2/68
EA1.47.159	.	.	.	.	KNOB, shut-off cock lever locking		1	L40	2/81
EA3.81.1971	.	.	.	.	KNOB, shut-off cock lever, L.H., red		1	L40	2/9
	.	.	.	.	Attaching parts for EA3.81.1971:—				
A33/B16	.	.	.	.	Screw, 4BA c'sk head		1	—	2/29
A33/C20	.	.	.	.	Screw, 2BA c'sk head			—	2/30
EA3.81.1972	.	.	.	.	KNOB, shut-off cock lever, R.H., green		1	L40	2/16
	.	.	.	.	Attaching parts for EA3.81.1972:—				
A33/B16	.	.	.	.	Screw, 4BA c'sk head		1	—	2/17
A33/C20	.	.	.	.	Screw, 2BA c'sk head		1	—	2/18
AS1908/B	.	.	.	.	KNOB, throttle control lever, L.H., green		1	—	2/3
	.	.	.	.	Attaching parts for AS1908/B:—				
A27/CT	.	.	.	.	Nut, 2BA thin		1	—	2/13
A33/C28	.	.	.	.	Screw, 2BA c'sk head		1	—	2/20
AS1908/C	.	.	.	.	KNOB, throttle control lever, R.H., red		1	—	2/4
	.	.	.	.	Attaching parts for AS1908/C:—				
A27/CT	.	.	.	.	Nut, 2BA thin		1	—	2/5
A33/C28	.	.	.	.	Screw, 2BA c'sk head		1	—	2/6
EG7.47.127	.	.	.	.	LEVER, THROTTLE, L.H., ASSEMBLY (Mod.5028)		1	—	2/14
	.	.	.	.	Spares for:—				
EG7.47.17	.	.	.	.	BOLT, special, 2BA		2	S96	2/12
EG7.47.9	.	.	.	.	FITTING, hinge		1	S96	2/19
EG7.47.11	.	.	.	.	FITTING, hinge		1	S96	2/2
HOFFMANN	.	.	.	.					
CJ1	.	.	.	.	JOINT, self aligning		1	—	2/41
EG7.47.129	.	.	.	.	LEVER, throttle, lower (Mod.5028)		1	—	
A27CT	.	.	.	.	NUT, 2BA thin		2	—	2/11
EG7.47.15	.	.	.	.	PIN, hinge		1	DTD157	2/7
SP90/C4	.	.	.	.	PIN, split		1	—	2/1
EG7.47.13	.	.	.	.	SPRING, laminated leaf		1	S513	2/8
EG7.47.128	.	.	.	.	LEVER, THROTTLE, R.H., ASSEMBLY (Mod.5028)		1	—	2/24
	.	.	.	.	Spares for:—				
EG7.47.17	.	.	.	.	BOLT, special, 2BA		2	S96	2/12
EG7.47.9	.	.	.	.	FITTING, hinge		1	S96	2/19
EG7.47.11	.	.	.	.	FITTING, hinge		1	S96	2/2
HOFFMANN	.	.	.	.					
CJ1	.	.	.	.	JOINT, self aligning		1	—	2/41
EG7.47.129	.	.	.	.	LEVER, throttle, lower (Mod.5028)		1	—	
A27/CT	.	.	.	.	NUT, 2BA thin		2	—	2/11
EG7.47.15	.	.	.	.	PIN, hinge		1	DTD197	2/7
SP90/C4	.	.	.	.	PIN, split		1	—	2/1
EG7.47.13	.	.	.	.	SPRING, laminated leaf		1	S513	2/8

CONTROLS

ENGINE CONTROLS IN NOSE FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
E.A3.47.139	.	.	.	LEVER, shut-off cock control, L.H. (Mod.5028)			1	—	2/45
E.A4.47.140	.	.	.	LEVER, shut-off control, R.H. (Mod.5028)			1	—	2/44
A27/CP	.	.	.	NUT, 2 BA plain, for lever stop screw			8	—	2/49
E.A1.47.295	.	.	.	PIN, special, shut-off cock control lever clamp			1	L40	2/82
E.A1.47.297	.	.	.	PIN, special, throttle lever control clamp			1	L40	2/69
E.G7.47.21	.	.	.	PLATE, reaction, throttle control			1	S515	2/38
E.G7.47.23	.	.	.	PLATE, reaction, throttle control, assembly			1	S515	2/39
E.G7.47.49	.	.	.	PLATE, guard, assembly			1	L73	2/35
				Attaching parts for E.G7.47.49:—					
A32/B8	.	.	.	Screw, 4 BA round head			6	—	2/33
A32/B16	.	.	.	Screw, 4 BA round head			3	—	2/28
SP47/B	.	.	.	Washer, 4BA spring			9	—	2/32
E.A3.47.91	.	.	.	PLATE, reaction, shut-off cock assembly			1	DTD124	2/27
E.A3.47.93	.	.	.	PLATE, reaction shut-off cock			1	DTD124	2/31
E.A3.47.145	.	.	.	PLATE, tapped bush locking			1	DTD124	2/75
				Attaching parts for EA3.47.145:—					
AS.1242/4/B	.	.	.	Bolt, 4 BA c'sk head			2	—	2/67
AGS.2002/B/1	.	.	.	Nut, stiff, 4 BA			2	—	2/72
SP15/B	.	.	.	Washer, 4 BA plain			2	—	2/73
E.A3.81.1997	.	.	.	PLATE, push switch protection			2	L72	2/15
				Attaching parts for E.A3.81.1997:—					
A44/Z10	.	.	.	Screw, 8 BA round head			3	—	2/10
E.G7.47.31	.	.	.	SCREW, special 2 BA, lever stop			2	S96	2/34
A32/C28	.	.	.	SCREW, 2 BA round head, lever stop			6	—	2/48
A32/C40	.	.	.	SCREW, 2 BA round head, lever stop			2	—	2/54
E.A3.47.85	.	.	.	SHIM, at throttle levers			2	Lam.	2/40
								Alum.	
E.A3.47.103	.	.	.	SHIM, at shut-off cock levers			2	Lam.	2/42
								Alum.	
E.A3.81.1995	.	.	.	SLEEVE, at relight switches			2	LPT56	2/23
DOWTY	.	.	.	SWITCH, push, type A			2	—	2/21
C.5162Y				Attaching parts for C.5162Y:—					
A43/Z12	.	.	.	Screw, 8 BA cheese head			2	—	2/22
MS.5752	.	.	.	SWITCH, micro (Mod.5262)			1	—	2/58
				Attaching parts for MS.5752:—					
A25/8B	.	.	.	Bolt, 4 BA hex. head			2	—	2/50
AGS.2001/B/1	.	.	.	Nut, stiff, 4 BA			2	—	2/76
SP15/B	.	.	.	Washer, 4 BA plain			2	—	2/77
E.A3.47.83	.	.	.	TUBE, bearing, at throttle levers			1	T4	2/37
E.A3.47.81	.	.	.	WASHER, special friction, at throttle levers			2	Feroda FF	2/36
E.A3.47.89	.	.	.	WASHER, special friction, at shut-off cock levers			2	Feroda FF	2/43

R

CONTROLS

ENGINE CONTROLS IN NOSE FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EEAS.238/1A	.	.	.	WASHER, "D", clip attachment			1	L72	2/78
				Attaching parts for E.G7.47.1:—					
A25/2C	.	.	.	Bolt, 2 BA hex. head			3	—	2/65
AS.1246/2C	.	.	.	Bolt, 2 BA round head			2	—	2/74
AS.2922/2-1/2C	.	.	.	Bolt, 2 BA round head			6	—	2/46
AS.2922/3C	.	.	.	Bolt, 2 BA round head			5	—	2/47
AGS2001/C/1	.	.	.	Nut, stiff, 2 BA			5	—	2/66
E.A1.47.245	.	.	.	CLAMP, grommet retaining at pressure bulkhead			4	L40	1/4
				Attaching parts for E.A1.47.245:—					
A25/2C	.	.	.	Bolt, 2 BA hex. head			2	—	1/3
AGS.2001/C/1	.	.	.	Nut, stiff, 2 BA			2	—	1/11
E.A1.47.357	.	.	.	CLEAT, engine control support, frame 4			2	L40	1/6
				Attaching parts for E.A1.47.357:—					
A25/7C	.	.	.	Bolt, 2 BA hex. head			3	—	1/12
AGS.2001/C/1	.	.	.	Nut, stiff, 2 BA			3	—	1/2
SIMMONDS CORSEY SP15/7	.	.	.	CLIP, rigid, engine control rods, at frames 5, 6, 7, 8, and 10 (in pairs)			28	—	1/18
				Attaching parts for SP15/7:—					
A25/7C	.	.	.	Bolt, 2 BA hex. head, at frames 5, 6, 7 and 8			2	—	1/16
A25/9C	.	.	.	Bolt, 2 BA hex. head, at frame 10			2	—	1/24
AGS.2001/C/1	.	.	.	Nut, stiff, 2 BA			2	—	1/15
SIMMONDS CORSEY SP15/10	.	.	.	CLIP, rigid, engine control rods, frame 3 (in pairs)			8	—	1/14
				Attaching parts for SP15/10:—					
A25/10E	.	.	.	Bolt, 1/4" BSF hex. head			2	—	1/5
AGS.2001/E/1	.	.	.	Nut, stiff, 1/4" BSF			2	—	1/17
E.A1.47.251	.	.	.	CONTROL, engine fuel shut-off cock L.H. (SIMMONDS CORSEY No. 7)			1	—	1/8
E.A1.47.253	.	.	.	CONTROL, engine throttle, L.H. (SIMMONDS CORSEY No. 7)			1	—	1/7
E.A1.47.255	.	.	.	CONTROL, engine fuel shut-off cock, R.H.			1	—	1/9
E.A1.47.257	.	.	.	CONTROL, engine throttle, R.H. (SIMMONDS CORSEY No. 7)			1	—	1/1
				Attaching parts for E.A1.47.251, 253, 255 and 257:—					
AGS.899/4	.	.	.	Collar, shackle pin			1	—	1/19
SP4Y/D9	.	.	.	Pin, shackle			1	—	1/22
SP90/C7	.	.	.	Pin, split			1	—	1/21
Z.11809	.	.	.	GROMMET, at pressure bulkhead			4	—	1/10
E.B6.47.5	.	.	.	PACKING, for rigid clip, frame 10, 1-3/16" x 1/2" x 3/16"			2	LFS21	1/23
E.B6.47.7	.	.	.	PACKING, for rigid clip, frame 10			2	LFS21	1/25
E.A1.47.217	.	.	.	SUPPORT, ENGINE CONTROL RODS, FRAME 12, ASSEMBLY Spares for:—			1	—	1/20
SIMMONDS CORSEY SP15/7	.	.	.	CLIP, rigid			4	—	1/13

CONTROLS

ENGINE CONTROLS IN WINGS, PORT

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
—	CONTROLS, ENGINE, IN WING, PORT, ASSEMBLY (E.A3.45.21) Spares for:—	—	—	12/17
E.A1.47.81	. BLOCK, split, sealing, for controls at wing rib 1 Attaching parts for E.A1.47.81:—	1	Red Fibre	12/27
A25/2B	. Bolt, 4 BA hex. head	6	—	12/31
AGS.2001/B/1	. Nut, stiff, 4 BA	6	—	12/22
SP.15/B	. Washer, 4 BA plain	6	—	12/25
EEAS.12/1	. BOLT, special, connecting rod fork-end	10	S11	12/30
R E.A3.47.187	. LEVER, CONTROL CONNECTING INTERMEDIATE, GROUP (Mod. 5028) Spares for:—	1	—	12/14
HOFFMANN C.J.0	. . BEARING, spherical	4	—	12/6
SKEFCO EE.4	. . Bearing, throttle	1	—	12/7
SKEFCO EE.5	. . BEARING, shut-off cock	1	—	12/16
R E.A3.47.189	. . LEVER, control, shut-off cock (Mod.5028)	1	—	12/12
R E.A3.47.191	. . LEVER, control, throttle (Mod. 5028)	1	—	12/4
E.A1.47.65	. . WASHER, special, clamping	1	L1	12/3
R E.A3.47.175	. LEVER, CONTROL, THROTTLE VALVE AND SHUT-OFF COCK, GROUP (Mod 5028) (Pre-Mod. 5177)	1	—	12/41
E.A3.47.279	. LEVERS, CONTROL AND MOUNTING ASSEMBLY (Mod. 5177) Spares for:—	1	—	
HOFFMANN C.J.0	. . BEARING, spherical	4	—	12/40
HOFFMANN C.S.5	. . BEARING, shut-off cock	2	—	12/37
HOFFMANN T.21	. . BEARING, throttle	2	—	12/36
R E.A3.47.183	. . LEVER, control, throttle (Mod. 5028)	1	—	12/42
R E.A3.47.185	. . LEVER, control, throttle (Mod. 5028)	1	—	12/35
R E.A3.47.179	. . LEVER, control, shut-off cock (Mod. 5028)	1	—	12/39
R E.A3.47.181	. . LEVER, control, shut-off cock (Mod. 5028) (Pre-Mod. 5177)	1	—	12/38
R E.A3.47.253	. . LEVER, control, shut-off cock (Mod. 5177) Attaching parts for EA3.47.175 and 279:—	1	—	
A25/4E	. Bolt, 1/4" BSF hex. head	1	—	12/33
A25/3E	. Bolt, 1/4" BSF hex. head	1	—	12/43
A27/ES	. Nut, 1/4" BSF slotted	2	—	12/34
SP90/C4	. Pin, split	2	—	12/28
SP15/E	. Washer, 1/4" BSF plain	2	—	12/32
EEAS.63	. NUT, special, 2 BA thin slotted	10	S96	12/24
E.A3.47.25	. TUBE, control from intermediate lever to engine control connecting lever	1	—	12/19
E.A3.47.29	. TUBE, control, from intermediate lever to engine control connecting lever	1	—	12/18
E.A3.47.31	. TUBE, control, engine shut-off cock, assembly Spares for:—	1	—	12/23
E.A1.47.359	. . TURNBUCKLE	1	—	12/20
E.A3.47.33	. TUBE, control, engine throttle, assembly Spares for:—	1	—	12/29
E.A1.47.369	. . TURNBUCKLE	1	—	12/21
E.A4.47.561	. TUBE, control, from fuselage to intermediate lever	2	—	12/11
EEAS.28/3DU	. WASHER, special	QR	S515	12/26

CONTROLS

ENGINE CONTROLS IN NOSE FUSELAGE

Part Number	Description 1 2 3 4 5 6	No. Off	Mati. Spec.	Plate No.

CONTROLS

ENGINE CONTROLS IN WING, STARBOARD

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
	CONTROLS, ENGINE, IN WING, STARBOARD ASSEMBLY (E.A3.47.22)						—	—	12/2
	Spares for:—								
E.A1.47.81	. BLOCK, split, sealing, for controls at wing rib 1						1	Red Fibre	12/27
	Attaching parts for E.A1.47.81:—								
A25/2B	. Bolt, 4 BA hex. head						6	—	12/31
AGS.2001/B/1	. Nut, stiff, 4 BA						6	—	12/22
SP15/B	. Washer, 4 BA plain						6	—	12/25
EEAS.12/1	. BOLT, special, connecting rod fork-end						10	S11	12/30
E.A3.47.188	. LEVER, CONTROL, CONNECTING, INTER- MEDIATE, GROUP (Mod.5028)						1	—	12/15
	Spares for:—								
HOFFMANN C.J.O.	. . BEARING, spherical						4	—	12/6
SKEFCO EE.4	. . BEARING, throttle						1	—	12/7
SKEFCO EE.5	. . BEARING, shut-off cock						1	—	12/16
E.A3.47.190	. . LEVER, control, shut-off cock (Mod. 5028)						1	—	12/12
E.A3.47.192	. . LEVER, control, throttle (Mod. 5028)						1	—	12/4
E.A1.47.65	. . WASHER, special clamping						1	L1	12/3
E.A3.47.177	. LEVER, CONTROL, THROTTLE VALVE AND SHUT-OFF COCK, GROUP (Mod. 5028)						1	—	12/42
	Spares for:—								
HOFFMANN C.J.O.	. . BEARING, spherical						4	—	12/40
HOFFMANN CS.5	. . BEARING, shut-off cock						2	—	12/37
HOFFMANN T.21	. . BEARING, throttle						2	—	12/36
E.A3.47.183	. . LEVER, control, throttle (Mod. 5028)						1	—	12/42
E.A3.47.185	. . LEVER, control, throttle (Mod. 5028)						1	—	12/35
E.A3.47.179	. . LEVER, control, shut-off cock (Mod. 5028)						1	—	12/39
E.A3.47.181	. . LEVER, control, shut-off cock (Mod. 5028)						1	—	12/38
E.A3.47.253	. . LEVER, control, shut-off cock (Mod. 5177)						1	—	
	Attaching parts for EA3.47.177:—								
A25/4E	. Bolt, 1/4" BSF hex. head						1	—	12/33
A25/3E	. Bolt, 1/4" BSF hex. head						1	—	12/43
A27/ES	. Nut, 1/4" BSF slotted						2	—	12/34
SP90/C4	. Pin, split						2	—	12/28
SP15/E	. Washer, 1/4" BSF plain						2	—	12/32
EEAS.63	. NUT, special, 2 BA thin slotted						10	S96	12/24
E.A1.47.9	. TUBE, control, from intermediate lever to engine control connecting lever						1	—	12/8
E.A3.47.27	. TUBE, control, from intermediate lever to engine control connecting lever						1	—	12/5
E.A3.47.35	. TUBE, control, engine, shut-off cock assembly						1	—	12/9
	Spares for:—								
E.A1.47.359	. . TURNBUCKLE						1	—	12/10
E.A1.47.519	. TUBE, control, engine throttle						1	—	12/13
E.A4.47.551	. TUBE, control, from fuselage to intermediate lever						2	—	12/1
EEAS.28/3DU	. WASHER, special						QR	S515	12/26

CONTROLS

ENGINE CONTROLS IN WING, STARBOARD

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

CONTROLS

ENGINE CONTROLS IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
E.A1.47.125	CONTROLS, ENGINE, IN CENTRE FUSELAGE ASSEMBLY Spares for:—	—	—	
EEAS.12/1	. BOLT, special, connecting control tube and lever	24	S11	13/9
E.A1.47.203	. CONTROLS, ENGINE AT FRAME 13, GROUP Spares for:—	1	—	14/15
EEAS.13/5	. . BOLT, special, pivot, for throttle and cut out valve control operating lever	1	S96	14/21
E.A3.47.73	. . BOLT, special pivot, for throttle and cut out valve control operating lever	1	—	14/7
E.A1.47.177	. . BRACKET, fairlead attachment, L.H.	1	—	13/13
E.A1.47.179	. . BRACKET, fairlead attachment, R.H.	1	—	13/12
E.A1.47.307	. . FAIRLEAD, half, for control tubes	2	LFS21	14/11
E.A1.47.309	. . FAIRLEAD, half, for control tubes Attaching parts for E.A1.47.307 and E.A1.47.309:—	4	LFS21	14/20
A25/10C	. . Bolt, 2 BA hex. head	2	—	14/19
AGS.2001/C/1	. . Nut, stiff, 2 BA	2	—	14/18
R E.A3.47.119	. . LEVER, throttle control L.H. (Mod. 5028)	1	—	13/16
R E.A3.47.120	. . LEVER, throttle control R.H. (Mod. 5028)	1	—	13/14
R E.A3.47.121	. . LEVER, cut-out valve control L.H. (Mod. 5028)	1	—	13/15
R E.A3.47.122	. . LEVER, cut-out valve control R.H. (Mod. 5028)	1	—	13/11
E.A1.47.305	. FAIRLEAD, half, for control tubes Attaching parts for E.A1.47.305:—	16	LFS21	14/12
A25/12C	. Bolt, 2 BA hex. head	2	—	14/27
AS.1242/14C	. Bolt, 2 BA c'sk head	2	—	14/14
AGS.2001/C/1	. Nut, stiff, 2 BA	2	—	14/9
E.A1.47.535	. Packing	1	—	14/25
E.A1.47.537	. Packing	1	—	14/13
E.A1.47.539	. Packing	1	—	14/31
SP15/C	. Washer, 2 BA plain	2	—	14/10
E.A3.47.113	. LEVER, ASSEMBLY AT FRAME 16 (Mod. 5028) Spares for:—	1	—	14/16
HOFFMANN CS.3	. . BEARING, ballrace	2	—	14/32
E.A1.47.105	. . BRACKET, top	1	L72	14/22
E.A1.47.107	. . BRACKET, bottom	1	L72	14/34
R E.A3.47.125	. . HOUSING, ballrace (Mod. 5028)	2	—	14/33
R E.A3.47.155	. . LEVER, SUB-ASSEMBLY (Mod. 5028) Spares for:—	1	—	14/29
HOFFMANN C.J.O.	. . . BEARING, spherical	2	—	14/24
R E.A3.47.123	. . . EYE-END, assembly (Mod. 5028) Spares for:—	2	—	14/28
HOFFMANN C.J.O.	 BEARING, spherical	1	—	14/28B
R E.A3.47.135	 EYE-END	1	—	14/28A
R E.A3.47.157	. . . LEVER (Mod. 5028)	1	—	14/36
R E.A3.47.159	. . . LEVER (Mod. 5028)	1	—	14/37
R A27/J7	. . . NUT, 3/8" BSF thin	2	—	14/26

CONTROLS

ENGINE CONTROLS IN CENTRE FUSELAGE

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
R E.A3.47.114	.	.	.	.	.	LEVER, ASSEMBLY, AT FRAME 16 (Mod. 5028) Spares for:—	1	—	14/17
HOFFMANN CS.3	.	.	.	.	.	BEARING, ball-race	2	—	14/32
E.A1.47.106	.	.	.	.	.	BRACKET, top	1	L72	14/23
E.A1.47.108	.	.	.	.	.	BRACKET, bottom	1	L72	14/35
R E.A3.47.125	.	.	.	.	.	HOUSING, ballrace (Mod. 5028)	2	—	14/33
R E.A3.47.156	.	.	.	.	.	LEVERS, SUB-ASSEMBLY (Mod. 5028) Spares for:—	1	—	14/30
HOFFMANN C.J.O.	.	.	.	.	.	BEARING, spherical	2	—	14/24
R E.A3.47.123	.	.	.	.	.	EYE-END, assembly (Mod. 5028) Spares for:—	2	—	14/28
HOFFMANN C.J.O.	.	.	.	.	.	BEARING, spherical	1	—	14/28B
R EA3.47.135	.	.	.	.	.	EYE-END	1	—	14/28A
R E.A3.47.158	.	.	.	.	.	LEVER (Mod. 5028)	1	—	14/36
R E.A3.47.160	.	.	.	.	.	LEVER (Mod. 5028)	1	—	14/37
A27/JT	.	.	.	.	.	NUT, 3/8" BSF thin	2	—	14/26
EEAS.63	.	.	.	.	.	NUT, special, for control tube and lever connecting bolts	24	S96	13/10
R E.A3.47.115	.	.	.	.	.	TUBE, CONTROL, INTERMEDIATE, AFT OF FRAME 13, ASSEMBLY (Mod. 5028) Spares for:—	2	—	14/2
R EA3.47.163	.	.	.	.	.	EYE-END, assembly (Mod. 5028) Attaching parts for EA3.47.163:—	1	—	14/8
R SP28/G6	.	.	.	.	.	Pin, taper	2	—	14/3
R E.A3.47.117	.	.	.	.	.	TUBE, CONTROL, INTERMEDIATE THROTTLE AND SHUT-OFF COCK, ASSEMBLY (Mod. 5028) Spares for:—	4	—	13/7
R E.A3.47.163	.	.	.	.	.	EYE-END, assembly (Mod. 5028)	1	—	13/6
E.A3.47.167	.	.	.	.	.	EYE-END (Mod. 5028)	1	—	13/8
EEAS.51	.	.	.	.	.	FORK-END Attaching parts for EEAS.51:—	1	L40	13/8
R SP28/G6	.	.	.	.	.	Pin, taper	4	—	13/2
E.A1.47.233	.	.	.	.	.	TUBE, CONTROL, TRANSVERSE, CENTRE, AT FRAME 16, ASSEMBLY Spares for:—	2	—	13/25
EEAS.51	.	.	.	.	.	FORK-END Attaching parts for EEAS.51:—	2	L40	13/23
SP28/G6	.	.	.	.	.	Pin, taper	4	—	13/22

CONTROLS

ENGINE CONTROLS IN CENTRE FUSELAGE

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
R E.A4.47.575	.	TUBE, CONTROL, TRANSVERSE, LEVER					4	—	13/29
		CONNECTING, ASSEMBLY (Mod. 5028)							
		Spares for:—							
R E.A3.47.163	.	EYE-END (Mod. 5028)					1	—	13/28
R		Attaching parts for E.A3.47.163							
SP28/G6	.	Pin, taper					2	—	13/24
EEAS.50	.	FORK-END					1	L40	13/27
EEAS.234	.	PLUG, end					1	L40	13/30
		Attaching parts for EEAS.234:—							
SP28/G6	.	Pin, taper					2	—	13/26
R E.A4.47.577	.	TUBE, CONTROL, BETWEEN OPERATING LEVER					2	—	13/4
		AND INTERMEDIATE CONTROL							
		TUBE ASSEMBLY (Mod. 5028)							
		Spares for:—							
R E.A3.47.163	.	EYE-END (Mod. 5028)					1	—	13/3
EEAS.234	.	PLUG, end					1	L40	13/5
R		Attaching parts for E.A3.47.163 and EEAS.234:—							
SP28/G6	.	Pin, taper					4	—	13/1
E.A4.47.535	.	TUBE, CONTROL, CONNECTING TO LEVER AT					4	—	13/21
		FRAME 16, ASSEMBLY							
		Spares for:—							
EEAS.50	.	FORK-END, adjustable					1	L40	13/20
EEAS.51	.	FORK-END					1	L40	13/18
EEAS.234	.	PLUG, end					1	L40	13/19
		Attaching parts for EEAS.51 and EEAS.234:—							
SP28/G6	.	Pin, taper					4	—	13/17
E.A9.47.209	.	TUBE, CONTROL, SHUT-OFF COCK AND					2	—	14/5
		THROTTLE, ASSEMBLY							
		Spares for:—							
EEAS.234	.	PLUG, end					1	L40	14/4
		Attaching parts for EEAS.234:—							
SP28/G6	.	Pin, taper					2	—	14/1
EEAS.28/3/DU	.	WASHER					QR	S515	14/6

CONTROLS

ENGINE CONTROLS IN CENTRE FUSELAGE

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

CONTROLS

FLAP OPERATING MECHANISM, PORT

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
—	FLAP OPERATING MECHANISM, PORT, ASSEMBLY (E.A1.20.701) Spares for:—	—	—	16/11
E.A1.20.711	. BRACKET, flap operating jack unit support	2	L40	16/6
A25/10G	Attaching parts for E.A1.20.711:—	2	—	16/2
SP15/G	. Bolt, 5/16" BSF hex. head	2	—	16/1
	. Washer, 5/16" BSF plain			
E.A3.20.3991	. BRACKET, mounting, flap operating jack unit support (Mod. 4781)	4	S96	16/4
A25/8G	Attaching parts for E.A3.20.3991:—			
	. Bolt, 5/16" BSF hex. head	1	—	16/5
E.A1.20.3129	. BRACKET, mounting, Desynn transmitter	1	L72	15/17
A25/1B	Attaching parts for E.A1.20.3129:—			
	. Bolt, 4 BA hex. head	6	—	15/15
E.A3.20.1011	. LINK, CONNECTING, FLAP TO OPERATING MECHANISM, GROUP	4	—	16/16
	Spares for:—			
E.A3.20.1009	. . BEARING	2	—	16/16A
E.A3.20.1007	. . BUSH	2	—	16/16B
E.A3.20.1013	. . HOUSING, bearing	1	—	16/16C
E.A3.20.1015	. . HOUSING, bearing	1	—	16/16D
E.A1.20.797	. . PLATE, locking	1	L72	16/25
	Attaching parts for E.A1.20.797:—			
A25/9B	. . Bolt, 4 BA hex. head	2	—	16/23
AGS2001/B/1	. . Nut, stiff, 4 BA	2	—	16/21
SP15/B	. . Washer, 4 BA plain	2	—	16/24
E.A1.20.795	. . SCREW, adjusting	1	S11	16/17
E.A1.20.791	. . WASHER, special	2	L72	16/30
E.A3.20.2289	. PLATE, removable cover, at rib 3A for assembly of flap jack unit	1	L72	15/22
	Attaching parts for E.A3.20.2289:—			
A61/1C	. Bolt, 2 BA hex. head	6	—	15/20
AGS2001/C/3	. Nut, stiff, 2 BA	6	—	15/23
SP15/C	. Washer, 2 BA plain	6	—	15/21
E.A1.20.10777	. PLATE, removable cover, at rib 3 for assembly of flap jack unit	1	L72	15/32
	Attaching parts for E.A1.20.10777:—			
A61/1C	. Bolt, 2 BA hex. head	6	—	15/30
AGS2001/C/3	. Nut, stiff, 2 BA	6	—	15/33
SP15/C	. Washer, 2 BA plain	6	—	15/31
E.A1.20.10778	. PLATE, removable cover, at rib 3 for assembly of flap jack unit	1	L72	15/24
	Attaching parts for E.A1.20.10778:—			
A61/1C	. Bolt, 2 BA hex. head	6	—	15/34
AGS2001/C/3	. Nut, stiff, 2 BA	6	—	15/25
SP15/C	. Washer, 2 BA plain	6	—	15/35
E.A1.20.10779	. PLATE, removable cover at ribs 3 and 5 for assembly of flap jack unit	2	L72	15/11
	Attaching parts for E.A1.20.10779:—			
A61/1C	. Bolt, 2 BA hex. head	7	—	15/5
AGS2001/C/3	. Nut, stiff, 2 BA	7	—	15/12
SP15/C	. Washer, 2 BA plain	7	—	15/6

CONTROLS

FLAP OPERATING MECHANISM, PORT

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
E.A1.20.10780	.	PLATE, removable cover, at rib 4 for assembly of flap jack unit					1	L72	15/28
		Attaching parts for E.A1.20.10780:—							
A61/1C	.	Bolt, 2 BA hex. head					7	—	15/26
AGS2001/C/3	.	Nut, stiff, 2 BA					7	—	15/29
SP15/C	.	Washer, 2 BA plain					7	—	15/27
E.A1.20.813	.	ROD, PUSH, OUTBOARD FLAP CONTROL BETWEEN HINGE AND OPERATING JACK, GROUP					1	—	16/12
		Spares for:—							
E.A1.20.839	.	BUSH, bearing					1	DTD197	16/14
E.A1.20.827	.	EYE-END, socket					1	L40	16/13
		Attaching parts for E.A1.20.827:—							
EEAS.37/15A	.	Nipple					6	S96	16/28
EEAS.38/2A	.	Spoke					3	S94	16/22
E.A1.20.825	.	FORK-END, socket					1	L40	16/18
		Attaching parts for E.A1.20.825:—							
EEAS.37/15A	.	Nipple					6	S96	16/28
EEAS.38/2A	.	Spoke					3	S94	16/22
AGS554	.	NIPPLE, lubricating					1	—	16/29
E.A1.20.805	.	PIN, special					1	S11	16/26
E.A1.20.807	.	PLATE, locking					1	L72	16/19
EEAS.5	.	WASHER, red fibre					1	BSS216	16/27
E.A1.20.815	.	ROD, PUSH, OUTBOARD FLAP CONTROL, BETWEEN HINGE AND OPERATING JACK, GROUP					2	—	16/7
		Spares for this group are identical with those for group Part No. E.A1.20.813							
E.A1.20.819	.	ROD, PUSH, INBOARD FLAP CONTROL, BETWEEN HINGE AND OPERATING JACK CONNECTING ARM, GROUP					1	—	16/8
		Spares for this group are identical with those for group Part No. E.A1.20.813							
		Attaching parts for E.A1.20.813, 815 and 819							
E.A1.20.803	.	Pin, special					1	S11	16/9
AGS.166/19	.	Pin, split					1	—	16/10

FLAP OPERATING MECHANISM, PORT

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
6491	E.A1.20.3133	ROD, CONNECTING, FLAP INDICATOR							1	—	B	15/13
		MECHANISM, GROUP										
		Consisting of:—										
28N/1045680	AGS.899/2	COLLAR							2	—	C	15/3
	E.A1.20.881	FORK-END, R.H.							1	L1	—	15/2
	E.A1.20.883	FORK-END, L.H.							1	L1	—	15/14
28M/1006473	A27/CT	NUT, 2 BA thin							1	—	C	15/1
R 28M/4095891	A27/CTL	NUT, 2 BA thin							1	—	C	15/7
28P/1207864	SP.4Y/B4	PIN, shackle							2	—	C	15/9
R 28P/1040788	SP90/C8	PIN, split							2	—	C	15/4
7094	E.A1.20.3157	ROD, screwed							1	L40	C	15/8
R 6A/7101865	†	TRANSMITTER, Desynn							1	—	A	15/10
		Attaching parts for 6A/7101865:—										
28D/1212940	A61/2C	Bolt, 2 BA hex. head							4	—	C	15/16
R 28M/4095802	AGS.2001/C/3	Nut, stiff, 2 BA							4	—	C	15/19
28W/9419475	SP15/C	Washer, 2 BA plain							3	—	C	15/18

CONTROLS

FLAP OPERATING MECHANISM, PORT

[illegible]

CONTROLS

FLAP OPERATING MECHANISM, STARBOARD

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
—	FLAP OPERATING MECHANISM, STARBOARD, ASSEMBLY (E.A1.20.700) Spares for:—	—	—	18/20
E.A1.20.711	. BRACKET, flap operating jack unit support Attaching parts for E.A1.20.711:—	2	L40	18/28
A25/10G	. Bolt, 5/16" BSF hex. head	2	—	18/23
SP15/G	. Washer, 5/16" BSF, plain	2	—	18/22
E.A3.20.3991	. BRACKET, mounting, flap operating jack unit support (Mod. 4781) Attaching parts for E.A3.20.3991:—	2	S96	18/27
A25/8G	. Bolt, 5/16" BSF hex. head	1	—	18/24
E.A3.20.4009	. BRACKET, mounting, flap operating jack unit support (Mod. 4781) Attaching parts for E.A3.20.4009	2	S96	18/30
A25/8G	. Bolt, 5/16" BSF hex. head	1	—	18/25
E.A3.20.1011	. LINK, CONNECTING, FLAP TO OPERATING MECHANISM, GROUP Spares for:—	4	—	18/4
E.A3.20.1009	. . BEARING	2	—	18/4A
E.A3.20.1007	. . BUSH	2	—	18/4B
E.A3.20.1013	. . HOUSING, Bearing	1	—	18/4C
E.A3.20.1015	. . HOUSING, Bearing	1	—	18/4D
E.A1.20.797	. . PLATE, locking Attaching parts for E.A1.20.797:—	1	L72	18/12
A25/9B	. . Bolt, 4 BA hex. head	2	—	18/7
AGS2001/B/1	. . Nut, stiff, 4 BA	2	—	18/9
SP15/B	. . Washer, 4 BA plain	2	—	18/8
E.A1.20.795	. . SCREW, adjusting	1	S11	18/5
E.A1.20.791	. . WASHER, special	2	L72	18/17
E.A3.20.2289	. PLATE, removable cover, at rib 3A for assembly of flap jack unit Attaching parts for E.A3.20.2289:—	1	L72	17/17
A61/1C	. Bolt, 2 BA hex. head	6	—	17/15
AGS2001/C/3	. Nut, stiff, 2 BA	6	—	17/18
SP15/C	. Washer, 2 BA plain	6	—	17/16
E.A1.20.10777	. PLATE, removable cover, at rib 3 for assembly of flap jack unit Attaching parts for E.A1.20.10777:—	1	L72	17/21
A61/1C	. Bolt, 2 BA hex. head	6	—	17/19
AGS2001/C/3	. Nut, stiff, 2 BA	6	—	17/22
SP15/C	. Washer, 2 BA plain	6	—	17/20
E.A1.20.10778	. PLATE, removable cover, at rib 3 for assembly of flap jack unit Attaching parts for E.A1.20.10778:—	1	L72	17/13
A61/1C	. Bolt, 2 BA hex. head	6	—	17/11
AGS2001/C/3	. Nut, stiff, 2 BA	6	—	17/14
SP15/C	. Washer, 2 BA plain	6	—	17/12
E.A1.20.10779	. PLATE, removable cover, at ribs 3, 4 and 5 for assembly of flap jack unit Attaching parts for E.A1.20.10779:—	2	L72	17/1
A61/1C	. Bolt, 2 BA hex. head	7	—	17/4
AGS2001/C/3	. Nut, stiff, 2 BA	7	—	17/6
SP15/C	. Washer, 2 BA plain	7	—	17/5

CONTROLS

FLAP OPERATING MECHANISM, STARBOARD

Part Number	Description	No. Off	Mati. Spec.	Plate No.
	1 2 3 4 5 6			
E.A1.20.10780	PLATE, removable cover, at ribs 3, 4 and 5 for assembly of flap jack unit	1	L72	17/9
A61/1C	Attaching parts for E.A1.20.10780:—			
AGS2001/C/2	Bolt, 2 BA hex. head	7	—	17/7
SP15/C	Nut, stiff, 2 BA	7	—	17/10
	Washer, 2 BA plain	7	—	17/8
E.A1.20.817	ROD, PUSH, OUTBOARD FLAP CONTROL, BETWEEN FLAP HINGE AND OPERATING JACK, GROUP	1	—	18/1
	Spares for:—			
E.A1.20.839	BUSH, bearing	1	DTD197	18/3
E.A1.20.827	EYE-END, socket	1	L40	18/2
	Attaching parts for E.A1.20.827:—			
EEAS.37/15A	Nipple	6	S96	18/16
EEAS.38/2A	Spoke	3	S94	18/11
E.A1.20.825	FORK-END, socket	1	L40	18/10
	Attaching parts for E.A1.20.825:—			
EEAS.37.15A	Nipple	6	S96	18/16
EEAS.38/2A	Spoke	3	S94	18/11
AGS.554	NIPPLE, lubricating	1	—	18/15
E.A1.20.805	PIN, special	1	S11	18/13
E.A1.20.807	PLATE, locking	1	L72	18/6
EEAS.5	WASHER, red fibre	1	BSS216	18/14
E.A1.20.869	ROD, PUSH, INBOARD FLAP CONTROL, BETWEEN HINGE AND OPERATING JACK CONNECTING ARM, GROUP	1	—	18/19
	Spares for this group are identical with those for group Part No. E.A1.20.817			
E.A1.20.889	ROD, PUSH, INBOARD FLAP CENTRE WING, GROUP	1	—	18/18
	Spares for this group are identical with those for group Part No. E.A1.20.817			
E.A1.20.891	ROD, PUSH, FLAP, OUTER WING, GROUP	1	—	18/21
	Spares for this group are identical with those for group Part No. E.A1.20.817			
E.A1.20.803	Attaching parts for E.A1.20.817, 869, 889 and 891			
AGS166/19	Pin, special	1	S11	17/2
	Pin, split	1	—	17/3

CONTROLS
FLYING CONTROLS IN COCKPIT

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
-		CONTROLS, FLYING, IN COCKPIT, ASSEMBLY (EG7.45.3) Spares for:-	-	-	
EEAS13/1		. BOLT, special, control tube connecting	11	S96	3/1
EEAS14		. BUSH, special spacing, at control tube joints	11	S96	3/3
12G/9635203		. CHARGE H.E. emergency	1	-	3/2
-		. CONTROLS, ON PILOT'S FLOOR, ASSEMBLY (EG7.45.5) Spares for:-	-	-	
R EA3.45.247		. . AILERON BIAS, ASSEMBLY Spares for:-	1	-	6/13
R 5W/4520730		. . . ACTUATOR, linear, type 259, Mk.2 Attaching parts for 5W/4520730:-	1	-	6/36
EA6.45.345		. . . Bolt, shouldered	1	S42	6/25
A25/3E		. . . Bolt, 1/4" BSF hex. head	1	-	6/27
A27/ES		. . . Nut, 1/4" BSF, slotted	2	-	6/34
SP90/C7		. . . Pin, split	2	-	6/30
EA6.45.337		. . . ANGLE	1	L72	6/29
EA6.45.338		. . . ANGLE Attaching parts for EA6.45.337 and EA6.45.338:-	1	L72	6/35
A25/2C		. . . Bolt, 2 BA hex. head	2	-	6/37
A25/1C		. . . Bolt, 2 BA hex. head	4	-	6/23
AGS2001/C/1		. . . Nut, stiff, 2 BA	6	-	6/24
SP13/C		. . . Washer, 2 BA plain	4	-	6/28
R SP8Y/16		. . . ROLLER	1	-	6/31
EA6.45.335		. . . TUBE, torque and levers, assembly Attaching parts for EA6.45.335:-	1	DTD124	6/22
EA6.45.343		. . . Bolt, shouldered	1	S42	6/20
EA6.45.341		. . . Bush, oilite	2	Round Bar	6/26
A27/ES		. . . Nut, 1/4" BSF slotted	1	-	6/33
SP90/C7		. . . Pin, split	1	-	6/32
SP42/G		. . . Washer, tab	1	-	6/21
EG7.45.69		. . COLUMN, CONTROL, PILOT'S, GROUP (Mod.4956) Spares for:-	1	-	5/59
HOFFMANN T17		. . . BEARING, ballrace, aileron control	1	-	5/58
HOFFMANN T25		. . . BEARING, ballrace, pilot's hand grip	1	-	5/43
EA6.45.291		. . . BLOCK, brake cable adjusting Attaching parts for EA6.45.291:-	1	L40	4/13
AS1242/8C		. . . Bolt, 2 BA c'sk head	1	-	4/12
A27/CS		. . . Nut, 2 BA slotted	1	-	4/19
SP90/C7		. . . Pin, split	1	-	4/31
A33/C24		. . . Screw, 2 BA c'sk head	2	-	4/22
SP15/C		. . . Washer, 2 BA plain	1	-	4/17

CONTROLS
FLYING CONTROLS IN COCKPIT

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA1.45.107		BUSH, main bearing at bottom casting	1	L40	4/30
EA3.45.473		CABLE, brake	1	—	5/32
		Spares for:—			
R ACO1352		NIPPLE, swaged (SAS4797)	2	—	5/32A
or					
R MPP1505		NIPPLE, swaged (SAS4797)	2	—	
		Attaching parts for EA3.45.473			
AGS899/2		Collar	1	—	5/3
SP47/B9		Pin, shackle	1	—	5/4
SP90C5		Pin, split	1	—	5/22
EG7.82.633		CABLE, ASSEMBLY, UA60, No.13, FROM 'PRESS TO TRANSMIT' SWITCH ON CONTROL COLUMN TO PILOT'S PITOT SWITCH T/B GROUP Consisting of:—	1	—	6/15
UNIFLEXPREN 6		CABLE, uniflexpren 6	QR	—	
EEAS146/20		SLEEVE, 1/2" long	QR	—	
EEAS146/2		SLEEVE, 1-1/2" long	QR	—	
PAGE ENG.					
B1640		SWITCH, "press to transmit"	1	—	6/14
HC294		TAG, ring tongue	3	—	
R E1659		TUBING, 1/4" o/d x .040 wall	QR	—	
EA3.81.637/1		CABLE ASSEMBLY N69B	1	—	
or					
EA3.81.6779		CABLE ASSEMBLY N69B	1	—	
BOWDEN 6/40		CLIP, pliable, brake cable	1	—	5/62
EA6.45.245		COLUMN, CONTROL, SUB-ASSEMBLY Consisting of:—	1	—	5/52
EA6.45.247		CASTING, top	1	DTD300	5/56
EA1.45.1021		TUBE, 2-1/4" o/d x 20 SWG	1	T45	5/61
EA1.45.91		YOKE, bottom casting	1	DTD300	5/70
EA3.45.539		CONTROL, ELEVATOR, GROUP (Mod.4491) Spares for:—	1	—	4/35
HOFFMANN					
T.33		BEARING, ball, journal	1	—	4/8
EA1.45.177		DIAPHRAGM, ballrace housing mounting	1	DTD340	4/7
EA1.45.175		HOUSING, ballrace Attaching parts for EA1.45.175:—	1	L45	4/9
AS1242/3C		Bolt, 2 BA c'sk head	8	—	4/5
A27/CS		Nut, 2 BA slotted	8	—	4/16
SP90/C5		Pin, split	8	—	4/20
EA3.45.515		Ring, clamp	1	L72	4/6
SP15/C		Washer, 2 BA plain	8	—	4/18
EA3.45.523		LEVER, ELEVATOR OPERATING, GROUP Consisting of:—	1	—	4/2
SKEFCO CBA2		BEARING, ballrace	1	—	4/4
EEAS3/D		HOUSING, bearing	1	L40	4/1
EA3.45.519		LEVER	1	L40	4/14
EEAS4/20C		WASHER, packing Attaching parts for EA3.45.523:—	2	L72	4/3
AS1242/5E		Bolt, 1/4" BSF c'sk head	8	—	4/10
A27/ES		Nut, 1/4" BSF, slotted	8	—	4/26
SP90/C5		Pin, split	8	—	4/27
EA3.45.517		Ring, clamp	1	L72	4/11
SP16/E		Washer, 1/4" BSF plain	8	—	4/21
EA1.45.173		SLEEVE, lever mounting Attaching parts for EA1.45.173:—	1	L40	4/25
A59/22G		Bolt, 5/16" BSF hex. head	3	—	4/29
A27/GS		Nut, 5/16" BSF slotted	3	—	4/48
SP90/C7		Pin, split	3	—	4/49
AS1903/G16		Washer, saddle	6	—	4/46
SP16/G		Washer, 5/16" BSF plain	3	—	4/47

A.P.101B-0417-3A		CONTROLS					Page DH3					
FLYING CONTROLS IN COCKPIT												
Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
6225	E.A1.45.105							SOCKET, mounting; elevator control to control .. column	1	L40	C	4/39
								Attaching parts for E.A1.45.105:-				
28D/1213439	A59/22G							Bolt, 5/16" BSF hex. head	3	-	C	4/24
28M/5808571	A27/GS							Nut, 5/16" BSF slotted	3	-	C	4/45
28P/9527619	SP90/C7							Pin, split	3	-	C	4/44
28W/46070850	AS1903/G16							Washer, saddle	6	-	C	4/40
28W/9419488	SP16/G							Washer, 5/16" BSF plain	3	-	C	4/43
	E.A1.45.171							TUBE, torque, connecting socket and lever, 2" o/d x 14 SWG	1	T4	-	4/28
								Attaching parts for E.A3.45.539:-				
1021	E.A1.45.1153							Bolt, special	1	S11	C	4/23
28M/1011467	A27/JS							Nut, 3/8" BSF slotted	1	-	C	4/34
28P/9527619	SP90/C7							Pin, split	1	-	C	4/37
77	E.A1.45.1025							FORK-END, control column	1	S94	C	5/68
								Attaching parts for E.A1.45.1025:-				
1572	EEAS.37/1A							Nipple, 6 BA	4	S96	C	5/66
1570	EEAS.38/1A							Spoke, 6 BA (Make from 28R/6123)	2	S94	LM	5/67
5CW/4408141	1320Z2							GROMMET	1	-	C	
	E.A6.45.267							GEAR, bevel (Supplied with tube, Ref. 38087)	1	S96	-	5/49
21214	E.A6.45.265							HOUSING, control column	1	S11	C	5/41
6190	E.A1.45.1059							LABEL, "quadrant to mesh centrally with control .. unit"	1	L72	C	5/42
1132	E.A6.45.215							LEVER, BRAKE CABLE OPERATING, GROUP ..	1	-	B	5/28
								Spares for:-				
1134	E.A6.45.217							CAP, collar member	1	DTD216	C	5/35
1133	E.A6.45.219							COLLAR, fulcrum pin retaining	1	L40	C	5/37
								Attaching parts for E.A6.45.215:-				
28N/1045680	AGS.899/2							Collar	2	-	C	5/2
28P/1013002	SP4Y/B9							Pin, shackle	2	-	C	5/5
28P/9486478	SP90/C5							Pin, split	2	-	C	5/1
6211	E.A6.45.289							LEVER, pilot's brake operating	1	Mag. Alloy	C	5/6
								Attaching parts for E.A6.45.289:-				
28N/1045680	AGS.899/2							Collar	2	-	C	5/8
28P/7119888	SP4Y/B14							Pin, shackle	1	-	C	5/9
28P/4666844	SP4Y/B15							Pin, shackle	1	-	C	5/13
28P/9486478	SP90/C5							Pin, split	2	-	C	5/23
28W/9419475	SP15/C							Washer, 2 BA plain	1	-	C	5/12
2890	E.A3.45.257							LUG, pilot's brake lever	1	L40	C	5/11
20667	E.A6.45.249							MECHANISM, BRAKE OPERATING, GROUP	1	-	B	5/69
								Consisting of:-				
1136	E.A6.45.285							PIN, fulcrum, brake lever cable operating	1	S92	C	5/53
1457	E.A6.45.255							PLUG, screwed, pin retaining	1	L40	C	5/60
	E.A6.45.253							PLUNGER	1	L40	-	5/55
	E.A6.45.251							SHAFT	1	S94	-	5/54
80	E.A1.45.679							SPRING	1	DTD215	C	5/57
	E.G7.45.41							MOUNTING, AIR BRAKE SWITCH OVER-SHOOT STOP, ASSEMBLY	1	-	-	5/24
								Spares for:-				
	E.B6.81.877							BRACKET, clip	1	L72	-	5/14

CONTROLS

FLYING CONTROLS IN COCKPIT

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
28M/1086618 28S/9419453 28W/9419465	E.B6.81.2253							1	—	—	5/15
	AGS.2002/B/1										
	A31/B14							2	—	C	5/16
	SP13/B							3	—	C	5/17
28S/1007469	E.G7.45.35							2	—	C	5/18
	E.G7.45.39							1	L72	—	5/19
	A33/B14							1	L72	—	5/20
								2	—	C	5/21
1454	E.A6.45.263							1	L40	C	5/47
1455	E.A6.45.269							1	L40	C	5/46
1456	E.A6.45.271							1	L40	C	5/44
6226	E.A1.45.153							2	DTD380	C	4/15
28S/9419435 28W/9416642	A31/B12										
	SP47/B							2	—	C	4/32
								2	—	C	4/33

CONTROLS

FLYING CONTROLS IN COCKPIT

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

CONTROLS
FLYING CONTROLS IN COCKPIT

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.45.259	. . .	PLATE, brake locking	1	L72	5/29
EA3.45.261	. . .	PLATE, brake mechanism retaining	1	L72	5/27
AS1248/8C	. . .	Attaching parts for EA3.45.261:			
AGS2002/C/1	. . .	Bolt, 2BA mushroom head	3	—	5/45
EEAS1/1C	. . .	Nut, stiff, 2BA	3	—	5/39
	. . .	Screw, 2BA 120° c'sk head	2	S96	5/10
EA6.45.273	. . .	PLATE, cover, brake mechanism	1	L40	5/51
EA6.45.287	. . .	PLUNGER, brake mechanism operating	1	L65	5/25
EA3.45.265	. . .	RING, brake mechanism locking	1	L40	5/31
EA1.31.277	. . .	SHIM, brake mechanism cover plate	4	Lam Alum.	5/48
or					
EEAS27/8/4B	. . .	SOCKET, conduit, brake cable adjuster	1	L40	5/64
EA1.45.123	. . .	SPHERE, control column locating	1	DTD265	4/36
EA1.45.1029	. . .	SPRING, locking plate compression	1	DTD215	5/34
EA3.45.263	. . .	STOP, air brake switch overshoot	1	—	5/33
EA3.45.5097	. . .	SUPPORT, CONTROL COLUMN CASTING, GROUP (Mod.4956) (Mod.5028) Spares for:	1	—	4/52
HOFFMANN T17		BEARING, ballrace, control column	2	—	4/41
HOFFMANN T25		BEARING, ballrace, between sleeve and support column	2	—	4/42
EA1.45.1033		BOLT, special, aileron operating lever sprocket mounting sleeve fixing	3	S11	4/54
EA3.45.711		CASTING, control column support (Mod.5028)	1	—	4/50
EA1.45.1027		FORK-END	1	S11	4/38
EA1.45.961		LEVER, AILERON OPERATING, GROUP Consisting of:	1	—	4/57
SKEFCO CBA2		BEARING, ballrace	1	—	4/64
EA1.45.483		COLLAR, distance, between lever	1	L64	4/67
AGS798/E		EYE-BOLT, 1/4" BSF	1	—	4/68
EEAS3/D		HOUSING, ballrace	1	L65	4/59
EA1.45.959		LEVER, operating	1	DTD683	4/65
A27/EP		NUT, 1/4" BSF plain	1	—	4/66
EEAS4/20C		WASHER, packing	2	DTD610	4/62
EEAS37/1A		NIPPLE, 6BA	4	S96	4/60
A27/CP		NUT, 2BA plain	4	—	4/58

A.P.101B-0417-3A

Page DH5

CONTROLS

FLYING CONTROLS IN COCKPIT

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
A27/CT	.	.	.	.	NUT, 2BA thin		2	—	4/51
EA3.45.5099	.	.	.	.	SLEEVE, sprocket mounting (Mod.4956)		1	L40	4/63
EEAS38/1A	.	.	.	.	SPOKE, 6BA (Make from 28R/6123)		2	S94	4/61
EA1.45.619	.	.	.	.	SPROCKET		1	L40	4/56
EA1.45.165	.	.	.	.	STUD, mounting		2	DTD126A	4/53
EA1.45.993	.	.	.	.	TUBE, distance, between sprocket and casting, 22 swg		1	T4	4/55
D10001	.	.	.	.	SWITCH, 3-way		1	—	5/7
	.	.	.	.	Attaching parts for D10001:				
A32/B8	.	.	.	.	Screw, 4BA round head		2	—	5/30
or									
1260-2-001C	.	.	.	.	SWITCH		1	—	
EA9.00.159	.	.	.	.	TUBE, INNER AILERON OPERATING, GROUP (EA1.45.971) Consisting of:		1	—	5/63
HOFFMANN	.	.	.	.					
T29	.	.	.	.	BEARING, ballrace		1	—	5/38
EEAS37/13A	.	.	.	.	NIPPLE, 6BA		4	S96	5/36
EEAS38/1A	.	.	.	.	SPOKE, 6BA		2	S94	5/50
EA1.45.1023	.	.	.	.	TUBE, operating, 1 1/4" o/d x 14 swg		1	T45	5/65
EA6.45.261	.	.	.	.	WASHER, special		1	L40	5/26
EA3.45.413	.	.	.	.	WASHER, special		1	Alum.	5/40
EG7.45.23	.	.	.	.	WHEEL, PILOT'S CONTROL, ASSEMBLY Spares for:—		1	—	6/8
EA3.81.351	.	.	.	.	CLAMP, intercom wiring Attaching parts for EA3.81.351:		2	L40	6/17
A32/A16	.	.	.	.	Screw, 6BA round head		2	—	6/19
A33/B12	.	.	.	.	Screw, 4BA c'sk head		1	—	6/11
AGS2035/A	.	.	.	.	Washer, 6BA shakeproof		2	—	6/18
EB6.45.65	.	.	.	.	COVER, switch mounting Attaching parts for EB6.45.65:		1	L72	6/3
A41/B8	.	.	.	.	Screw, 4BA cheese head		2	—	6/1
EB6.45.57	.	.	.	.	MOUNTING, tailplane trim and isolating switches Attaching parts for EB6.45.57		1	L65	6/5
A33/B14	.	.	.	.	Screw, 4BA c'sk head		2	—	6/7
EG7.45.27	.	.	.	.	PIECE, distance, for intercom switch		1	L54	6/10
EG7.45.33	.	.	.	.	PLATE, cover, intercom switch Attaching parts for EG7.45.33:		1	L59	6/6
A33/A8	.	.	.	.	Screw, 6BA c'sk head		2	—	6/9
5F/9143294	.	.	.	.	SLEEVE, PVC, 7mm x .5 mm wall		QR	—	6/16
DUNLOP	.	.	.	.					
ACM24484/7	.	.	.	.	SWITCH, isolating		1	—	6/4
DUNLOP	.	.	.	.					
AC14834/7	.	.	.	.	SWITCH, 2-way, tail trim		1	—	6/2
EB6.45.55	.	.	.	.	WHEEL, hand		1	DTD721	6/12
EA3.45.109	.	.	.	.	COVER, sealing pilot's control column		1	—	10/1

CONTROLS
FLYING CONTROLS IN COCKPIT

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA3.45.5071	 ALTS. TO PILOT'S RUDDER PEDALS	—	—	—
EA3.45.5227	 PEDALS, PILOT'S RUDDER CONTROL, GROUP (Mod.4956)	1	—	8/34
	Consisting of:			
EA3.45.5085	 BEARING, c/w housing and ballrace	1	—	8/31
A25/4E	 BOLT, 1/4" BSF hex. head	8	—	8/26
AS1242/3C	 BOLT, 2BA c'sk head	8	—	8/45
EEAS95/16G	 BOLT, special	2	—	8/46
—	 CABLE, RUN, BRAKES (EA3.45.457)	—	—	7/34
	Spares for:			
EA3.45.461	 BLOCK, pulley support	1	L40	7/7
	Attaching parts for EA3.45.461:			
EA3.45.465	 Block, tapped	1	S92	7/28
EA3.45.467	 Block, tapped	1	S92	7/11
A25/1C	 Bolt, 2BA hex. head	4	—	7/5
EA3.45.171	 BRACKET, lower pulley and cable guard	1	L72	7/36
	Attaching parts for EA3.45.171:			
A25/1C	 Bolt, 2BA hex. head	2	—	7/31
A27/CP	 Nut, 2BA plain	2	—	7/33
EA3.45.173	 BRACKET, upper pulley	1	L72	7/26
	Attaching parts for EA3.45.173:			
A25/1C	 Bolt, 2BA hex. head	2	—	7/24
A27/CP	 Nut, 2BA plain	2	—	7/23
EA3.45.463	 GUIDE, cable	1	S92	7/29
	Attaching parts for EA3.45.463:			
A25/1/2B	 Bolt, 4BA hex. head	1	—	7/10
A25/4B	 Bolt, 4BA hex. head	1	—	7/22
SP13/B	 Washer, 4BA plain	2	—	7/4
AS111	 PULLEY, at brake control valve	1	—	7/27
	Attaching parts for AS111:			
A25/5E	 Bolt, 1/4" BSF hex. head	1	—	7/21
A27/ES	 Nut, 1/4" BSF slotted	1	—	7/38
SP90/C8	 Pin, split	1	—	7/35
SP13/E	 Washer, 1/4" BSF plain	1	—	7/32
EA3.45.459	 PULLEY, assembly	1	—	7/30
	Attaching parts for EA3.45.459:			
A25/7E	 Bolt, 1/4" BSF hex. head	1	—	7/6
EA3.45.469	 Washer, thrust	2	L40	7/14
EA3.45.5089	 CLAMP, ring	1	—	8/47
EA3.16.5037	 DIAPHRAGM, lower	1	—	8/48
EA3.45.5073	 LEVER AND SPROCKET ASSEMBLY	1	—	8/35
or				
EA3.45.5075	 LEVER AND BOSS ASSEMBLY (Preferred alternative for spares)	1	—	8/36
	Spares for:			
EA3.45.5081	 BOSS	1	—	8/37
EA3.45.5083	 CLAMP, ring	1	—	8/38
EA3.45.5217	 LEVER	1	—	8/39
EA3.45.5079	 SPROCKET	1	—	8/40
	Attaching parts:			
AS1242/10C	 Bolt, 2BA c'sk head	10	—	8/41
A27/CS	 Nut, 2BA slotted	10	—	8/42
SP90/C5	 Pin, split, 1/16" x 5/8" long	10	—	8/43
SP13/C	 Washer, 2BA plain	10	—	8/44

CONTROLS

[illegible]

A.P.101B-0417-3A

CONTROLS

Page DH7

FLYING CONTROLS IN COCKPIT

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.45.253	. . .	PEDALS, PILOT'S RUDDER CONTROL, GROUP	1	—	8/32
		Spares for:—			
HOFFMANN					
T21		BEARING, ballrace	1	—	8/24
AS2209		BOLT, pedal pivot	2	—	8/22
AS2203		BOLT, pivot	2	—	8/27
AS2202		BOLT, pivot	1	—	8/15
AS2196		BOLT, special	4	—	8/7
AS3399		BOLT, special taper	2	—	8/11
AS2226		BUSH, lower	1	—	8/14
AS2180		BUSH, upper	1	—	8/12
AS2178		COLLAR, for adjusting worm	1	—	8/9
AS2231		LINK	4	—	8/17
AS2206		LINK, bar	2	—	8/13
AS2224		NUT, cap	1	—	8/3
AS2197		NUT, special	4	—	8/20
A24/EP		NUT, 1/4" BSF plain	3	—	8/27B
A24/ES		NUT, 1/4" BSF slotted	2	—	8/4B
A24/JS		NUT, 3/8" BSF slotted	2	—	8/22A
A24/CS		NUT, 2BA slotted	3	—	8/27A
AS46745		PEDAL, GROUP (Alt.R60/49) (Mod.5101)	1	—	8/28
		Spares for:—			
AS46744		STIRRUP	1	—	8/16
AS46746		PEDAL, GROUP (Alt.R60/49) (Mod.5101)	1	—	8/2
		Spares for:—			
AS46744		STIRRUP	1	—	8/1
AS2191		PEDESTAL	1	—	8/29
AS2210		PIECE, distance	2	—	8/18
SP90/C5		PIN, split	7	—	8/27C
SP90/E10		PIN, split	1	—	8/3A
SP90/C7		PIN, split	4	—	8/4A
AS2189		PLATE, support	1	—	8/23
		Attaching parts for AS2189:—			
A25/1C		Bolt, 2BA hex. head	4	—	8/19
AS2242		Washer, tab	1	—	8/21
AS2179		PLATE, wheel adjustment	1	—	8/6
AS2181		SHIM, packing	QR	—	8/3B
AS2412		SLEEVE, screwed	1	—	8/8
SP14/C		WASHER	3	—	8/27D
SP15/E		WASHER	3	—	8/27E
AS2411		WORM, adjusting	1	—	8/10
AS2188		SPINDLE	1	—	8/25
AS3398		WASHER	2	—	8/4
AS2177		WHEEL, adjusting	1	—	8/5

CONTROLS
FLYING CONTROLS IN COCKPIT

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
R EA3.45.249	.	.	.	.	UNIT, BRAKE CONTROL, GROUP		2	—	7/39
R EA3.45.251	.	.	.	.	Spares for: BRACKET, brake unit support		1	L72	7/40
R A25/1C	.	.	.	.	Attaching parts for EA3.45.251: Bolt, 2BA, hex. head		6	—	7/37
R EA3.45.189	.	.	.	.	CAM, plate guide		2	L40	7/25
R A25/4C	.	.	.	.	Attaching parts for EA3.45.189: Bolt, 2BA hex. head		2	—	7/20
R AS1242/4C	.	.	.	.	Bolt, 2BA c'sk. head		1	—	7/19
R SP47/C	.	.	.	.	Washer, 2BA spring		2	—	7/17
R EA3.45.191	.	.	.	.	LEVER, brake valve operating		1	S96	7/13
R A25/6C	.	.	.	.	Attaching parts for EA3.45.191: Bolt, 2BA hex. head		1	—	7/15
R A27/CS	.	.	.	.	Nut, 2BA slotted		1	—	7/1
R SP90/C8	.	.	.	.	Pin, split		1	—	7/8
R EA3.45.193	.	.	.	.	LINK		1	S11	7/12
R AGS899/2	.	.	.	.	Attaching parts for EA3.45.193: Collar, shackle pin		2	—	7/2
R EA3.45.195	.	.	.	.	Pin, special		1	S11	7/18
R SP4/Y/B11	.	.	.	.	Pin, shackle		1	—	7/3
R SP90/C8	.	.	.	.	Pin, split		2	—	7/9
R SP15/C	.	.	.	.	Washer, 2BA plain		1	—	7/16

CONTROLS
FLYING CONTROLS IN COCKPIT

Ref. No.	Part No.	Description						No. off	Mntl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
96	E.A1.45.477	SPRING, tension, between aileron control and tension lever						1	DTD125	C	6/38
	—	COVER, PRESSURE BOX, ASSEMBLY (E.A3.45.477) Spares for:—						—	—	—	9/7
21349	E.A3.45.479	COVER, access						1	L72	B	9/25
21348	E.A3.45.475	PANEL, assembly						1	L72	B	9/33
	E.A3.45.21	MOUNTING, AILERON, ELEVATOR, AND RUDDER CONTROL LEVERS AT PRESSURE BULKHEAD, GROUP Spares for:—						1	—	—	9/2
8195	E.A3.45.121	BAR, stop, top						1	DTD300	C	9/10
8196	E.A3.45.123	BAR, stop, bottom						1	DTD300	C	9/36
		Attaching parts for E.A3.45.121 and E.A3.45.123:—									
28D/9140644	A25/9C	Bolt, 2 BA hex. head						4	—	C	9/1
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA						4	—	C	9/20
28W/9419404	SP16/C	Washer, 2 BA plain						4	—	C	9/13
1535	E.A3.45.27	Bolt, stop, control levers						5	—	C	9/27
1534	E.A1.45.1207	BOLT, stop, elevator at pressure bulkhead						1	S96	C	9/14
8197	E.A3.45.125	BRACKET, stop bar						6	—	C	9/11
8198	E.A3.45.255	BRACKET, stop bar						2	—	C	9/5
		Attaching parts for E.A3.45.125 and E.A3.45.255:—									
28D/9133011	A25/2C or	Bolt, 2 BA hex. head						2	—	C	9/12
28D/1214091	AS.1242/2C	Bolt, 2 BA c'sk head						2	—	C	9/29
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA						2	—	C	9/6
28W/9419404	SP15/C	Washer, 2 BA plain						2	—	C	9/8
3878	E.A3.45.23	CASING, lever control						1	—	C	9/37
1439156	E.A3.45.537	LEVER, CONTROL, GROUP (MOD. 4489)						1	—	B	9/3
		Spares for:—									
33007	E.A1.45.361	END-PIECE, control lever						2	L40	C	9/30
		Attaching parts for E.A1.45.361:—									
28D/9133011	A25/2C	Bolt, 2 BA hex. head						2	—	C	9/21
28D/1007976	AS.1242/4C	Bolt, 2 BA c'sk head						3	—	C	9/22
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA						5	—	C	9/24
	E.A3.45.535	Piece, packing (Mod 4489)						1	L72	—	9/9
28W/9419475	SP15/C	Washer, 2 BA plain						5	—	C	9/26
24754	E.A1.45.349	HOUSING, control						1	DTD289	C	9/31
112	E.A1.45.345	LEVER, c/w ballrace						6	—	C	9/4
		Attaching parts for E.A1.45.345:—									
28D/1215686	A59/7E	Bolt, 1/4" BSF						4	S96	C	9/19
111	E.A1.45.367	Dowel						1	S1	C	9/28
28M/9480017	AGS.2001/E/1	Nut, stiff, 1/4" BSF						4	—	C	9/23
28W/9471273	SP124/E	Washer, 1/4" BSF, spring						4	—	C	9/18

CONTROLS

FLYING CONTROLS IN COCKPIT

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA1.45.351	.	.	.	RING, sealing, outboard			1	L45	9/32
EA1.45.353	.	.	.	RING, sealing, centre			1	L45	9/34
EA1.45.355	.	.	.	RING, sealing, outboard			1	L45	9/35
				Attaching parts for EA3.45.537:					
A25/4C	.	.	.	Bolt, 2BA hex. head			2	—	9/16
A25/3C	.	.	.	Bolt, 2BA hex. head			6	—	9/17
AGS2001/C/1	.	.	.	Nut, stiff, 2BA			8	—	9/15
EA3.45.25	.	.	.	SEAL, rubber, between control lever casing and pressure bulkhead			1	—	9/38
EA3.45.543	.	.	.	MOUNTING, ELEVATOR CONTROL LEVER, GROUP (Mod.4491) (Ref.8191 modified)			1	—	3/28
				Spares for:					
HOFFMANN T17	.	.	.	BEARING, ballrace			2	—	3/14
EA3.45.103	.	.	.	BOBBIN, lever mounting			1	L40	3/23
EA1.45.267	.	.	.	HOUSING, ballrace, inboard control shaft			1	L40	3/17
				Attaching parts for EA1.45.267:					
AS1242/3C	.	.	.	Bolt, 2BA c'sk head			6	—	3/18
EA3.45.513	.	.	.	Ring, clamp			1	L72	3/19
EA3.45.533	.	.	.	LEVER, ELEVATOR, OPERATING, GROUP (Ref.33182 modified)			1	—	3/33
				Consisting of:					
SKEFCO CBA2	.	.	.	BEARING, ballrace			2	—	3/7
EEAS3/D	.	.	.	HOUSING, ballrace			2	L65	3/12
EA3.45.527	.	.	.	LEVER			1	L40	3/27
EEAS4/20C	.	.	.	WASHER, special, packing			4	L72	3/16
				Attaching parts for EA3.45.533:					
AS1242/4E	.	.	.	Bolt, 1/4" BSF c'sk head			6	—	3/29
A27/ES	.	.	.	Nut, 1/4" BSF slotted			6	—	3/30
SP90/C5	.	.	.	Pin, split			6	—	3/31
SP16/E	.	.	.	Washer, 1/4" BSF plain			6	—	3/32
EEAS37/14A	.	.	.	NIPPLE, 4BA			4	S96	3/9
EEAS37/16A	.	.	.	NIPPLE, 2BA			2	S96	3/25
EA1.45.271	.	.	.	SHAFT, control mounting			1	L40	3/20
EEAS38/2A	.	.	.	SPOKE, 4BA (Make from 28R/6124)			2	S94	3/21
EEAS38/3A	.	.	.	SPOKE, 2BA (Make from 28R/6328)			1	S94	3/22
EEAS63/E	.	.	.	NUT, special, control tube connecting bolt			11	S96	3/6
EEAS127	.	.	.	PIECE, distance, control tube connecting			11	S96	3/5

CONTROLS

FLYING CONTROLS IN COCKPIT

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
—		. SNATCH-UNIT, INSTALLATION (EA3.45.545) (Mod.4435) Spares for:—	—	—	10/4
EA1.45.609		. . BRACKET	1	—	10/13
MARTIN BAKER		. . BUSH	1	—	10/10
D/MBEU/1806/EE		. . BUSH	1	—	10/10
or					
EA3.45.437		. . BUSH	1	T35	10/11
AGS2002/E/1		. . NUT, stiff, 1/4" BSF	2	—	10/7
SP90/C5		. . PIN, split	1	—	10/3
MARTIN BAKER		. . SNATCH-UNIT	1	—	10/2
MBCJ/2106					
MARTIN BAKER		. . STUD	1	—	10/8
A/MBEU/1805/EE					
or					
EA1.45.613		. . STUD	1	L40	10/9
EA1.45.611		. . SUPPORT	1	LFS26	10/6
		Attaching parts for EA1.45.611:—			
A25/4C		. . Bolt, 2BA hex. head	4	—	10/5
AGS2001/C/1		. . Nut, stiff, 2BA	4	—	10/12
HELLERMAN					
INSULOID					
LKOX-HS-B		. . TIE, cable, insulox black	QR	—	
EA3.45.651		. TUBE, ELEVATOR, ASSEMBLY (Mod.4930) (Pre-Mod.5473)	1	—	3/26
EA3.45.727		. TUBE, CONTROL, ELEVATOR, ASSEMBLY (Mod.5473)	1	—	
		Spares for:—			
EEAS.47/2		. . FITTING, adjuster	1	L40	3/4
EA3.45.665		. TUBE, RUDDER, ASSEMBLY (Mod.4930) (Pre-Mod.5473)	1	—	3/10
EA3.45.735		. TUBE, CONTROL, RUDDER, ASSEMBLY (Mod.5473)	1	—	
EA3.45.661		. TUBE, AILERON, ASSEMBLY (Mod.4930) (Pre-Mod.5473)	1	—	3/15
EA3.45.733		. TUBE, CONTROL, AILERON, ASSEMBLY (Mod.5473)	1	—	
		Spares for:—			
EA3.45.657		. . TUBE, ASSEMBLY, FORWARD (Mod.4930) (Pre-Mod.5473)	1	—	
EA3.45.823		. . TUBE, ASSEMBLY, FORWARD (Mod.5473)	1	—	
EA3.45.659		. . TUBE, ASSEMBLY, AFT (Mod.4930) (Pre-Mod.5473)	1	—	3/11
EA3.45.825		. . TUBE, ASSEMBLY, AFT (Mod.5473)	1	—	
		Spares for:—			
EA3.45.663		. . . TUBE, AFT (Mod.4930)	1	—	3/24

A.P.101B-0417-3A

CONTROLS

Page DH11

FLYING CONTROLS IN COCKPIT

	Part Number	Description	No. Off	Matl. Spec.	Plate No.
		1 2 3 4 5 6			
R	EA3.45.667	. TUBE, CONTROL, ASSEMBLY (Mod.4930) (Pre-Mod.5473)	1	—	3/14
	EA3.45.737	. TUBE, CONTROL, ASSEMBLY (Mod.5473)	1	—	
		Spares for:—			
	EEAS.47/2	. . FITTING, adjuster	1	L40	3/4
R	EA3.45.669	. TUBE, CONTROL, ASSEMBLY (Mod.4930) (Pre-Mod.5473)	3	—	3/8
	EA3.45.739	. TUBE, CONTROL, ASSEMBLY (Mod.5473)	3	—	
		Spares for:—			
	EEAS.47/2	. . FITTING, adjuster	1	L40	3/4

CONTROLS

FLYING CONTROLS IN COCKPIT

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

A.P.101B-0417-3A

CONTROLS

Page DJ1

FLYING CONTROLS IN CENTRE FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
R —	CONTROLS, FLYING, IN CENTRE FUSELAGE, ASSEMBLY (EA3.45.379) Spares for:—						—	—	19/1
R EA3.00.5427	. LEVER, AILERON MOUNTING, AT FRAME 22, ASSEMBLY (EA3.45.5105) (Mod.4956) Spares for:—						1	—	19/2
R EA3.45.5107	. . LEVER ASSEMBLY Spares for:—						1	—	19/3
R T21	. . . BEARING						2	—	19/4
R EA3.45.5161	. . . GUARD Attaching parts for EA3.45.5161:—						1	—	19/11
R A25/1C	. . . Bolt, 2BA						4	—	19/12
R A25/1C	. . . Bolt, 2BA						4	—	19/13
R EA3.45.5153	. . . HOUSING Attaching parts for EA3.45.5153:—						2	—	19/14
R A25/2C	. . . Bolt, 2BA						8	—	19/15
R EA3.45.5109	. . . LEVER assembly, top Attaching parts for EA3.45.5109:—						1	—	19/5
R AS1242/4E	. . . Bolt, 1/4" BSF						4	—	19/16
R A27ES	. . . Nut, 1/4" BSF						4	—	19/17
R SP90C5	. . . Pin, split						4	—	19/18
R SP13E	. . . Washer						4	—	19/19
R EA3.45.5113	. . . LEVER assembly, bottom Attaching parts for EA3.45.5113:—						1	—	19/6
R AS1242/5E	. . . Bolt, 1/4" BSF						6	—	19/20
R A27ES	. . . Nut, 1/4" BSF						6	—	19/21
R SP90C5	. . . Pin, split						6	—	19/22
R EA3.45.5155	. . . Ring, clamp						1	L56	19/23
R SP13E	. . . Washer						6	—	19/24
R EA3.45.5121	. . . PLATE assembly, bottom						1	—	19/25
R EA3.45.5117	. . . PLATE assembly, top						1	—	19/26
R EA3.45.5151	. . . SPINDLE						1	S92	19/27
R EA3.45.5157	. . . SPOOL, retaining spindle Attaching parts for EA3.45.5157:—						1	L65	19/28
R EA3.45.5159	. . . Bolt, shouldered, 2BA						1	S97	19/29
R EEAS.95/16E	. . . Bolt, 1/4" BSF						1	—	19/30
R A27CS	. . . Nut, 2BA						1	—	19/31
R A27ES	. . . Nut, 1/4" BSF						1	—	19/32
R SP90C5	. . . Pin, split						2	—	19/33
R EA3.45.5167	. . . Washer, saddle (Make from AS1903E12)						4	—	19/34
R SP13C	. . . Washer (if required) Attaching parts for EA3.00.5427:—						1	—	19/35
R A25/1C	. Bolt, 2BA						14	—	19/36
R A25/2C	. Bolt, 2BA						10	—	19/37
R A25/11C	. Bolt, 2BA						2	—	19/38
R AGS2001C1/66	. Nut, 2BA						14	—	19/39
R EA3.45.5209	. Washer, profile, 12 SWG						2	L72	19/53
R SP13C	. Washer						28	—	19/54

CONTROLS

FLYING CONTROLS IN CENTRE FUSELAGE

	Part Number	Description	No. Off	Matl. Spec.	Plate No.
		1 2 3 4 5 6			
R	EA3.45.5181	. LEVER, AILERON IDLER, AT FRAME 22 ASSEMBLY (Mod.4956) Spares for:—	1	—	20/1
R	T17	. . BEARING, ballrace	2	—	20/2
R	EA3.45.5205	. . HOUSING, ballrace Attaching parts for EA3.45.5205:—	2	—	20/3
R	AS1242/2C	. . Bolt, 2BA	8	—	20/4
R	A25/2C	. . Bolt, 2BA	8	—	20/5
R	AGS2001C1/66	. . Nut, 2BA	8	—	20/6
R	EA3.45.5207	. . Ring, clamp	1	—	20/7
R	EA3.45.5211	. . Shim, laminated	1	—	20/8
R	SP13C	. . Washer	8	—	20/9
R	EA3.45.5193	. . LEVER assembly Spares for:—	1	—	20/10
R	CBA2	. . . BEARING, ballrace	2	—	20/11
R	EEAS.3D	. . . HOUSING	2	—	20/12
R	EA3.45.5195	. . . LEVER	1	—	20/13
R	EEAS.4/20C	. . . WASHER, packing Attaching parts for EA3.45.5193:—	4	—	20/14
R	AS1242/4E	. . Bolt, 1/4" BSF	6	—	20/15
R	A27ES	. . Nut, 1/4" BSF	6	—	20/16
R	SP90C5	. . Pin, split	6	—	20/17
R	SP16E	. . Washer, thick	6	—	20/18
R	EA3.45.5203	. . SPINDLE Attaching parts for EA3.45.5181:—	1	—	20/19
R	A25/1C	. Bolt, 2BA	18	—	20/20
R	AGS2001C1/66	. Nut, 2BA	18	—	20/21
R	SP13C	. Washer	18	—	20/22
R	EA1.45.485	. SUPPORT, CONTROL TUBE, BETWEEN FRAMES 12 AND 13, ASSEMBLY Spares for:—	1	—	19/40
R	FS515	. . BEARING, roller	3	—	19/41
R	EA1.45.545	. . EXTRUSION	1	—	19/42
R	EA1.45.547	. . EXTRUSION	1	—	19/43
R	EA1.45.463	. . SUPPORT Attaching parts for EA1.45.485:—	1	—	19/44
R	A25/3C	. Bolt, 2BA	6	—	19/45
R	A27CP	. Nut, 2BA	6	—	19/46
R	EA1.45.487	. SUPPORT, CONTROL TUBE, AT FRAME 15, ASSEMBLY Spares for:—	1	—	19/47
R	FS515	. . BEARING, roller	3	—	19/48
R	EA1.45.465	. . SUPPORT Attaching parts for EA1.45.487:—	1	—	19/49
R	A25/4C	. Bolt, 2BA	6	—	19/50
R	A27CP	. Nut, 2BA	6	—	19/51
R	EEAS.15-64-110HR	. Strip, packing	3	—	19/52

FLYING CONTROLS IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA1.45.489	. SUPPORT, CONTROL TUBE, AT FRAME 20 ASSEMBLY Spares for:—	1	—	20/23
FS515	. . BEARING, roller	3	—	20/24
EA1.45.467	. . SUPPORT Attaching parts for EA1.45.489:—	1	—	20/25
A25/3C	. Bolt, 2BA	6	—	20/26
A27CP	. Nut, 2BA	6	—	20/27
EEAS.15/64/110NR	. Strip, packing	3	—	20/28
EA1.45.491	. SUPPORT, CONTROL TUBE, AT FRAME 23 ASSEMBLY Spares for:—	1	—	20/29
FS515	. . BEARING, roller	2	—	20/30
EA1.45.469	. . SUPPORT Attaching parts for EA1.45.491:—	1	—	20/31
A25/4C	. Bolt, 2BA	4	—	20/32
A27CP	. Nut, 2BA	4	—	20/33
EA1.45.497	. SUPPORT, CONTROL TUBE, AT FRAME 30A ASSEMBLY Spares for:—	1	—	20/34
FS515	. . BEARING, roller	2	—	20/35
EA1.45.699	. SUPPORT, CONTROL TUBE, AT FRAME 27 ASSEMBLY Spares for:—	1	—	20/36
FS515	. . BEARING, roller	2	—	20/37
EA3.45.673	. TUBE, CONTROL, ELEVATOR AND RUDDER ASSEMBLY (Pre-Mod.5473)	6	—	20A/1
EA3.45.743	. TUBE, CONTROL, ELEVATOR AND RUDDER ASSEMBLY (Mod.5473) Spares for:—	6	—	
EEAS.130	. . END-FITTING, c/w ballrace (Pre-Mod.5473)	1	DTD683	20A/2
EA3.45.767	. . END-FITTING (Mod.5473)	1	—	
EEAS.131/2	. . FORK-END (Pre-Mod.5473)	1	—	20A/3
EA3.45.765	. . FORK-END (Mod.5473)	1	—	
EA3.45.361	. . TUBE (Pre-Mod.5473)	1	—	
EA3.45.785	. . TUBE (Mod.5473)	1	—	20A/28
EA3.45.679	. TUBE, CONTROL, BETWEEN FRAMES 12 AND 15 ASSEMBLY (Mod.4930) (Pre-Mod.5473) Spares for:—	3	—	20A/4
EA3.45.749	. TUBE, CONTROL, BETWEEN FRAMES 12 AND 15 ASSEMBLY (Mod.5473) Spares for:—	3	—	
EEAS.130	. . END-FITTING (Pre-Mod.5473)	1	—	20A/2
EA3.45.767	. . END-FITTING (Mod.5473)	1	—	

CONTROLS

FLYING CONTROLS IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EEAS.131/2	. . FORK-END (Pre-Mod.5473)	1	—	20A/3
EA3.45.765	. . FORK-END (Mod.5473)	1	—	
EA3.45.373	. . TUBE (Pre-Mod.5473)	1	—	
EA3.45.791	. . TUBE (Mod.5473)	1	—	20A/29
EA3.45.671	. TUBE, CONTROL, BETWEEN FRAMES 15 AND 20 ASSEMBLY (Mod.4930) (Pre-Mod.5473)	1	—	20A/5
EA3.45.741	. TUBE, CONTROL, BETWEEN FRAMES 15 AND 20 ASSEMBLY (Mod.5473) Spares for:—	1	—	
EEAS.130	. . END-FITTING (Pre-Mod.5473)	1	—	20A/2
EA3.45.767	. . END-FITTING (Mod.5473)	1	—	
EEAS.131/2	. . FORK-END (Pre-Mod.5473)	1	—	20A/3
EA3.45.765	. . FORK-END (Mod.5473)	1	—	
EA3.45.357	. . TUBE (Pre-Mod.5473)	1	—	
EA3.45.783	. . TUBE (Mod.5473)	1	—	20A/30
EA3.45.677	. TUBE, CONTROL, BETWEEN FRAME 20 AND AILERON LEVER ASSEMBLY (Mod.4930) (Pre-Mod.5473)	1	—	20A/6
EA3.45.747	. TUBE, CONTROL, BETWEEN FRAME 20 AND AILERON LEVER ASSEMBLY (Mod.5473) Spares for:—	1	—	
EEAS.128	. . END-FITTING (Pre-Mod.5473)	1	—	20A/7
EA3.45.769	. . END-FITTING (Mod.5473) Attaching parts for EEAS.128 or EA3.45.769:—	1	—	
EEAS.37/13A	. . Nipple	4	—	20A/8
EEAS.41/2	. . Pin, sealing	2	—	20A/9
AGS.2052/19/27	. . Rivet, Tucker (Mod.4930)	2	—	20A/10
AGS.2045/609	. . Rivet	2	—	20A/11
EEAS.38/1A	. . Spoke	2	—	20A/12
EEAS.47/2	. . FORK-END, adjusting Attaching parts for EEAS.47/2:—	1	—	20A/13
A29NP	. . Nut, 1/2" BSF	1	—	20A/14
EEAS.131/2	. . FORK-END (Pre-Mod.5473)	1	—	20A/15
EA3.45.765	. . FORK-END (Mod.5473) Attaching parts for EEAS.131/2 or EA3.45.765:—	1	—	
EEAS.37/13A	. . Nipple	6	—	20A/16
EEAS.38/1A	. . Spoke	3	—	20A/17

FLYING CONTROLS IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA3.45.369	. . TUBE (Pre-Mod.5473)	1	—	
EA3.45.789	. . TUBE (Mod.5473)	1	—	20A/31
EA3.45.675	. TUBE, CONTROL, AT FRAME 21 ASSEMBLY (Mod.4930) (Pre-Mod.5473)	1	—	20A/18
EA3.45.745	. TUBE, CONTROL, AT FRAME 21 ASSEMBLY (Mod.5473) Spares for:—	1	—	
EEAS.131/2	. . FORK-END (Pre-Mod.5473)	2	—	20A/19
EA3.45.765	. . FORK-END (Mod.5473) Attaching parts for EEAS.131/2 or EA3.45.765:—	2	—	
EEAS.37/13A	. . Nipple	6	—	20A/20
EEAS.38/1A	. . Spoke	3	—	20A/21
EA3.45.365	. . TUBE (Pre-Mod.5473)	1	—	
EA3.45.787	. . TUBE (Mod.5473)	1	—	20A/32
EA3.45.681	. TUBE, CONTROL, BETWEEN FRAMES 23 AND 27 ASSEMBLY (Mod.4930) (Pre-Mod.5473)	2	—	20A/22
EA3.45.751	. TUBE, CONTROL, BETWEEN FRAMES 23 AND 27 ASSEMBLY (Mod.5473) Spares for:—	2	—	
EEAS.130	. . END-FITTING, c/w ballrace (Pre-Mod.5473)	1	—	20A/2
EA3.45.767	. . END-FITTING (Mod.5473)	1	—	
EEAS.131/2	. . FORK-END (Pre-Mod.5473)	1	—	20A/3
EA3.45.765	. . FORK-END (Mod.5473)	1	—	
EA3.45.377	. . TUBE (Pre-Mod.5473)	1	—	
EA3.45.793	. . TUBE (Mod.5473) Attaching parts for control tubes:—	1	—	
EEAS.13/1	. Bolt, special	2	—	20A/23
EEAS.14	. Bush	2	—	20A/24
EEAS.63E	. Nut	2	—	20A/25
EEAS.127	. Piece, distance	2	—	20A/26
SP90C7	. Pin, split	2	—	20A/27

FLYING CONTROLS IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			

A.P.101B-0417-3A

CONTROLS

Page DK1

FLYING CONTROLS IN REAR FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
-	CONTROLS, FLYING, IN REAR FUSELAGE, ASSEMBLY (EA3.45.385) Spares for:-	-	-	
EEAS.13/1	. BOLT, special, control tube connecting	8	S96	21/21
EEAS.14	. BUSH, spacing, at connections	8	S96	21/22
-	. LEVERS, CONTROL, AND MOUNTING OF BRACKETS AT FRAME 42, ASSEMBLY (EA1.45.601) Spares for:-	-	-	21/40
EA1.45.1193	. . LEVER, CONTROL, ELEVATOR, GROUP Consisting of:-	1	-	21/26
HOFFMANN CS.1	. . . BEARING, ballrace	2	-	21/4
SKEFCO CBA.2	. . . BEARING, ballrace	2	-	21/19
EA1.45.573	. . . BOBBIN Attaching parts for EA1.45.573:-	1	L40	21/5
A25/4C	. . . Bolt, 2BA hex. head	4	-	21/13
A27/CP	. . . Nut, 2BA plain	4	-	21/11
SP16/C	. . . Washer, 2BA plain	4	-	21/12
EA1.45.577	. . . BUSH, distance	1	L65	21/8
EEAS.3/D	. . . HOUSING, ballrace	2	L65	21/23
EA1.45.1191	. . . LEVER	1	L65	21/18
EEAS.4/20C	. . . WASHER, packing, ballrace housing Attaching parts for EA1.45.1193:-	4	DTD610	21/20
EEAS.13/6	. . Bolt, special, 1/4" BSF	1	S96	21/14
A27/ES	. . Nut, 1/4" BSF slotted	1	-	21/2
SP90/C7	. . Pin, split	1	-	21/1
SP15/E	. . Washer, 1/4" BSF plain	1	-	21/3
EA1.45.561	. . LEVER, CONTROL, RUDDER, ASSEMBLY Spares for:-	1	-	21/24
HOFFMANN CS.1	. . . BEARING, ballrace	2	-	21/9
EA1.45.575	. . . BOBBIN	1	L40	21/7
EA1.45.577	. . . BUSH, distance	1	L65	21/10
EA1.45.569	. . . LUG, end, c/w ballrace Attaching parts for EA1.45.561:-	2	-	21/25
EEAS.13/7	. . Bolt, special, 1/4" BSF	1	S96	21/6
A27/ES	. . Nut, 1/4" BSF slotted	1	-	21/16
SP90/C7	. . Pin, split	1	-	21/17
SP15/E	. . Washer, 1/4" BSF plain	1	-	21/15
EEAS.63/E	. NUT, special, 1/4" BSF, control rod connecting bolt	8	S96	21/29
EEAS.127	. PIECE, distance, at lever and rod connections	8	S96	21/28
SP90/C7	. PIN, split	8	-	21/30
EA1.45.499	. SUPPORT, CONTROL TUBES, AT FRAME 35, ASSEMBLY Spares for:-	1	-	21/31
FS515	. . BEARING, roller	2	-	21/32
EA1.45.501	. SUPPORT, CONTROL TUBES, AT FRAME 37, ASSEMBLY Spares for:-	1	-	21/33
FS515	. . BEARING, roller	2	-	21/34

R

R

R

R

CONTROLS

FLYING CONTROLS IN REAR FUSELAGE

	Part Number	Description	No. Off	Matl. Spec.	Plate No.
		1 2 3 4 5 6			
R	EA3.45.647	. TUBE, CONTROL, RUDDER (Mod.4930) (Pre-Mod.5473)	1	—	21/35
	EA3.45.723	. TUBE, CONTROL, RUDDER (Mod.5473)	1	—	
		Spares for:—			
	EEAS.47/2	. . FITTING, adjuster	1	L40	21/52
	EEAS.131/2	. . FORK-END (Pre-Mod.5473)	1	L40	21/50
	EA3.45.765	. . FORK-END (Mod.5473)	1	—	
	A29/NP	. . NUT, 1/2" BSF plain	1	—	21/51
R	EA3.45.649	. TUBE, CONTROL, ELEVATOR (Mod.4930) (Pre-Mod.5473)	2	—	21/41
	EA3.45.725	. TUBE, CONTROL, ELEVATOR (Mod.5473)	2	—	
		Consisting of:—			
R	EA3.45.681	. . TUBE, CONTROL, ASSEMBLY (Mod.4930) (Pre-Mod.5473)	1	—	21/49
	EA3.45.751	. . TUBE, CONTROL, ASSEMBLY (Mod.5473)	1	—	
		Spares for:—			
	EEAS.130	. . . END-FITTING, c/w bearing (Pre-Mod.5473)	1	—	21/44
	EA3.45.767	. . . END-FITTING (Mod.5473)	1	—	
	EEAS.131/2	. . . FORK-END (Pre-Mod.5473)	1	L40	21/48
	EA3.45.765	. . . FORK-END (Mod.5473)	1	—	
R	EA3.45.653	. TUBE, CONTROL, ELEVATOR (Mod.4930) (Pre-Mod.5473)	1	—	21/36
	EA3.45.729	. TUBE, CONTROL, ELEVATOR (Mod.5473)	1	—	
		Spares for:—			
	EEAS.47/2	. . FITTING, adjuster	1	L40	21/47
	EA3.45.313	. . FORK-END (Pre-Mod.5473)	1	L40	21/45
	EA3.45.811	. . FORK-END (Mod.5473)	1	—	
	A29/NP	. . NUT, 1/2" BSF plain	1	—	21/46
R	EA3.45.681	. TUBE, CONTROL, ELEVATOR (Mod.4930) (Pre-Mod.5473)	2	—	21/42
	EA3.45.751	. TUBE, CONTROL, ELEVATOR (Mod.5473)	2	—	
		Spares for:—			
	EEAS.130	. . . END-FITTING, c/w bearing (Pre-Mod.5473)	1	—	21/38
	EA3.45.767	. . . END-FITTING (Mod.5473)	1	—	
	EEAS.131/2	. . . FORK-END (Pre-Mod.5473)	1	L40	21/37
	EA3.45.765	. . . FORK-END (Mod.5473)	1	—	
R	EA3.45.683	. TUBE, CONTROL, ELEVATOR (Mod.4930) (Pre-Mod.5473)	1	—	21/39
	EA3.45.753	. TUBE, CONTROL, ELEVATOR (Mod.5473)	1	—	
		Spares for:—			
	EEAS.47/2	. . FITTING, adjuster	1	L40	21/52
	EEAS.131/2	. . FORK-END (Pre-Mod.5473)	1	L40	21/50
	EA3.45.765	. . FORK-END (Mod.5473)	1	—	
	A29/NP	. . NUT, 1/2" BSF plain	1	—	21/51
R	EA3.45.685	. TUBE, CONTROL, RUDDER (Mod.4930) (Pre-Mod.5473)	1	—	21/27
	EA3.45.755	. TUBE, CONTROL, RUDDER (Mod.5473)	1	—	
		Spares for:—			
	EEAS.47/2	. . FITTING, adjuster	1	L40	21/52
	EEAS.131/2	. . FORK-END (Pre-Mod.5473)	1	L40	21/50
	EA3.45.765	. . FORK-END (Mod.5473)	1	—	
	A29/NP	. . NUT, 1/2" BSF plain	1	—	21/51

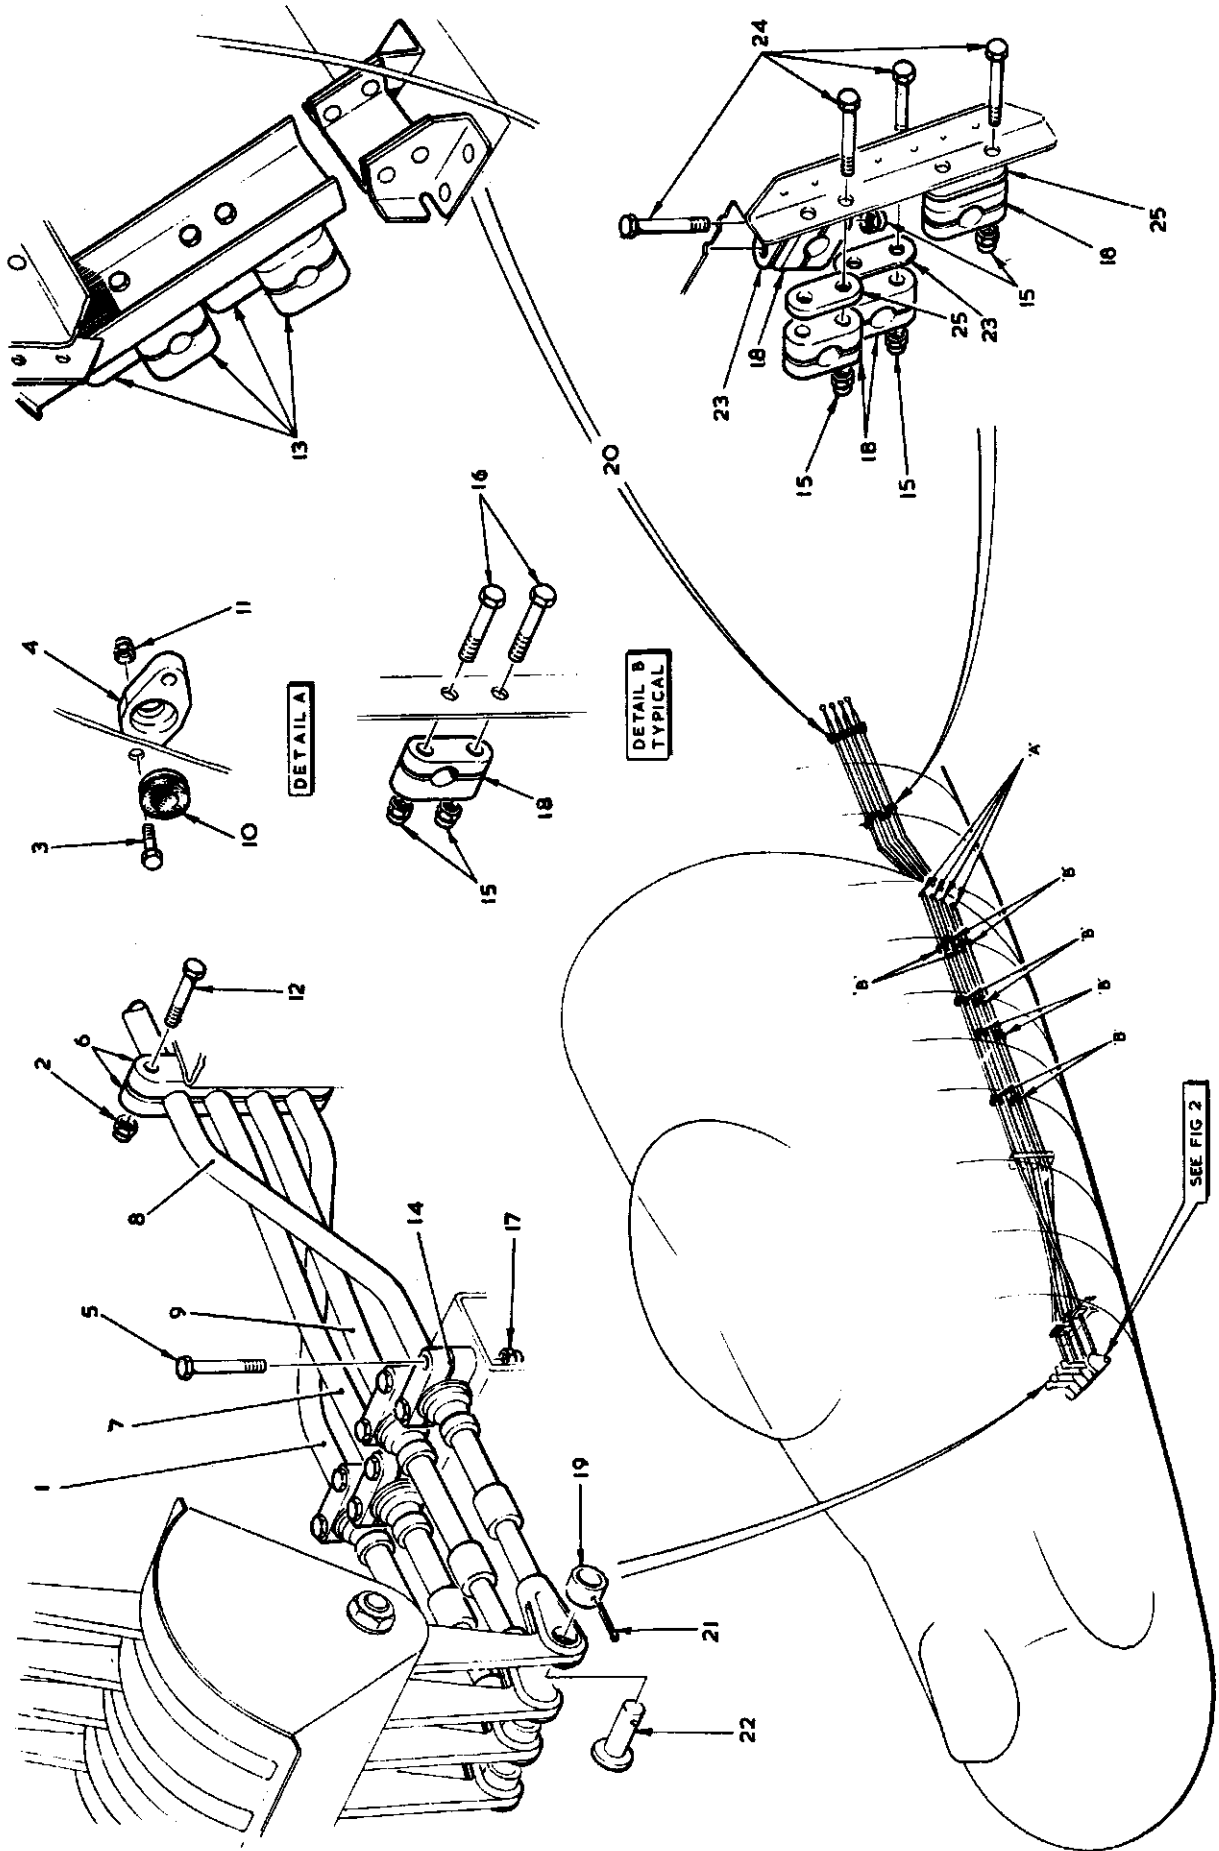


FIG.1 ENGINE CONTROLS IN NOSE FUSELAGE

Restricted

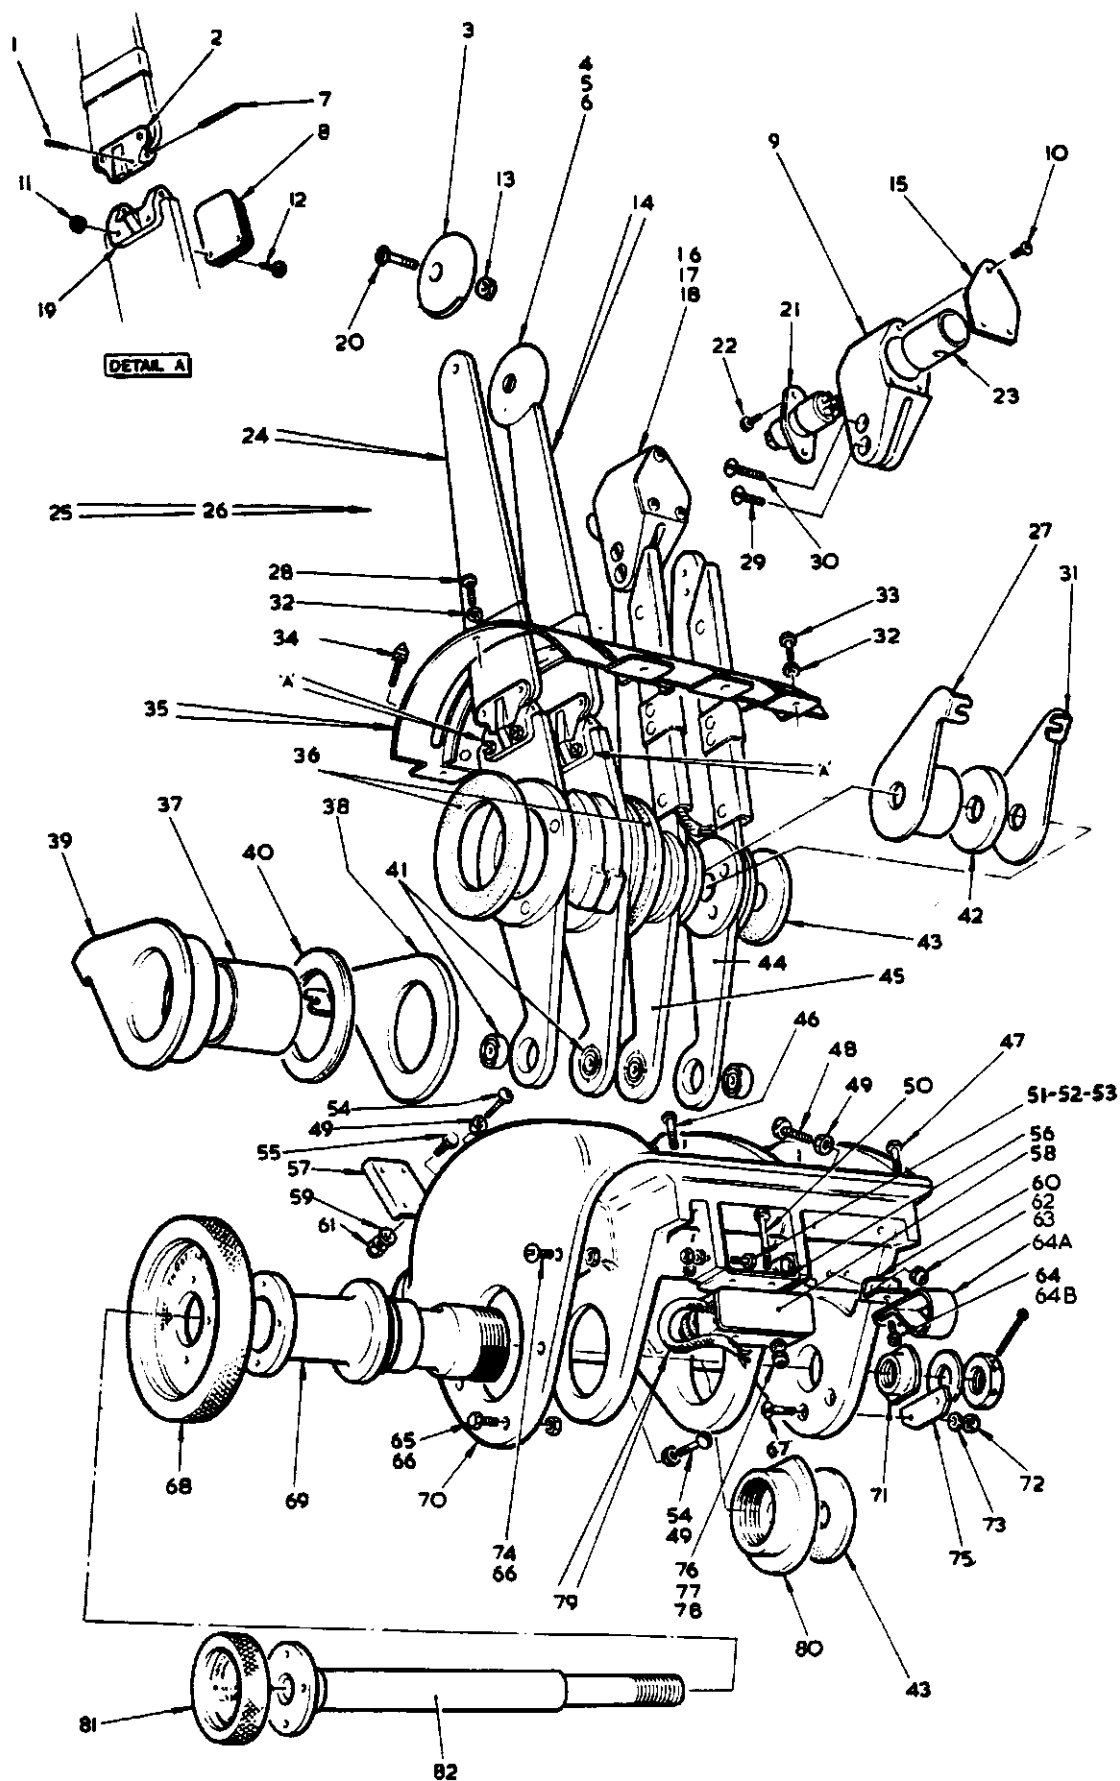


FIG.2 ENGINE CONTROLS IN NOSE FUSELAGE

T. MK.17 SECT. D

Restricted

AL II

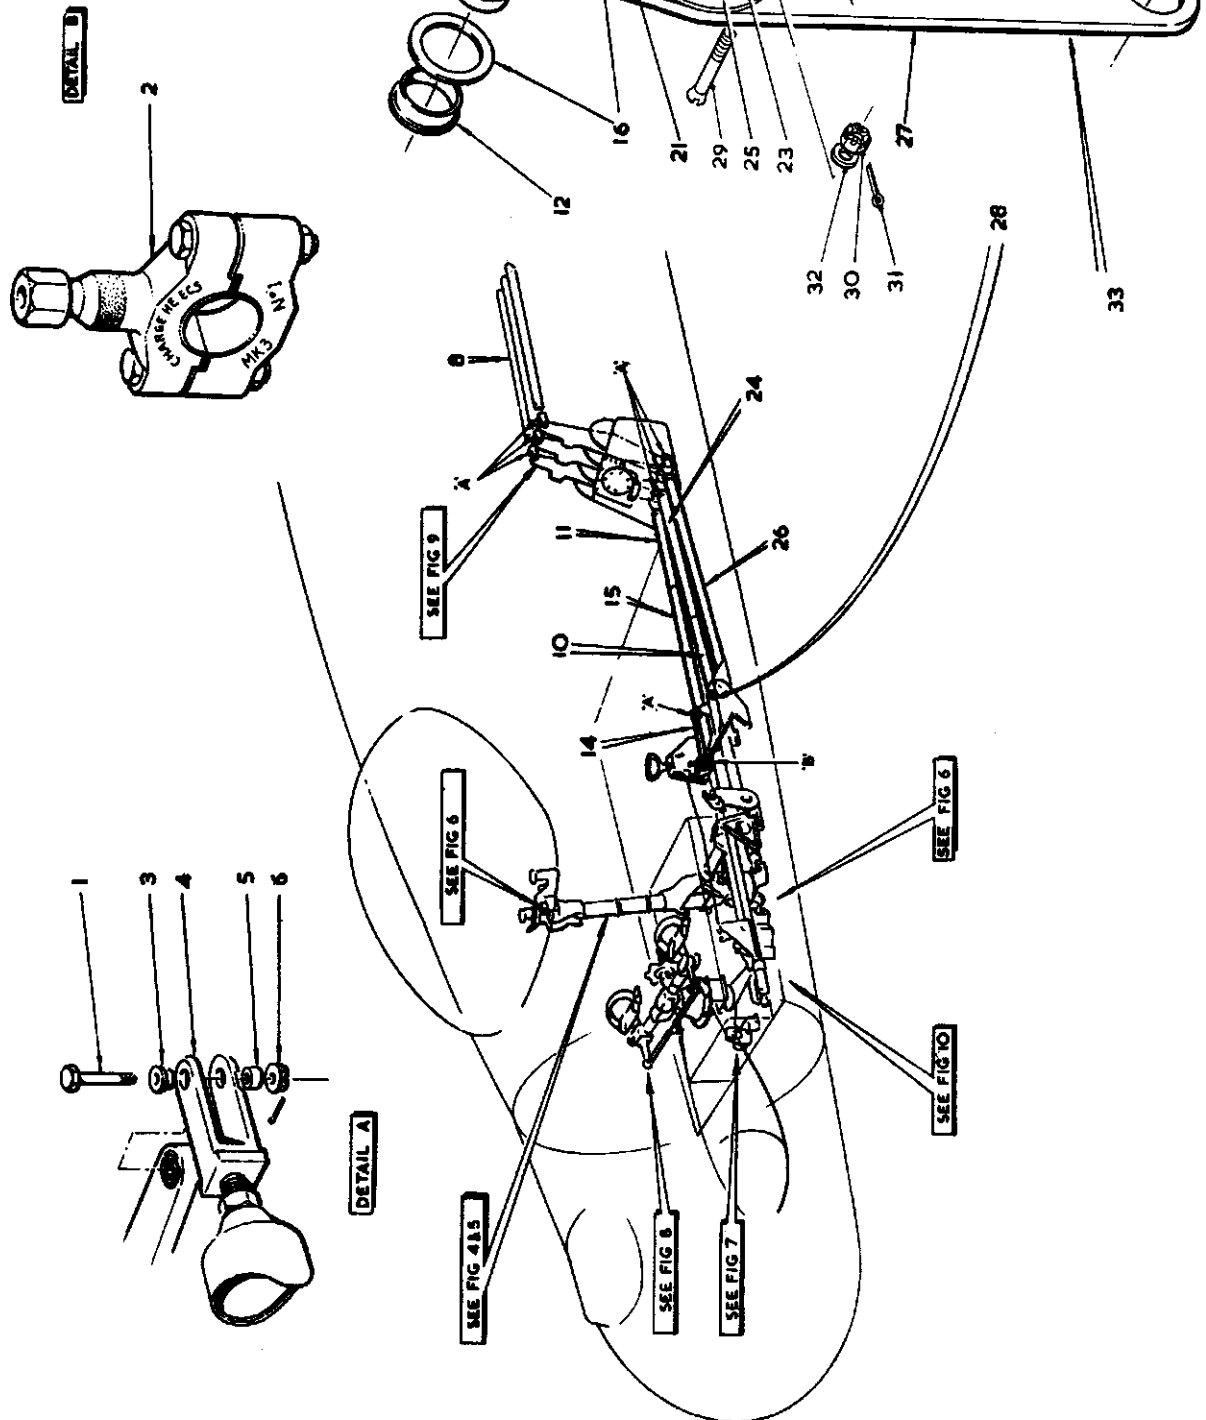


FIG.3 FLYING CONTROLS IN COCKPIT
Restricted

Restricted

AL8

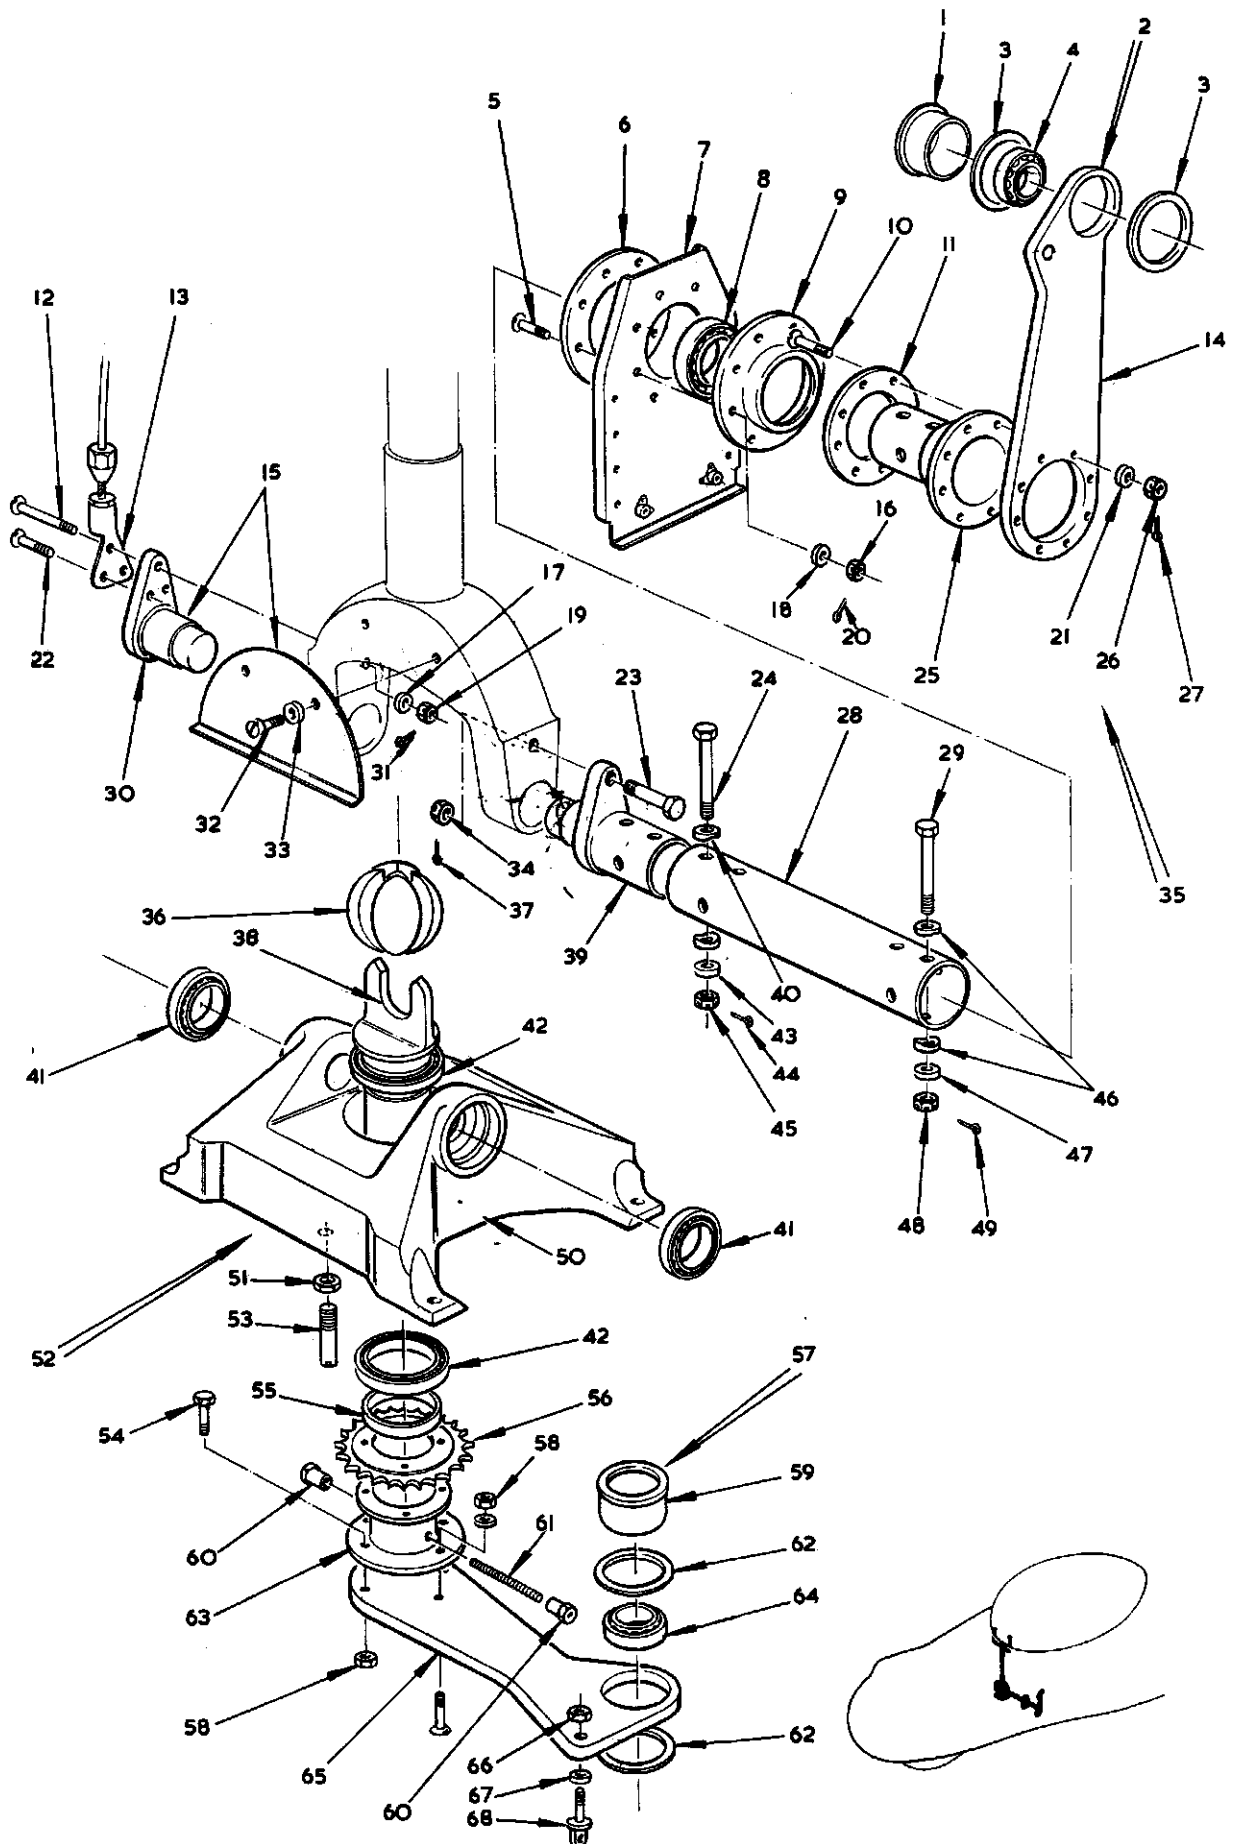


FIG 4. FLYING CONTROLS IN COCKPIT

Restricted

TMK 17, SECT D

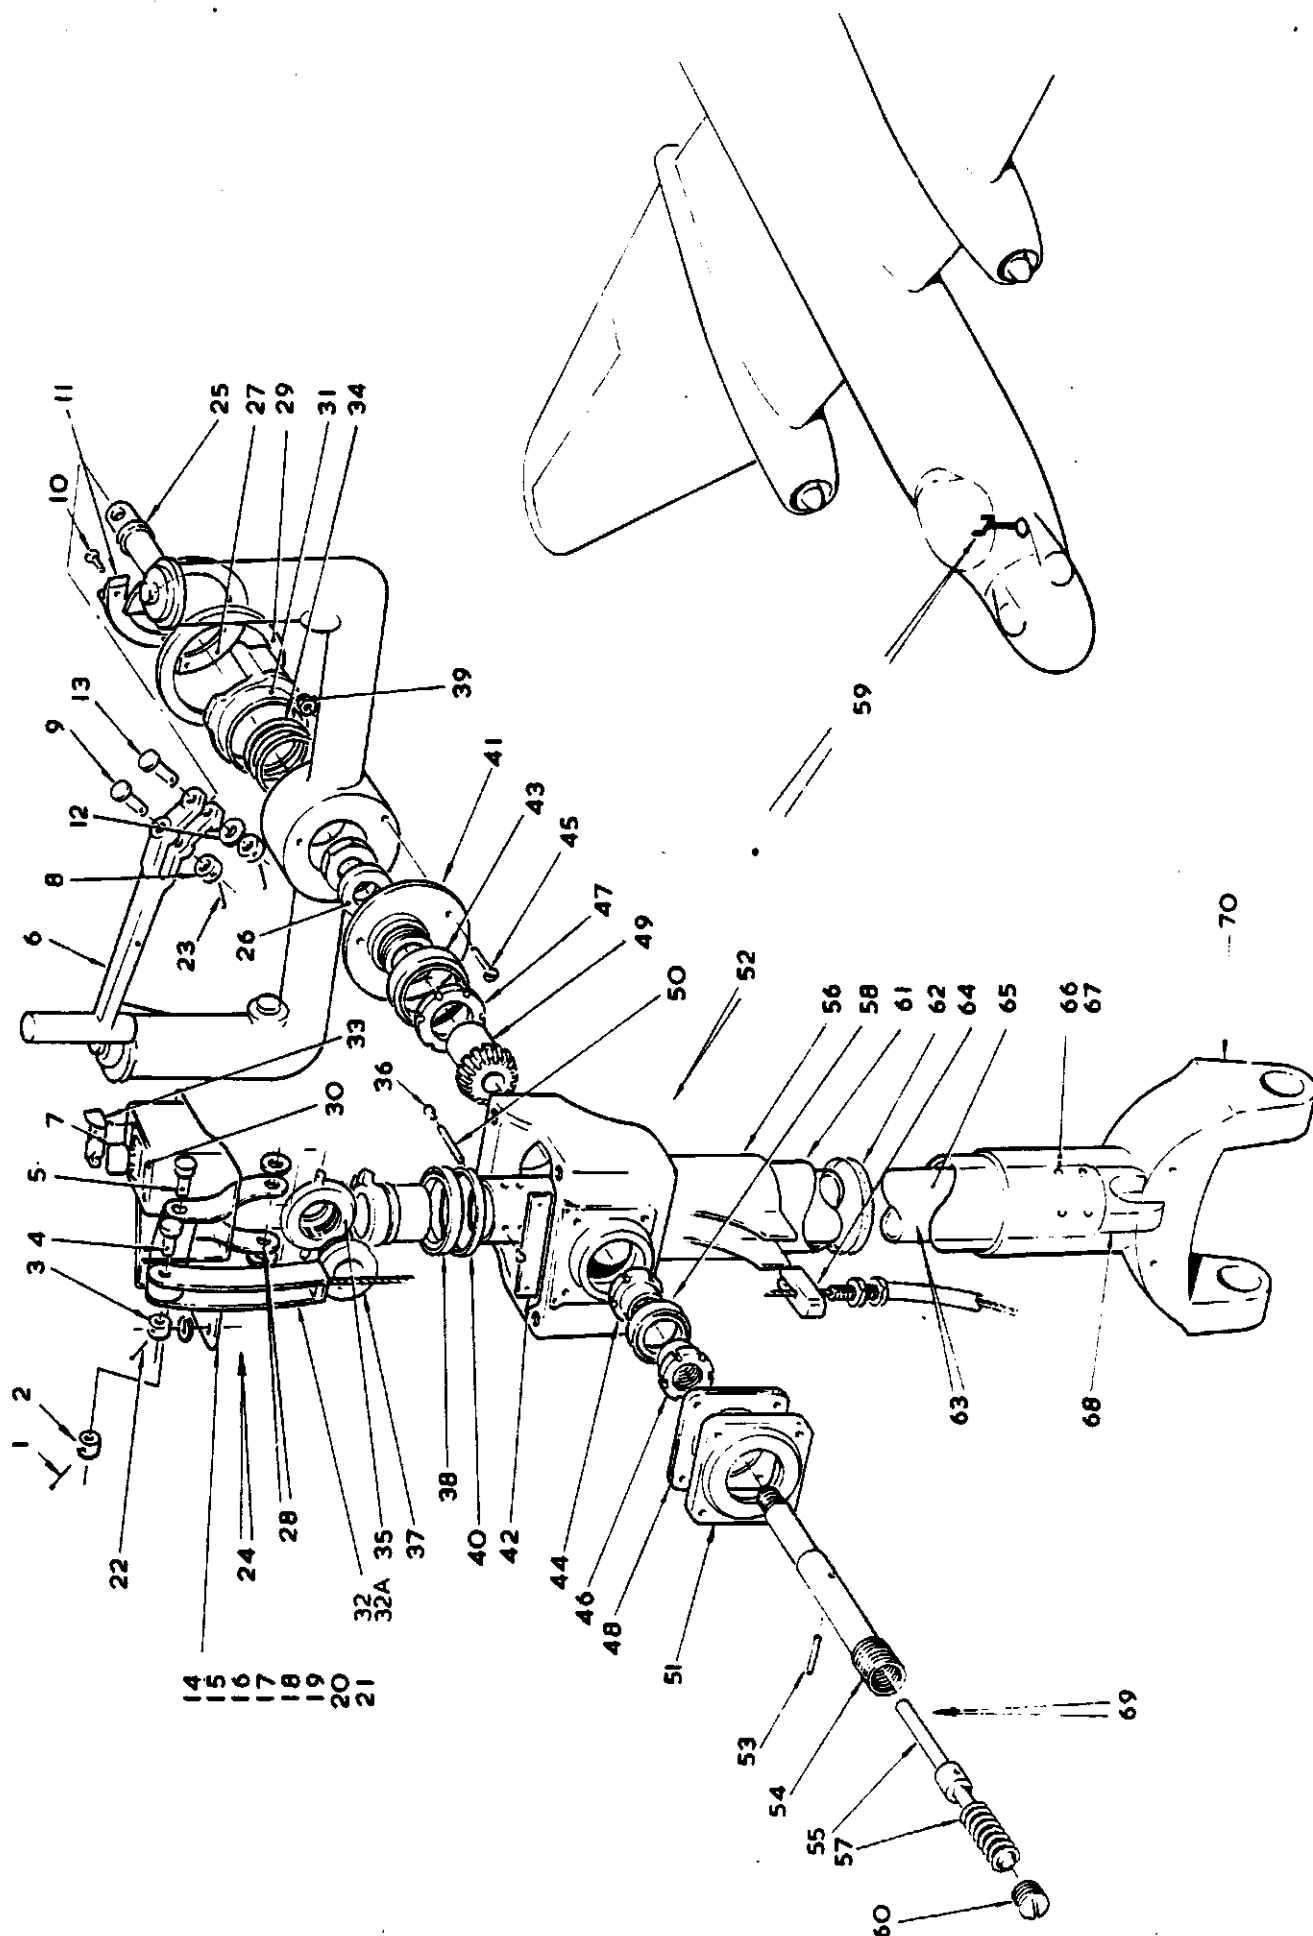


FIG.5 FLYING CONTROLS IN COCKPIT

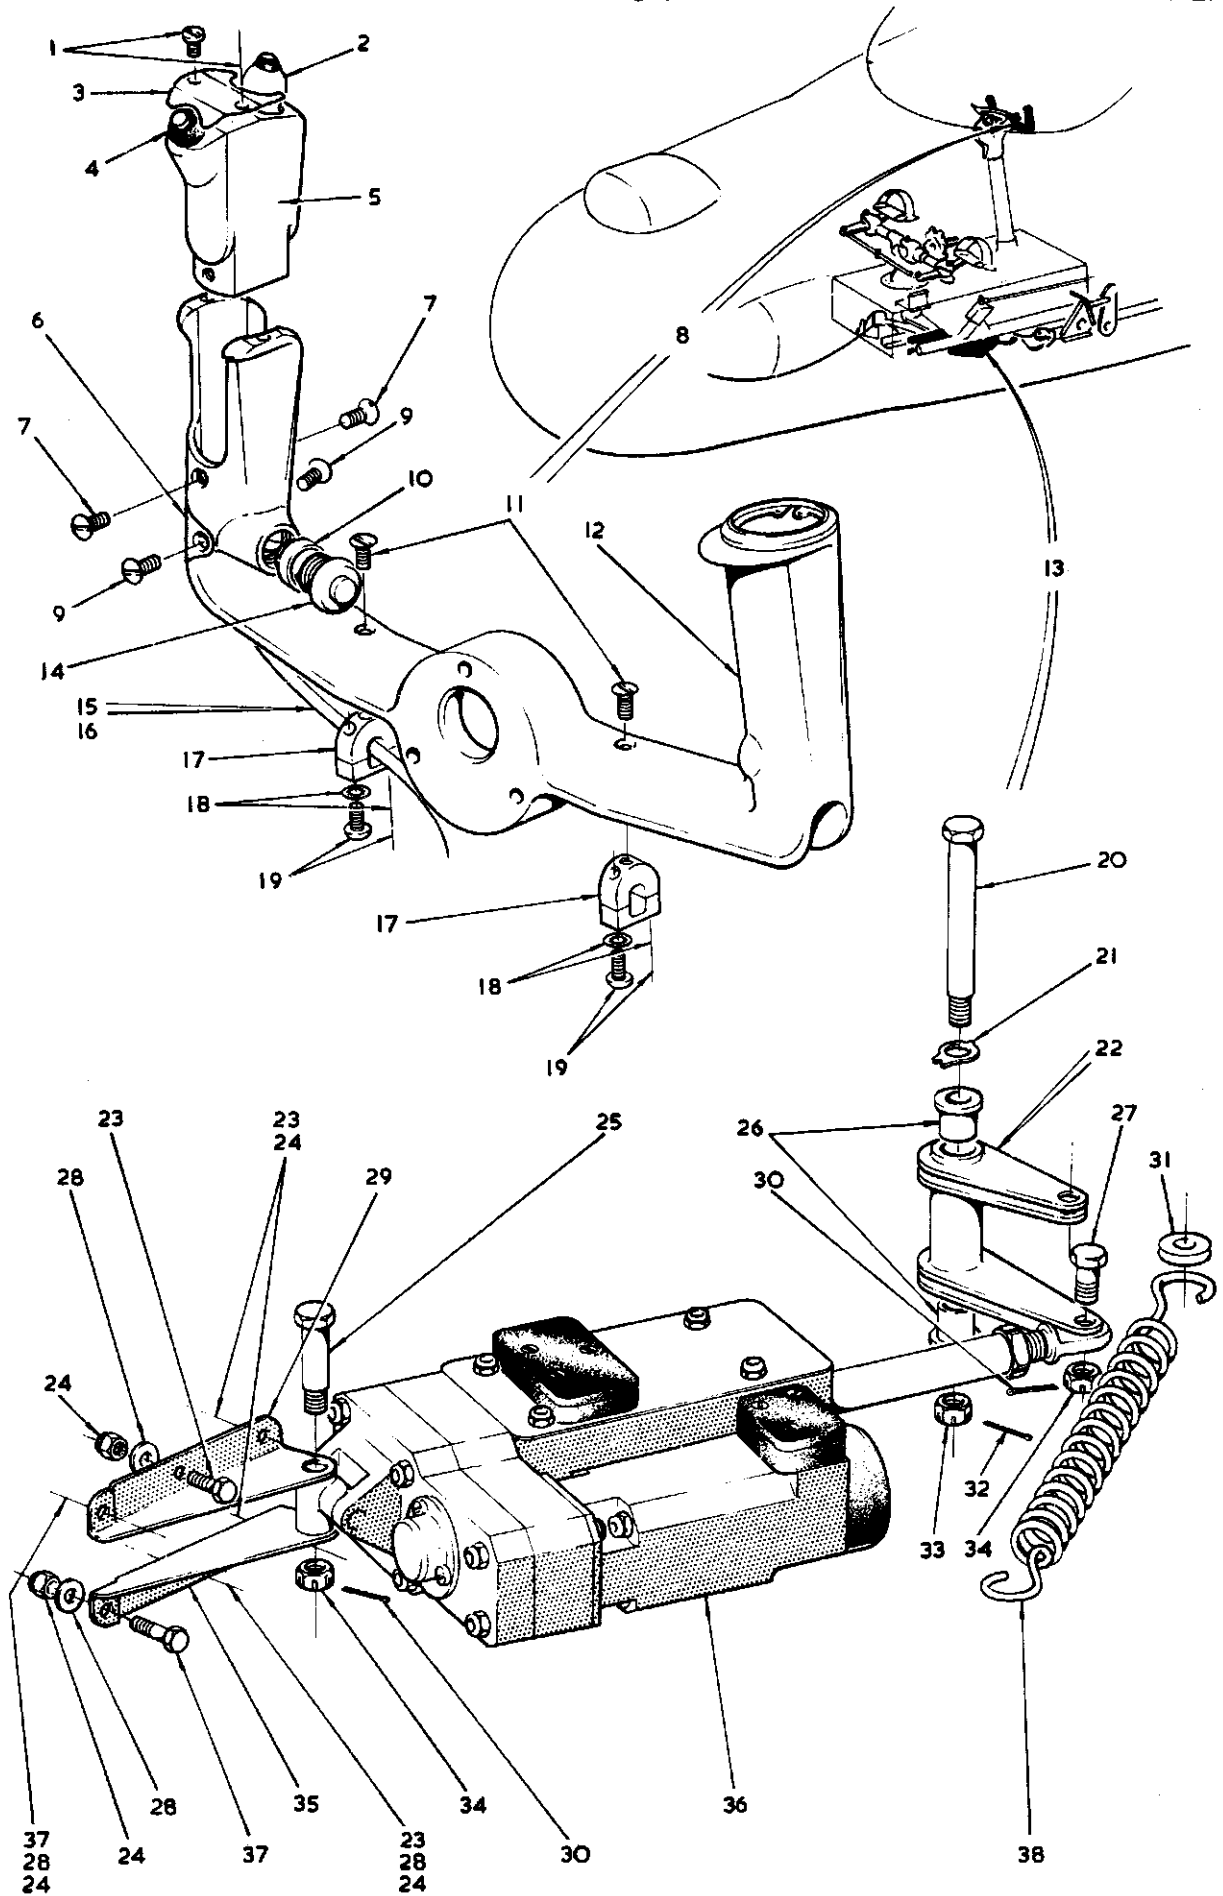


FIG.6 FLYING CONTROLS IN COCKPIT
Restricted

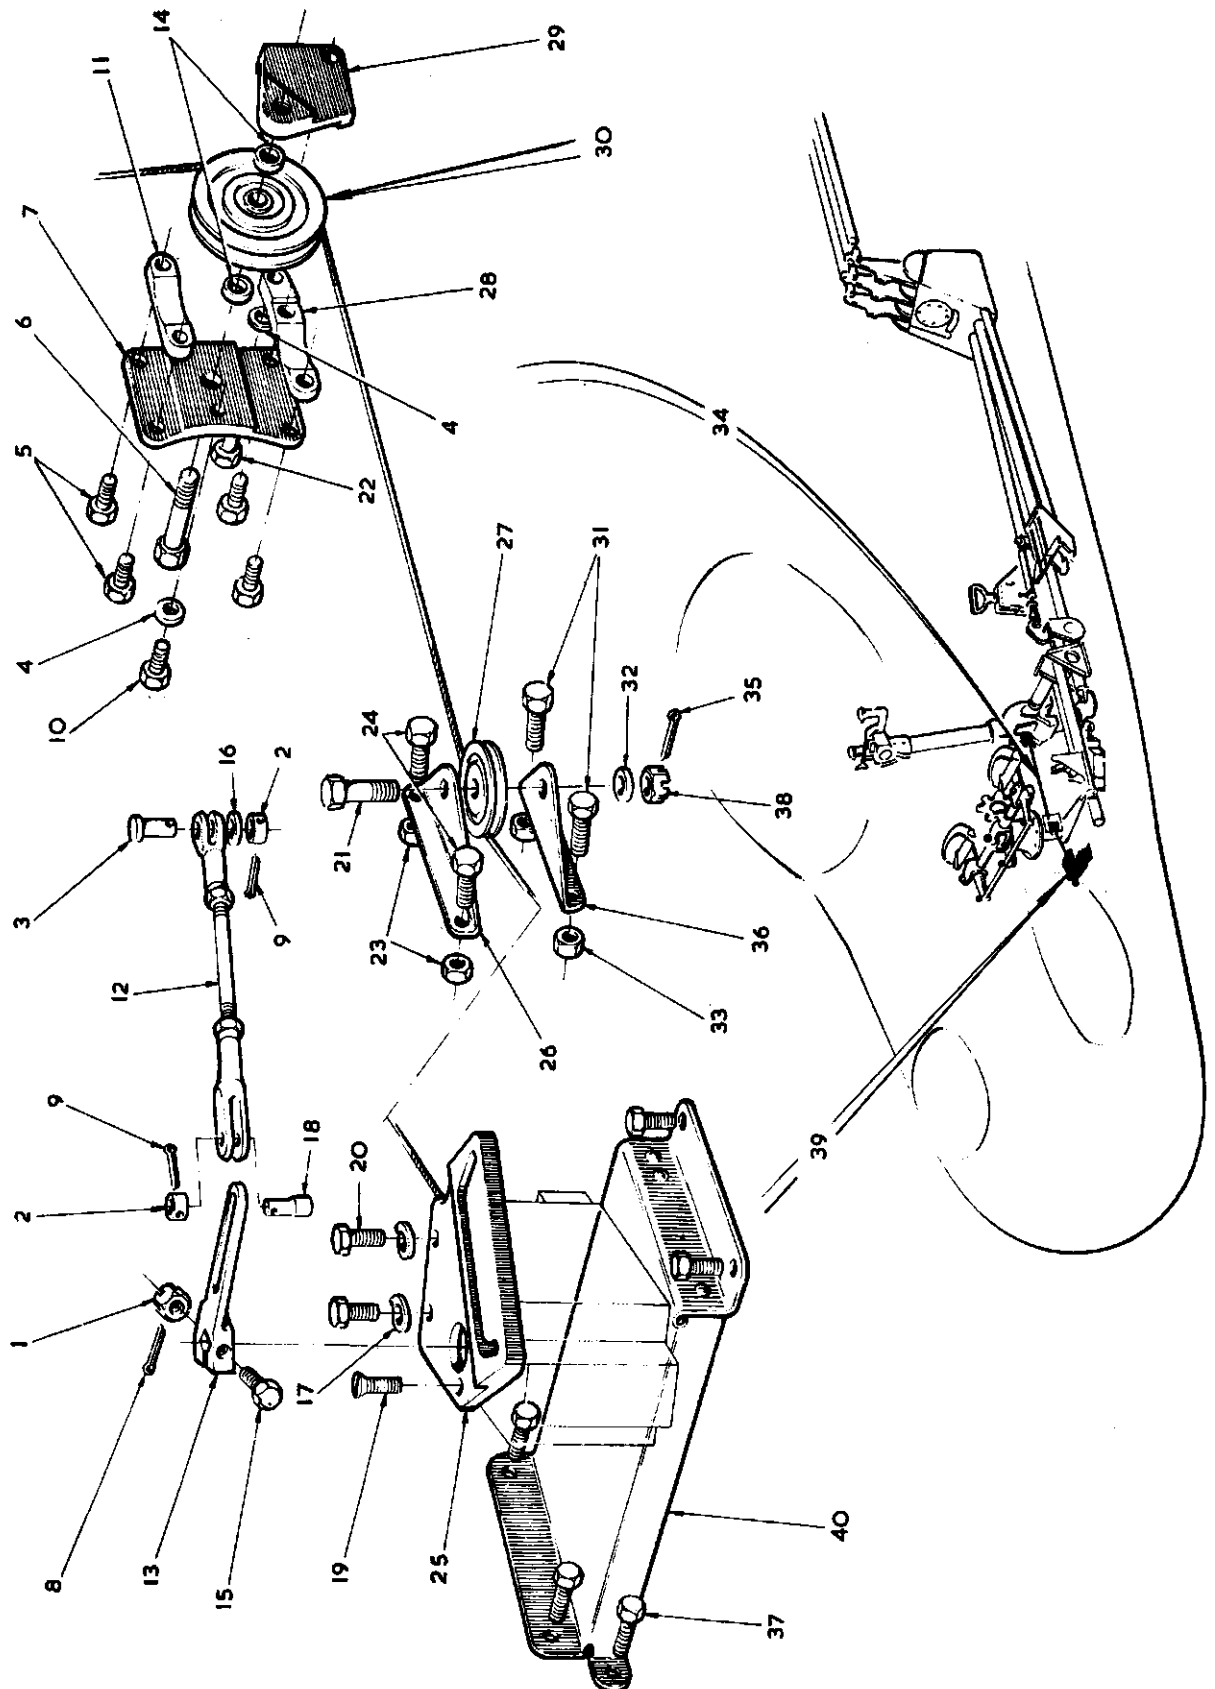


FIG.7 FLYING CONTROLS IN COCKPIT
Restricted

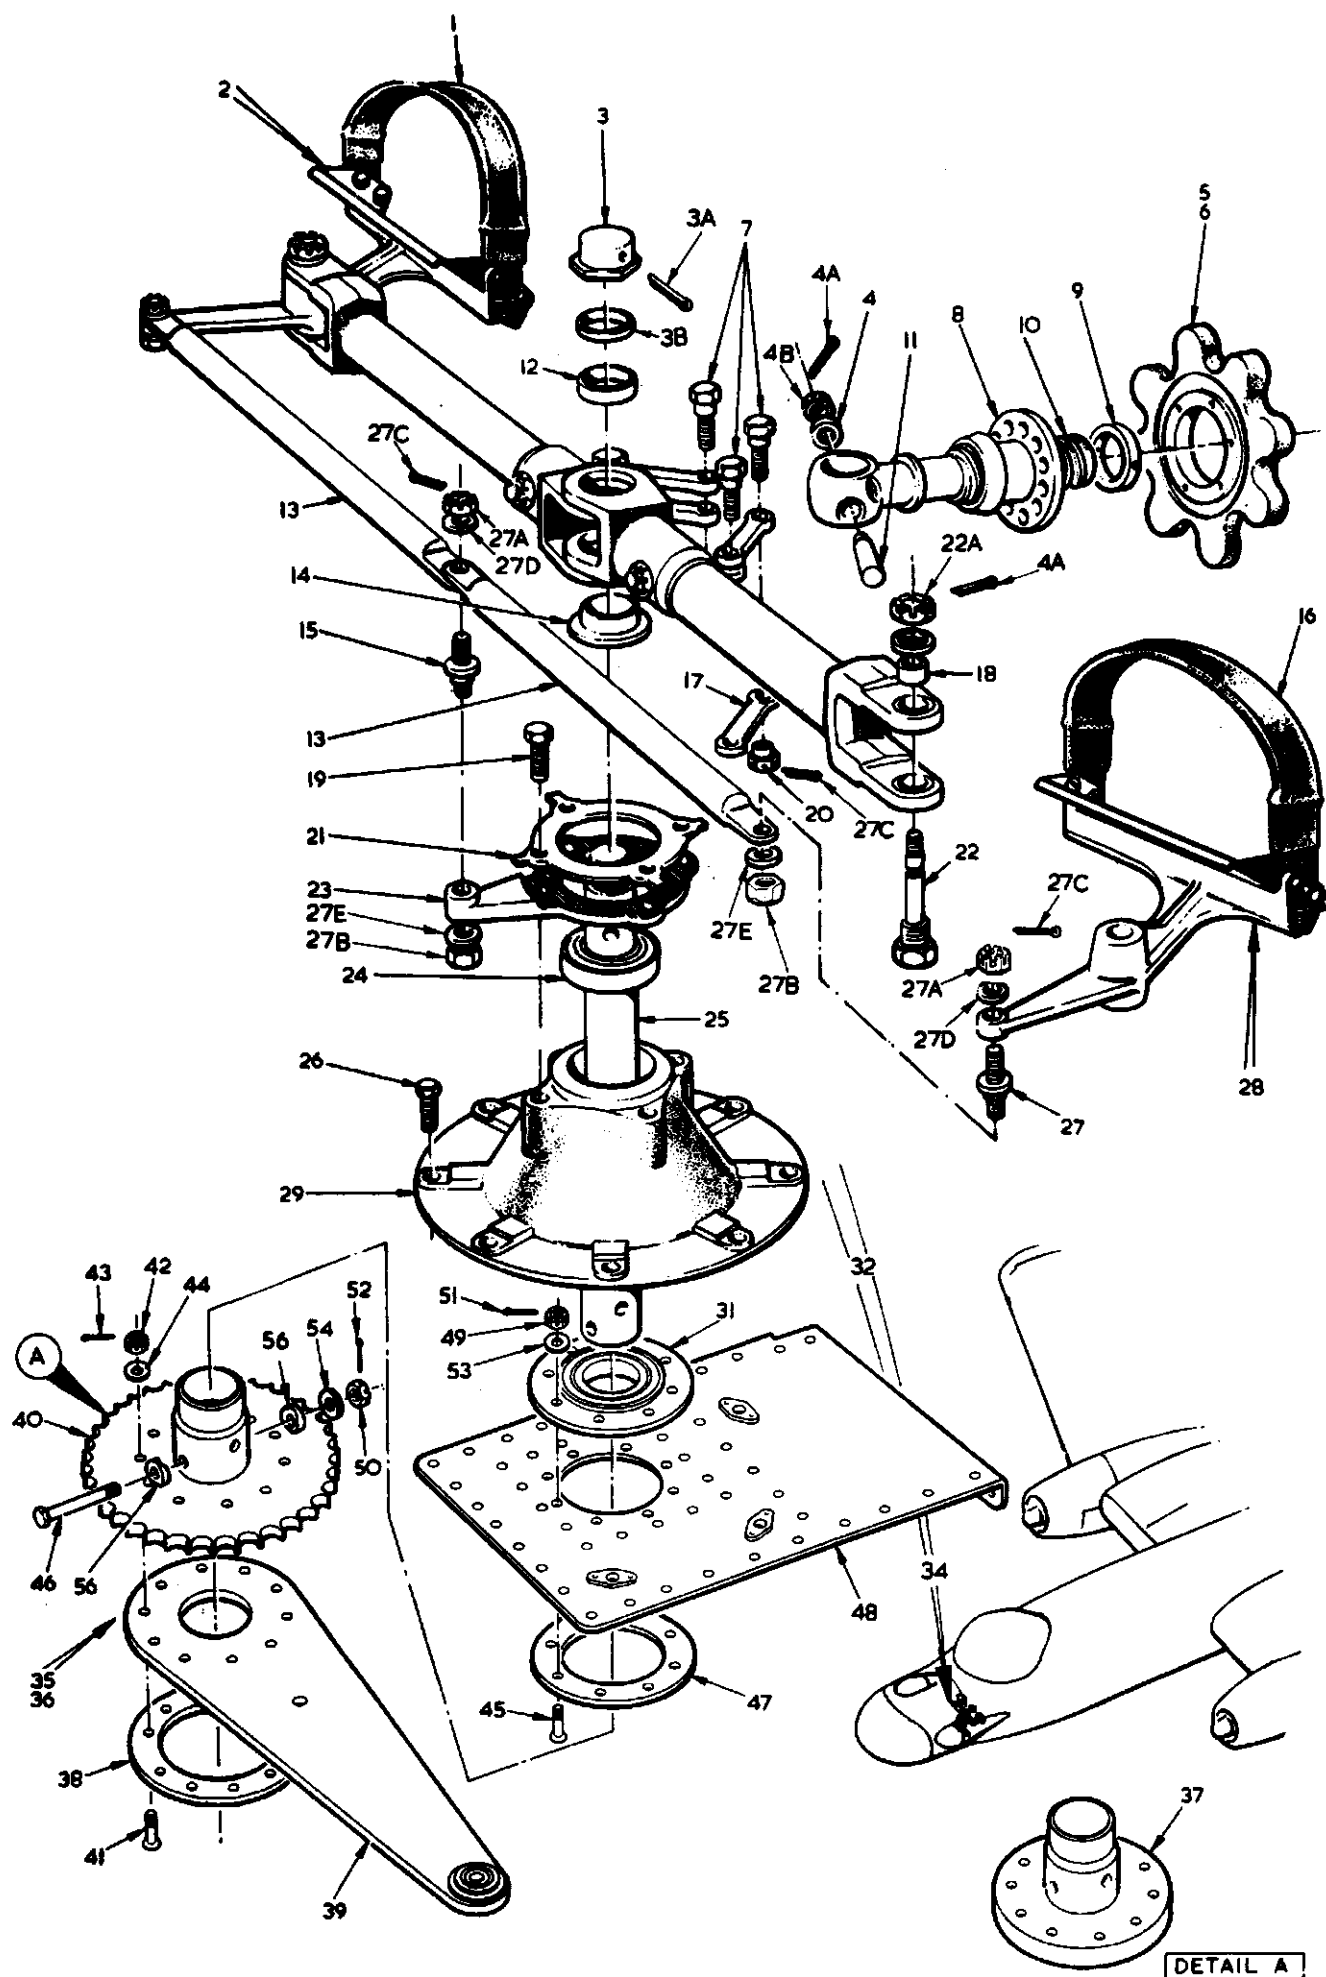


FIG 8 FLYING CONTROLS IN COCKPIT

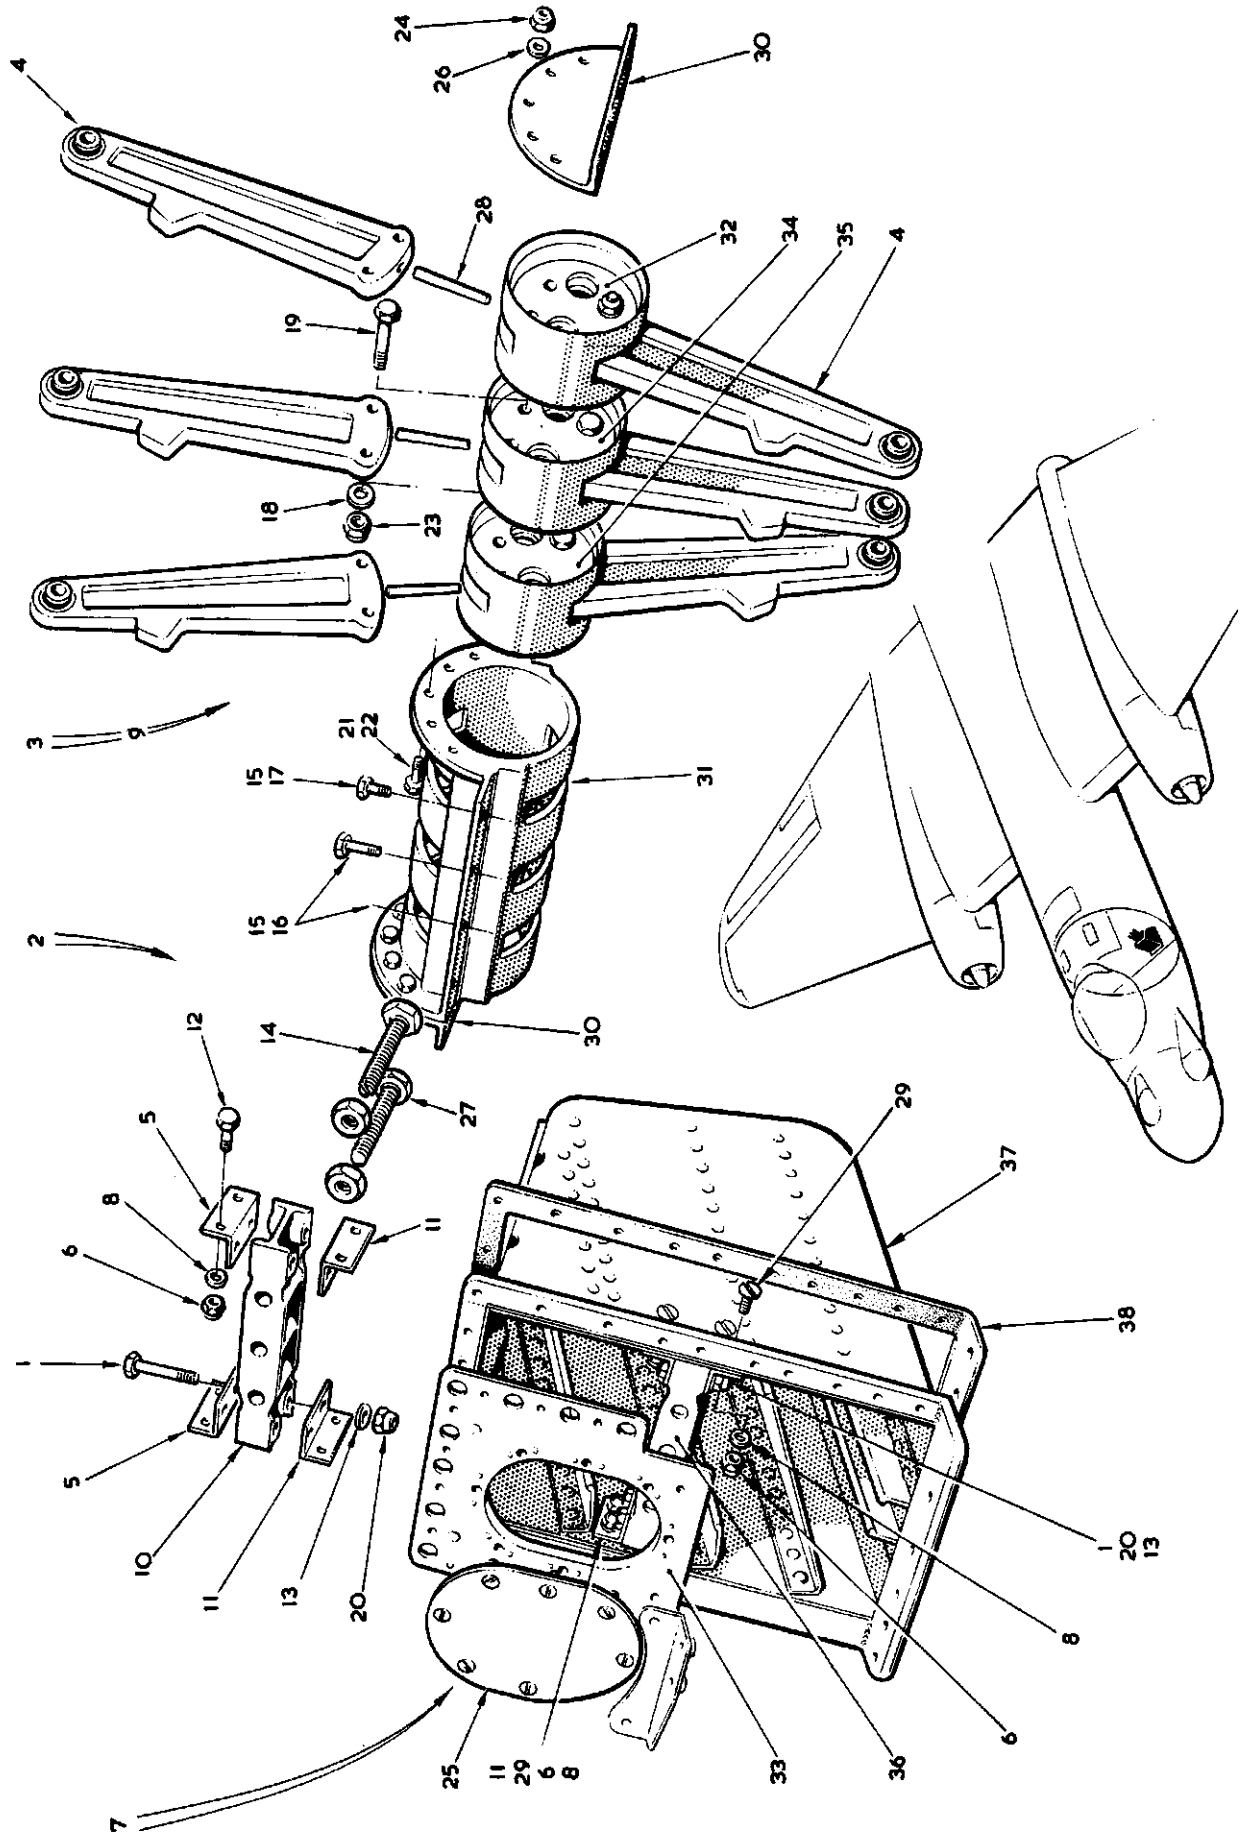


FIG 9. FLYING CONTROLS IN COCKPIT
Restricted

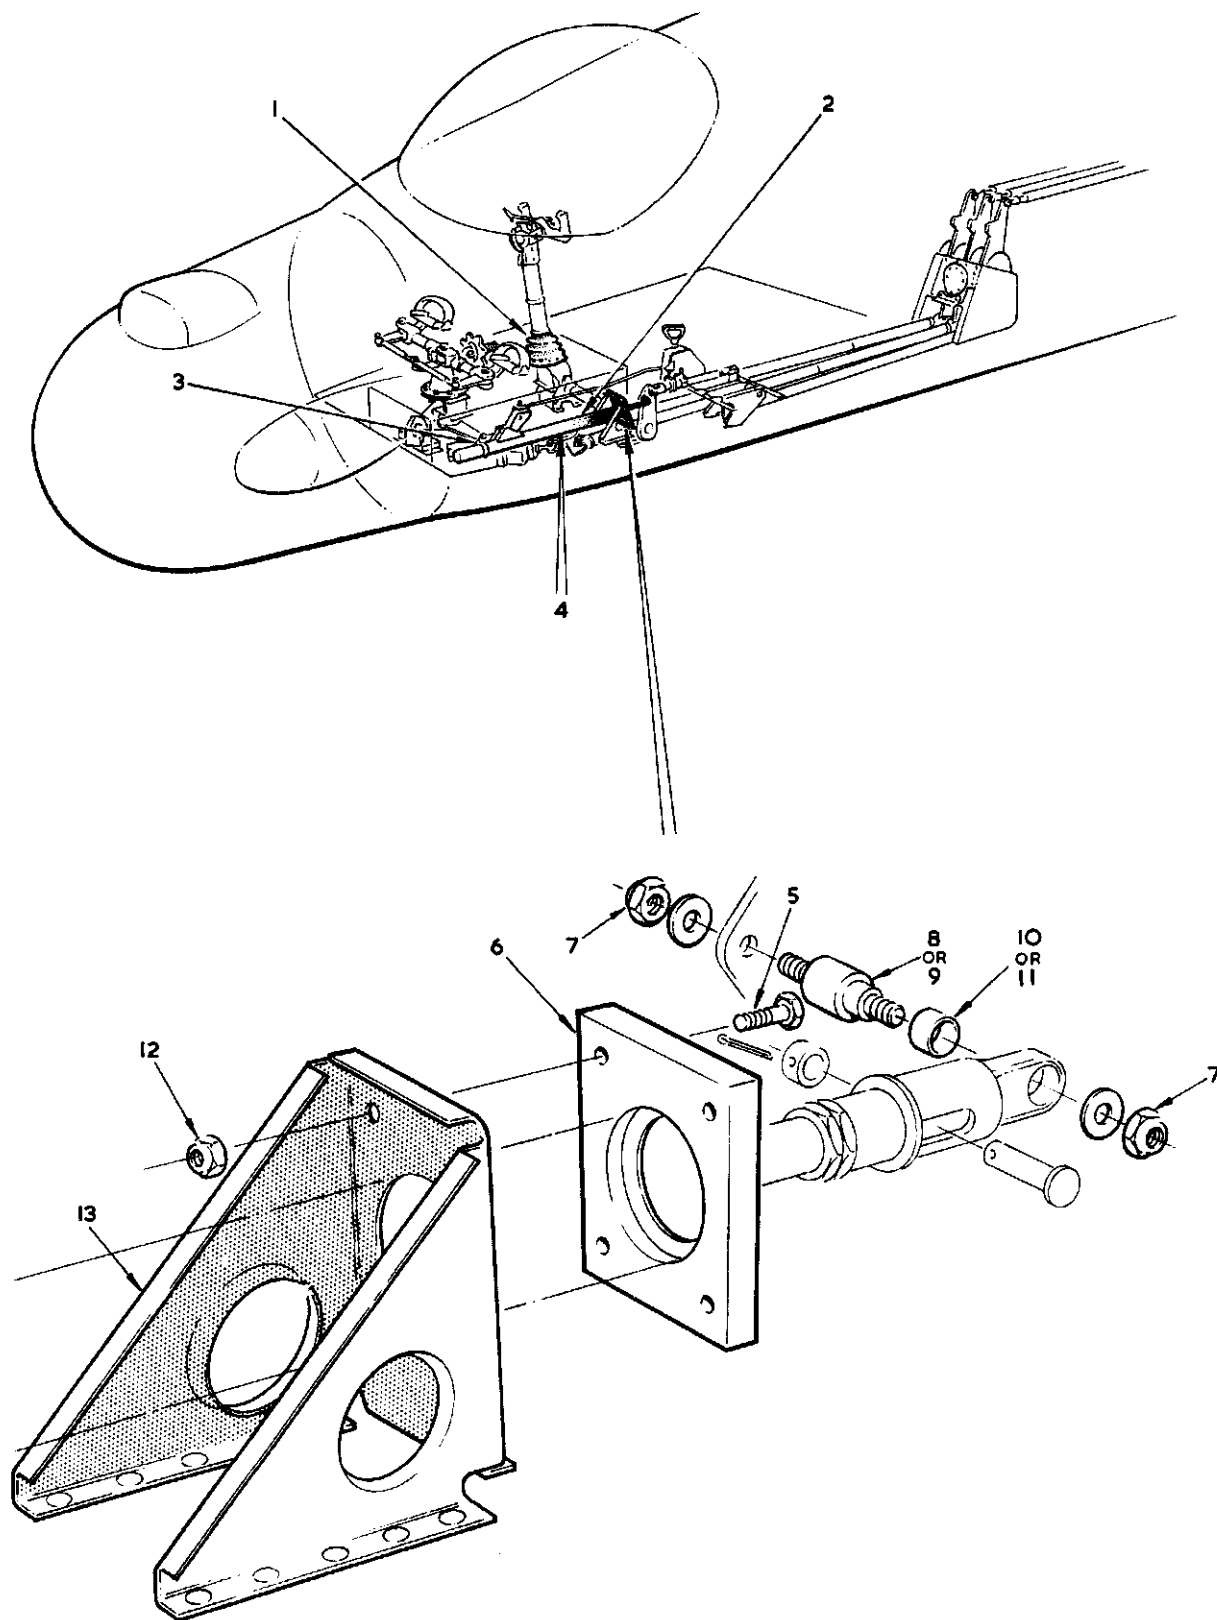


FIG.10 FLYING CONTROLS IN COCKPIT

Restricted

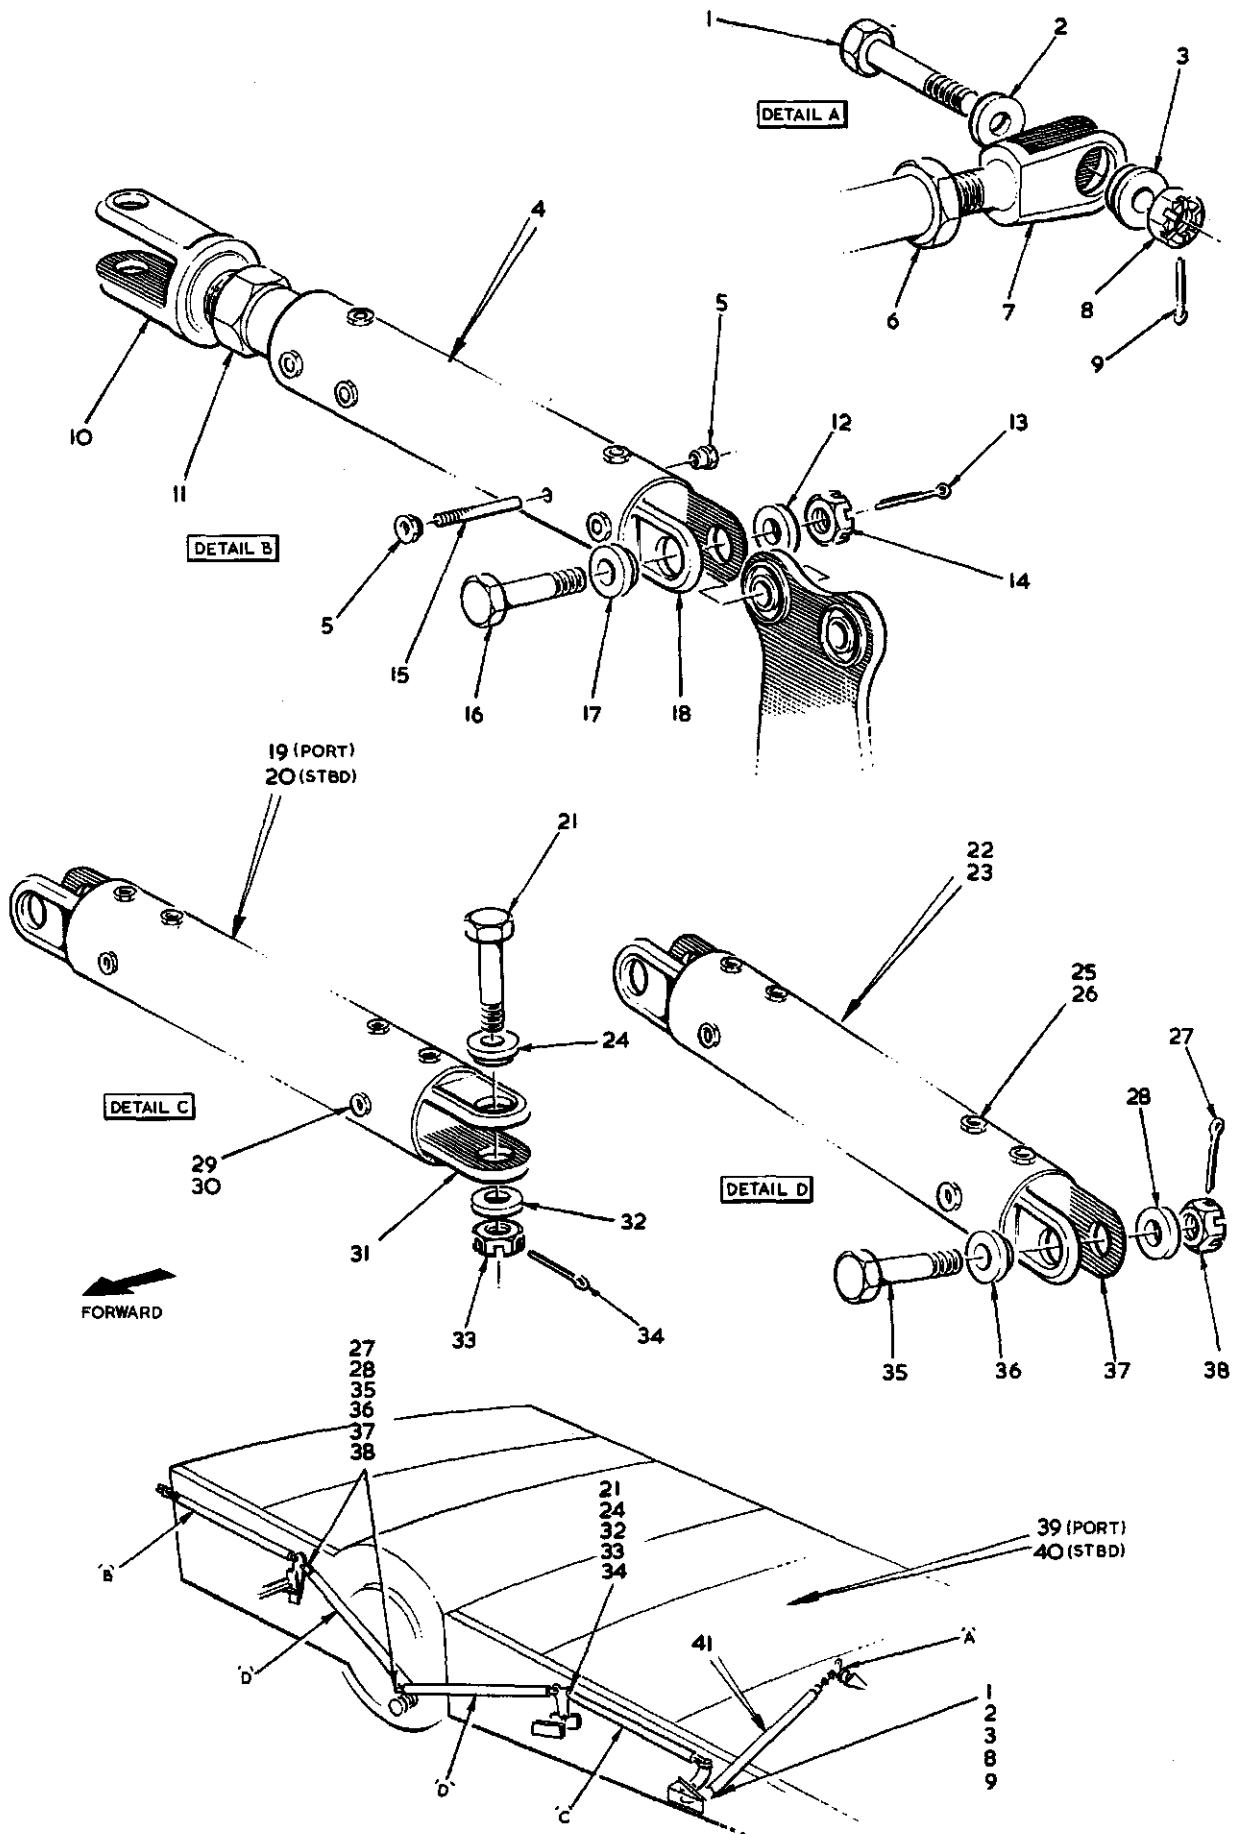


FIG.11 AILERON CONTROLS IN WING PORT & STBD
Restricted

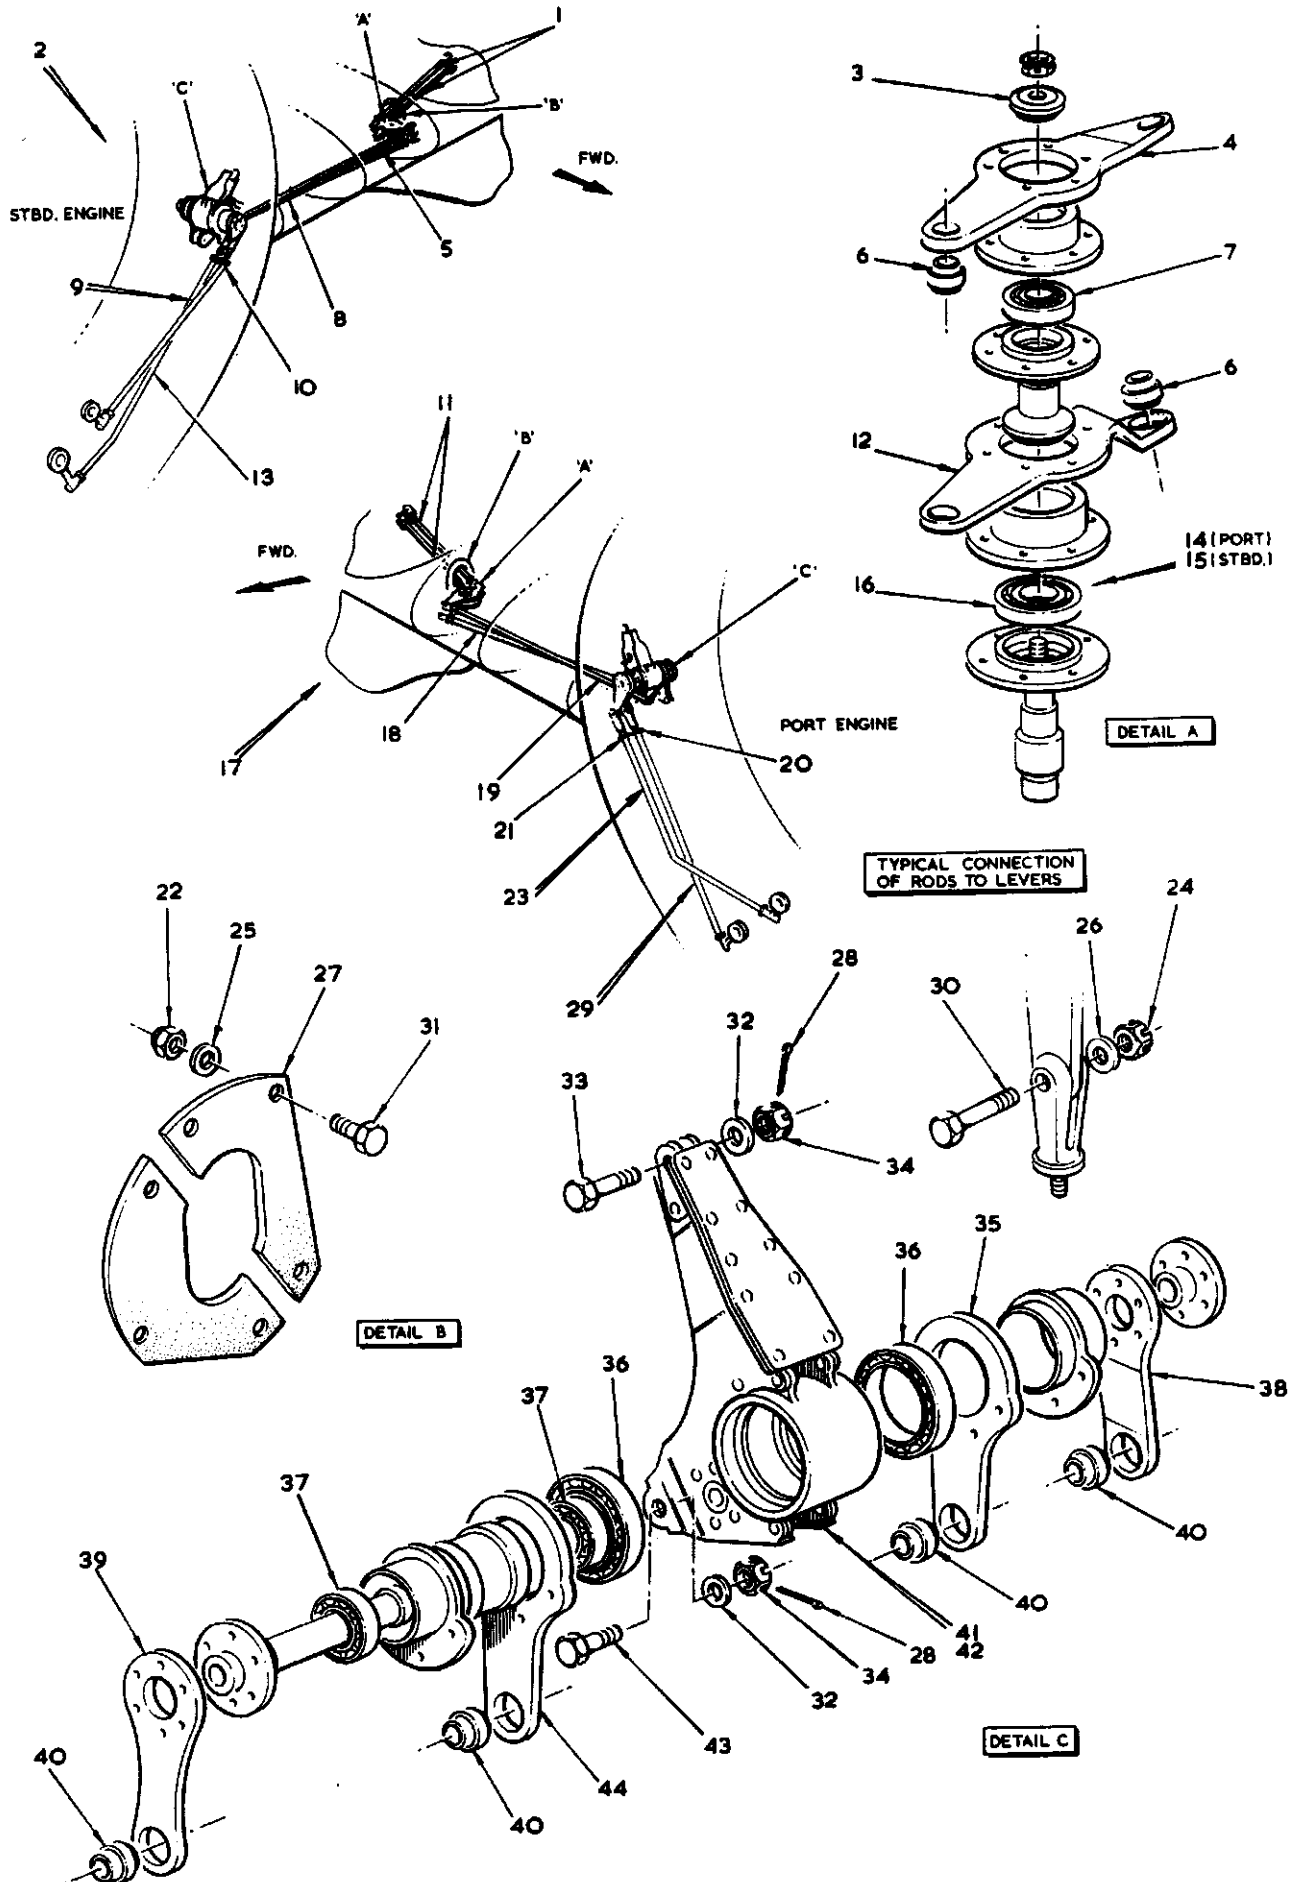
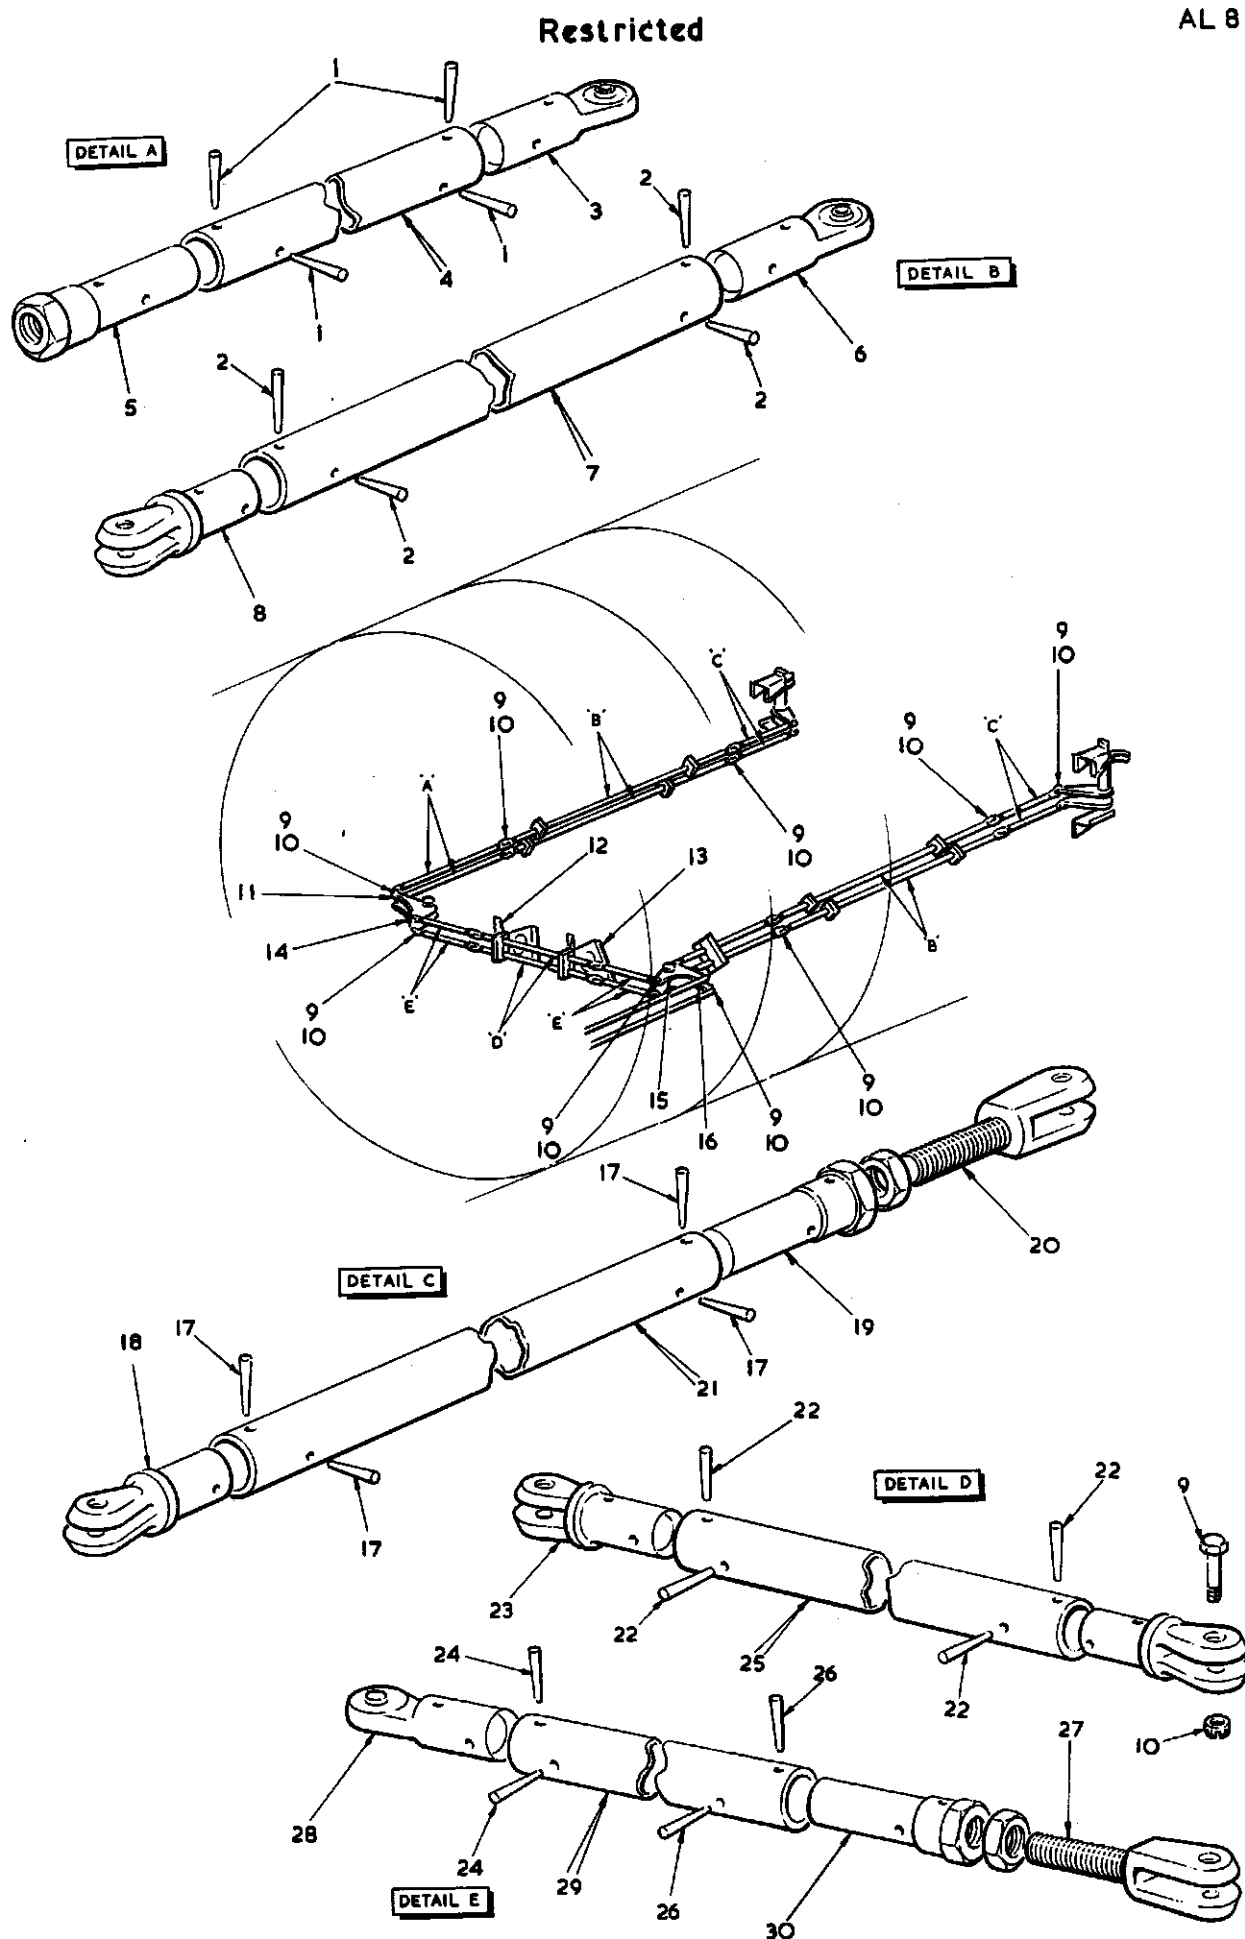


FIG. 12 ENGINE CONTROLS IN WINGS PORT & STBD.



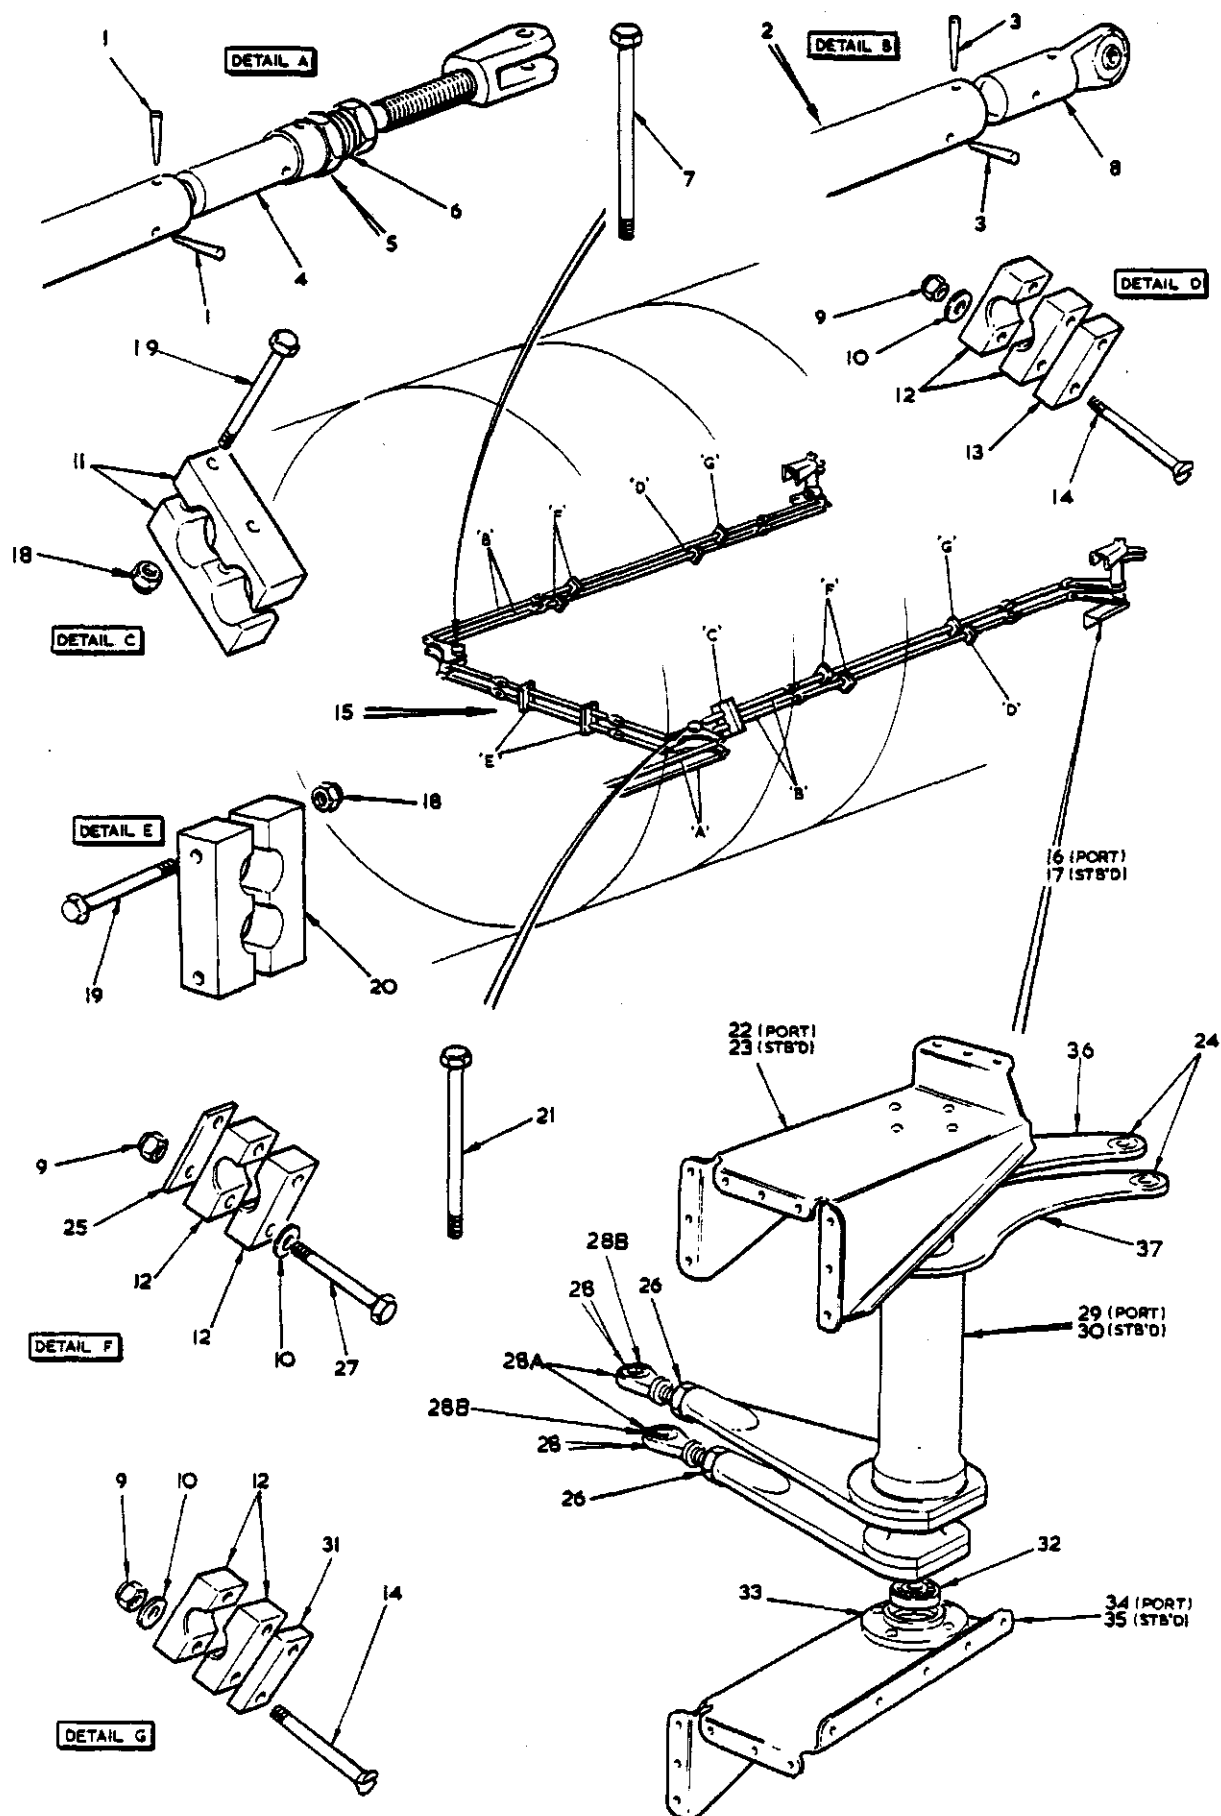


FIG.14 ENGINE CONTROLS IN CENTRE FUSELAGE

T. MK.17 SECT. D

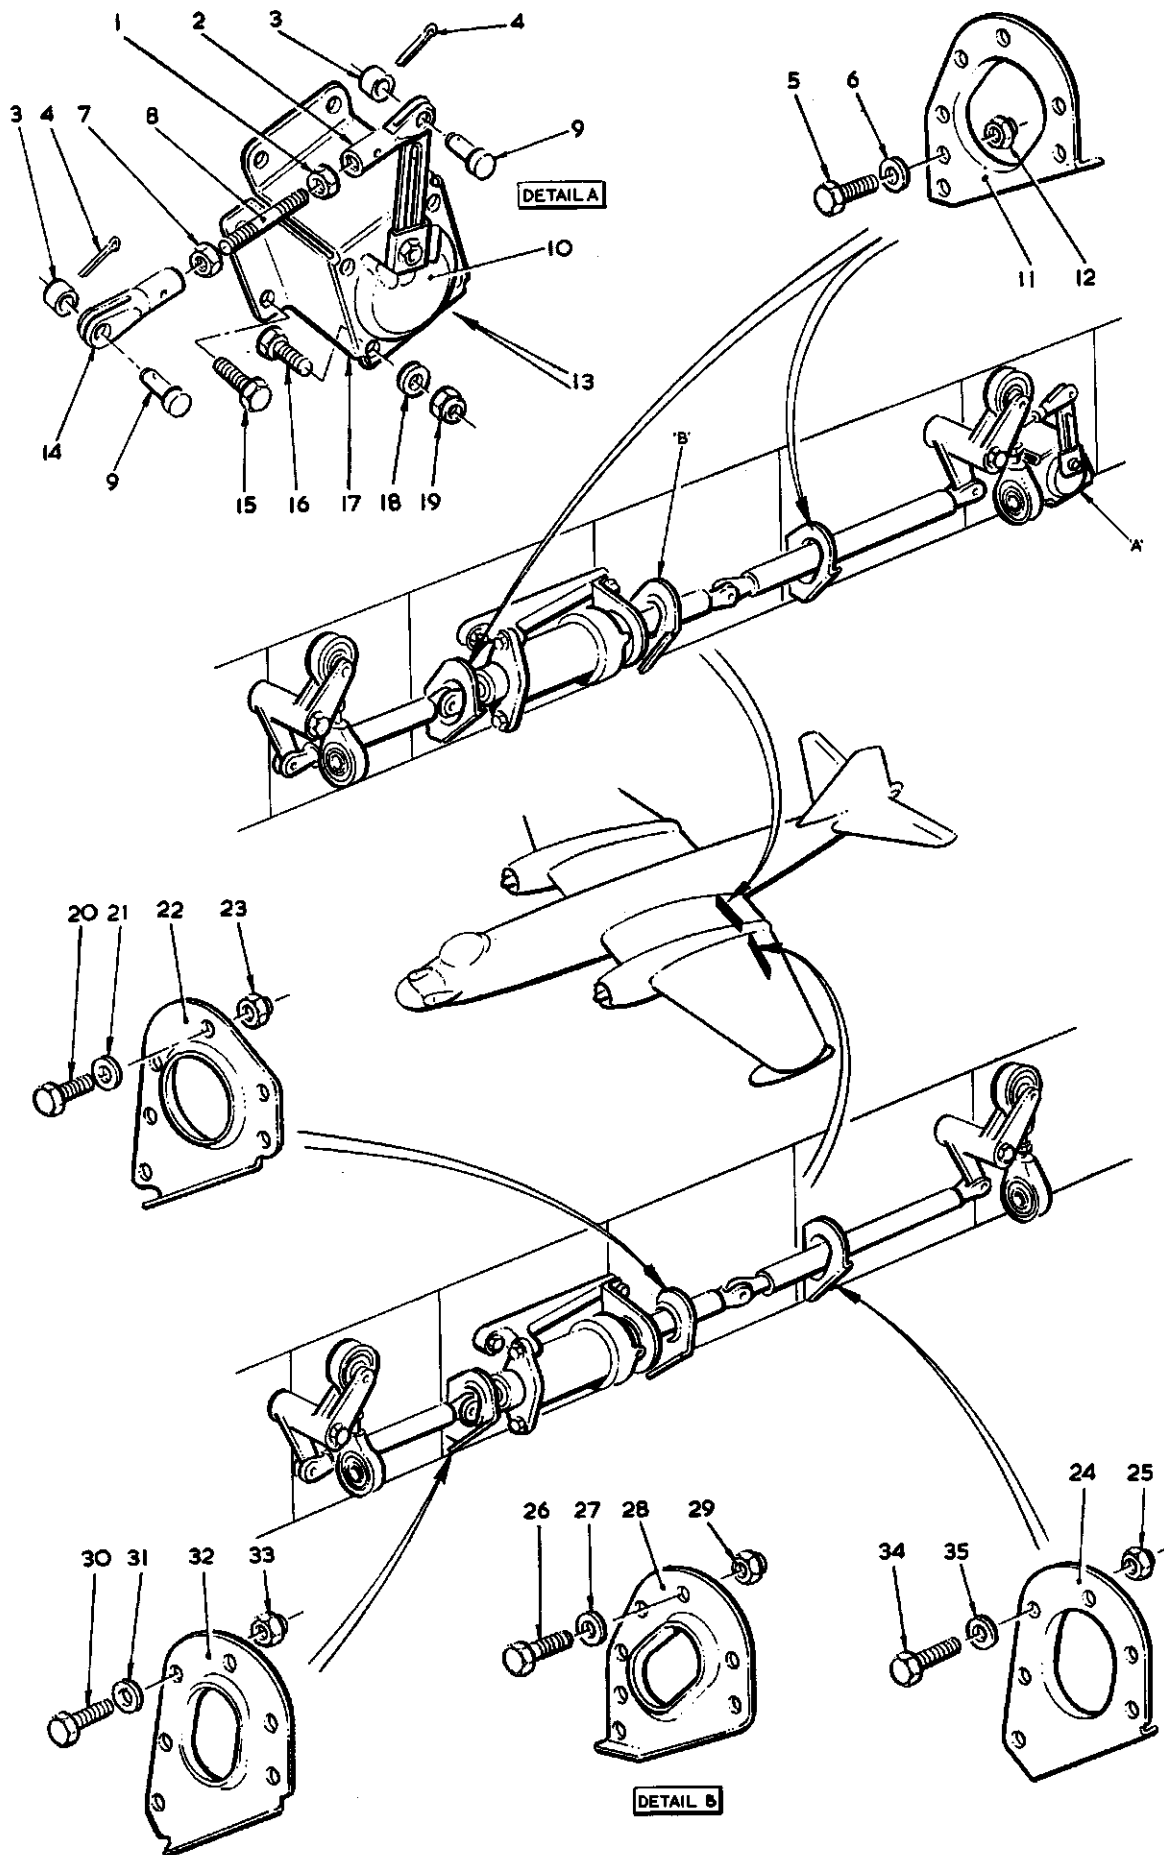


FIG. 15 FLAP OPERATING MECHANISM PORT
Restricted

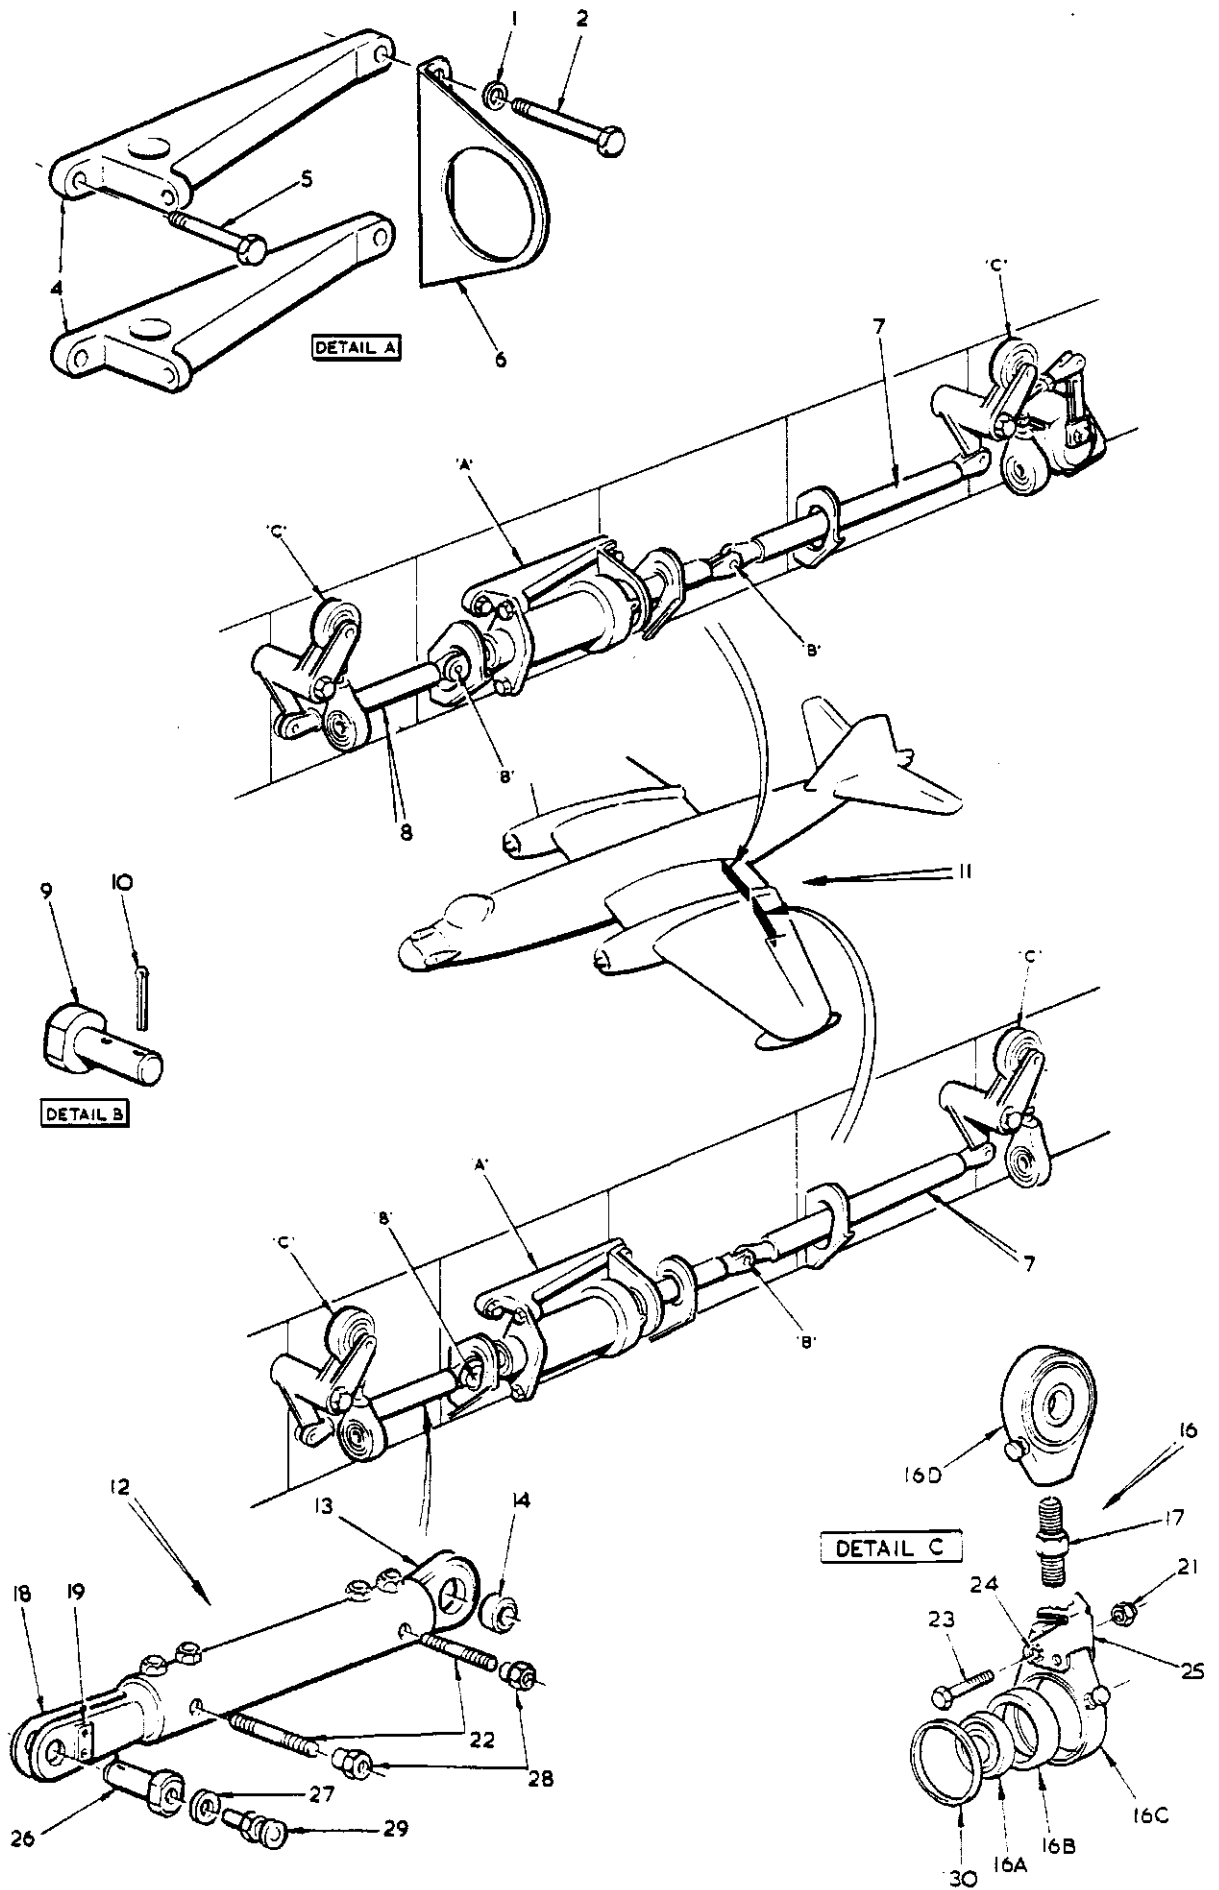


FIG.16 FLAP OPERATING MECHANISM PORT

T.MK.17 SECT. D

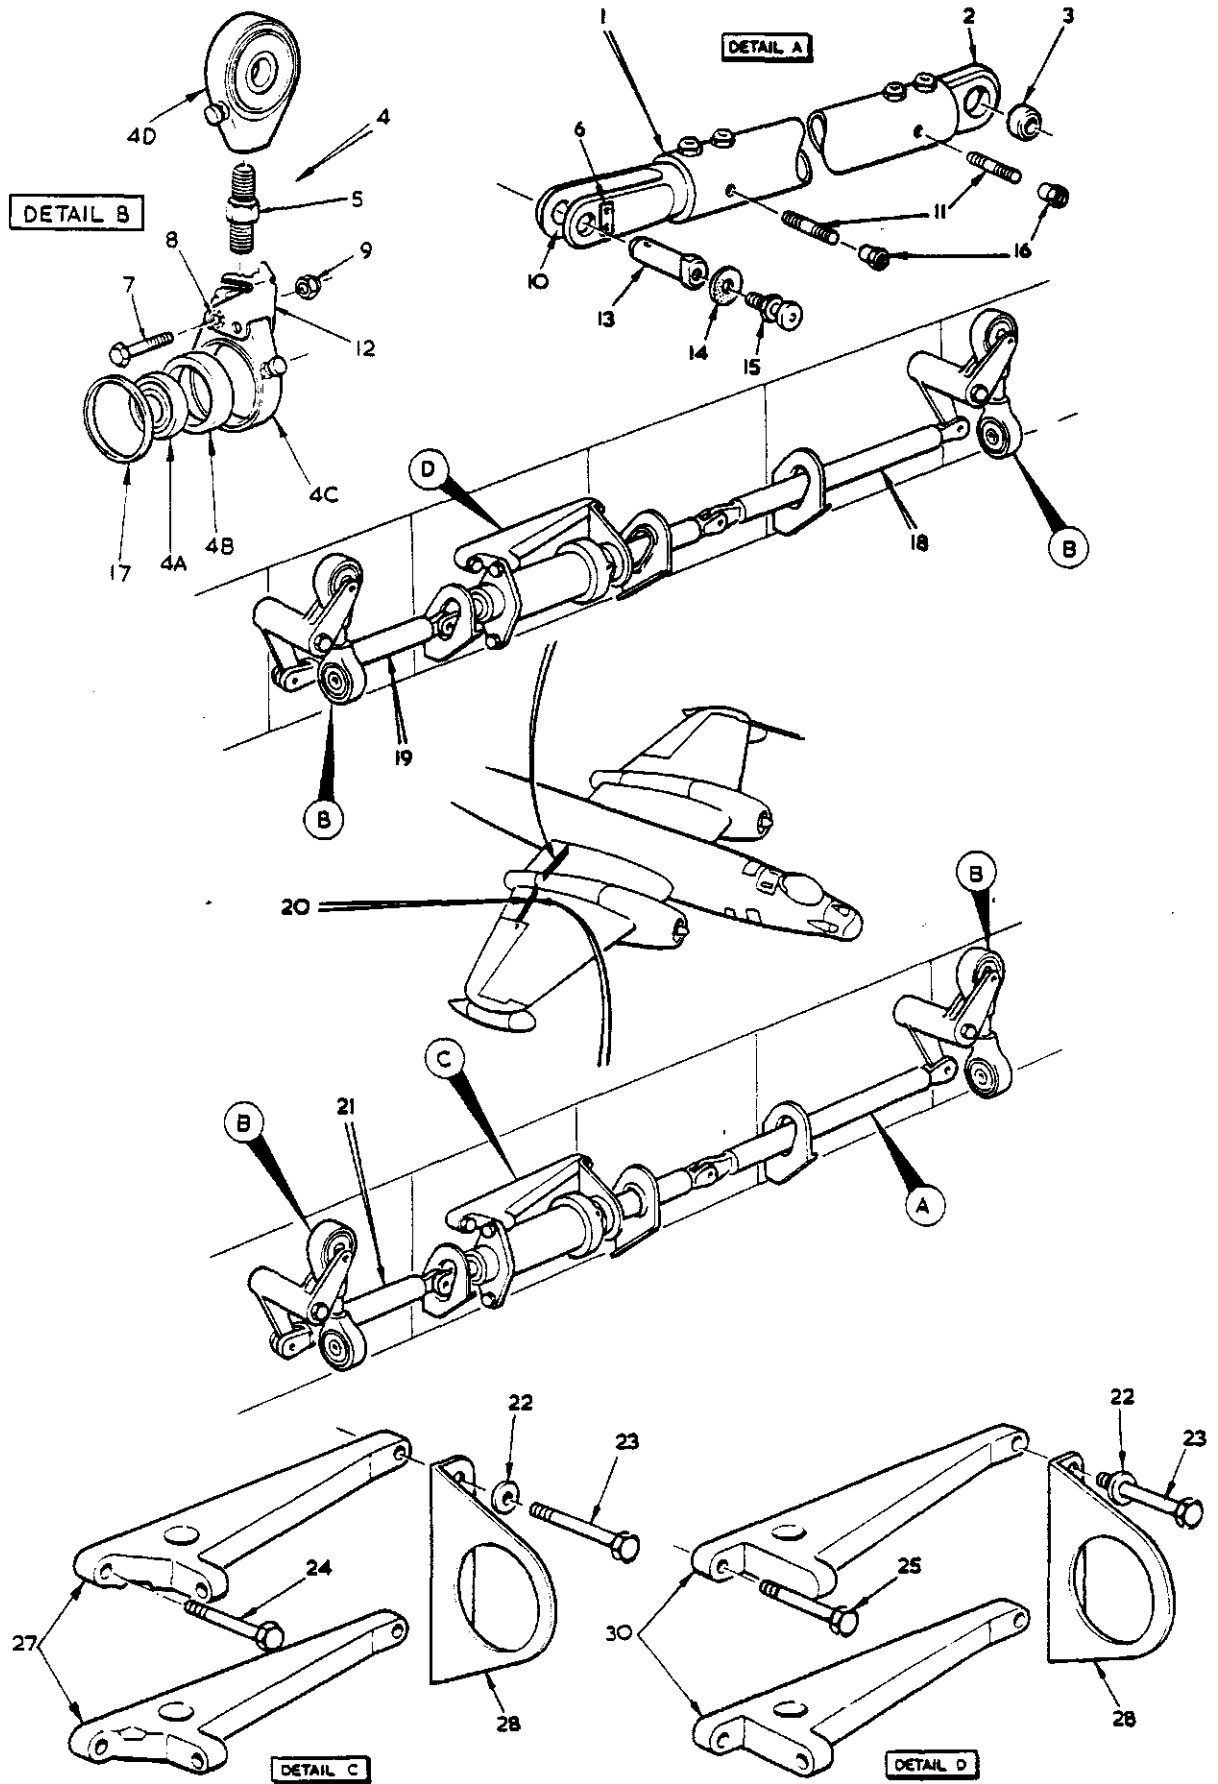


FIG.18 FLAP OPERATING MECHANISM STBD

T. MK.17 SECT. D

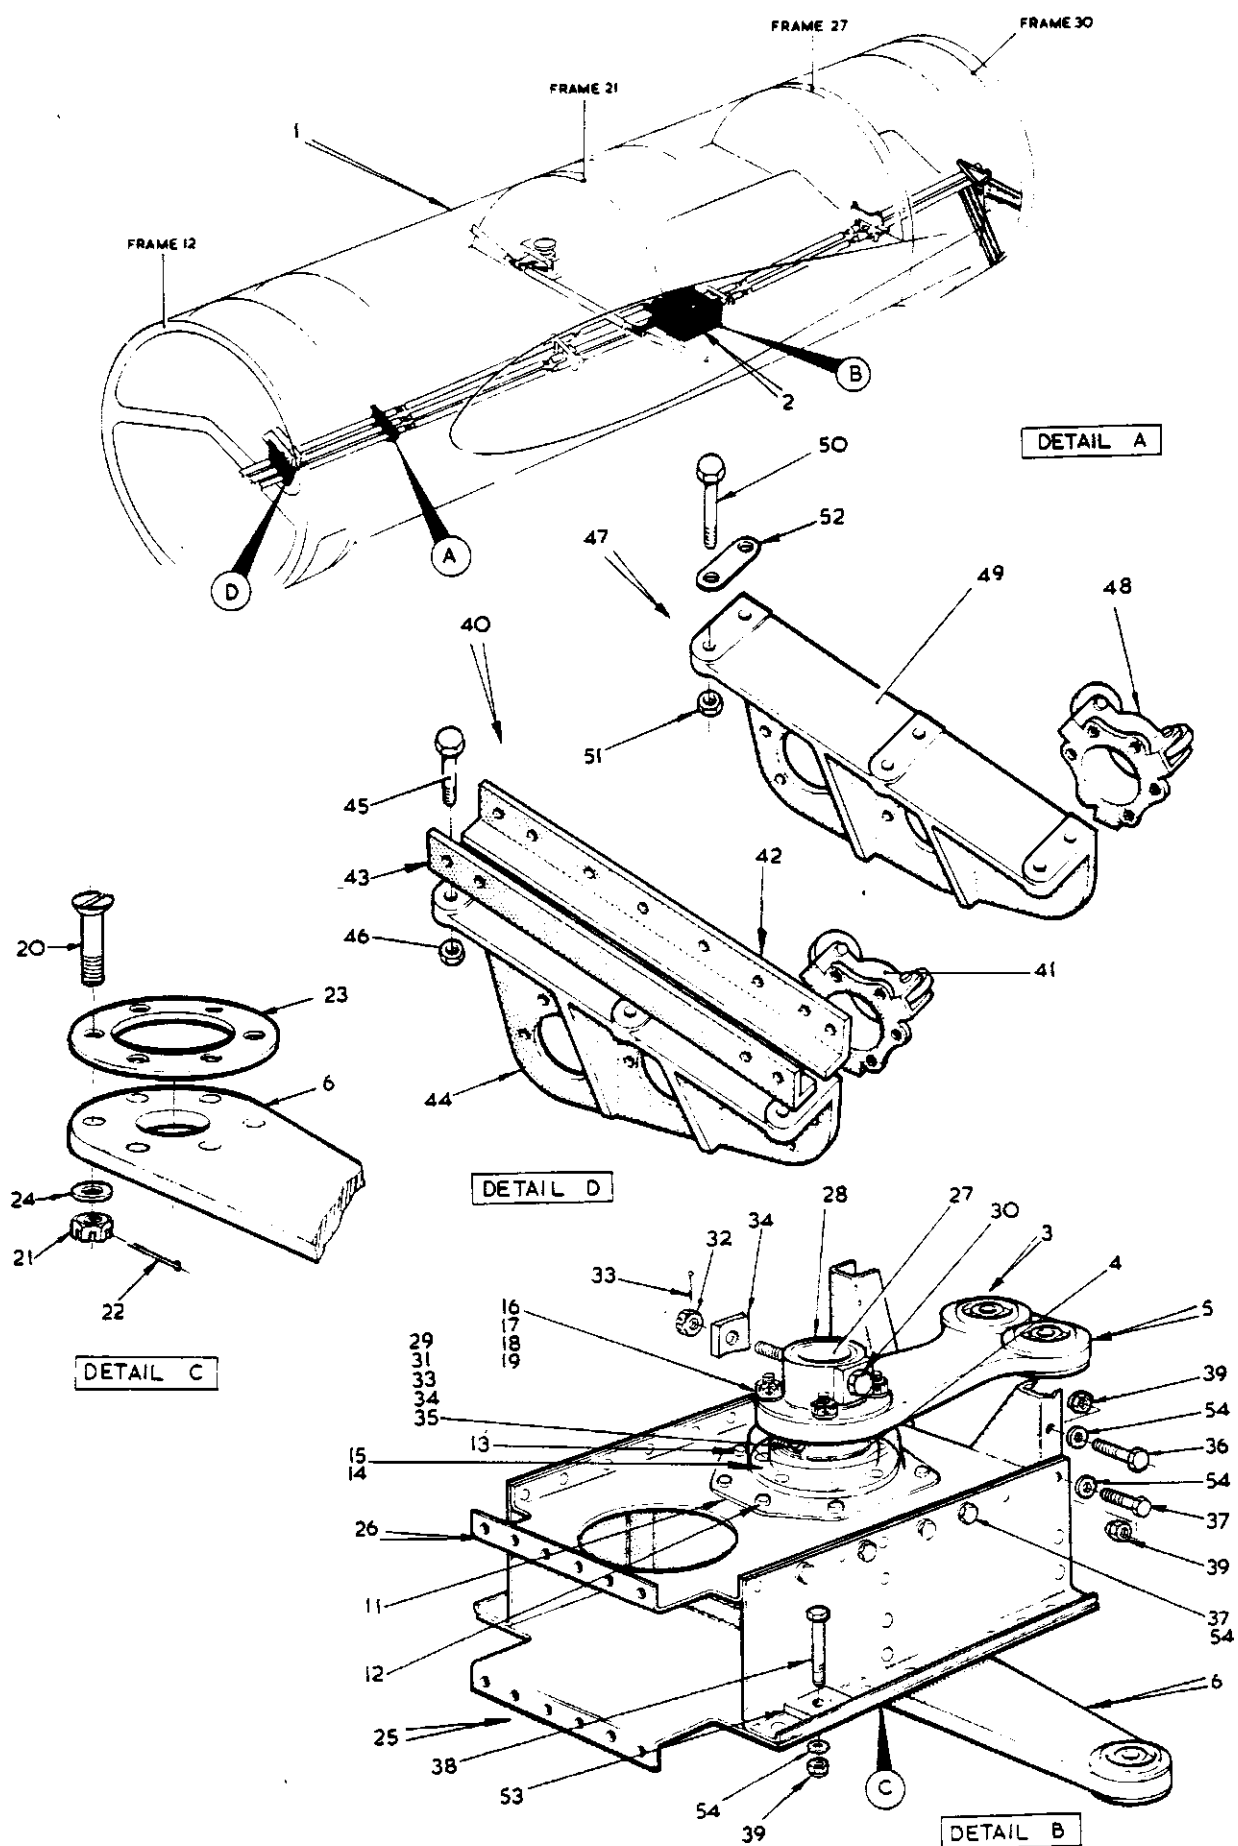


FIG.19 FLYING CONTROLS IN CENTRE FUSELAGE

T.MK.17 SECT. D

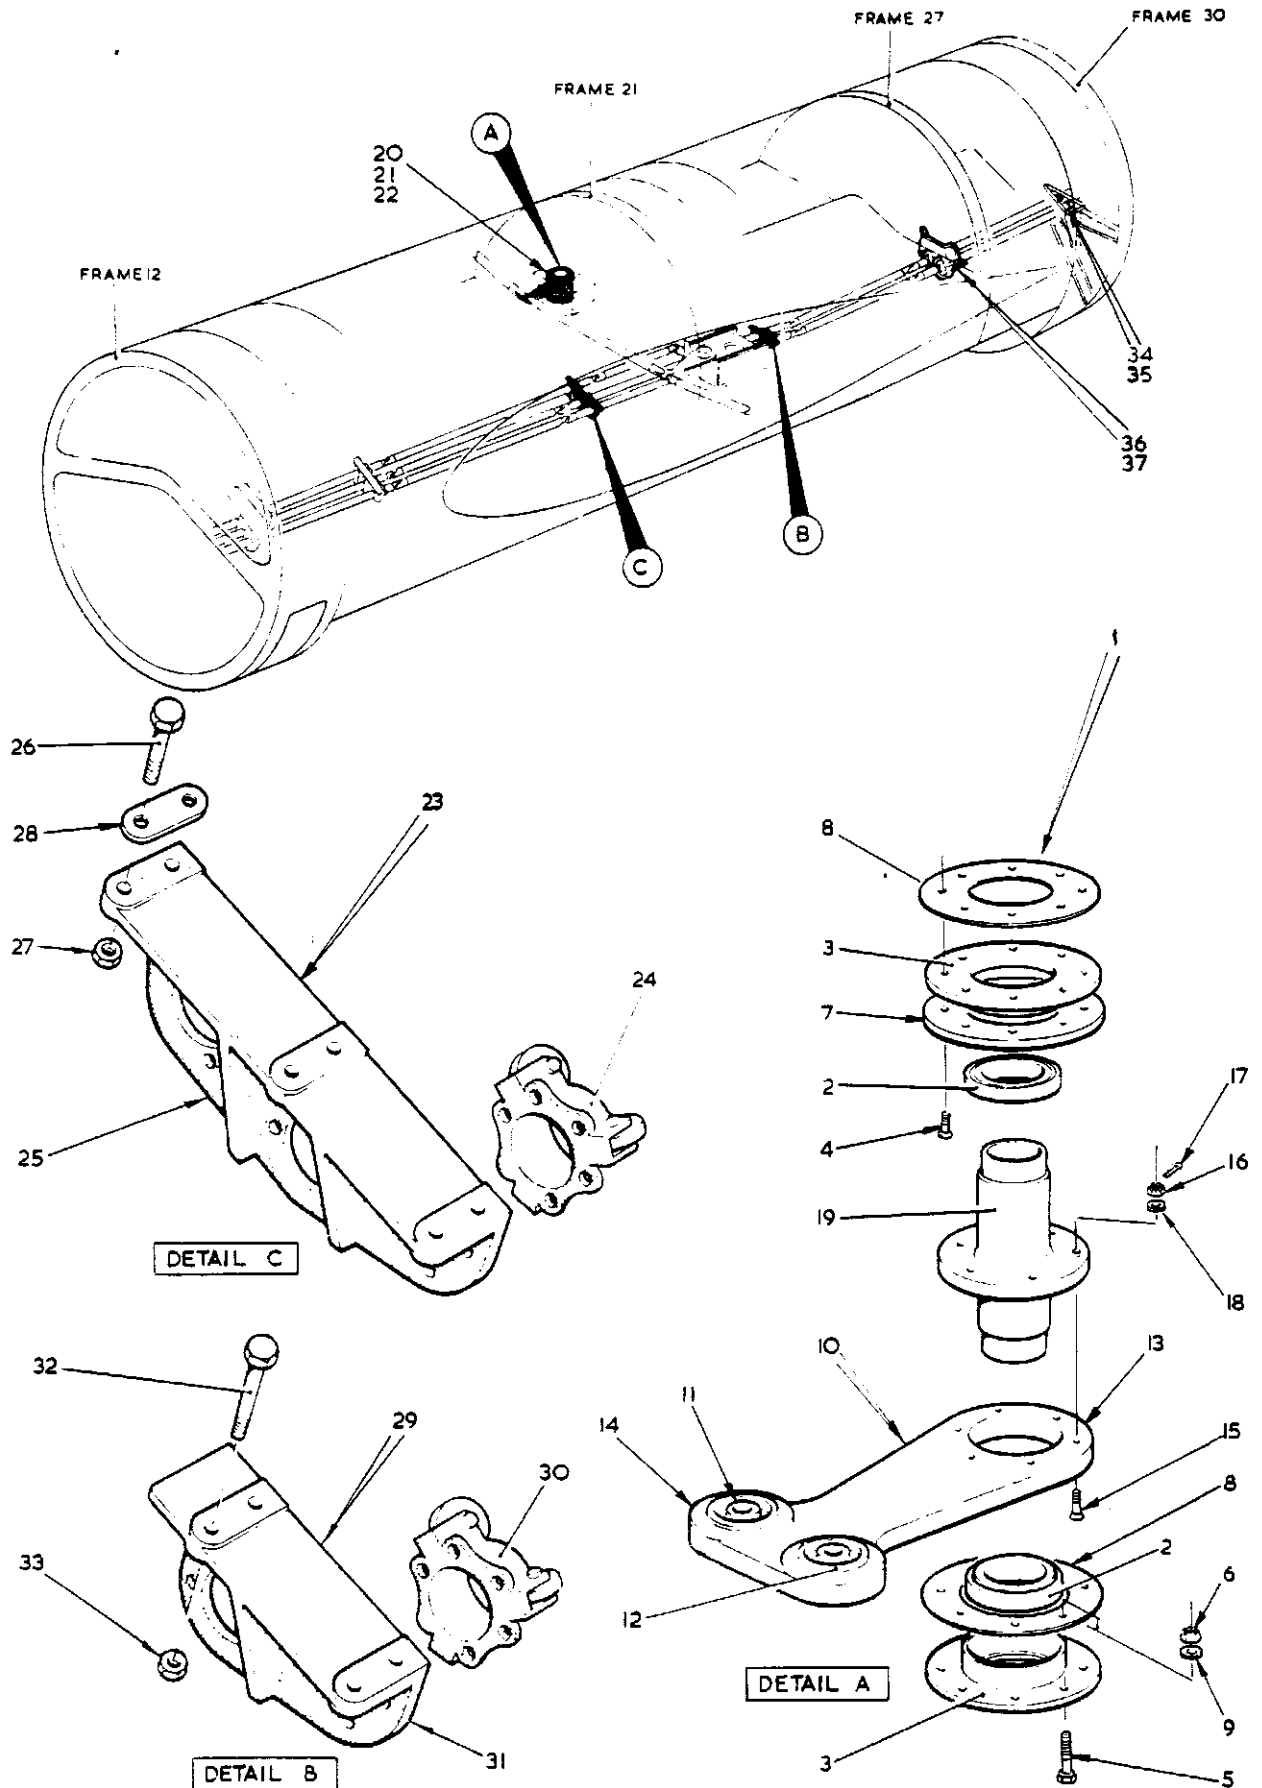


FIG.20 FLYING CONTROLS IN CENTRE FUSELAGE

T.MK.17 SECT D

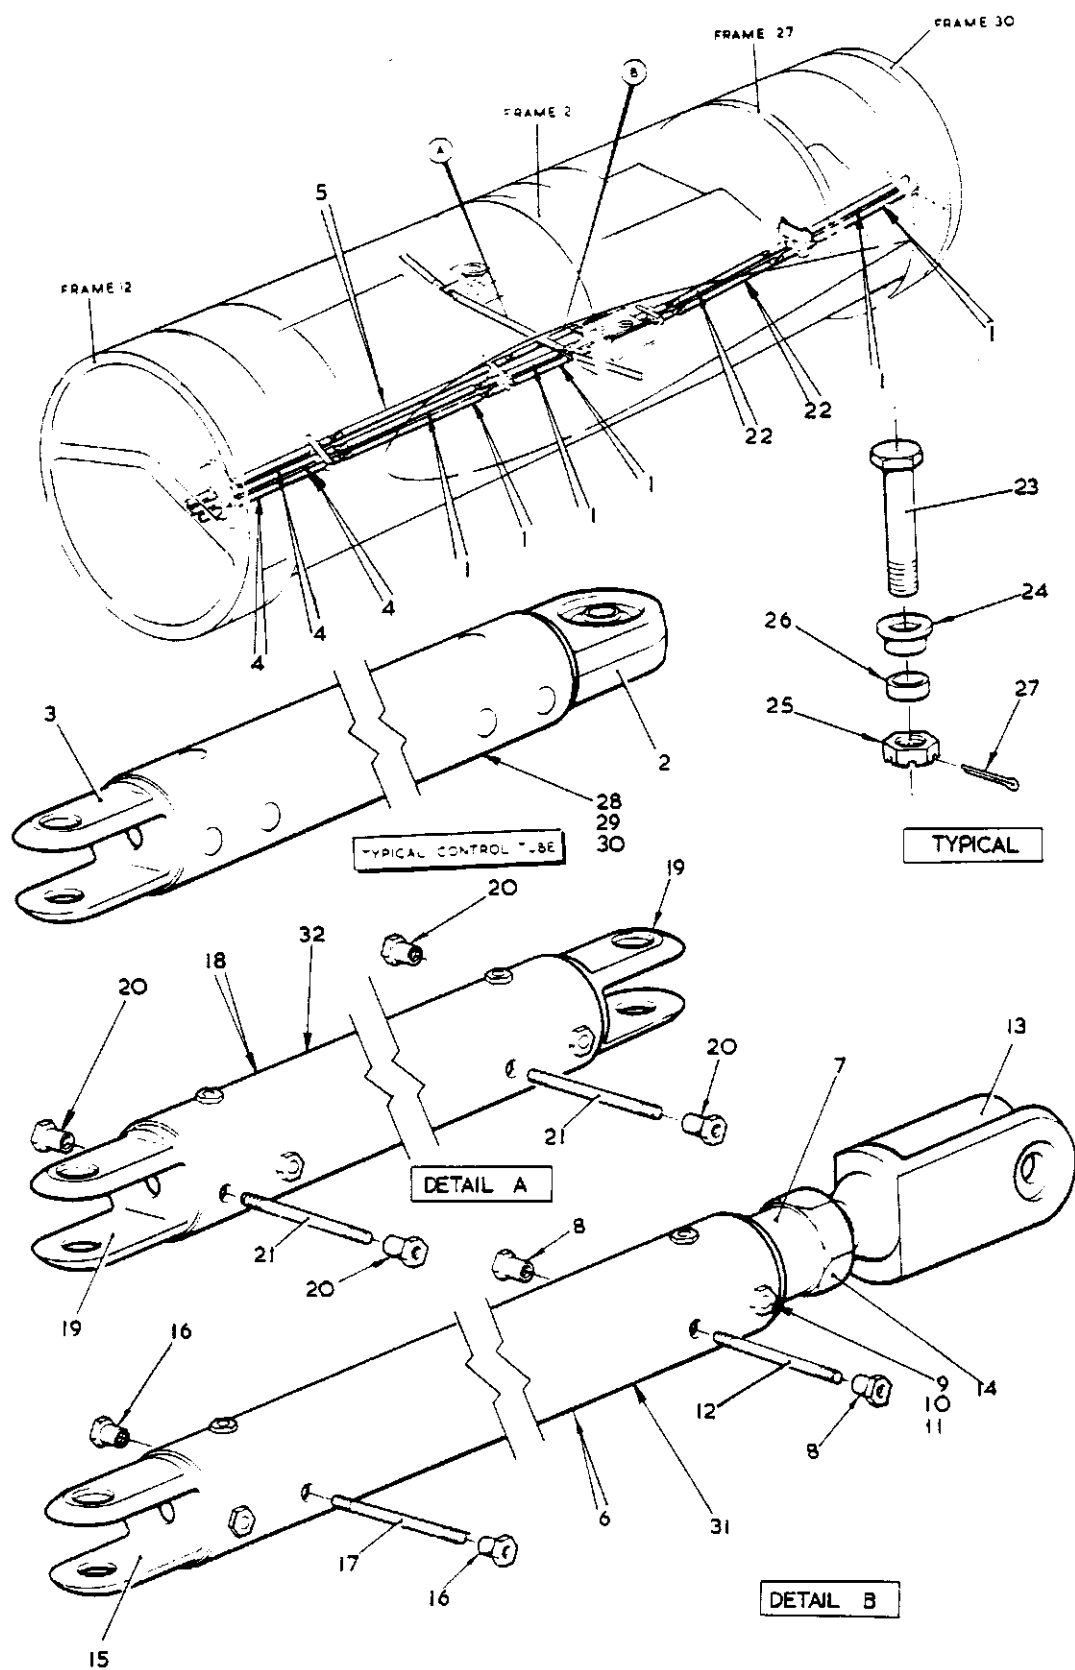


FIG.20A FLYING CONTROLS IN CENTRE FUSELAGE

T.MK.17 SECT. D

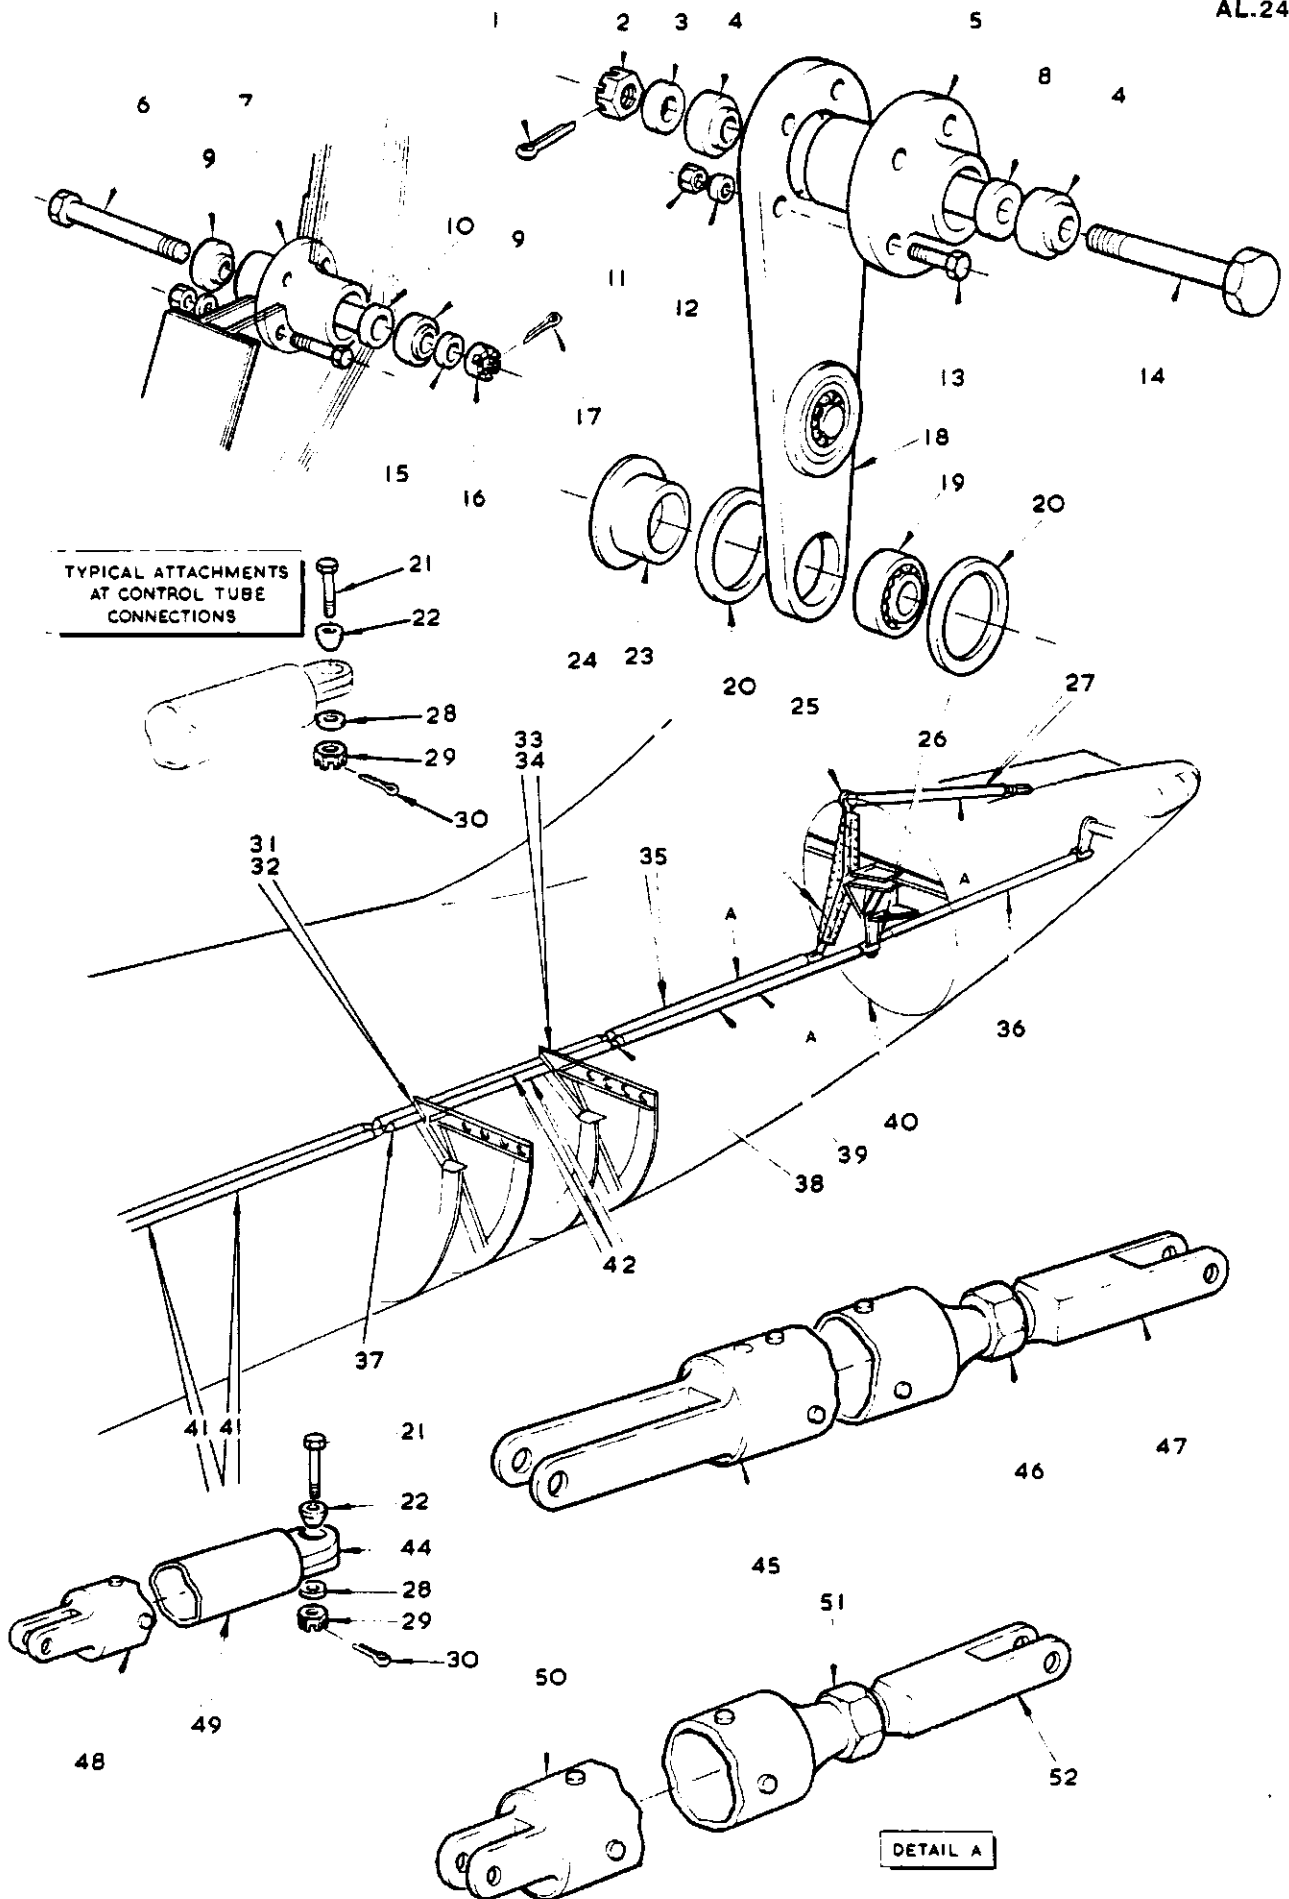


FIG.21 FLYING CONTROLS IN REAR FUSELAGE

T. MK.17 SECT.D