

ENGINE. Mk.102. INSTALLATION. PORT

Part Number	Description	No.	Mati. Spec.	Plate No.
		Off		
1 2 3 4 5 6				
EG7.00.15	ENGINE, Mk.102, INSTALLATION, PORT Spares for:—	—	—	1/17
EA1.50.959	. DUCT, air, compressor bleed valve	2	—	1/4
EA1.60.5	. FIRE PROTECTION SYSTEM IN ENGINE BAY Spares for:—	—	—	1/10
150D/01/300-2	. . UNIT, fire detecting, resetting Attaching parts for 150D/01/300:—	7	—	1/20
A25/11C	. . Bolt, 2BA hex. head	2	—	1/15
A25/21C	. . Bolt, 2BA hex. head	1	—	1/18
AGS2001/C/1	. . Nut, stiff, 2BA	2	—	1/19
EA1.60.43	. . Tube, distance (as required) (Make from 308/9611260)	1	L62	1/21
SP15/C	. . Washer, 2BA plain	2	—	1/16
EA3.50.37	. PIPE, FUEL DRAIN, ASSEMBLY (Mod.4726) Spares for:—	1	—	1/12
EA3.50.35	. . PIPE, drain	1	—	1/14
EA1.57.15	. PIPE, flexible, fuel feed to engine (Dunlop Part No.AHM541/23-16)	1	WH2/1	1/7
EA2.57.785	. PIPE, flexible, drop tank air supply (Pre-Mod.5448)	1	—	1/9
EA2.57.825	. PIPE, flexible (Mod.5448)	1	—	
EA4.61.105	. PIPE, flexible (Pre-Mod.5448)	1	—	
EA4.61.115	. PIPE, flexible (Mod.5448)	1	—	
EA3.57.33	. PIPE, assembly, from compressor coupling to nose coupling	1	—	1/5
EA1.60.57	. PIPE, flexible, fire protection system (Dunlop Part No.AHO.24508/10.75)	1	WH2/1	1/8
EA1.50.973	. RING, air duct retaining	4	L59	1/6
EA3.81.1105	. THERMO-COUPLE, ASSEMBLY Spares for:—	4	—	1/2
6A/4337977 or 6A/5452	. . THERMO-COUPLE	1	—	1/1
SLP80/WE	. . TUBE	1	—	1/3

POWER INSTALLATION
ENGINE, Mk.102, INSTALLATION, PORT

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

A.P.101B-0417-3A

POWER INSTALLATION

Page LA1

ENGINE, Mk.102, INSTALLATION, STARBOARD

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EG7.00.16	ENGINE, Mk.102, INSTALLATION, STARBOARD						—	—	2/11
	Spares for:—								
EA1.50.959	. DUCT, air compressor fuel valve						2	—	2/19
EA1.60.6	. FIRE, PROTECTION SYSTEM IN ENGINE BAY						—	—	2/14
	Spares for:—								
EA1.60.51	. . BRACKET, mounting, L.H. detector unit						1	—	2/5
150D/01/300-2	. . UNIT, fire detecting, resetting						8	—	2/1
	Attaching parts for 150D/01/300:—								
A25/1C	. . Bolt, 2BA hex. head (as required)						2	—	2/4
A25/10C	. . Bolt, 2BA hex. head (as required)						2	—	2/7
A25/11C	. . Bolt, 2BA hex. head (as required)						2	—	2/8
A25/15C	. . Bolt, 2BA hex. head (as required)						2	—	2/20
AGS2001/C/1	. . Nut, stiff, 2BA						2	—	2/3
EA1.60.43	. . Tube, distance (as required) (Make from 32B/9611260)						2	L62	2/6
AS2807/5/035	. . Tube, distance (as required)						2	T35	2/21
SP15/C	. . Washer, 2BA plain						2	—	2/2
EA3.50.37	. PIPE, FUEL DRAIN, ASSEMBLY (Mod.4726)						—	—	2/18
	Spares for:—								
EA3.50.35	. . PIPE, fuel drain						1	—	2/16
EA1.57.16	. PIPE, flexible, fuel feed to engine						1	WH2/1	2/13
	(Dunlop Part No. AHM542-23-16)								
EB6.57.83	. PIPE, flexible, drop tank air supply (Pre-Mod.5448)						1	—	2/9
EB6.57.351	. PIPE, flexible (Mod.5448)						1	—	
EA1.60.58	. PIPE, flexible, fire protection system						1	—	2/12
EA1.50.973	. RING, air duct retaining						4	L59	2/10
EA3.81.1105	. THERMO-COUPLE, ASSEMBLY						4	—	2/23
	Spares for:—								
6A/4337977 or 6A/5452	. . THERMO-COUPLE						1	—	2/22
SLP80/WE	. . TUBE						1	—	2/24

POWER INSTALLATION

ENGINE, Mk.102, INSTALLATION, STARBOARD

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

A.P.101B-0417-3A

POWER INSTALLATION

Page LB1

COWLING, ENGINE, PORT

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
	—	COWLING, ENGINE, PORT, ASSEMBLY						—	—	—	3/15
		(E.A1.50.395)									
		Spares for:—									
626	E.A1.50.103	CLIP, toggle, hook spring						2	L72	C	3/3
627	E.A1.50.105	CLIP, toggle, hook spring						2	L72	C	3/5
		Attaching parts for E.A1.50.103 and E.A1.50.105:—									
28D/1007979	AS.1246/1B	Bolt, 4 BA round head						1	—	C	3/4
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA						1	—	C	3/10
28W/9419465	SP13/B	Washer, 4 BA plain						1	—	C	3/7
3004	E.A3.00.121	COWL, FRONT, GROUP (E.A1.50.249)						1	—	A	4/13
		(Supplied undrilled and with trim allowance)									
		Spares for:—									
18193	E.A1.50.843	AIR INTAKE, ASSEMBLY						1	—	B/MR	4/6
		Spares for:—									
10699	E.A1.50.1055	COVER, plate, debris guard attachment plate						2	L72	C	4/11
	—	FRAME, FLANGED RING, ASSEMBLY						—	—	—	4/20
		(E.A1.50.1833)									
		Spares for:—									
33250	EEAS.75	SEAL						1	KO99F Linatex	C	4/17
3089	E.A1.50.1673	PLATE, louvre						2	DTD166B	C	4/19
10702	E.A1.50.1597	SCREEN, perforated, 18 SWG						38	Comm. Alum.	C	4/21
26503	E.A1.50.1823	SLEEVE, exhaust outlet						1	—	C	4/18
6615	E.A3.00.239	BAFFLE, bleed valve air duct						1	—	C	4/3
		(Supplied undrilled with trim allowance)									
5208	E.A1.50.1753	DUCT, air compression, bleed valve						1	—	C	4/4
		Attaching parts for E.A1.50.1753:—									
1026	EEAS.1/1-1/2C	Screw, 2 BA 120° c'sk head						14	S96	C	4/2
4784	E.A1.50.1761	PANEL, access, for adjustment of accelerator and						3	—	C	4/16
		bleed valve control									
4786	E.A1.50.1779	PANEL, access, for bleed valve adjustment						1	—	C	4/5
		Attaching parts for E.A1.50.1779:—									
1025	EEAS.1/1C	Screw, 2 BA 120° c'sk head						8	S96	C	4/1
22530	E.A1.50.1805	PANEL, access, P.V. ram						1	L72	B	4/7
		Attaching parts for E.A1.50.1805:—									
28D/1007975	AS.1242/1C	Bolt, 2 BA c'sk head						8	—	C	4/8
22531	E.A1.50.1807	PANEL, access, P.V. ram						1	L72	B	4/10
		Attaching parts for E.A1.50.1807:—									
28D/1007975	AS.1242/1C	Bolt, 2 BA c'sk head						8	—	C	4/9
		Attaching parts for E.A1.50.249:—									
1 129	E.A1.50.1051	Screw, special						41	S11	C	3/6

POWER INSTALLATION
COWLING, ENGINE, PORT

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
30953	E.A3.50.23	COWL, BOTTOM, REAR (LESS U/C COWL DOOR), GROUP (For aircraft WD.951 and onwards) (Supplied drilled to Drg. No. E.A3.00.263 with trim allowance)						1	—	B	5/30
		Spares for:—									
4178	E.A1.50.65	BRACKET, forward hinge, U/C cowl door						1	L40	C/MR	5/51
		Attaching parts for E.A1.50.65:—									
28D/1011023	A25/20C	Bolt, 2 BA hex. head						4	—	C	5/58
28M/1006473	A27/CT	Nut, 2 BA thin						4	—	C	5/57
28W/9419475	SP15/C	Washer, 2 BA plain						4	L40	C	5/61
4171	E.A1.50.67	BRACKET, aft hinge, U/C cowl door						1	L40	C/MR	5/7
		Attaching parts for E.A1.50.67:—									
28D/1011023	A25/20C	Bolt, 2 BA hex. head						2	—	C	5/1
28D/1011024	A25/21C	Bolt, 2 BA hex. head						2	—	C	5/2
28M/1006473	A27/CT	Nut, 2 BA thin						4	—	C	5/21
28W/9419475	SP15/C	Washer, 2 BA plain						2	—	C	5/20
28W/9419404	SP16/C	Washer, 2 BA plain						2	—	C	5/12
		COWL, BOTTOM, REAR (E.A3.50.25)						—	—	—	5/34
		Spares for:—									
5182	E.A1.50.1601	PLATE, engine oil sump drainage pipe retaining						1	—	C	5/37
37413	E.A6.50.991	SPRING, funnel, assembly, for air duct						1	—	C	5/38
3036	E.A1.50.317	DOOR, access, in bottom rear cowl						1	—	C	5/32
3038	E.A1.50.319	DOOR, undercarriage cowl (Supplied with trim allowance)						1	—	C	5/27
		Attaching parts for E.A1.50.319:—									
28N/9153394	AGS.899/6	Collar, 5/16"						2	—	C	5/5
28P/5225	SP4Z/F10	Pin, shackle						1	—	C	5/53
28P/12348	SP4Z/F18	Pin, shackle						1	—	C	5/11
28P/1202576	SP90/C7	Pin, split						2	—	C	5/4
639	E.A1.50.365	Washer						2	L46	C	5/3
28FP/4062396	FJ5/60DS	FASTENER, dzus						4	—	C	5/16
28FP/4062396	FJ.5/70DS	FASTENER, dzus						4	—	C	5/17
28FP/4062400	FJ.5/80DS	FASTENER, dzus						2	—	C	5/18
633	E.A1.50.281	FASTENER, TOGGLE, GROUP						2	—	C	5/9
		Spares for:—									
16312	E.A1.50.95	HANDLE, TOGGLE FASTENER, GROUP						1	—	C/MR	5/15
		Spares for:—									
29H/4100	TERRY 169/1	RING, split						1	—	C	5/24

A.P.101B-0417-3A

POWER INSTALLATION

Page LB3

COWLING, ENGINE, PORT

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
EA1.50.49	.	.	.	.	SPRING		1	Spring Steel	5/23
					Attaching parts for EA1.50.95:				
EA1.50.155	.	.	.	.	Pin, stud, special		2	S11	5/13
SP90/C7	.	.	.	.	Pin, split		2	—	5/14
EA1.50.282	.	.	.	.	FASTENER, TOGGLE, GROUP		2	—	5/10
					Spares for this group are identical with those for Part No.EA1.50.281 on page LB2				
EA1.50.283	.	.	.	.	FASTENER, TOGGLE, GROUP		1	—	5/55
					Spares for:				
EA1.50.97	.	.	.	.	HANDLE, TOGGLE FASTENER, GROUP		1	—	5/60
					Spares for:				
TERRY 169/1	.	.	.	.	RING, split		1	—	5/59
EA1.50.49	.	.	.	.	SPRING		1	Spring Steel	5/54
					Attaching parts for EA1.50.97:				
EA1.50.157	.	.	.	.	Pin, stud, special		2	S11	5/48
SP90/E4	.	.	.	.	Pin, split		2	—	5/49
EA1.50.284	.	.	.	.	FASTENER, TOGGLE, GROUP		1	—	5/56
					Spares for this group are identical with those for Part No.EA1.50.283				
EA1.50.161	.	.	.	.	PANEL, toggle fastener housing		6	—	5/36
EA1.50.1639	.	.	.	.	ROD, TENSION, AND CHECK CABLE, ASSEMBLY (Pre Mod.5178)		1	—	5/40
EA3.50.43	.	.	.	.	ROD, TENSION, AND CHECK CABLE, ASSEMBLY (Mod.5178)		1	—	
					Spares for:				
A25/3C	.	.	.	.	BOLT, 2BA		1	—	5/50
EA1.50.1641	.	.	.	.	CABLE, check, assembly (Pre Mod.5178)		1	—	5/45
EA3.50.39	.	.	.	.	CABLE, check, assembly (Mod.5178)		1	—	
					Spares for:				
C2	.	.	.	.	FERRULE, 'TALURIT' (Mod.5178)		2	—	5/65
EA1.50.1645	.	.	.	.	ROPE, steel wire (Pre Mod.5178)		AR	—	5/66
4PNC	.	.	.	.	ROPE, steel wire (Mod.5178)		AR	—	
SP67A	.	.	.	.	THIMBLE (Mod.5178)		2	—	5/67
EA1.50.721	.	.	.	.	SPOOL (Pre Mod.5178)		2	—	
SP3/Y/413	.	.	.	.	FORK, joint		1	—	5/44
SP3/Y/413L	.	.	.	.	FORK, joint		1	—	5/46
A27/CP	.	.	.	.	NUT, 2BA plain (Pre Mod.5178)		1	—	5/39
A27/CS	.	.	.	.	NUT, 2BA plain (Mod.5178)		1	—	
A14/CB	.	.	.	.	NUT, 2BA (Pre Mod.5178)		1	—	5/42
A27/CP	.	.	.	.	NUT, 2BA (Mod.5178)		1	—	
A14/CBL	.	.	.	.	NUT, 2BA (Pre Mod.5178)		1	—	5/47
A27/CPL	.	.	.	.	NUT, 2BA (Mod.5178)		1	—	
SP90/C5	.	.	.	.	PIN, split		1	—	5/64
SP/8Y2	.	.	.	.	ROD, tension		1	—	5/41
EA3.50.45	.	.	.	.	SPACER (Mod.5178)		1	—	5/63
EA3.50.47	.	.	.	.	WASHER (Mod.5178)		1	—	5/43
S5-325	.	.	.	.	SPRING, dzus		6	—	5/62
EA1.50.1793	.	.	.	.	WASHER, cup, engine cowling dzus fastener retaining		10	DTD124A	5/19
					Attaching parts for EA3.50.23:				
EEAS1/1-1/2C	.	.	.	.	Screw, 2BA 120° c'sk head		10	S96	3/21

R

POWER INSTALLATION
COWLING, ENGINE, PORT

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA1.50.845	. COWL, TOP, REAR, GROUP For aircraft WD951 and onwards, supplied drilled and with trim allowance to Part No.EA3.00.127 Spares for:	1	—	5/25
EA1.50.161	. . DOOR, toggle fastener housing	8	—	5/6
EA1.50.315	. . DOOR, access, igniter plug	2	—	5/29
EA1.50.281	. . FASTENER, TOGGLE, GROUP Spares for:	2	—	5/9
EA1.50.95	. . . HANDLE, TOGGLE FASTENER, GROUP Spares for:	1	—	5/15
TERRY 169/1	 RING, split	1	—	5/24
EA1.50.49	 SPRING	1	Spring Steel	5/23
EA1.50.155	Attaching parts for EA1.50.95: . . . Pin, stud, special	2	S11	5/13
SP90/C7	. . . Pin, split	2	—	5/14
EA1.50.282	. . FASTENER, TOGGLE, GROUP Spares for this group are identical with those for Part No.EA1.50.281	2	—	5/10
EA1.50.283	. . FASTENER, TOGGLE, GROUP Spares for:	2	—	5/55
EA1.50.97	. . . HANDLE, TOGGLE, FASTENER, GROUP Spares for:	1	—	5/60
TERRY 169/1	 RING, split	1	—	5/59
EA1.50.49	 SPRING	1	Spring Steel	5/54
EA1.50.157	Attaching parts for EA1.50.97: . . . Pin, stud, special	2	S11	5/48
SP90/E4	. . . Pin, split	2	—	5/49
EA1.50.284	. . FASTENER, TOGGLE, GROUP Spares for this group are identical with those for Part No.EA1.50.283	2	—	5/56
FJ5/60DS	. . FASTENER, dzus	4	—	5/16
FJ5/70DS	. . FASTENER, dzus.	4	—	5/17
FJ5/80DS	. . FASTENER, dzus	2	—	5/18
S5/325	. . SPRING, dzus	8	—	5/22
EA1.50.1793	. . WASHER, cup, engine cowling dzus fastener retaining	10	DTD124A	5/19
EA1.50.109	. FORK-END, fitting, toggle fastener Attaching parts for EA1.50.109:	2	S11	3/28
SP4Y/D6	. Pin, shackle	1	—	3/29
EA1.50.135	. FORK-END, fitting, toggle fastener Attaching parts for EA1.50.135:	6	L40	3/18
SP4Y/D6	. Pin, shackle	1	—	3/20

A.P.101B-0417-3A

POWER INSTALLATION

Page LB5

COWLING, ENGINE, PORT

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
EA1.50.137	.	FORK-END, fitting, toggle fastener					8	L40	3/22
SP4Y/F10	.	Attaching parts for EA1.50.137:—					1	—	3/23
	.	Pin, shackle							
EA1.50.391	.	FORK-END, fitting, toggle fastener					1	L40	3/1
SP4Y/D10	.	Attaching parts for EA1.50.391:—					1	—	3/2
	.	Pin, shackle							
EA1.50.29	.	HOOK, cowl, toggle fastener					8	S11	3/30
EA1.50.45	.	HOOK, cowl, toggle fastener					10	S11	3/11
EA1.50.13	.	PANEL, ENGINE SERVICE, GROUP					1	—	4/23
	.	Spares for:—							
EA1.50.161	.	DOOR, toggle fastener housing					4	—	4/22
EA1.50.283	.	FASTENER, TOGGLE, GROUP					2	—	4/32
	.	Spares for:—							
EA1.50.97	.	HANDLE, TOGGLE, FASTENER, GROUP					1	—	4/31
	.	Spares for:—							
TERRY	.								
169/1	.	RING, split					1	—	4/35
EA1.50.49	.	SPRING					1	Spring Steel	4/30
	.	Attaching parts for EA1.50.97:—							
EA1.50.157	.	Pin, stud, special					2	S11	4/29
SP90/E4	.	Pin, split					2	—	4/28
EA1.50.284	.	FASTENER, TOGGLE, GROUP					2	—	4/26
	.	Spares for this group are identical with those for Part No. EA1.50.283							
—	.	PANEL, SERVICE, ASSEMBLY (EA1.50.291)					—	—	4/33
	.	Spares for:—							
EA6.50.283	.	DUCT, ventilating					2	—	4/32
EA1.50.293	.	FRAME 2A, engine assembly							
	.	Spares for:—							
EE11/2	.	EXTRUSION (SAS4769)					QR	—	4/36
	.	Attaching parts for EE11/2:—							
EC1099	.	Adhesive (SAS4769)					QR	—	
EB7.50.37	.	OUTLET, WHEEL CASE BREATHER, ASSEMBLY					1	—	4/27
	.	Spares for:—							
EB7.50.41	.	RING, sealing					1	Besto-bell	4/25
EA1.50.393	.	PIN, turbine starter exhaust pipe locating					2	DTD126	4/12
EA3.50.21	.	PIPE, engine starter exhaust					2	—	4/15
EA1.50.111	.	ROD-END, fitting, toggle fastener					1	L40	3/12
	.	Attaching parts for EA1.50.111:—							
SP4Y/D15	.	Pin, shackle					1	—	3/14
EA1.50.119	.	ROD, toggle fastener					4	S11	3/25
EA1.50.121	.	ROD, toggle fastener					1	S11	3/13

POWER INSTALLATION

COWLING, ENGINE, PORT

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.
EA1.50.123	. ROD, toggle fastener	1	S11	3/9
EA1.50.125	. ROD, toggle fastener	2	S11	3/19
EA1.50.129	. ROD, toggle fastener	4	S96	3/26
EA1.50.131	. ROD, toggle fastener	2	S96	3/24
EA1.50.133	. ROD, toggle fastener	2	S96	3/27
EEAS.1/8E	. SCREW, 1/4" BSF 120° c'sk head	2	S96	3/17
EA1.50.101	. SPRING, toggle hook tension	4	Spring Steel	3/8

A.P.101B-0417-3A		POWER INSTALLATION					Page LC1	
COWLING, ENGINE, STARBOARD								
Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index		
		1 2 3 4 5 6 7						
	—	COWLING, ENGINE, STARBOARD,	—	—	—	3/16		
		ASSEMBLY (E.A1.50.396)						
		Spares for:—						
626	E.A1.50.103	CLIP, toggle, hook spring	2	L72	C	3/3		
627	E.A1.50.105	CLIP, toggle, hook spring	2	L72	C	3/5		
		Attaching parts for E.A1.50.103 and E.A1.50.105:—						
28D/1007979	AS1246/1B	Bolt, 4 BA round head	1	—	C	3/4		
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	1	—	C	3/10		
28W/9419465	SP13/B	Washer, 4 BA plain	1	—	C	3/7		
3005	E.A3.00.122	COWL, FRONT, GROUP (E.A1.50.250)	1	—	A	4/14		
		(Supplied undrilled and with trim allowance)						
		Spares for:—						
18193	E.A1.50.843	AIR, INTAKE, ASSEMBLY	1	—	B/MR	4/6		
		Spares for:—						
10699	E.A1.50.1055	COVER, plate, debris guard attachment plate	2	L72	C	4/11		
	—	FRAME, FLANGED RING, ASSEMBLY	—	—	—	4/20		
		(E.A1.50.1833)						
		Spares for:—						
33250	EEAS.75	SEAL	1	KO99F Linatex	C	4/17		
3089	E.A1.50.1673	PLATE, louvre	2	DTD166B	C	4/19		
10702	E.A1.50.1597	SCREEN, perforated	38	Comm. Alum.	C	4/21		
26503	E.A1.50.1823	SLEEVE, exhaust outlet	1	—	C	4/18		
6615	E.A3.00.239	BAFFLE, bleed valve air duct	1	—	C	4/3		
		(Supplied undrilled with trim allowance)						
5208	E.A1.50.1753	DUCT, air compression, bleed valve	1	—	C	4/4		
		Attaching parts for E.A1.50.1753:—						
1026	EEAS.1/1-1/2C	Screw, 2 BA 120° c'sk head	14	S96	C	4/2		
4784	E.A1.50.1761	PANEL, access, for adjustment of accelerator and	3	—	C	4/16		
		bleed valve control						
4786	E.A1.50.1779	PANEL, access, for bleed valve adjustment	1	—	C	4/5		
		Attaching parts for E.A1.50.1779:—						
1025	EEAS.1/1C	Screw, 2 BA 120° c'sk head	8	S96	C	4/1		
22530	E.A1.50.1805	PANEL, access, P.V. ram	1	L72	C	4/7		
		Attaching parts for E.A1.50.1805:—						
28D/1007975	AS.1242/1C	Bolt, 2 BA c'sk head	8	—	C	4/8		
22531	E.A1.50.1807	PANEL, access, P.V. ram	1	L72	C	4/10		
		Attaching parts for E.A1.50.1807:—						
28D/1007975	AS.1242/1C	Bolt, 2 BA c'sk head	8	—	C	4/9		
		Attaching parts for E.A1.50.250:—						
1129	E.A1.50.1051	Screw, special	41	S11	C	3/6		

POWER INSTALLATION

COWLING, ENGINE, STARBOARD

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
30954	E.A3.50.24	COWL, BOTTOM, REAR (LESS U/C COWL DOOR), GROUP (For aircraft WD.951 and onwards, supplied drilled to Part No. E.A3.00.264 with trim allowance) Spares for:—							1	—	B	5/31
4143	E.A1.50.66	BRACKET, forward hinge U/C cowl door Attaching parts for E.A1.50.66:—							1	L40	C/MR	5/52
28D/1011023	A25/20C	Bolt, 2 BA hex. head							4	—	C	5/58
28M/1006473	A27/CT	Nut, 2 BA thin							4	—	C	5/57
28W/9419475	SP15/C	Washer, 2 BA plain							4	—	C	5/61
4144	E.A1.50.68	BRACKET, aft hinge U/C cowl door Attaching parts for E.A1.50.68:—							1	L40	C/MR	5/8
28D/1011023	A25/20C	Bolt, 2 BA hex. head							2	—	C	5/1
28D/1011024	A25/21C	Bolt, 2 BA hex. head							2	—	C	5/2
28M/1006473	A27/CT	Nut, 2 BA hex. head							4	—	C	5/21
28W/9419475	SP15/C	Washer, 2 BA plain							2	—	C	5/20
28W/9419404	SP16/C	Washer, 2 BA plain							2	—	C	5/12
—	—	COWL, BOTTOM, REAR (E.A3.50.26) Spares for:—							—	—	—	5/35
5182	E.A1.50.1601	PLATE, engine oil sump drainage pipe retaining							1	—	C	5/37
37413	E.A6.50.991	SPRING, funnel, assembly, for air duct							1	—	C	5/38
3037	E.A1.50.318	DOOR, access, in bottom rear cowl							1	—	C	5/33
3039	E.A1.50.320	DOOR, undercarriage cowl (Supplied with trim allowance) Attaching parts for E.A1.50.320:—							1	—	C	5/28
28N/9153394	AGS.899/6	Collar, 5/16"							2	—	C	5/5
28P/5525	SP4Z/F10	Pin, shackle							1	—	C	5/53
28P/12348	SP4Z/F18	Pin, shackle							1	—	C	5/11
28P/9527169	SP90/C7	Pin, split							2	—	C	5/4
639	E.A1.50.365	Washer							2	L46	C	5/3
28FP/4062396	FJ.5/60DS	FASTENER, dzus							4	—	C	5/16
28FP/4062398	FJ.5/70DS	FASTENER, dzus							4	—	C	5/17
28FP/4062400	FJ.5/80DS	FASTENER, dzus							2	—	C	5/18
633	E.A1.50.281	FASTENER, TOGGLE, GROUP Spares for:—							2	—	C	5/9
16312	E.A1.50.95	HANDLE, TOGGLE FASTENER, GROUP Spares for:—							1	—	C/MR	5/15
29H/4100	TERRY 169/1	RING, split							1	—	C	5/24

POWER INSTALLATION
COWLING, ENGINE, STARBOARD

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA1.50.49		SPRING	1	Spring Steel	5/23
EA1.50.155		Attaching parts for EA1.50.95:	2	S11	5/13
SP90/C7		Pin, stud, special	2	—	5/14
EA1.50.282		Pin, split	2	—	5/10
EA1.50.283		FASTENER, TOGGLE, GROUP	2	—	5/10
EA1.50.283		Spares for this group are identical with those for Part No.EA1.50.281 on page LC2	1	—	5/55
EA1.50.97		FASTENER, TOGGLE, GROUP	1	—	5/60
TERRY 169/1		Spares for:	1	—	5/59
EA1.50.49		HANDLE, TOGGLE FASTENER, GROUP	1	—	5/54
EA1.50.157		Spares for:	1	—	5/48
SP90/E4		RING, split	2	Spring Steel	5/49
EA1.50.284		SPRING	2	—	5/56
EA1.50.161		Attaching parts for EA1.50.97:	1	—	5/36
EA1.50.1639		Pin, stud, special	1	—	5/40
EA3.50.43		Pin, split	1	—	5/50
A25/3C		FASTENER, TOGGLE, GROUP	1	—	5/45
EA1.50.1641		Spares for this group are identical with those for Part No.EA1.50.283	1	—	5/65
EA3.50.39		PANEL, toggle, fastener housing	1	—	5/66
C2		ROD, TENSION, AND CHECK CABLE, ASSEMBLY (Pre Mod.5178)	2	—	5/67
EA1.50.1645		ROD, TENSION, AND CHECK CABLE, ASSEMBLY (Mod.5178)	1	—	5/44
4PNC		Spares for:	1	—	5/46
EA1.50.721		BOLT, 2BA	1	—	5/39
SP3/Y/413		CABLE, check assembly (Pre Mod.5178)	1	—	5/42
SP3/Y/413L		CABLE, check assembly (Mod.5178)	1	—	5/47
A27/CP		Spares for:	1	—	5/64
A27/CS		FERRULE, 'Talurit' (Mod.5178)	1	—	5/41
A14/CB		ROPE, steel wire (Pre Mod.5178)	1	—	5/63
A27/CP		ROPE, steel wire (Mod.5178)	1	—	5/43
A14/CBL		SPOOL (Pre Mod.5178)	1	—	5/62
A27/CPL		FORK, joint	1	—	5/19
SP90/C5		FORK, joint	1	—	3/21
SP/8Y2		NUT, 2BA plain (Pre Mod 5178)	1	—	
EA3.50.45		NUT, 2BA plain (Mod.5178)	1	—	
EA3.50.47		NUT, 2BA (Pre Mod.5178)	1	—	
S5/325		NUT, 2BA (Mod.5178)	1	—	
EA1.50.1793		NUT, 2BA (Pre Mod.5178)	1	—	
EEAS1/1-1/2C		NUT, 2BA (Mod.5178)	1	—	
		PIN, split	1	—	
		ROD, tension	1	—	
		SPACER (Mod.5178)	1	—	
		WASHER (Mod.5178)	1	—	
		SPRING, dzus	6	—	
		WASHER, cup, engine cowling dzus fastener retaining	10	DTD124A	
		Attaching parts for EA3.50.24:	10	S96	
		Screw, 2BA c'sk head	10	S96	

POWER INSTALLATION
COWLING, ENGINE, STARBOARD

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA1.50.846	.	COWL, TOP REAR, GROUP (For aircraft WD951 and onwards, supplied drilled with trim allowance to Part No.EA3.00.128) Spares for:	1	—	5/26
EA1.50.161	.	DOOR, toggle fastener housing	8	—	5/6
EA1.50.315	.	DOOR, access, igniter plug	2	—	5/29
EA1.50.281	.	FASTENER, TOGGLE, GROUP Spares for:	2	—	5/9
EA1.50.95	.	HANDLE, TOGGLE FASTENER, GROUP Spares for:	1	—	5/15
TERRY 169/1	.	RING, split	1	—	5/24
EA1.50.49	.	SPRING, 19 SWG	1	Spring Steel	5/23
EA1.50.155	.	Attaching parts for EA1.50.95: Pin, stud, special	2	S11	5/13
SP90/C7	.	Pin, split	2	—	5/14
EA1.50.282	.	FASTENER, TOGGLE, GROUP Spares for this group are identical with those for Part No.EA1.50.281	2	—	5/10
EA1.50.283	.	FASTENER, TOGGLE, GROUP Spares for:	2	—	5/55
EA1.50.97	.	HANDLE, TOGGLE FASTENER, GROUP Spares for:	1	—	5/60
TERRY 169/1	.	RING, split	1	—	5/59
EA1.50.49	.	SPRING, 19 SWG	1	Spring Steel	5/54
EA1.50.157	.	Attaching parts for EA1.50.97: Pin, stud, special	2	S11	5/48
SP90/E4	.	Pin, split	2	—	5/49
EA1.50.284	.	FASTENER, TOGGLE, GROUP Spares for this group are identical with those for Part No.EA1.50.283	2	—	5/56
FJ5/60DS	.	FASTENER, dzus	4	—	5/16
FJ5/70DS	.	FASTENER, dzus	4	—	5/17
FJ5/80DS	.	FASTENER, dzus	2	—	5/18
S5/325	.	SPRING, dzus	8	—	5/22
EA1.50.1793	.	WASHER, cup, engine cowlng dzus fastener retaining	10	DTD124A	5/19
EA1.50.109	.	FORK-END, fitting, toggle fastener Attaching parts for EA1.50.109:	2	S11	3/28
SP4Y/D6	.	Pin, shackle	1	—	3/29
EA1.50.135	.	FORK-END, fitting, toggle fastener Attaching parts for EA1.50.135:	6	L40	3/18
SP4Y/D6	.	Pin, shackle	1	—	3/20

A.P.101B-0417-3A

POWER INSTALLATION

Page LC5

COWLING, ENGINE, STARBOARD

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA1.50.137	.	FORK-END, fitting, toggle fastener					8	L40	3/22
	.	Attaching parts for EA1.50.137:—							
SP4Y/F10	.	Pin, shackle					1	—	3/23
EA1.50.391	.	FORK-END, fitting, toggle fastener					1	L40	3/1
	.	Attaching parts for EA1.50.391:—							
SP4Y/D10	.	Pin, shackle					1	—	3/2
EA1.50.29	.	HOOK, cowl, toggle fastener					8	S11	3/30
EA1.50.45	.	HOOK, cowl, toggle fastener					10	S11	3/11
EA1.50.14	.	PANEL, ENGINE SERVICE, GROUP					1	—	4/24
		Spares for this group are identical with those for port group Ref. No. 3040 on page LB5, except for the following deletion and addition							
		Delete:—							
—	.	PANEL, SERVICE, ASSEMBLY (EA1.50.291)					—	—	4/33
		Add:—							
—	.	PANEL, SERVICE, ASSEMBLY (EA1.50.292)					—	—	4/34
		Spares for this assembly are identical with those for assembly EA1.50.291 on page LB5, except for the following deletion and addition							
		Delete:—							
R EA1.50.293	.	FRAME 2A, engine assembly					—	—	
		Add:—							
R EA1.50.294	.	FRAME 2A, engine assembly					—	—	
EA1.50.393	.	PIN, turbine starter exhaust pipe locating					2	DTD126	4/12
EA3.50.21	.	PIPE, engine starter exhaust					2	—	4/15
EA1.50.111	.	ROD-END, fitting, toggle fastener					1	L40	3/12
	.	Attaching parts for EA1.50.111:—							
SP4Y/D15	.	Pin, shackle					1	—	3/14
EA1.50.119	.	ROD, toggle fastener					4	S11	3/25
EA1.50.121	.	ROD, toggle fastener					1	S11	3/13
EA1.50.123	.	ROD, toggle fastener					1	S11	3/9
EA1.50.125	.	ROD, toggle fastener					2	S11	3/19
EA1.50.129	.	ROD, toggle fastener					4	S96	3/26
EA1.50.131	.	ROD, toggle fastener					2	S96	3/24
EA1.50.133	.	ROD, toggle fastener					2	S96	3/27
EEAS.1/8E	.	SCREW, 1/4" BSF 120° c'sk head					2	S96	3/17
EA1.50.101	.	SPRING, toggle hook tension					1	Spring Steel	3/8

POWER INSTALLATION
COWLING, ENGINE, STARBOARD

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

POWER INSTALLATION

ENGINE MOUNTINGS AND ATTACHMENTS, PORT

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
—	ENGINE MOUNTINGS AND ATTACHMENTS, PORT, ASSEMBLY (EA1.51.1)						—	—	6/31
	Spares for:—								
R EA1.51.17	. BEARING, spherical, seating, rear engine mounting						2	S11	6/40
R EA1.51.211	. BRACKET, ENGINE MOUNTING, REAR, ASSEMBLY (Mod.5045)						1	—	6/28
	Consisting of:—								
R EK5.51.611	. . BRACKET, mounting (Mod.5045)						1	—	6/42
R EA1.51.215	. . CAP, retaining, spherical bearing (Mod.5045)						1	—	6/33
	Attaching parts for EA1.51.215:—								
R A27/JS	. . Nut, slotted, $\frac{3}{8}$ " BSF						1	—	6/50
R A27/LS	. . Nut, slotted, $\frac{7}{16}$ " BSF						1	—	6/51
R SP90/C8	. . Pin, split						1	—	6/52
R SP90/C9	. . Pin, split						1	—	6/53
R SP122/J	. . Washer, $\frac{3}{8}$ " dia.						1	—	6/54
R SP122/L	. . Washer, $\frac{7}{16}$ " dia.						1	—	6/55
R EA1.51.213	. . STUD (Mod.5045)						1	—	6/39
R EA1.51.15	. . STUD (Mod.5045)						1	—	6/49
	Attaching parts for EA1.51.15 and EA1.51.213:—								
R EA1.51.207	. . Screw, grub						1	S11	6/44
	Attaching parts for EA1.51.211								
R A25/8G	. Bolt, 5/16" BSF hex. head						6	—	6/35
R A27/GP	. Nut, 5/16" BSF plain						6	—	6/37
R EA1.51.209	. Shim (if required)						2	—	6/41
R SP15/G	. Washer, 5/16" BSF plain						6	—	6/36
R EA1.51.212	. BRACKET, ENGINE MOUNTING, REAR, ASSEMBLY (Mod.5045)						1	—	6/29
	Consisting of:—								
R EK5.51.612	. . BRACKET, mounting (Mod.5045)						1	—	6/43
R EA1.51.215	. . CAP, retaining, spherical bearing (Mod.5045)						1	—	6/33
	Attaching parts for EA1.51.215:—								
R A27/JS	. . Nut, slotted, $\frac{3}{8}$ " BSF						1	—	6/50
R A27/LS	. . Nut, slotted, $\frac{7}{16}$ " BSF						1	—	6/51
R SP90/C8	. . Pin, split						1	—	6/52
R SP90/C9	. . Pin, split						1	—	6/53
R SP122/J	. . Washer, $\frac{3}{8}$ " dia.						1	—	6/54
R SP122/L	. . Washer, $\frac{7}{16}$ " dia.						1	—	6/55
R EA1.51.213	. . STUD (Mod.5045)						1	—	6/39
R EA1.51.15	. . STUD (Mod.5045)						1	—	6/49
	Attaching parts for EA1.51.15 and EA1.51.213:—								
R EA1.51.207	. . Screw, grub						1	S11	6/44
	Attaching parts for EA1.51.212								
R A25/8G	. Bolt, 5/16" BSF hex. head						6	—	6/35
R A27/GP	. Nut, 5/16" BSF plain						6	—	6/37
R EA1.51.209	. Shim (if required)						2	—	6/41
R SP15/G	. Washer, 5/16" BSF plain						6	—	6/36

POWER INSTALLATION

ENGINE MOUNTINGS AND ATTACHMENTS, PORT

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA1.51.229	MOUNTING, ENGINE, FORWARD, INBOARD, ASSEMBLY (Mod 5048) Spares for:—	1	—	6/19
EA1.51.33	. . BOLT, shouldered, engine mounting	1	S11	6/26
EA1.51.225	. . BRACKET, engine mounting (Mod 5048) (Pre Mod 5240) (PORT)	1	BAC.M44	6/16
EA1.51.233	. . BRACKET, engine mounting (Mod 5240) (PORT)	1	—	
EA1.51.45	. . FORK-END, for tie rod	1	S96	6/27
EA1.51.27	. . NUT, locking, plug retaining	1	L40	6/2
A27/PT	. . NUT, locking 9/16" BSF	1	—	6/27A
A27/JS	. . NUT, slotted 3/8" BSF	1	—	6/56
SP90/C/7	. . PIN, split	1	—	6/57
EA1.51.25	. . PLUG, retaining, tie rod ball end	1	L40	6/8
EA1.51.43	. . ROD, tie, adjustable, spherical end	1	S65	6/24
SP16/J	. . WASHER, 3/8" Dia.	1	—	6/58
	Attaching parts for EA1.51.229:—			
EA1.51.37	. Bolt, eye, lower, engine bracket and control bracket mounting	1	S11	6/23
EA1.51.39	. Bolt, eye, upper, engine bracket and control bracket mounting	1	S11	6/10
EEAS222/11G	. Bolt, 5/16" BSF hex. head	2	—	6/15
A27/GP	. Nut, 5/16" BSF	2	—	6/22
A27/GS	. Nut, slotted, 5/16" BSF	2	—	6/11
SP90/C/7	. Pin, split	2	—	6/45
AP125/G	. Washer, 5/16" plain	4	—	6/12
EA1.51.231	MOUNTING, ENGINE, FORWARD, OUTBOARD, ASSEMBLY (Mod 5048) Spares for:—	1	—	6/3
EA1.51.33	. . BOLT, shouldered, engine mounting	1	S11	6/25
EA1.51.227	. . BRACKET, engine mounting (Mod 5048)	1	BAC.M44	6/13
EA1.51.45	. . FORK-END, for tie rod	1	S96	6/21
EA1.51.27	. . NUT, locking, plug retaining	1	L40	6/9
A27/PT	. . NUT, locking, 9/16" BSF	1	—	6/27A
A27/JS	. . NUT, slotted, 3/8" BSF	1	—	6/59
SP90/C/7	. . PIN, split	1	—	6/60
EA1.51.25	. . PLUG, retaining, tie rod ball end	1	L40	6/7
EA1.51.43	. . ROD, tie, adjustable, spherical, end	1	S65	6/18
SP16/J	. . WASHER	1	—	6/61
	Attaching parts for EA1.51.231:—			
EEAS222/11G	. Bolt, 5/16" BSF hex. head	3	—	6/5
EEAS222/12G	. Bolt, hex. head, 5/16" BSF	1	—	6/46
A58/GS	. Nut, slotted, 5/16" BSF	1	—	6/47
SP90/C/7	. Pin, split	1	—	6/48
SP125/G	. Washer, 5/16" plain	4	—	6/1
EA1.51.19	. PIN, spherical bearing, rear inboard, bracket retaining	1	S11	6/38

POWER INSTALLATION

ENGINE MOUNTINGS AND ATTACHMENTS, STARBOARD

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
—	ENGINE MOUNTINGS AND ATTACHMENTS, STARBOARD, ASSEMBLY (EA1.51.2) Spares for:—	—	—	6/32
EA1.51.17	. BEARING, spherical, seating, rear, engine mounting	2	S21	6/40
EA1.51.211	. BRACKET, ENGINE MOUNTING, REAR, ASSEMBLY (MOD.5045) Consisting of:—	1	—	6/28
EK5.51.611	. . BRACKET, mounting (Mod.5045)	1	—	6/42
EA1.51.215	. . CAP, retaining, spherical bearing (Mod.5045) Attaching parts for EA1.51.215:—	1	—	6/33
A27/JS	. . Nut, slotted, $\frac{3}{8}$ " BSF	1	—	6/50
A27/LS	. . Nut, slotted, $\frac{7}{16}$ " BSF	1	—	6/51
SP90/C8	. . Pin, split	1	—	6/52
SP90/C9	. . Pin, split	1	—	6/53
SP122/J	. . Washer, $\frac{3}{8}$ " dia.	1	—	6/54
SP122/L	. . Washer, $\frac{7}{16}$ " dia.	1	—	6/55
EA1.51.213	. . STUD (Mod.5045)	1	—	
EA1.51.15	. . STUD (Mod.5045) Attaching parts for EA1.51.15 and EA1.51.213:—	1	—	
EA1.51.207	. . Screw, grub Attaching parts for EA1.51.211	1	S11	6/44
A25/8G	. Bolt, 5/16" BSF hex. head	6	—	6/35
A27/GP	. Nut, 5/16" BSF plain	6	—	6/37
EA1.51.209	. Shim (if required)	21	—	6/41
SP15/G	. Washer, 5/16" BSF plain	6	—	6/36
EA1.51.212	. BRACKET, ENGINE MOUNTING, REAR, ASSEMBLY (MOD.5045) Consisting of:—	1	—	6/29
EK5.51.612	. . BRACKET, mounting (Mod.5045)	1	—	6/43
EA1.51.215	. . CAP, retaining, spherical bearing (Mod.5045) Attaching parts for EA1.51.215:—	1	—	6/33
A27/JS	. . Nut, slotted, $\frac{3}{8}$ " BSF	1	—	6/50
A27/LS	. . Nut, slotted, $\frac{7}{16}$ " BSF	1	—	6/51
SP90/C8	. . Pin, split	1	—	6/52
SP90/C9	. . Pin, split	1	—	6/53
SP122/J	. . Washer, $\frac{3}{8}$ " dia.	1	—	6/54
SP122/L	. . Washer, $\frac{7}{16}$ " dia.	1	—	6/55
EA1.51.213	. . STUD (Mod.5045)	1	—	6/39
EA1.51.15	. . STUD (Mod.5045) Attaching parts for EA1.51.15 and EA1.51.213	1	—	6/49
EA1.51.207	. . Screw, grub Attaching parts for EA1.51.212	1	S11	6/44
A25/8G	. Bolt, 5/16" BSF hex. head	6	—	6/35
A27/GP	. Nut, 5/16" BSF plain	6	—	6/37
EA1.51.209	. Shim (if required)	2	—	6/41
SP15/G	. Washer, 5/16" BSF plain	6	—	6/36

POWER INSTALLATION

ENGINE MOUNTING AND ATTACHMENTS, STARBOARD

Part Number	Description	No. Off	Matl. Spec.	Plate No.
				1 2 3 4 5 6
EA1.51.230	MOUNTING ENGINE FORWARD INBOARD ASSEMBLY (Mod 5048) Spares for:—	1	—	6/20
EA1.51.33	BOLT, shouldered engine mounting	1	S11	6/26
EA1.51.226	BRACKET, engine mounting (Mod 5048) (Pre Mod 5240) starboard	1	BAC.M44	6/17
EA1.51.234	BRACKET, engine mounting (Mod 5240) starboard	1	—	
EA1.51.45	FORK-END, for tie rod	1	S96	6/27
EA1.51.27	NUT, locking plug retaining	1	L40	6/2
A27/PT	NUT, locking, 9/16" BSF	1	—	6/27A
A27/JS	NUT, slotted, 3/8" BSF	1	—	6/56
SP90/CT	PIN, split	1	—	6/57
EA1.51.25	PLUG, retaining tie rod ball end	1	L40	6/8
EA1.51.43	ROD, tie adjustable spherical end	1	S65	6/24
AS471/J	WASHER, 3/8" dia.	1	—	6/58
	Attaching parts for EA1.51.230:—			
EA1.51.37	Bolt eye lower engine bracket and control bracket mounting	1	S11	6/23
EA1.51.39	Bolt eye upper engine bracket and control bracket mounting	1	S11	6/10
EEAS222/11G	Bolt, 5/16" BSF hex. head	2	—	6/15
A27/GP	Nut, 5/16" BSF	2	—	6/22
A27/GS	Nut, slotted 5/16" BSF	2	—	6/11
SP90/C7	Pin, split	2	—	6/45
SP125/G	Washer, 5/16" plain	4	—	6/12
EA1.51.232	MOUNTING ENGINE FORWARD OUTBOARD ASSEMBLY (Mod 5048) Spares for:—	1	—	6/4
EA1.51.33	BOLT, shouldered engine mounting	1	S11	6/25
EA1.51.228	BRACKET, engine mounting (Mod 5048)	1	BAC.M44	6/14
EA1.51.45	FORK-END, for tie rod	1	S96	6/21
A27/PT	NUT, locking, 9/16" BSF	1	—	6/27A
EA1.51.27	NUT, locking plug retaining	1	L40	6/9
A27/JS	NUT, slotted, 3/8" BSF	1	—	6/59
SP90/C7	PIN, split	1	—	6/60
EA1.51.25	PLUG, retaining tie rod ball end	1	L40	6/7
EA1.51.43	ROD, tie adjustable spherical end	1	L40	6/18
SP16/J	WASHER	1	—	6/61
	Attaching parts for EA1.51.232:—			
EEAS222/11G	Bolt, 5/16" BSF hex. head	3	—	6/5
EEAS222/12G	Bolt, hex. head 5/16" BSF	1	—	6/46
A58/GS	Nut, slotted 5/16" BSF	1	—	6/47
SP90/C7	Pin, split	1	—	6/48
SP125/G	Washer, 5/16" plain	4	—	6/1
EA1.51.19	PIN, spherical bearing rear inboard bracket retaining	1	S11	6/38

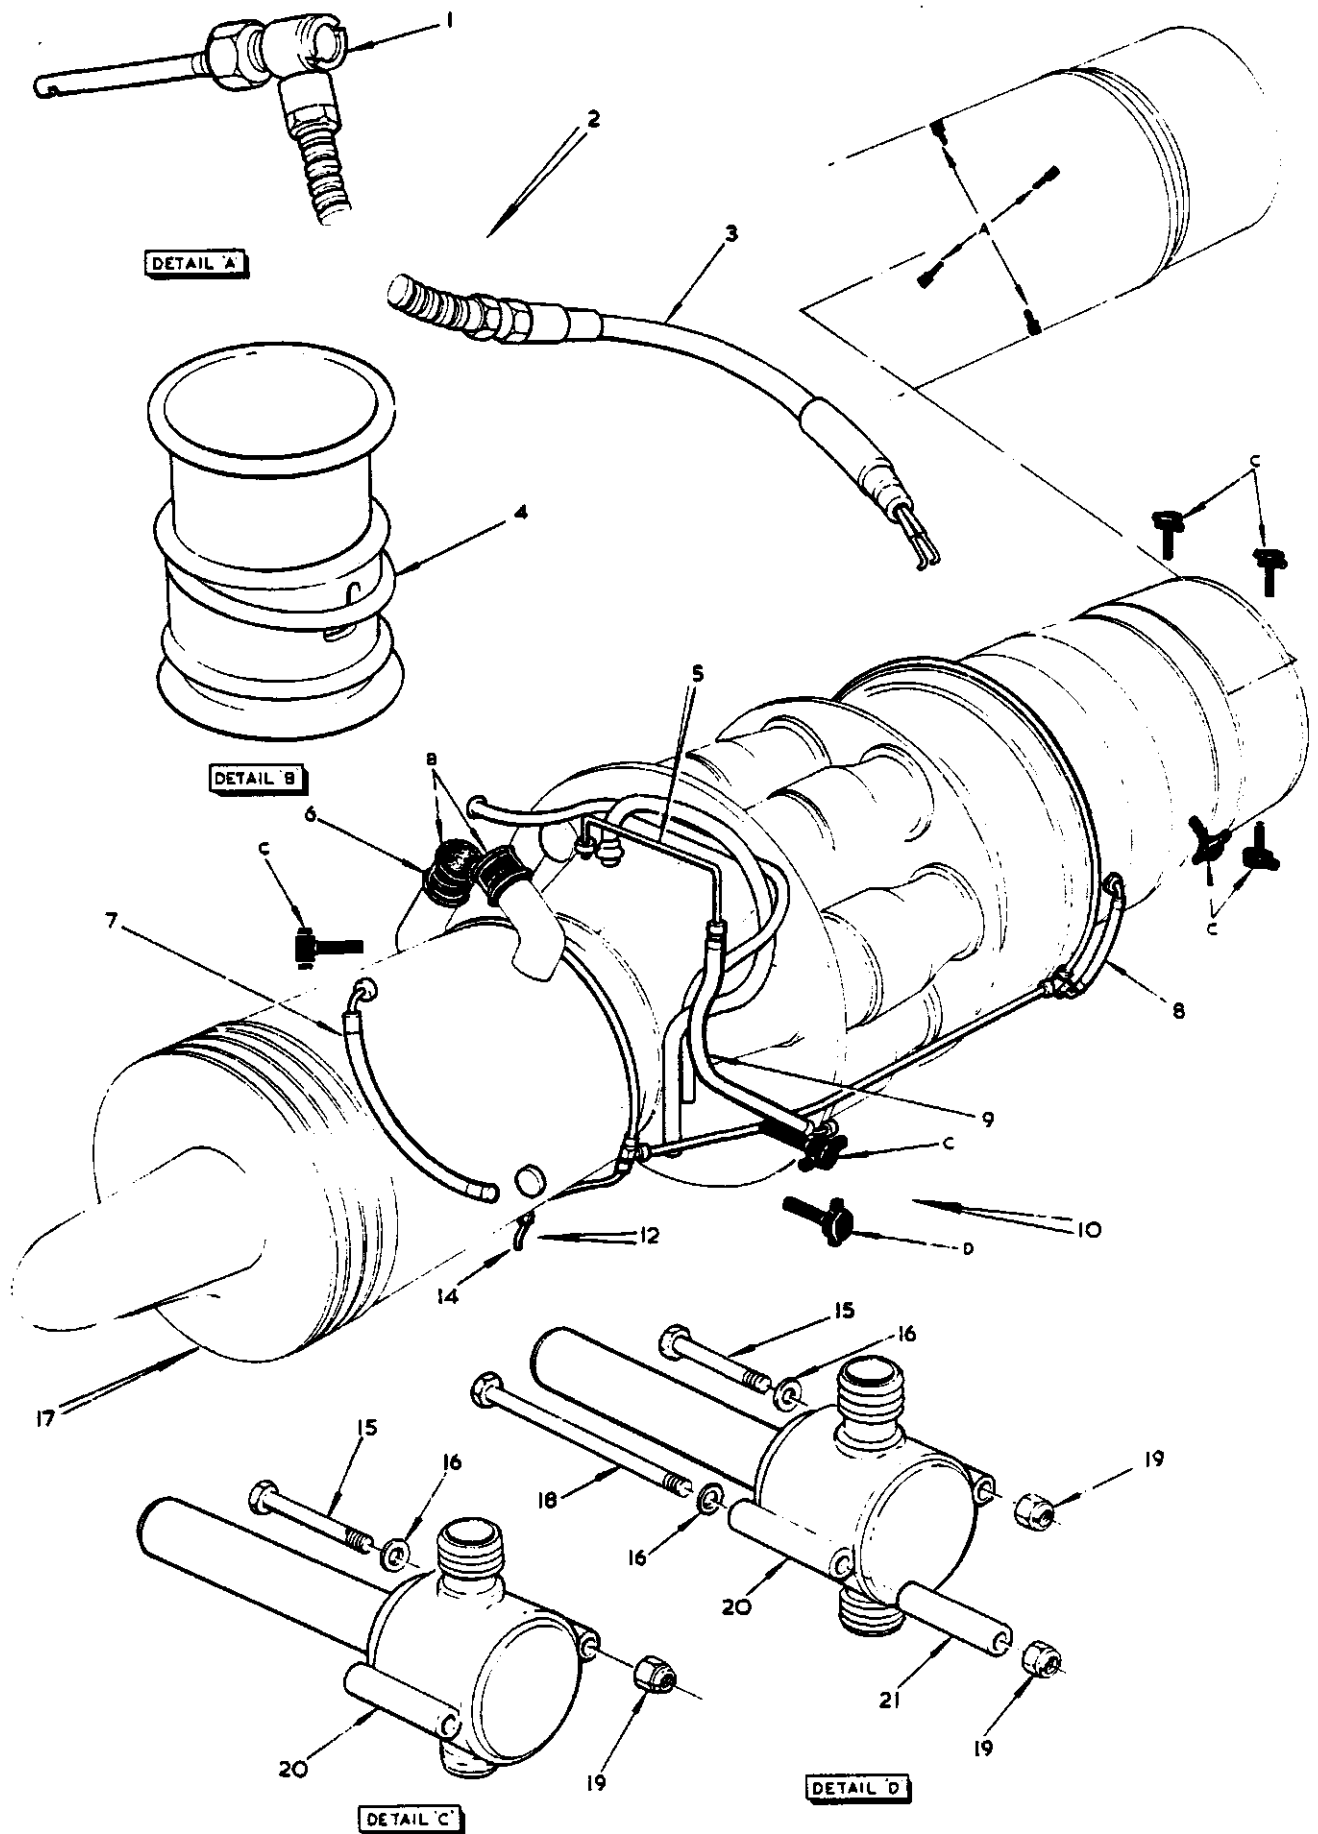


FIG.1 ENGINE MK.102 INSTALLATION, PORT

T. MK.17 SECT. L

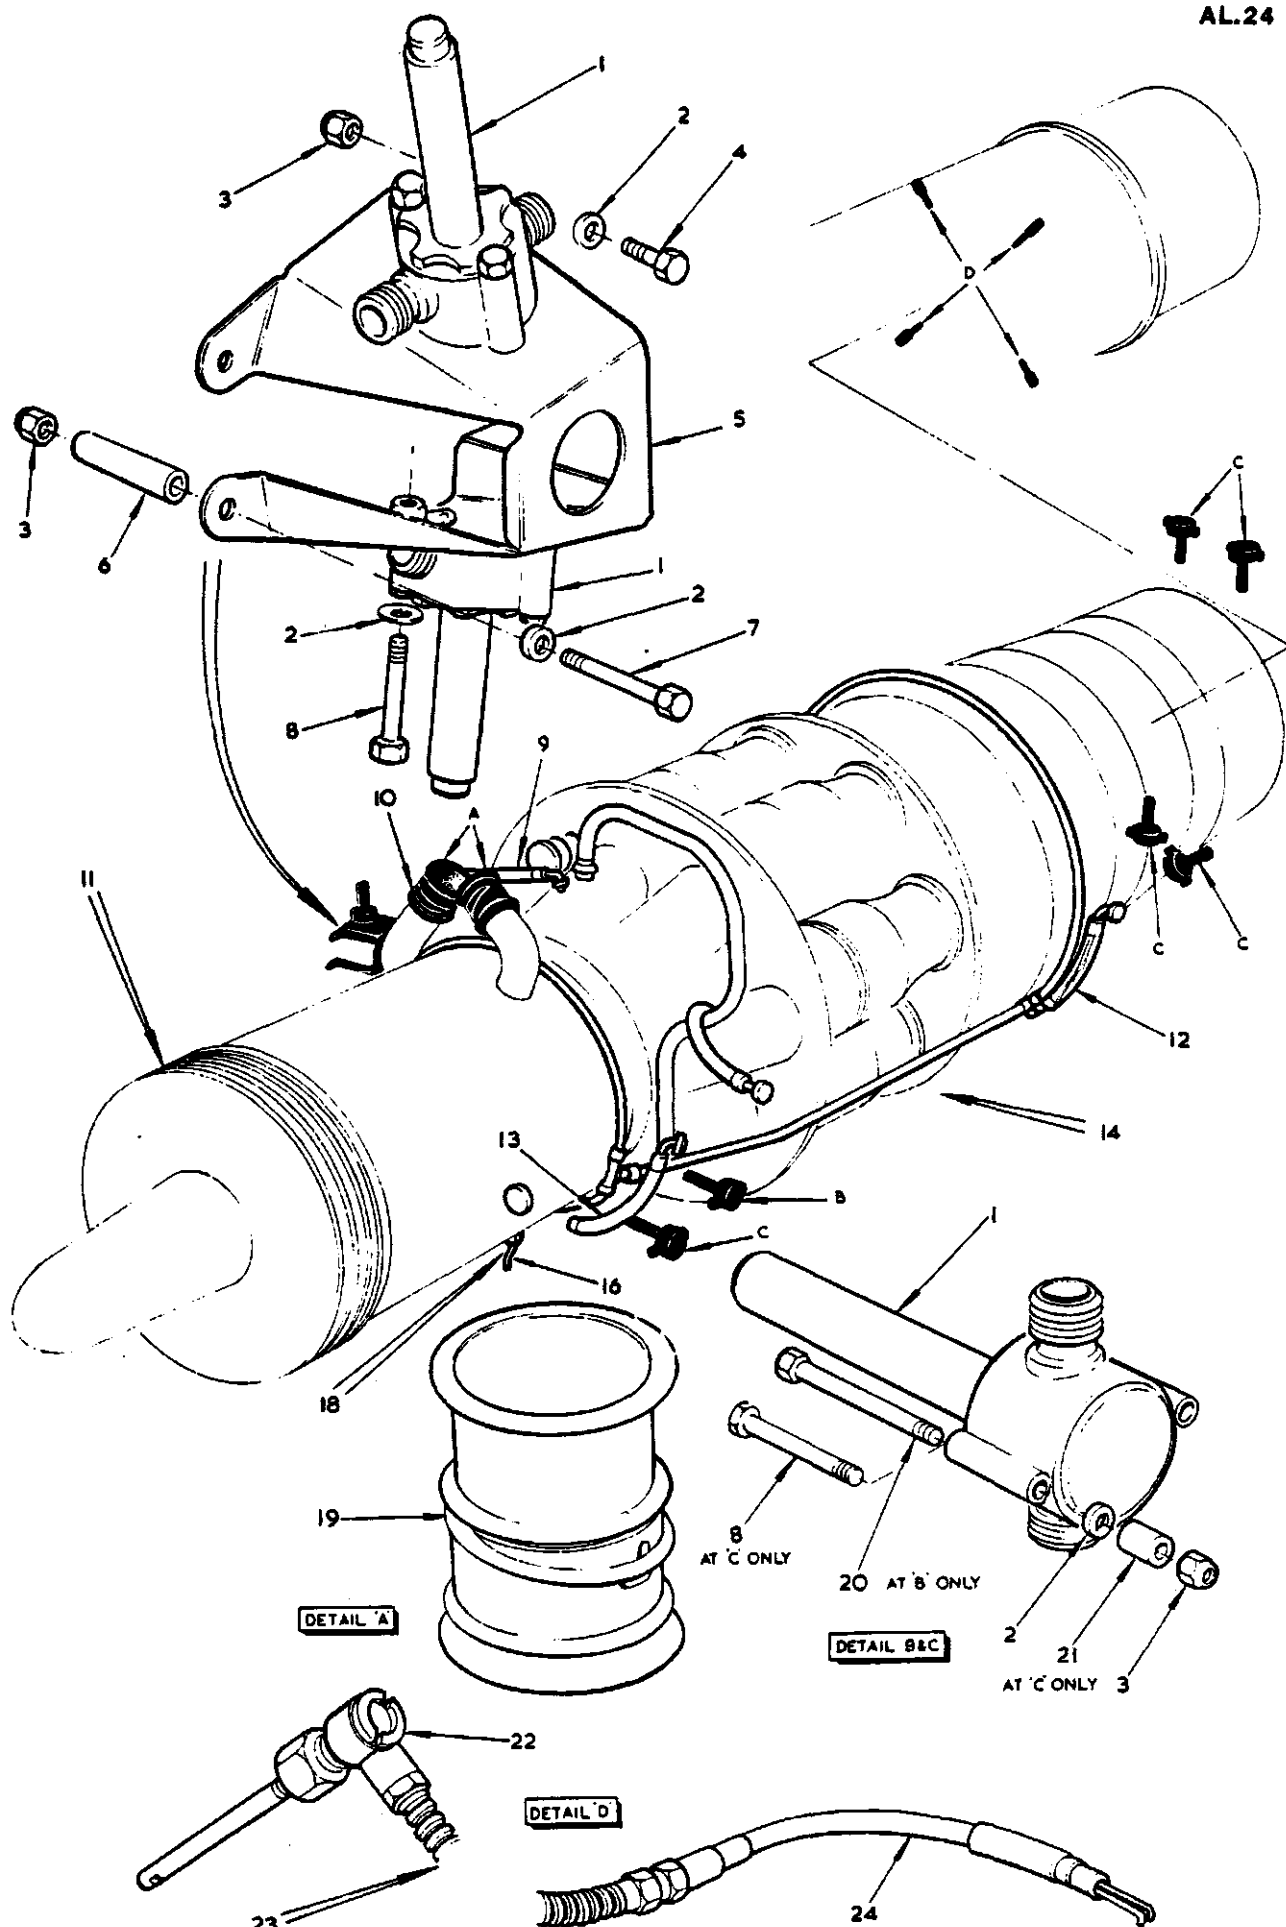


FIG.2 ENGINE MK.102 INSTALLATION STBD.

T. MK.17 SECT. L

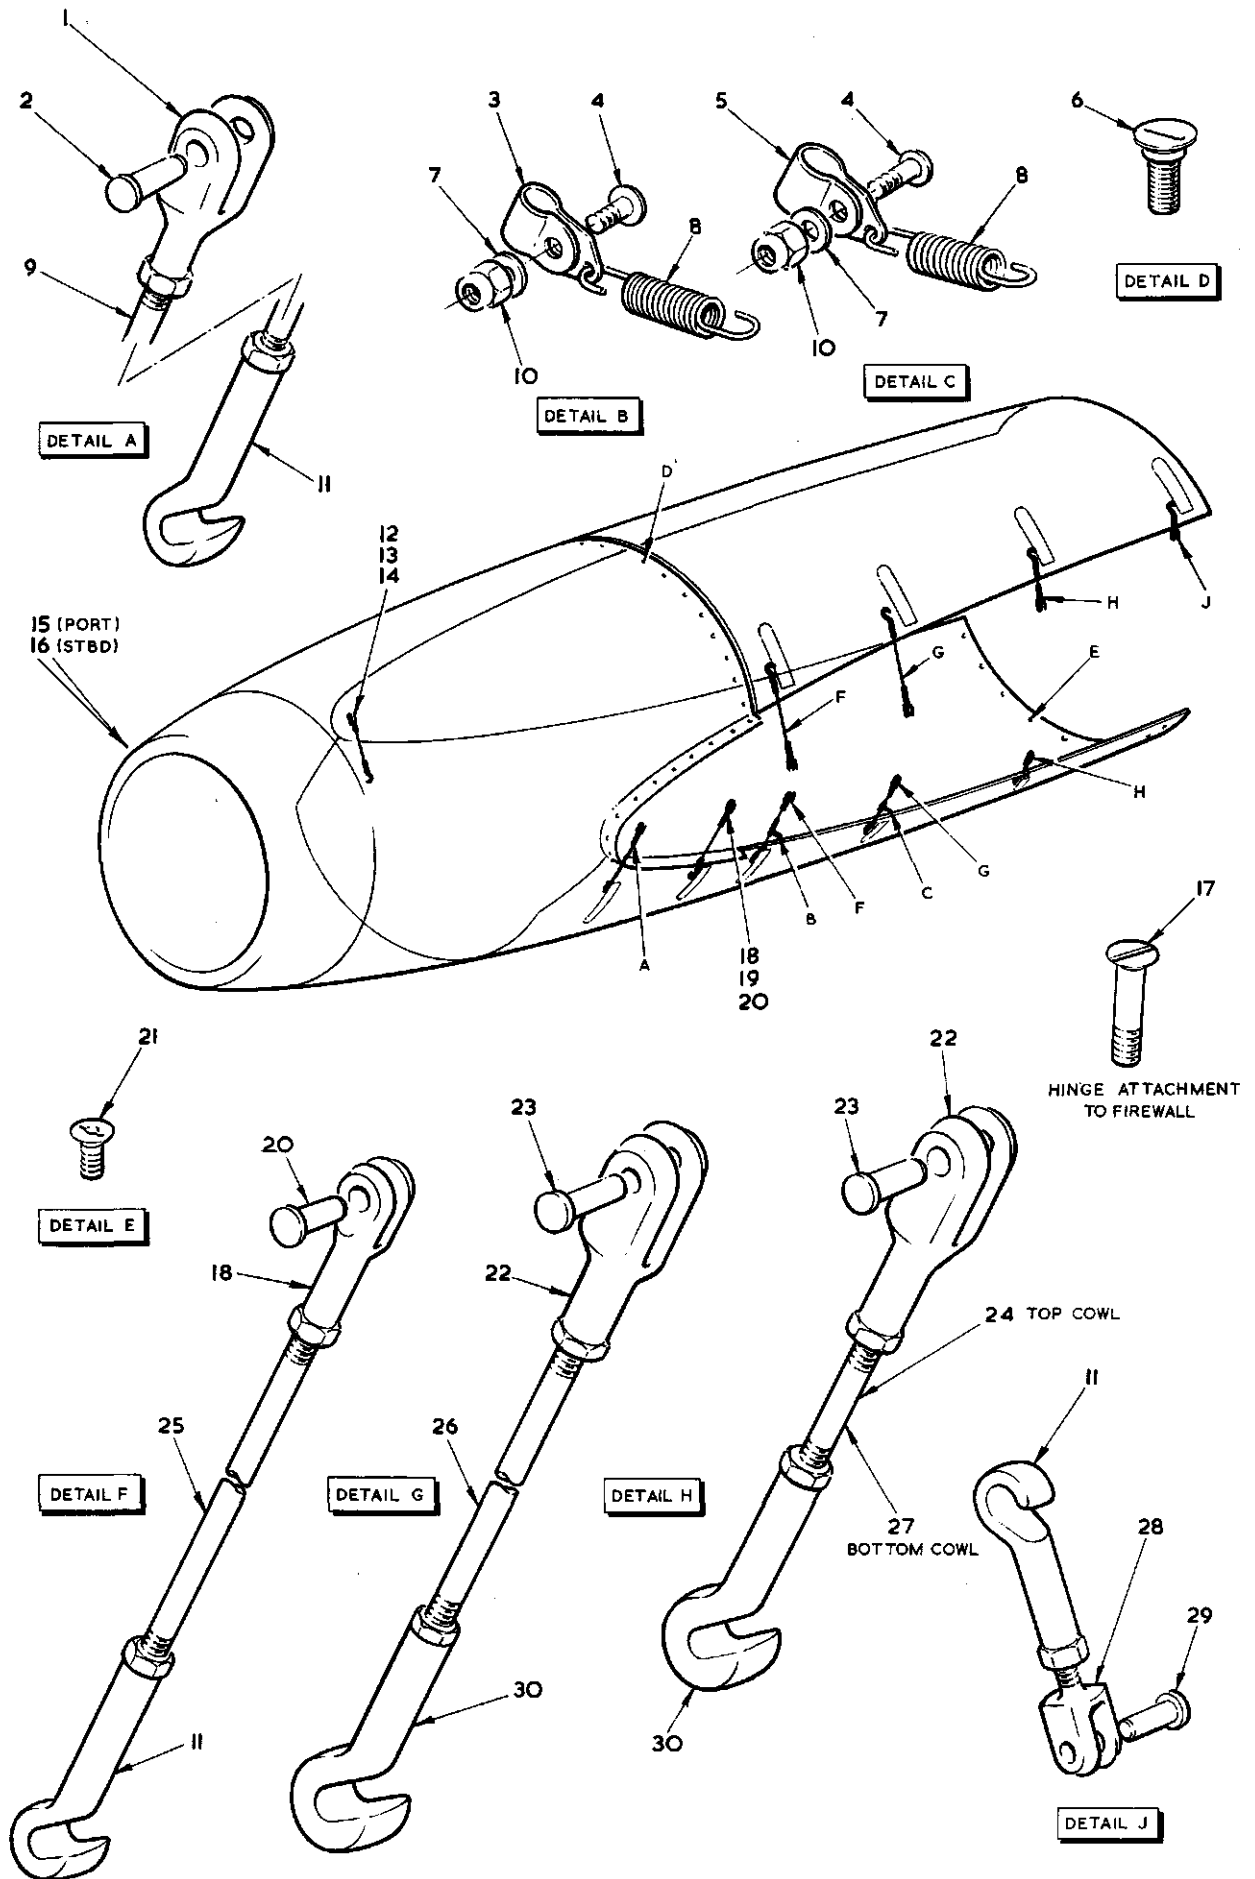


FIG 3 COWLING ENGINE PORT & STARBOARD
Restricted

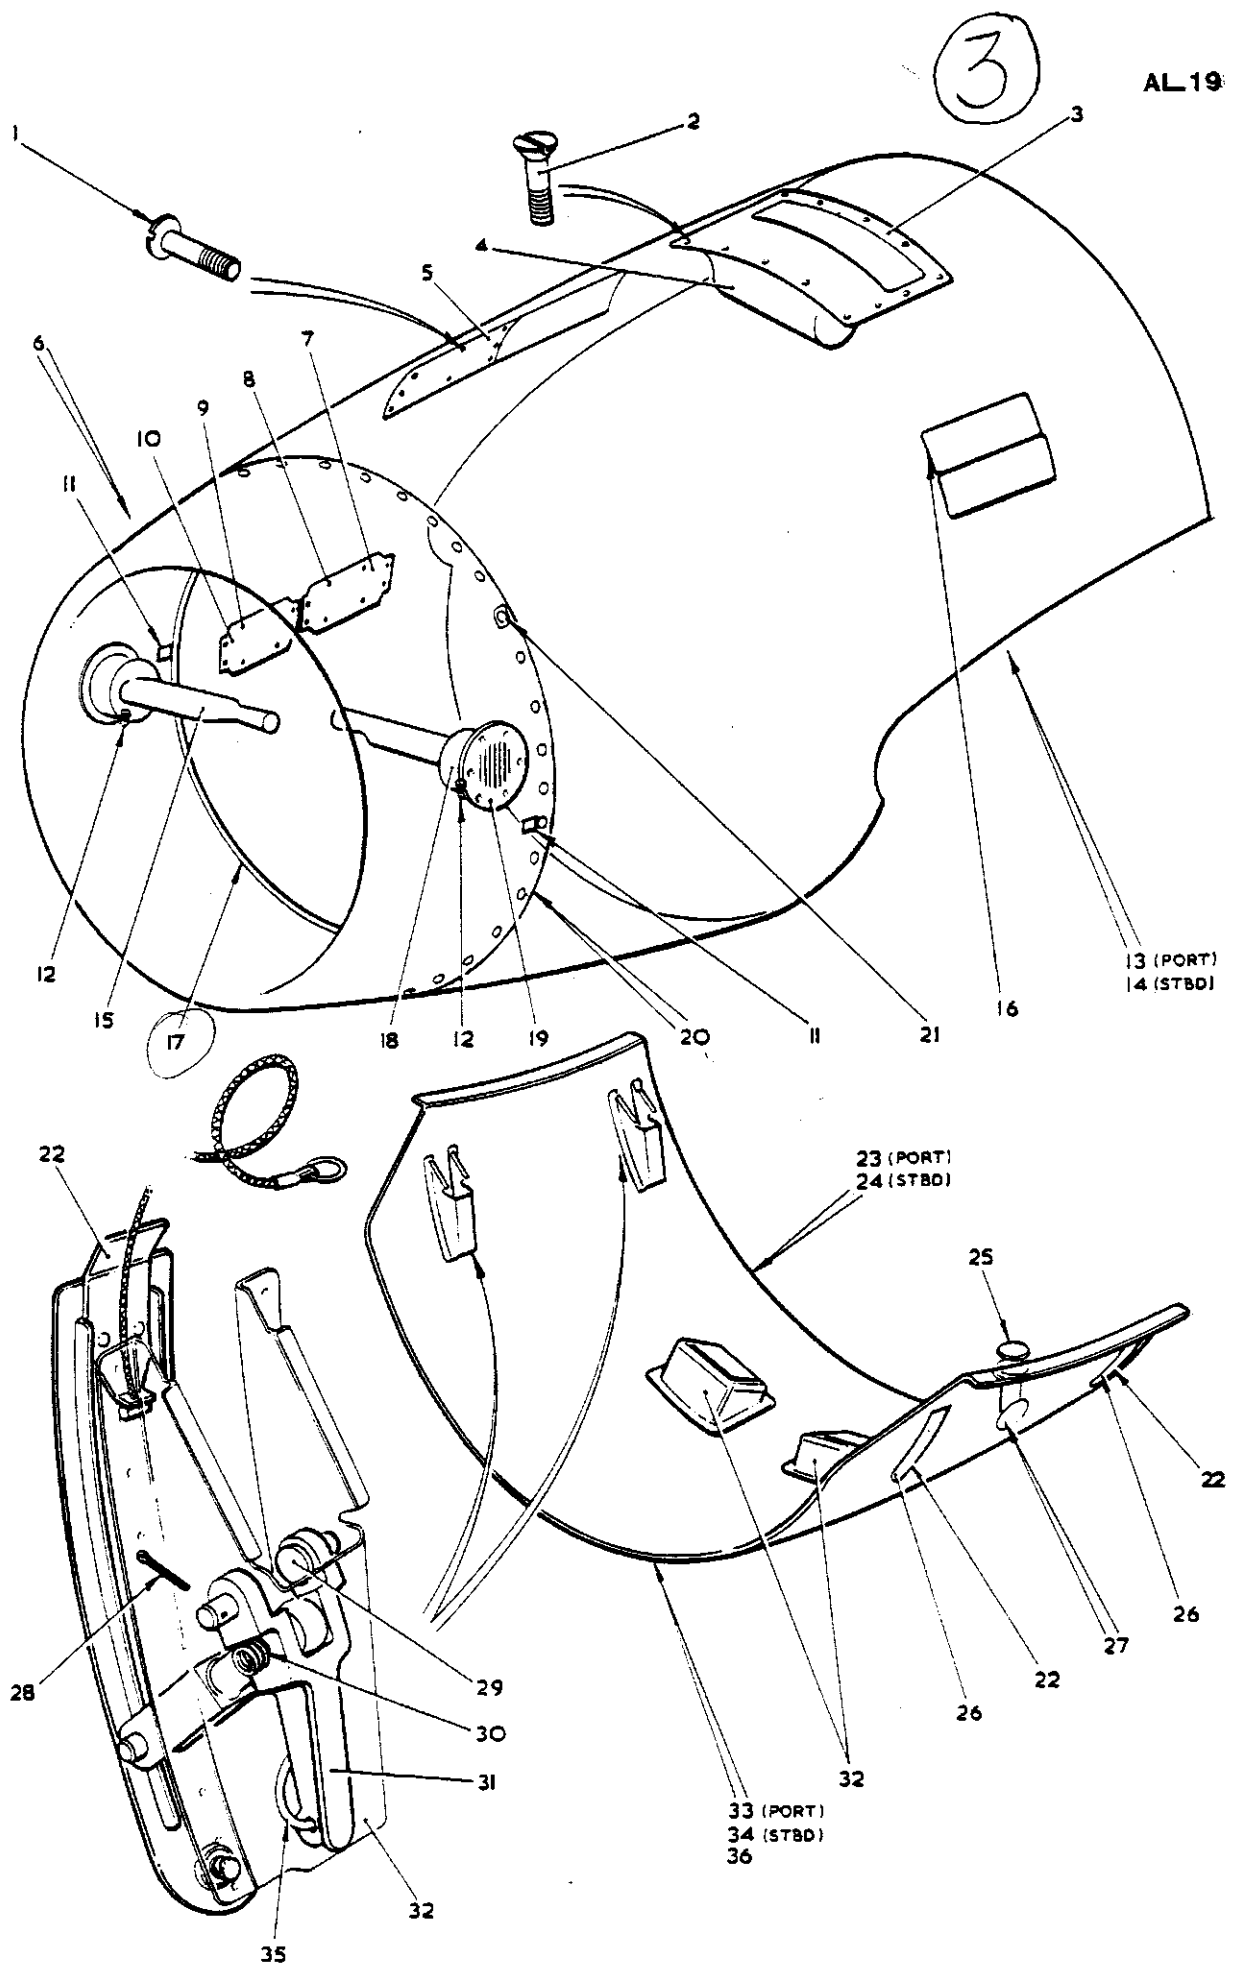


FIG.4 COWLING ENGINE PORT & STARBOARD

T.MK.17 SECT. L

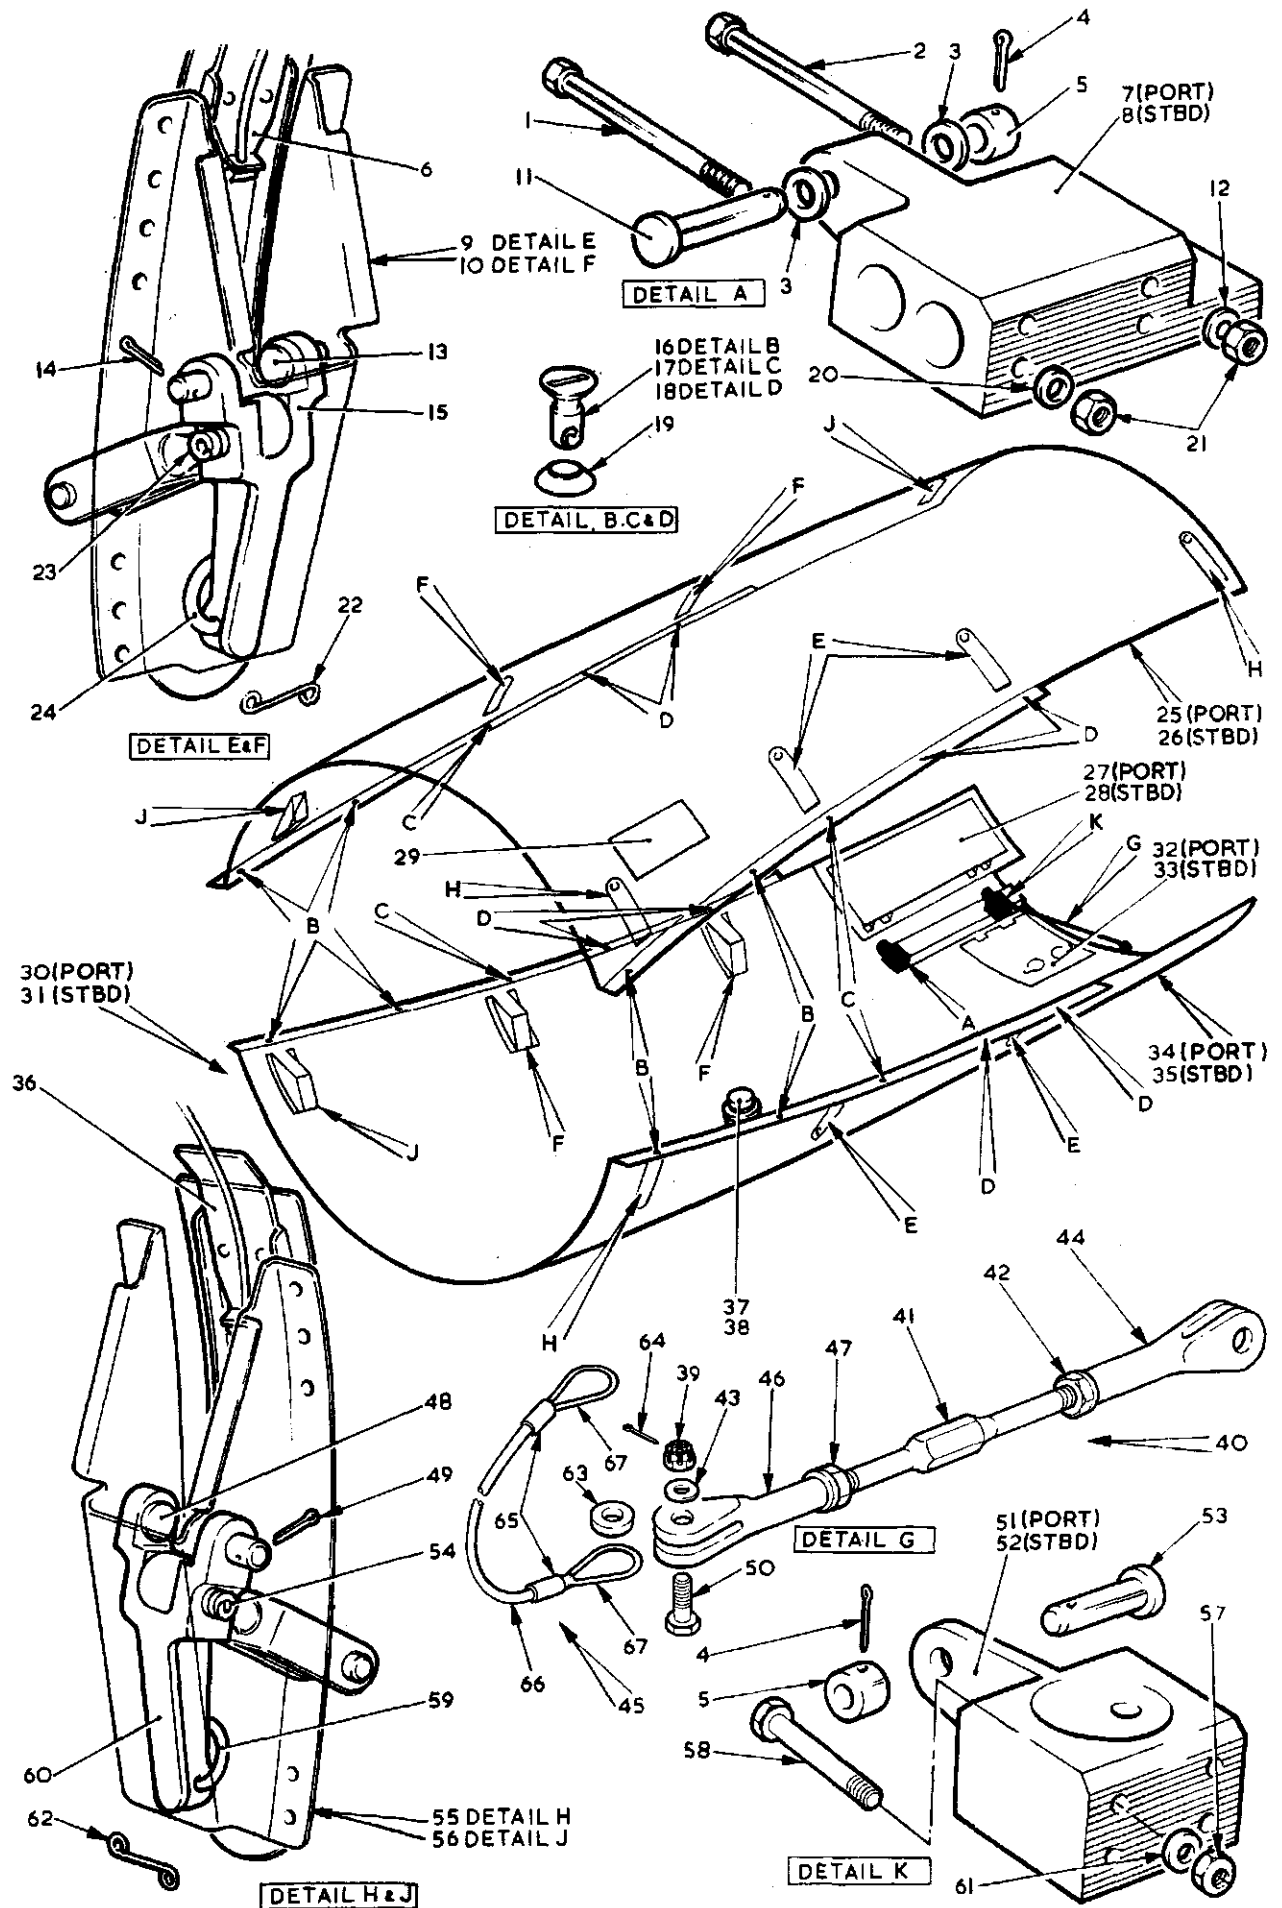


FIG. 5 COWLING ENGINE PORT AND STARBOARD
Restricted

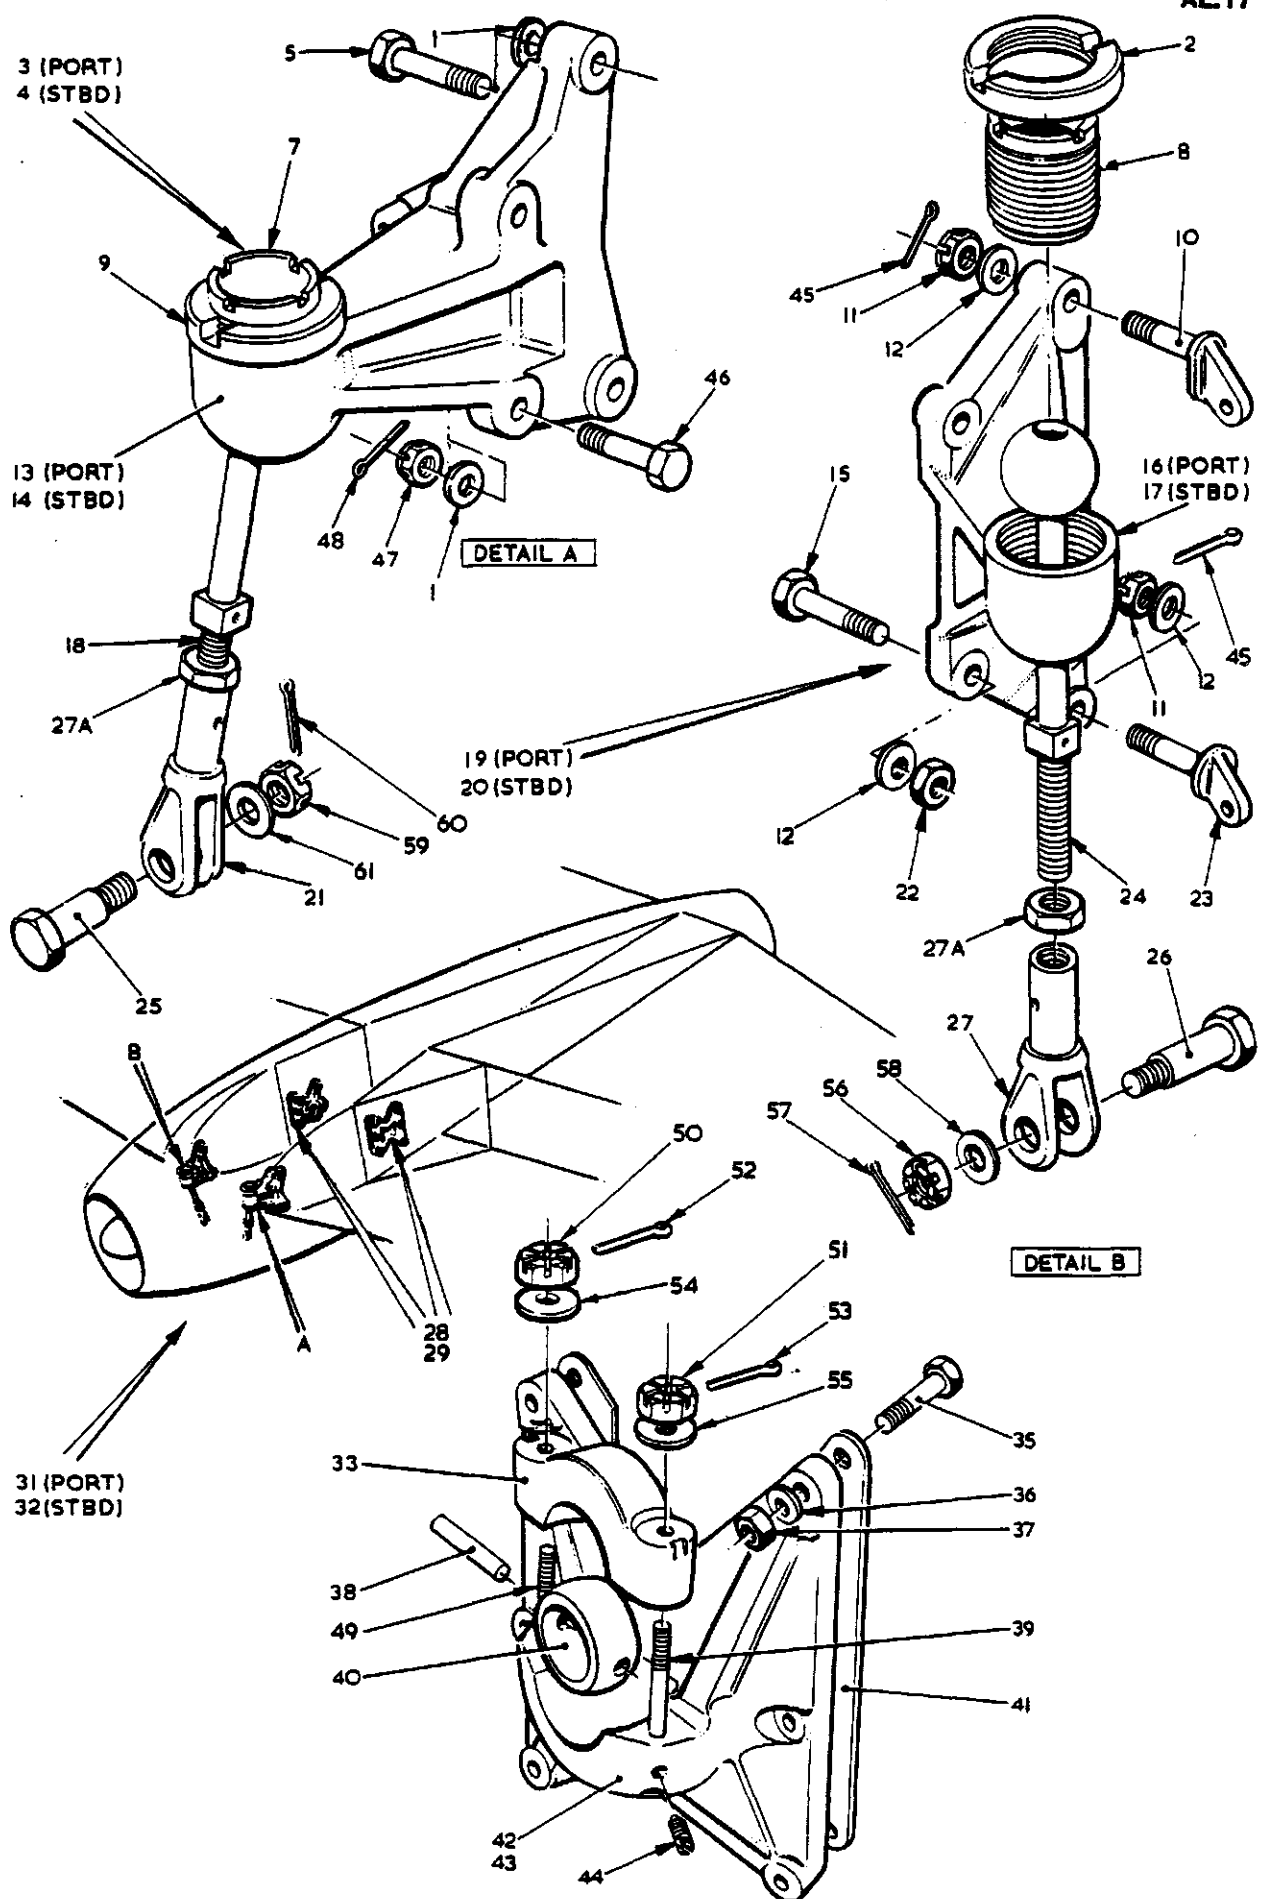


FIG.6 ENGINE MOUNTINGS & ATTACHMENTS PORT & STBD

T.MK.17 SECT. L