

## INDEX OF ASSEMBLIES

| Assembly                                     | Drawing No. | Page No. |
|--|-------------|----------|
| <b>CONTROLS, ENGINE (Section B)</b>          |             |          |
| Engine Controls in Centre Fuselage           | EA1-47-125  | B.1      |
| Engine Controls in Nose Fuselage             | EA1-47-5    | B.1      |
| Engine Controls in Port Wing                 | EA3-47-21   | B.1      |
| Engine Controls in Starboard Wing            | EA3-47-22   | B.1      |
| <b>CONTROLS, FLYING (Section B)</b>          |             |          |
| Aileron Controls in Port Wing                | EA1-45-13   | BA.1     |
| Aileron Controls in Starboard Wing           | EA1-45-14   | BA.1     |
| Flap, Operating, Port                        | EA1-20-701  | BA.1     |
| Flap, Operating, Starboard                   | EA1-20-700  | BA.1     |
| Flying Controls in Centre Fuselage           | EA3-45-379  | BC.1     |
| Flying Controls in Cockpit                   | EA3-45-5011 | BB.1     |
| Flying Controls in Rear Fuselage             | EA3-45-385  | BC.1     |
| <b>ELECTRICAL (Section C)</b>                |             |          |
| Electrical Equipment in Centre Fuselage      | EH5-81-349  | CA.1     |
| Electrical Equipment in Front Fuselage       | EH5-81-341  | C.1      |
| Electrical Equipment in Rear Fuselage        | EH5-81-355  | CB.1     |
| Electrical Equipment in Port Wing            | EA3-81-5551 | CC.1     |
| Electrical Equipment in Starboard Wing       | EA3-81-5552 | CD.1     |
| <b>EQUIPMENT, AIRCRAFT (Section D)</b>       |             |          |
| Equipment in Pressure Cabin                  | EH5-80-1    | D.1      |
| <b>EQUIPMENT, ANCILLARY (Section E)</b>      |             |          |
| Ground Equipment                             | EA3-88-5029 | E.1      |
| <b>FUSELAGE (Section F)</b>                  |             |          |
| Centre Portion                               | EA3-00-5043 | F.1      |
| Centre Structure                             | EA3-11-5001 | F.2      |
| Front Portion                                | EA3-10-5899 | FA.1     |
| Nose Portion                                 | EH5-00-5    | FB.1     |
| Rear Portion                                 | EA3-12-5001 | FC.1     |
| Rear Fuselage and Tail Unit                  | EH5-00-123  | FC.3     |
| <b>MAIN PLANES (Section G)</b>               |             |          |
| Main Plane, Port                             | EA3-00-5011 | G.1      |
| Main Plane, Starboard                        | EA3-00-5012 | GA.1     |
| <b>MISCELLANEOUS ATTACHMENTS (Section H)</b> |             |          |
|  | —           | H.1      |
| <b>POWER INSTALLATION (Section J)</b>        |             |          |
| Cowling, Engine, Port                        | EA1-50-395  | J.1      |
| Cowling, Engine, Starboard                   | EA1-50-396  | J.1      |
| Engine Mounting and Attachments, Port        | EA1-51-1    | JA.1     |
| Engine Mounting and Attachments, Starboard   | EA1-51-2    | JA.1     |
| R.A.3 Engine Installation, Port              | EA1-00-103  | JB.1     |
| R.A.3 Engine Installation, Starboard         | EA3-00-5010 | JB.3     |

## INDEX OF ASSEMBLIES

| Assembly                                 | Drawing No.      | Page No.   |
|--|------------------|------------|
| RADAR, RADIO (Section K)                 |                  |            |
| Radar, GEE 3, Installation               | EA3-90-5001      | KB.1       |
| Radar, Cossor I.F.F./S.S.R. Installation | EH5-82-43        | KBA.1      |
| Radar, TACAN Installation                | EH5-82-41        | KBB.1      |
| Radio, I.L.S. in Centre Fuselage         | EA3-82-5091      | KD.1       |
| Radio, I.L.S. in Front Fuselage          | EA3-82-5089      | KD.2       |
| Radio, I.L.S. in Port Wing               | EA3-82-5093      | KD.8       |
| Radio, I.L.S. in Starboard Wing          | EA3-82-5094      | KD.9       |
| Radio, U.H.F. AN-ARC 52, Installation    | 19C/30529        | KC.1       |
| Radio, W.T. and I.C. Installation        | EA3-82-5127      | KE.1       |
| SERVICES (Section L)                     |                  |            |
| Cabin Pressure System                    | EA3-73-5053      | LA.1       |
| De-Misting System                        | EA3-76-5001      | LB.1       |
| Fuel System in Centre Fuselage           | EA3-57-5015      | LC.1       |
| Hydraulic Equipment in Front Fuselage    | EA3-73-5005      | LD.1       |
| Hydraulic Equipment in Centre Fuselage   | EH5-73-101       | LD.4       |
| Oxygen System                            | EH5-71-1         | LE.1       |
| Window Launcher Heating System           | EA3-75-5127      | LF.1       |
| TAIL UNIT (Section M)                    |                  |            |
| Tailplane and Elevators                  | —<br>EA3-00-5007 | M.1<br>M.1 |
| TANKS (Section N)                        |                  |            |
|  | —                | N.1        |
| UNDERCARRIAGE (Section P)                |                  |            |
|  | —                | P.1        |