CHAP	5	SP 50		SER	VICING	PROCEDU	RES			AP.101B-1000-5A3F Section 1					
TRADE		AIR	RADAR	LIGHTNING				(1st Edition)						ACT	
SHEET	1	OF 2	SHEET/S	1 1A	2 2A	. 3 4	5	6	AL N		DATE			TIME	+
PITLE	IFF/SSR (Abridged Test).						non)	SERVICING RECORD AC NO DATE					H		
								-	(1)				1/5		EST
safety the wor	and S rk det	ervicing ailed on	Notes are to this Card.	be compl	ied wi	th through	ghout	-	(1)	(2)	(3) BRIEF DETAI	(4)	(5)		+
Special Tools and Equipment						URS	MAN	OF DEFECT OR	N	2	1 1 1				
Nil.	L et		Pinciro						MAN HOURS	TRADESMAN	SUSPECTED	720B	N.C.O. INITIALS	19	
			AIR RAI	DAR					MA	TE	DEFECT	[Et	N. IN		
1.	Pre	eparatio	on .									4.1			
1.1		16929 nction s		Ensure	set	to OF	F'.								
12.		ternal poplies.	ower	Switch	on.										
1.3		condary rning pa		Ensure lit.	IFF	warning	g lai	np			ignisati Liangan				
1.4	Lan	np test.		(i)	77	ate lar switch	1.77							5	
				(ii)	and	re both Green I	lamp	d			ALE TO THE			CARDS	
				(iii)	Set	lamp to	est	٠.			ing the			HAILUMEN DROCKENITRE	Ocenor
2.	Bui	ilt-in S	Self Test											d d	LI
2.1		16929.												TAME	THIE
	(a)) Mode 'switch		Set to	ON	•				1.	no Lecinor	E (1)		0000	2200
	(b)) Mode 2	2, C	Set to	OFF	١.		1 1			. No standard			<	н
	and D switches (c) Mode 1 and 3		Set to	1000	0.					Transfer and	A CONTRACTOR OF THE PARTY OF TH				
		code s	switches												
	(d)) Civil, switch		Set to	MIL	٠.									
) Functi	ion	Set to	STB	Υ'.					pri Licque	100			
	(f)) Self 7 buttor		Depres	S.									-	-
2.2	Sec	condary		Ensure	ਜਾਜਾ	warnin	o la	mn.							2
		rning pa	anel.	Ensure IFF warning lamp flashes or remains lit.									1	RADE	
														1	ASSOCIATED TRADES
														1	CLAT
														000	ASSU
													E		NO
									1		Marian A.			1	SP

SMS

