

**Internal Checks — continued****Centre Right Side**

E/F-band homer	...	OFF
Master armament selector	...	OFF
◀ Pure air pressure	...	4200 PSI minimum ▶
Weapons event panel	...	Test. Dimmers as required
Cabin temp selector	...	AUTO, as required
AI recorder	...	Off (in)
GW arming switch	...	SAFE
Pair/single	...	As required
Camera iris	...	As required
Camera master	...	As required
Navigation lights	...	As required
Taxy lights	...	OFF
Missile telemetry	...	Light out
Cabin altimeter	...	Condition
<b>Autopilot:</b>		
Master	...	OFF (supplies indicator white/ OFF)
Stab	...	OFF
Mode keys	...	ATTITUDE
Stick switch	...	OFF
Generator switch	...	NORMAL
IFF	...	SBY. Modes 1 and 3/A selected, mode 2 off. MIL selected. Codes as required
<b>Oxygen:</b>		
◀ Contents	...	Sufficient ▶
Supply	...	ON (wired)
Pressure	...	150 to 215 PSI
Flow switch	...	NORMAL
Test lever	...	Check safety pressure and mask fit, set normal
Flow indicators	...	Annunciating
Anti-g cock	...	ON
AVS	...	OFF
Trigger safety catch	...	SAFE

(End of F3/F6 internal checks)

This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

