

AL 22

FLIGHT SERVICING SCHEDULE
HUNTER ALL MKS
AFTER FLIGHT SERVICINGS

API01B-1300-SB1
1st Edition
Section 3

List of Contents

	Card No	No of Cards
Man A	1- 6	6
Man B	1- 5	5
Man C - Weapons	1-3	3

List of Chapters (Trades)

Chapter 1 Airframe	N11	N11
Chapter 2 Weapons	1	1
Chapter 3 Electrical	N11	N11
Chapter 4 Propulsion	N11	N11
Chapter 6 Flt Syst	N11	N11
Chapter 7 Air Radar	N11	N11
Chapter 8 Air Comms	N11	N11
Chapter 9 Photographic	1	1

List of Contents (Trade)

	Man A Cards	Man B Cards	Man C Cards	Chap/ Cards
Airframe	1-6	N11	N11	N11
Weapons	N11	N11	1-4	N11
Electrical	1	1-4	N11	N11
Propulsion	1	1-4	N11	N11
Flt Syst	1	N11	N11	N11
Air Radar	N11	2	N11	N11
Air Comms	N11	2 & 3	N11	N11
Photographic	N11	N11	N11	1

SMA/39/6/11

Man A
Card 1
AL 22

FLIGHT SERVICING SCHEDULE
HUNTER ALL MARKS
AFTER FLIGHT SERVICING

AP101B-1300-5B1
1st Edition
Section 3

Safety and Servicing Notes are to be complied with throughout the work detailed on this card.

AIRFRAME

Cockpit

011701	Brake parachute selector switches.	Ensure set to "OFF".	ALL
011801	Arrester gear selector switches. (If fitted).	Ensure set to "OFF".	ALL
011301	Aileron system	Ensure hydraulic	ALL
011302	Elevator system	pressure exhausted.	
011304	Tailplane trim system.	Operate.	ALL
016701	Main oxygen system.	Replenish. (5A2 Sect 2).	ALL

ELECTRICAL

Cockpit

036602	Accelerometer.	(i) Observe reading. (Ensure between +7 and -3.75G) (ii) Reset.	ALL
031702	Brake parachute door lock indicator pins.	Ensure correctly locked.	ALL

PROPULSION

Cockpit

046401	Top temperature control switch.	Ensure tell-tail wire intact.	ALL
--------	---------------------------------	-------------------------------	-----

FLT SYST

Cockpit

067302	Height and VSI.	Check zero setting.	7A & 8B
--------	-----------------	---------------------	---------

SMA/89/6/12

Man A
Card 2
AL 22

FLIGHT SERVICING SCHEDULE
HUNTER ALL MARKS
AFTER FLIGHT SERVICING

AP101B-1300-5B1
1st Edition
Section 3

Safety and Servicing Notes are to be complied with throughout the work detailed on this card.

AIRFRAME

Cockpit

010212	Windscreen.) (i) Clean.	ALL
010213	Canopy.) (ii) Look for damage.	
010215	Silica gel container.	Replace crystals if discoloured.	ALL

AIRFRAME

General

010101	External areas.	Look for obvious damage and signs of leaks.	ALL
--------	-----------------	---	-----

AIRFRAME

Nose Undercarriage Compartment

013012	Front door.	Look for obvious damage.	ALL
013021	Rear door.	(i) Look for obvious damage. (ii) Ensure secure.	ALL
010204	Nose undercarriage compartment.	Look for obvious damage.	ALL
013001	Undercarriage assy structure.	Look for obvious damage.	ALL
013028	Door lock spigots.	(i) Clean. (ii) Lubricate. (Grease ZX-38).	ALL
013009	Shock absorber strut.	(i) Look for signs of leaks. (ii) Ensure extension normal. (3.4 in min).	ALL
013025	Nosewheel.	Look for obvious damage.	ALL
013026	Tyre.	Examine.	ALL

SMS 10A

SMA/89/6/12A

Man A
Card 3
AL 22

FLIGHT SERVICING SCHEDULE
HUNTER ALL MARKS
AFTER FLIGHT SERVICING

AP101B-1300-5B1
1st Edition
Section 3

Safety and Servicing Notes are to be complied with throughout the work detailed on this card.

AIRFRAME

Front Fuselage

010227 Hood external emergency release perspex window. (i) Ensure secure. (ii) Examine and particularly for cracks.

ALL

015107 Cabin pressurization water extractor. Ensure drain clear.

ALL

Centre Fuselage

015111 Cabin pressurization cold air unit. Check oil level. (5A2 Sect 2).

ALL

Port Undercarriage Compartment

010623 Structure. Look for obvious damage.

ALL

012801 Undercarriage assy structure. Look for obvious damage.

ALL

012813 Shock absorber strut. (i) Look for signs of leaks. (ii) Ensure extension normal. (10 in min).

ALL

012810 Swivel couplings. Look for obvious damage and signs of leaks.

ALL

999999 Wheel door. Raise by hand.

ALL

012815 Stop. Ensure secure.

ALL

013124 Wheel door stop trunnion special screw. Ensure secure.

ALL

999999 Wheel door. Lower.

ALL

012828 Door lock spigots. (i) Clean. (ii) Lubricate. (Grease ZX-38).

ALL

012829 Mainwheel. Look for damage.

ALL

Small 18/6/13

Man A
Card 4
AL 22

FLIGHT SERVICING SCHEDULE
HUNTER ALL MARKS
AFTER FLIGHT SERVICING

AP101B-1300-5B1
1st Edition
Section 3

Safety and Servicing Notes are to be complied with throughout the work detailed on this card.

AIRFRAME

Port Undercarriage Compartment (contd)

012830	Tyre.	Examine.	ALL
013205	Brake operating cylinders.	Look for signs of leaks and obvious damage.	ALL
013207	Brake pads.	Check for wear. (1/8 in min).	ALL
013208	Wheel brakes.	Adjust. (If required).	ALL
013210	Maxaret wheel tyre.	Ensure positive contact with mainwheel.	ALL
103206	Friction plates.	Examine.	ALL
012831	Rear main pivot point fitting.	Look for cracks.	ALL

AIRFRAME

Port Mainplane

015201	Drop tanks. (100 gallon). (If fitted).	Look for signs of leaks and obvious damage.	ALL
016801	Pressure head.	Look for obvious damage.	ALL
010606	Pylon attachment bolts. (Pre Mod 964 and 965).	Ensure tight.	ALL

Tail Unit

011361	Elevator accumulator.	Check air pressure. (109 bar). (1575 lbf/in ²).	ALL
011350	Micronic filter.	Ensure tell-tail devise flush.	All

SMS 10A

SM 139/6/13A

Man A
Card 5
AL 22

FLIGHT SERVICING SCHEDULE
HUNTER ALL MARKS
AFTER FLIGHT SERVICING

AP101B-1300-5B1
1st Edition
Section 3

Safety and Servicing Notes are to be complied with throughout the work detailed on this card.

AIRFRAME

Tail Unit (contd)

Note: Item 131701 is applicable only if brake parachute has been streamed.

131701 Brake parachute. Replenish.
(5A2 Sect 2).

ALL

Rear Fuselage

011712 Brake parachute door lock indicator pins. Ensure correctly locked.

ALL

Starboard Mainplane

015201 Drop tanks. Look for signs of leaks and obvious damage.

ALL

010606 Pylon attachment bolts. Ensure tight.
(Pre Mod 964 and 965).

ALL

AIRFRAME

Starboard Undercarriage Compartment

010623 Structure.)
012801 Undercarriage assy) Look for obvious
structure.) damage.

ALL

012831 Rear main pivot point fitting. Look for cracks.

ALL

012813 Shock absorber strut. (i) Look for signs of leaks.
(ii) Ensure extension normal.
(10 in min).

ALL

012810 Swivel couplings. Look for signs of leaks and obvious damage.
(Post Mod 978).

ALL

999999 Wheel door. Raise by hand.

ALL

012815 Stop. Ensure secure.

ALL

3MA/89/6/14

Man A
Card 6
AE 22

FLIGHT SERVICING SCHEDULE
HUNTER ALL MARKS
AFTER FLIGHT SERVICING

AP101B-1300-5B1
1st Edition
Section 3

Safety and Servicing Notes are to be complied with throughout the work detailed on this card.

AIRFRAME

Starboard Undercarriage Compartment (contd)

013124	Wheel door stop trunnion special screw.	Ensure secure.	ALL
999999	Wheel door.	Lower.	ALL
012828	Door lock spigots.	(i) Clean. (ii) Lubricate. (Grease ZX-38).	ALL
012829	Mainwheel.	Look for damage.	ALL
012830	Tyre.	Examine.	ALL
013205	Brake operating cylinders.	Look for signs of leaks and obvious damage.	ALL
013207	Brake pads.	Check for wear. (1/8 in min).	ALL
013208	Wheel brakes.	Adjust. (If required).	ALL
011375	Aileron accumulator.	Check air pressure. (900 lbf/in ²).	ALL
011376	Micronic filter.	Ensure tell-tail device flush.	ALL
013210	Maxaret wheel tyre.	Ensure positive contact with mainwheel.	ALL
103206	Friction plates.	Examine.	ALL

Front Fuselage

010201	Skin.	Remove soot deposits.	ALL
010210	Blast tubes.	Look for cracks at welds.	ALL

SMS 10A

SMA/89/6/14A

Man B
Card 1
AL 22

FLIGHT SERVICING SCHEDULE
HUNTER ALL MARKS
AFTER FLIGHT SERVICING

AP101B-1300-5B1
1st Edition
Section 3

Safety and Servicing Notes are to be complied with throughout the work detailed on this card.

PROPULSION

Centre Fuselage

- 043804 ECU combined overboard fuel drain. (i) Ensure fuel is ejected during engine rundown. (ii) Look for leaks.

General

- 045201 Aircraft fuel system. (i) Replenish to amount detailed by NCO IC flight. (ii) Look for leaks. (Aircraft external).

ELECTRICAL

Radio Compartment

- 036001 Main batteries. (Type "J"). Look for signs of leaks and obvious damage.

PROPULSION

Port Air Intake

- 040301 Main air intake. Look for damage without entering intake.
- 040303 Boundary bleeds. Examine as far as possible.
- 040304 Boundary bleed spacers. Ensure secure.
- 043805 Intake guide vanes. Look for damage without entering intake.
- 043806 Compressor blades. Look for damage without entering intake.

SMA/99/6/15

Man B
Card 2
AL 22

FLIGHT SERVICING SCHEDULE
HUNTER ALL MARKS
AFTER FLIGHT SERVICING

AP101B-1300-5B1
1st Edition
Section 3

Safety and Servicing Notes are to be complied with throughout the work detailed on this card.

AIR RADAR

Front Fuselage

077902	Tacan aerial Type 100A. (If fitted).	Visually ensure intact.	ALL
076301	Upper IFF/SSR aerial Type 100A or 100B. (If fitted).	Visually ensure intact.	ALL
076302	Lower IFF/SSR aerial Type 100A or 100B. (If fitted).		ALL

AIR COMMS

Port Mainplane

088602	Upper PTR 175 aerial. (If fitted).	Visually ensure intact.	7A and 8B
--------	------------------------------------	-------------------------	-----------

Centre Fuselage

088603	Lower PTR 175 aerial. (If fitted).	Visually ensure intact.	7A and 8B
088402	UHF wideband aerial.	Visually ensure intact.	ALL

ELECTRICAL

Centre Fuselage

030104	Fatigue meter.	Record readings.	ALL
--------	----------------	------------------	-----

PROPULSION

045501	Extinguisher bottle discharge indicator. (1 off).	Ensure not protruding.	ALL
044002	Engine oil sump.	(i) Replenish. (Oil OX-38). (ii) Look for deterioration of filler neck seal (iii) Ensure cap self locking wing nut tightened securely.	ALL

SMA/89/6/15A

SMS 10A

Man B
Card 3
AL 22

FLIGHT SERVICING SCHEDULE
HUNTER ALL MARKS
AFTER FLIGHT SERVICING

AP101B-1300-5B1
1st Edition
Section 3

Safety and Servicing Notes are to be complied with throughout the work detailed on this card.

PROPULSION

Centre Fuselage (contd)

044402	Auxiliary gear box.	Replenish. (Oil OX-38).	ALL
044214	BTH turbo starter breeches.	Unload.	ALL
044101	Engine access panels.	(i) Ensure secure. (ii) Look for damage.	ALL
040306	Engine bleed valve ducting and louvres.	(i) Look for damage. (ii) Ensure unobstructed.	ALL

PROPULSION

Rear Fuselage

043812	LP turbine blades.	Look for damage without entering jet pipe.	ALL
043903	Jet pipe and rear fuselage.	Look for loose pieces of Alfoil jet pipe lagging in rear compartment.	ALL
043905	Jet pipe thermocouple.	Look for damage.	ALL

AIR COMMS

088202	Telebriefing plug Type 3570.	Look for obvious signs of damage.	ALL
--------	---------------------------------	--------------------------------------	-----

Starboard Mainplane

088502	Standby UHF rod.	Visually ensure intact.	ALL
--------	------------------	----------------------------	-----

ELECTRICAL

Radio Compartment

036017	Sealed lead acid battery. (If fitted).	Look for signs of leaks and obvious damage.	7
--------	--	---	---

Sma/59/6/16

Man B
Card 4
AL 22

FLIGHT SERVICING SCHEDULE
HUNTER ALL MARKS
AFTER FLIGHT SERVICING

AP101B-1300-5B1
1st Edition
Section 3

Safety and Servicing Notes are to be complied with throughout the work detailed on this card.

ELECTRICAL

Front Fuselage

087301	Airstream Direction detector probe.	(i) Look for damage. (ii) Ensure free to rotate.	8B
--------	-------------------------------------	---	----

PROPULSION

040301	Starboard air intake.	Look for damage without entering intake.	ALL
040303	Boundary bleeds.	Examine as far as possible.	ALL
0403304	Boundary bleed spacers.	Ensure secure.	ALL
043805	Intake guide vanes.	Look for damage without entering intake.	ALL
043806	Compressor blades.	Look for damage without entering intake.	ALL

SMS 10A

SMA/59/6/16A STC

Man C
Card 1
AL 21

FLIGHT SERVICING SCHEDULE
HUNTER ALL MARKS
AFTER FLIGHT SERVICING

API01B-1300-5B1
1st Edition
Section 3

Safety and Servicing Notes are to be complied with throughout the work detailed on this card.

MARK

WEAPONS

Cockpit

026201 Weapons system selector switches.

Ensure set to 'SAFE'.

ALL

WEAPONS

Ejection Seats

999999 Seat pan.

Raise to highest position.

ALL

999999 Neg-G strap.

(i) Lengthen.
(ii) Ensure laid back to top of PSP and not passed through seatpan firing handle.

ALL

999999 Parachute harness straps.

(i) Lengthen.
(ii) Ensure not tangled.
(iii) Ensure routed correctly.

ALL

020803 Top latch plunger.

Ensure latch and indicating plungers are flush with each other and slightly below end of plunger housing.

ALL

020811 Drogue container flap pin safety tie.

Ensure intact.

ALL

020826 Scissor shackle safety tie.

Ensure intact.

ALL

020809 Drogue withdrawal line.

Ensure routed correctly.

ALL

020810 Drogue gun shackle.

Ensure secure to piston.

ALL

020807 Drogue gun static rod.

Ensure secure to anchorage bracket.

ALL

020815 Anti 'G' tube blanking plug.

Ensure secure.

ALL

020816 Low pressure oxygen hose.

Ensure secure to manifold and not under tension.

ALL

020817 Mic/tel connectors.

Ensure connected correctly.

ALL

020804 Barostatic time release unit static line.

Ensure secure to anchorage.

ALL

Item 020812 is applicable only to 4HA seats.

020812 Drogue link line.

Ensure routed outside parachute restraint straps and through jaws of guillotine unit.

ALL

Man C
Card 2
AL 21

FLIGHT SERVICING SCHEDULE
HUNTER ALL MARKS
AFTER FLIGHT SERVICING

AP101B-1300-581
1st Edition
Section 3

Safety and Servicing Notes are to be complied with throughout the work detailed on this card.

WEAPONS

Ejection Seat(s) (Cont'd)

020827	Canopy jettison linkage.	Ensure connected to canopy firing unit sear.	ALL
020823	Emergency oxygen system upper rubber tubing.	(i) Carefully extend and ensure by feel, internal thread intact. (ii) Extend spring and examine particularly for cracking adjacent to quick release connection at lower end. (iii) Examine and particularly for cracking including upper end connection.	ALL
020822	Emergency oxygen bottle tell-tale wire.	Ensure intact.	ALL
020822	Emergency oxygen system upper rubber tubing sealing washer.	Ensure present.	ALL
130808	Harness quick release fitting.	Ensure in 'LOCKED' position.	ALL
020828	Manual separation handles.	Ensure locked down.	ALL
020830	Seat raising handle.	Ensure level with seat pan handle.	ALL
130801	Parachute and liferaft pack. (2 off).	(i) Examine and particularly for signs of contamination. (ii) Ensure correctly fitted.	ALL
020814	Leg restraint cords.	Ensure secure to anchor brackets.	ALL

WEAPONS

Centre Fuselage

029101	Aden Gun.	Inhibit. (If fired).	7
--------	-----------	-------------------------	---

Man C
Card 3
AL 21

FLIGHT SERVICING SCHEDULE
HUNTER ALL MARKS
AFTER FLIGHT SERVICING

AP101B-1300-5B1
1st Edition
Section 3

Safety and Servicing Notes are to be complied with throughout the work detailed on this card.

MARK

WEAPONS

Port Mainplane

029302 EMRU No. 1 Mk 1.

Ensure correctly cocked.

029501 SNEB Rocket installation.
(If fitted).

Examine.

ALL

ALL

WEAPONS

Rear Fuselage

021701 Tail parachute
release unit.

Ensure cocked correctly.

ALL

Starboard Mainplane

029302 EMRU No.1 Mk 1.

Ensure cocked correctly.

029501 SNEB Rocket installation
pylons. (If fitted).

Look for obvious damage.

ALL

7.

SMS 10

FLIGHT SERVICING SCHEDULE
AAA.E.E. HUNTER Mk 9 SUPPLEMENT
AFTER FLIGHT SERVICING101B-1300-5B1
Section 3
Oct. 1989

Safety and servicing notes are to be complied with throughout the work detailed on this card.

AIRFRAME

Cockpit.

010217 Ejection seat pin stowage. Ensure secure.

AIRFRAME

Aircraft General.

015204 230 gal. drop tank,
(If fitted). Ensure secure, (tank empty).
Look for signs of leaks and obvious damage.

015205 230 gal. drop tank
bracing strut. (If fitted). Ensure secure.

WEAPONS

Ejection Seat.

020805 Barostatic time release unit
primary plunger cap. Ensure secure.

020813 Seat pan firing cable eye and tie.
(3H seat only). Ensure secure.

130804 Slide disconnect safety tie. Ensure intact.

130805 Rip cord safety tie. Ensure intact.

130811 Webbing straps. Ensure secure.
Look for contamination and damage.

WEAPONS

Port and Stbd. Mainplanes.

Pylons. Inspect for damage.

PROPULSION

Centre Fuselage.

045501 Extinguisher bottles discharge
indicators (2 off). Ensure not protruding.

PROPULSION

Port and Stbd. Air Intakes.

040302 Secondary air intakes. Check springs for damage.

FLIGHT SERVICING SCHEDULE
A&A.E.E. HUNTER Mk 9 SUPPLEMENT
AFTER FLIGHT SERVICING101B-1300-5B1
Section 3
Oct. 1989

Safety and servicing notes are to be complied with throughout the work detailed on this card.

PROPULSION

Aircraft General.

I.P.N.

Replenish.

PROPULSION

Fuel System.

045210 Fuel system resuperator bags test.

Battery master switch	Set to 'ON'.
Engine master switch	Set to 'ON'.
Booster pump	Switch 'ON'.
Main fuel vent pipe	Look for leaks.
Booster pump	Switch 'OFF'.
Engine master switch	Switch 'OFF'.
Battery master switch	Switch 'OFF'.

WEAPONS

Port and Stbd. Mainplanes.

029307 Pylon E.R.U. safety breaks.

Disconnect.

Card 1 of 1

FLIGHT SERVICING SCHEDULE
HUNTER T Mk 7
AAA.E.E. SUPPLEMENTARY SERVICING
AFTER FLIGHT SERVICING

101B-1300-5B1
Section 3
Oct. 1989

Safety and servicing notes are to be complied with throughout the work detailed on this card.

Sept. 1989

WEAPONS

Procedure after spinning or if drop tank is loose after flight.

- (a) Ensure drop tanks are empty.
- (b) Place trolley under tank.
- (c) Re-torque tank.
- (d) 029302 EMRU No. 1 Mk 1 - Ensure correctly cocked.

Chap 9 PHOTOGRAPHIC
Card 1
AL 21

FLIGHT SERVICING SCHEDULE
HUNTER ALL MARKS
AFTER FLIGHT SERVICING

AP101B-1300-5B1
1st Edition
Section 3

Safety and Servicing Notes are to be complied with
throughout the work detailed on this card.

PHOTOGRAPHIC INSTALLATION (IF FITTED)

Cockpit

Item 099401 is applicable only if recorder is fitted.

Item	Description	Action	ALL
099401	GGs recorder.	Operate/Unload. (Annex 7).	ALL

Front Fuselage

099403	G90 camera. (If fitted for use).	Operate/Unload. (Annex 8).	ALL
--------	-------------------------------------	-------------------------------	-----

099405	G90 optical flat. (If camera fitted for use).	Look for obvious damage.	ALL
--------	---	--------------------------	-----

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

