

**GROUP A GENERAL INFORMATION****LIST OF CONTENTS**

|   | <i>Group</i> |
|---|--------------|
| SYSTEM DETAILS ... ..                                   | A.1          |
| REMOVAL OF JUNCTION BOXES, PANELS AND<br>SHELVES ... .. | A.2          |
| ◀ LOCATION OF EQUIPMENT ... .. ▶                        | A.3          |

**Note . . .**

*A list of contents appears at the beginning of each group*

**Introduction**

A general description of the electrical system as a whole is given in this group. Group A.1 describes the system and gives the method of referencing the components, together with general servicing and wiring diagrams of the junction boxes, panels and shelves. Tables listing the ratings and Stores References of the circuit breakers and filament lamps, together with a loading chart and circuit index will also be found in this group. Group

A.2 describes, with illustrations where necessary, the removal of the junction boxes, panels and shelves, while Group A.3 contains a master index of all the electrical equipment, together with illustrations showing the location and means of access to the components. For detailed information on the standard items of equipment employed, reference should be made to the appropriate Air Publications, which are quoted in this group.

This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

