

GROUP F.3

SERVICING LAMPS (CODE L)

LIST OF CONTENTS

	Para.
<i>Equipment employed</i>	1

DESCRIPTION

<i>Servicing lamps</i>	2
<i>Operation</i>	3

SERVICING

<i>General</i>	4
-----------------------	---

REMOVAL AND ASSEMBLY

<i>General</i>	5
-----------------------	---

ILLUSTRATION

	Fig.
<i>Servicing lamps</i>	1

Equipment employed

1. The major components employed in the servicing lamps circuit are quoted below, together with the Air Publication to which reference should be made for a detailed description and the necessary servicing required to maintain them in an

efficient condition.

Cabin lamps,

Mk.1A ... A.P.4343E, Vol.1, Sect.7.

DESCRIPTION

Servicing lamps

2. To illuminate the equipment in the ◀ nose wheel, engine starter and radio bays, ▶ during servicing operations a lamp is provided at each of these locations. The nose wheel bay lamp is mounted on the rear face of frame 3, the radio bay lamp is located adjacent to the gun firing panel at the top of the radio bay and the engine starter bay lamp is mounted on a bracket attached to an air intake stiffener just aft of frame 25. Each lamp is controlled by a switch incorporated in the lamp housing and a small socket is also provided in each housing to enable an inspection lamp to be used when required.

Operation

3. The operation of the circuit will be obvious when reference is made to the wiring diagram given in this group.

SERVICING

General

4. For general servicing of the electrical system as a whole, reference should be made to Group A.1 of this chapter, which also contains a table giving the details of the lamps used in this circuit. Apart from keeping all the components clean, ensuring that they are securely mounted and checking that the filaments are serviceable, no further servicing should be necessary.

Note...

Ensure that the servicing lamps are switched off after use.

REMOVAL AND ASSEMBLY

General

5. Once access has been obtained, the removal and assembly of the servicing lamps should present no unusual difficulties. The location of all the lamps and the means of access to them is indicated in Group A.3 of this chapter.

RESTRICTED

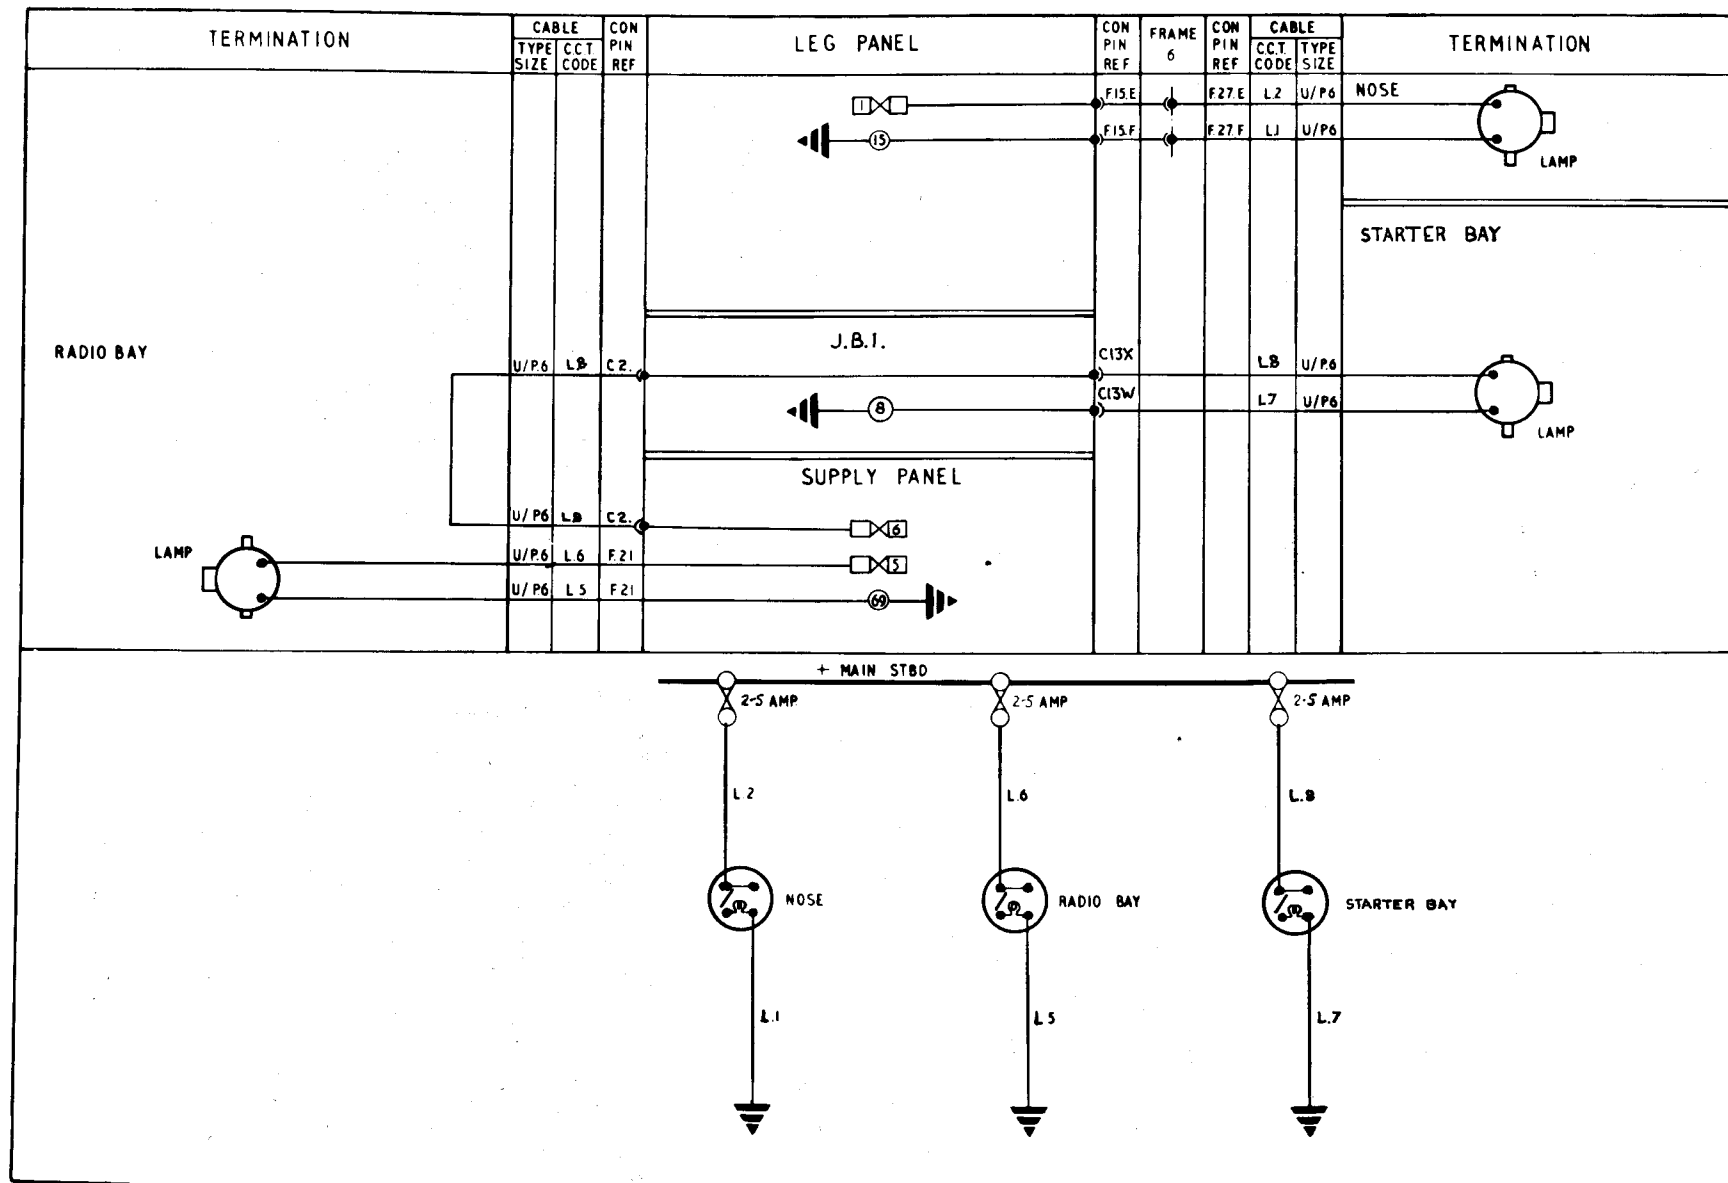


Fig.1. Servicing lamps

RESTRICTED

TP.(E) 11602

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

