

RADIO I.F.F./S.S.R. INSTALLATION

Ref. No.	Part No.	Description	No. Of	Material Specification	M.A. Class of Score	Plate No.
		1 2 3 4 5				
—	E.303383	RADIO, I.F.F./S.S.R. (A.R.I.23134) INSTALLATION,	—	—	—	
		ASSEMBLY (Mod. 1343)				
	B.295711	Aerial, bottom, group	1	—		MA.1
31 5826-99-4280400	—	Aerial, type 100B	1	—	A.	
6098091	B.295710	Mounting, aerial	1	—	C.	MA.1
10B/20275	—	Aerial, type 100B	1	—	A.	
	C.296387	Box, junction, I.F.F./S.S.R., group	1	—		MA.1
10H/9114121	LP.736720	Base, holder, relay	1	—	C.	
	B.290017	Box, junction	1	—		
	F.290020	Bracket	1	—		
	F.290588	Bush, earth	1	—		MA.1
31 5E/9012998	—	Cable, unipen 12	QR	BS2E.21	C.	
	B.296689/1	Diagram, wiring S.S.R./JB	1	—		
31 10H/5920-99-0590109	Belling Lee L.693/1	Fuse, 1 amp	1	—	C.	
10H/5920-99-0590137	Belling Lee L.754/0.5	Fuse, 500MA	1	—	C.	
5X/9491421	Hellermann No. 3	Grommet	1	—	C.	
31 10H/5920-99-0590231	Belling Lee L.1382	Holder, fuse	1	—	C.	
10H/5920-99-0590170	Belling Lee L.575	Holder, fuse	1	—	C.	
	B.290018	Lid	1	—		MA.1
10AS/1002528	—	Plate	1	—	C.	
5X/1956042	Hellermann 419206	Plug sealing	3	—	C.	
5X/	Hellermann 0613-1-1601	Plug, sealing	1	—	C.	
5X/2214039	Hellermann 467-14-5P	Receptacle, jam nut	1	—	C.	
5X/2214028	Hellermann 467-12-10S	Receptacle, jam nut	1	—	C.	
5X/2213944	Hellermann 467-10-6S	Receptacle, jam nut	1	—	C.	
10F/0530473	—	Relay, type SM5A-M4	1	—	B.	
	Std.2133/11	Sleeve, marker	17	—		
	Std.2134/11	Sleeve, marker	11	—		
	Std.2135/11	Sleeve, marker	2	—		
	Std.1606/32/B20	Screw	4	—		5
10AS/1002129	—	Spring, retaining	1	—	C.	
5X/9709513	HC.294D	Terminal, ring tongue 4 BA	6	—	C.	
5X/4491755	HC.296D	Terminal, ring tongue 6 BA	2	—	C.	
5X/1930218	HC.304D	Terminal, ring tongue 4 BA	3	—	C.	
5X/9014365	HC.300	Terminal, ring tongue 0 BA	2	—	C.	
	Std.1507/1/025	Tube, distance	2	—		4
5E/9516201	—	Wire, electrical type B19/0076 black	QR	EL1930	C.	

RADIO I.F.F./S.S.R. INSTALLATION

Ref. No.	Part No.	Description					No. Off	Material Specification	M.R. Class of Store	Plate No.
		1	2	3	4	5				
6098092	B.296244	Box, switch, group					1	—	B.	MA.1
	A.296245	Bracket, mounting					1	—		
	A.296246	Cover					1	—		MA.1
10H/5940-99-012-0202	Oxley	Insulator, "Barb" type 156 white					3	—	C.	
	F.296247	Plate, mounting					1	—		
10CV/0374391	Ferranti	Rectifier, CV.9117					2	—	C.	
	ZS.78									
	Std.1606/45/Z8	Screw					2	—		5
5248	Std.1606/45/A8	Screw					2	—	C.	5
5CW/2007871	C.5162Y Mk. 2	Switch, push button, type A					1	—	C.	
	F.302198	Bracket, failure lamp I.F.F./S.S.R.					1	—		MA.1
10HB/1171709†	D.296551	Cable, SSR.1, assembly					1	—	B.	
31 10HB/†	D.317379	Cable, SSR.2, assembly (Mod. 1375)					1	—	B.	
10HB/1171712†	B.296553	Cable, SSR.3, assembly					1	—	B.	
10HB/1171713†	B.296554	Cable, SSR.4, assembly					1	—	B.	
10HB/1171711†	B.290338	Cable, SSR.5, assembly					1	—	B.	
10HB/1171715†	B.299148	Cable, SSR.6, assembly					1	—	B.	
10HB/1171714†	B.296644	Cable, SSR.7, assembly					1	—	B.	
	† B.296555	Cable, SSR.8, assembly					1	—		
10HB/1171716†	B.299149	Cable, SSR.9, assembly					1	—	B.	
	† B.314837	Cable, SSR.11, assembly (Mod. 1375)					1	—		
	10250	Clip					1	—	C.	6
26VA/6044412	Std.2045/17/26	Clip					3	—	C.	6
26VA/6041756	Std.2045/40/22	Clip					1	—	C.	6
20236	Std.2045/30/22	Clip					1	—	C.	6
11983	Std.2046/21/22	Clip					2	—	C.	6
	Std.2045/23/24	Clip					2	—		6
26VA/6041762	Std.2046/23/24	Clip					2	—	C.	6
5X/1119715	Hellermann	Connector, TBF, hermetic					1	—	C.	
	467HTB-22-55PS									
	1646	Cover, switch					1	—	C.	MA.1
5L/9959118	—	Filament, lamp 28V. 0.04A					1	—	C.	
5UB/4357513	E.K. Cole	Inverter					1	—	A.	
	E.182									
31 5CX/4330630	Page	Lamp, warning, amber					1	—	C.	
	A.1660/C/15									
	A.293155	Mounting, angle, plug					1	—		MA.1
	B.296248	Mounting, control unit S.S.R.					1	—		MA.1
	B.296240	Mounting, radio					1	—		MA.1
1506491	A.296743	Plate, aerial switch					1	—	C.	MA.1
1178	Std.1606/44/B12	Screw					2	—	C.	5
	F.217996	Strip, bonding					1	—		
5CW/1047694	—	Switch, S.P. centre "off"					1	—	C.	
31 10D/5895-99-9563378	—	Transponder, S.S.R. 1520 type "X" 16928					1	—	A.	
5UB/4352384	E. K. Cole	Tray, mounting, inverter					1	—	B.	
31 10AR/5820-99-1075637	—	Tray, mounting, transponder 16945					1	—	B.	
	3808									
31 10AE/5895-99-1071521	Std.1509/23/040	Tube, distance					4	—	MR/C	4
	—	Unit, aerial switch type 16941					1	—	A.	
31 10L/5895-99-9563379	—	Unit, control type "X" 16929					1	—	A.	
31 10AC/1053243	—	Washer, check					8	—	C.	
9889	A.212860	Washer, sealing					1	—	C.	
		† See Cable Chart								



This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.