

NOTE TO READERS

The subject matter of this publication may be affected by Air Ministry Orders, or by "General Orders and Modifications" leaflets in this A.P. or even in some others. If possible, Amendment Lists are issued to correct this publication accordingly, but it is not always practicable to do so. When an Order or leaflet contradicts any portion of this publication, the Order or leaflet is to be taken as the overriding authority.

The inclusion of references to items of equipment does not constitute authority for demanding the items.

Each leaf bears the date and issue and, when applicable, the number of the Amendment List with which it was issued. New or amended technical information on new leaves, which are inserted when this publication is amended, will be indicated by solid triangles positioned in the text. The triangles are placed thus <..> to show the extent of amended text and thus >< to show where text has been deleted. When a Chapter is issued in a completely revised form the triangles will not appear.

A fully amended copy of Ground Handling Notes is to be carried in the aircraft on all flights other than those on delivery from the Contractor's works, or when the aircraft is required to fly over hostile territory.

< The reference number of this publication was altered from A.P. 4347G to 101B-1302-12 in June 1967. No general revision of page captions has been undertaken, but the code number appears in place of the earlier A.P. reference on new or amended leaves issued subsequent to that date. >

CONTENTS

CHAPTER 1 - Tabulated data

CHAPTER 2 - Controls

CHAPTER 3 - Ground handling

CHAPTER 4 - Replenishing

CHAPTER 5 - Engine starting and ground testing

INDEX

(Completely revised)

Item	Chap.	Para.	Fig. No.
Alighting gear controls ...	2	-	1
Alighting gear oleo leg ...	(1)	5	-
	(4)	-	1 Key
Ammunition ...	1	12	-
Anti-G installation air bottle ...	4	9	1 Key
Armament ...	(1)	12	-
	(4)	13	-
Batteries ...	4	-	1
Battery isolation switch ...	2	-	1
Brakes, wheel, pressure gauge ...	2	-	1
Brakes, wheel, control ...	2	-	1
Cabin hood release, external ...	2	4	-
Cabin hood release, internal ...	2	3	-
Cine camera ...	2	-	1
Cold air unit ...	4	20	-
Controls in cabin ...	2	-	1
Covers ...	3	1	-
Danger areas (turbine jet and intake) ...	5	-	1
Debris guards ...	3	-	2
Defuelling ...	4	2	-
Dimensions of aircraft ...	1	-	1
Drop fuel tanks ...	4	16	-
Ejection seats ...	1	9	-
Electrics, voltage ...	1	8	-
Engine, type ...	1	7	-
Engine, starting and ground test ...	5	-	-
Entrance/exit ...	2	2	-
External battery socket ...	4	-	1 Key

Item	Chap.	Para.	Fig. No.
Fire extinguisher switch	2	-	1
Flap control	2	-	1
Fuel cocks, H.P. and L.P.	2	-	1
Fuel	4	-	1 Key
Fuel system diagram	1	-	2
Fuel system defuelling	4	2	-
Fuel system refuelling	4	1	-
Fuel filter de-icing	4	17	-
General arrangement	1	-	1
Generators	1	8	-
Ground test	5	-	-
Hydraulic system accumulators	4	5	1 Key
Hydraulic system diagram	1	-	3
Hydraulic system engine driven pump	1	4	-
Hydraulic system hand pump pressure gauge ...	2	-	1
Hydraulic system topping up	4	4	1
Jacking, wheel change	3	6	-
Nose wheel oleo leg (see alighting gear)			
Oil system	4	19	1 Key
Oxygen system and emergency	(1	11	-
	(4	18	-
Parking brake	3	4	-
Picketing	3	5	2
Powered ailerons and elevators	1	-	3
Pressure cabin	1	3	-
Pressure refuelling	4	1	-
Refuelling	4	1	1
Relighting switches	2	-	1
Servicing points	4	-	1
Starter cartridges	(1	7	-
	(4	13	-

Item	Chap.	Para.	Fig. No.
Towing	3	3	1
Tyre changing, jacking	3	6	-
Tyres	1	5,6	-
Voltage, electrical system	1	8	-
Undercarriage (see alighting gear)			

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

