

EQUIPMENT AIRCRAFT—FATIGUE METER—INSTALLATION

Ref. No.	Part No.	Description	No. Off	Material Specification	M.R. Class of Store	Plate No.
		1 2 3 4 5				
21	5CZ/1053794	D.239870 METER, FATIGUE, ASSEMBLY (Mod. 912)	—	—		
21		Block, terminal, type B, 2-way	—	—	B.	
21		F.215678 Bolt, special	2	S.154		
21		F.215679 Bolt, special	1	S.154		
	—	B.216903 Cable, F.M.1, group (See Cable Chart)	1	—	—	
	—	B.216904 Cable, F.M.2, group (See Cable Chart)	1	—	—	
		F.216906 Bracket, fuseholder	1	L.72		
		A.216905 Cable, F.M.3, group (See Cable Chart)	1	—	—	
	7154	Std.840/55 Clip, securing cable	1	DTD.610	MR/C	4
21	6A/4664239	— Meter, structure fatigue, Mk. 14	1	—	A.	
		F.215681 Nut, special	3	S.62.8		
		F.215682 Piece, distance	3	L.65		
		A.215660 Plate, mounting	1	L.72		
21	1919	Std.1341/3 Stud, earthing point	1	—	C.	4
		F.205530 Tube, retaining	2	S.62.8		
		F.215680 Tube, retaining	2	S.62.8		
	3767	Std.915/B20 Washer	1	DTD.610	C.	4
	4150	Std.915/C22 Washer	4	DTD.610	C.	4
21	4613	Std.1335/C18 Washer	1	—	C.	4
21	4659	Std.1335/C22 Washer	1	—	C.	4

[illegible]

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

