

## Chapter 2 PREPARATION FOR FLIGHT

## LIST OF CONTENTS

	Para.		Para.		Para.
Introduction	1	Topping-up liquid starter fuel tank	14	Checking tyre pressures	26
Refuelling	2	Topping-up cold air unit	15	Air drier	27
Defuelling	4	Refilling engine oil sump	16	Removal of locking devices and covers	28
Draining water from fuel system	5	Refilling accessories gearbox and turret	17	Assembly of braking parachute	29
Refilling hydraulic reservoir	6	Refilling fuel filter de-icing tank	18	Mechanical opening of parachute doors	30
Charging hydraulic emergency and anti-'G', air bottles	7	Priming the fuel system	19	Fitting and removal of inboard drop tanks	31
Charging wheel brake accumulators	8	Armament safety break	20	Fuel flow check with drop tanks fitted	33
Charging aileron booster accumulator	9	Precautions prior to running the engine	21	Fitting and removal of outboard drop tanks	34
Charging elevator booster accumulator	10	Starting preliminaries	22	◀ Fitting and removing Matra launcher or Napalm bomb	35A ►
Charging oxygen cylinders	12	Engine starting	23	Hood and windscreen spray drains	36
Batteries	13	Running up engines with batteries removed	24	Hood jettison control	37
		Undercarriage deflection check	25		

## LIST OF ILLUSTRATIONS

	Fig.		Fig.		Fig.
Jet efflux danger areas	1	Windscreen air drier banjo assembly	2B	Loading of stores on inboard pylon	4
Servicing points	2	Braking parachute	3	Fitting drop tank strut	5
Drop tank refuelling selector switch	2A			◀ Loading of stores on outboard pylon	6 ►

## WARNING

## AN AIRCREW EJECTION SEAT IS FITTED TO THIS AIRCRAFT.

Before attempting to enter the cabin ensure that the instructions detailed on the LETHAL WARNING marker card at the front of this handbook have been complied with.

THIS IS VERY IMPORTANT

## ENGINE

When the aircraft is being manoeuvred on the ground with the engine running, or when the engine is being run for any purpose, it is essential that all personnel keep well clear of the air intakes and jet exhausts. To remain in proximity (fig. 1) is hazardous to safety. The air intake safety guards must be fitted at all times when the engine is being ground run.

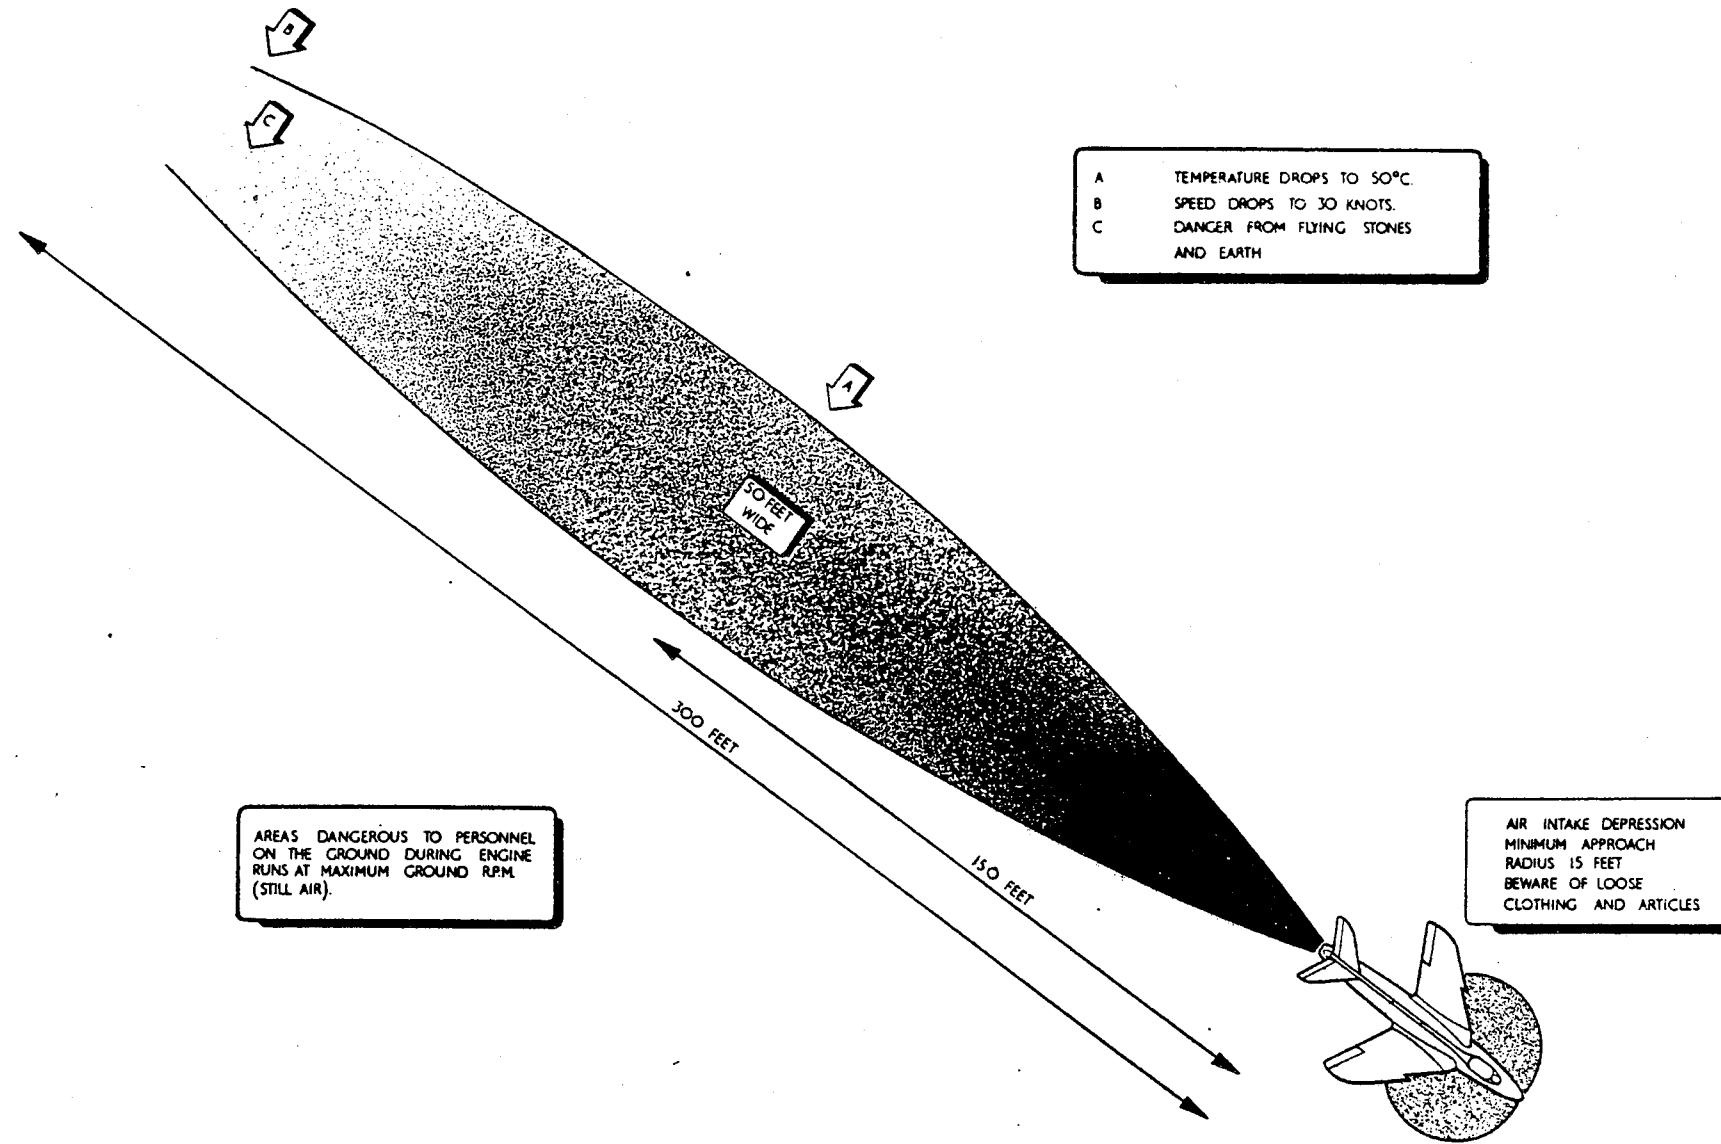


Fig. 1 Jet efflux danger areas  
RESTRICTED

**Introduction**

1. This chapter describes the replenishing of the various systems and certain servicing operations which may be found necessary during the preparation of the aircraft for flight, the location of the various servicing points being given in fig. 2. When the necessary operations are completed a check must always be made to ensure that all tools have been removed and that all panels and access doors lie flush with the surrounding surfaces and are securely fastened. The position of the access doors and the removable panels is shown in Sect. 2, Chap. 4. The operations described in the following paragraphs are grouped for convenience under their various systems and do not, therefore, constitute the order in which the operations are to be carried out.

**Refuelling**

2. The aircraft is refuelled under pressure through a 1½in. standard coupling in the port wheel bay (fig.2, item 12). High pressure refuellers, capable of refuelling at a rate of 150 gallons per minute at a pressure of 45–50 lb. per sq. in., should be used, but if these are not available, existing refuellers may be used with an adapter hose.

3. The disposition of the tanks, their interconnections and diagrams of the fuel system are given in Sect.4, Chap.2. The procedure for refuelling the system is as follows:-

(1) Ensure that the defuelling cock (fig.2, item 17) accessible via the engine starter access door, in the bottom of the fuselage, is turned OFF and locked (See para.4 (8)).

**Note . . .**

*The defuelling cock is normally locked in the OFF (flight) position. It is only turned to ON during defuelling.*

(2) Ensure that the L.P. fuel cock in the cabin is OFF. This is important.

(3) Ensure that the ganged cocks at the bottom of the rear transport joint are ON. (If the transport joint butt strap is in position, the cocks will already be ON.)

(4) Ensure that the refueller is earthed and connect the bonding of the hose to the aircraft structure. Remove the sealing cap from the refuelling coupling in the port wheel bay and connect up the refueller hose in its place.

**Note . . .**

*Ensure that the refuelling pressure relief valves in the underside of the stub wings are free to operate. This is particularly important when icy conditions prevail or when the aircraft has not been used for an appreciable time. To test a valve screw a ¼ in. B.S.F. bolt into the threaded hole in the valve and then pull the valve down.*

(5) Start the refueller pump and set the refueller control to RE-FUEL.

(6) (a) *Pre Mod.1228 aircraft* – If using internal power supply set the battery master switch on the leg panel in the cabin to ON, if using external power supply ensure that the switch is set to OFF.

(b) *Post Mod.1228 aircraft* – The battery master switch is to be OFF whether using the internal or an external power supply.

**Note . . .**

*A switch (fig.2A) in the port stub wing (accessible through the port wheel bay) enables selective refuelling, according to the position of the switch, of either, wing tanks only, wing tanks and inboard external tanks or wing tanks, inboard and outboard external tanks. In the latter position, when inboard external tanks are not fitted, the wing and outboard external tanks will be refuelled (Mod.1023).*

(6A) Set the time switch in the port wheel bay to ON and the drop tank refuelling selector switch as required. (The refuelling indicator lights in the wheel bay, one for each refuelling valve, should then come ON). If a low-pressure refueller is being employed, refuelling may take longer than 8 minutes and this will necessitate switching on the time switch for a second cycle. The servo valves in the aircraft fuel system will automatically close when the tanks are full and the refuelling circuit will cease to operate.

**Note . . .**


*During refuelling, after 50–100 gallons of fuel have passed into the aircraft, ensure that air is passing out of the vents from the pressure relief valves. This is particularly important when icy conditions prevail or when the aircraft has not been used for an appreciable time.*

(7) When refuelling is completed, check that the refuelling indicator lights on the time switch are extinguished and total the fuel contents as follows:— Add the amount put in (as recorded on the refueller gauges) to the amount remaining after the previous flight (as entered by the pilot in the Form 700).

(8) Remove the refuelling equipment and replace the sealing cap on the refuelling coupling. Check that the cap attachment chain length conforms with the details specified in Sect.4, Chap.2, Refuelling coupling.

(9) Switch OFF the time switch if it has not run a full cycle, and the battery master switch if using the internal power supply on pre Mod. 1228 aircraft.

**RESTRICTED**

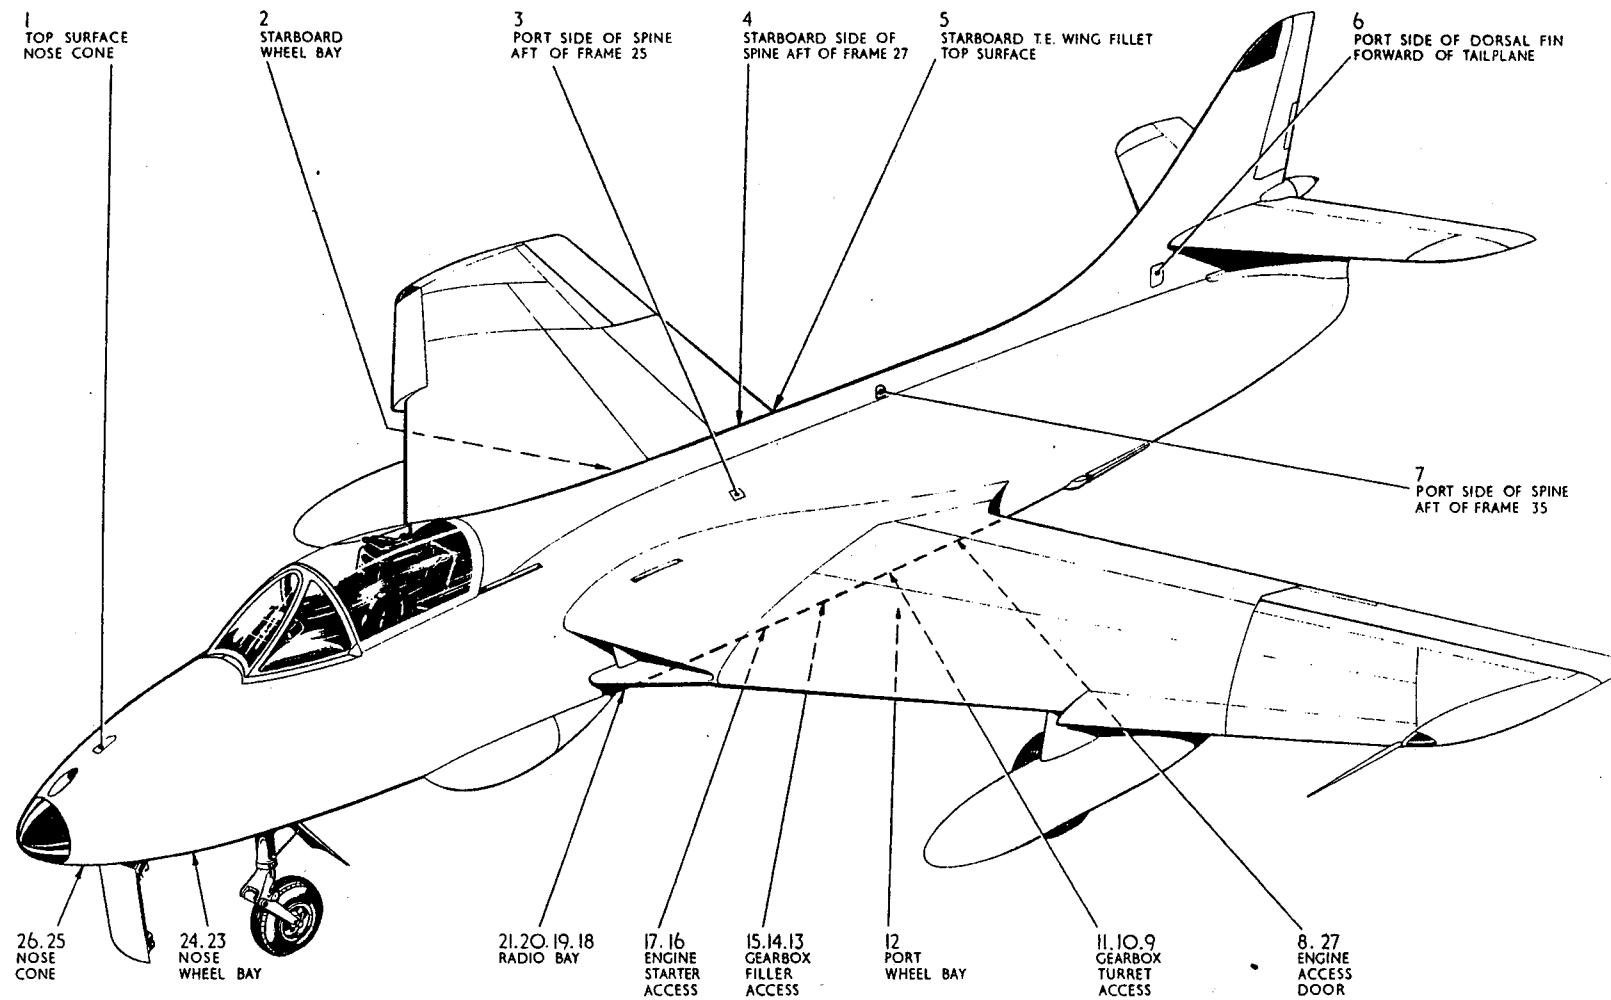

1. CAMERA GUN	7. EXTERNAL AIR CONNECTION - FUEL SYSTEM	14. FUEL FILTER DE-ICING TANK FILLER	21. CHARGING CONNECTION - AIR BOTTLES
2. CHARGING CONNECTION - AILERON ACCUMULATOR	8. ENGINE OIL SUMP FILLER	15. EXTERNAL HYDRAULIC SUPPLY VALVES	22.
3. ENGINE LIQUID FUEL STARTER TANK FILLER	9. ENGINE FUEL FILTER	16. FUEL SYSTEM DRAIN VALVES (2)	23. CHARGING CONNECTION - WHEEL BRAKES
4. COLD AIR UNIT DIPSTICK	10. ACCESSORIES GEARBOX TURRET DRIVE FILLER	17. DEFUELLING COCK	24. CHARGING CONNECTION - OXYGEN CYLINDERS
5. HYDRAULIC RESERVOIR FILLER	11. HYDRAULIC HANDPUMP	18. FUEL SYSTEM DRAIN VALVES (2)	25. EXTERNAL HOOD SWITCH
6. CHARGING CONNECTION - ELEVATOR ACCUMULATOR	12. REFUELLING AND DEFUELLING COUPLING	19. EXTERNAL ELECTRICAL SUPPLY	26. GROUND PRESSURIZING CONNECTION
	13. ACCESSORIES GEARBOX FILLER	20. BATTERIES	27. FUEL SYSTEM DRAIN VALVES (2)

**Fig. 2 Servicing points**

14457

**RESTRICTED**

**Defuelling**

4. The aircraft is defuelled through the refuelling coupling in the port wheelbay, being either sucked out by a refueller or pumped out by the tank booster pumps. An air pressure supply is required to transfer the fuel from the rear, wing and drop tanks to the front tanks during this operation. The air pressure, which must not exceed 120 lb. per sq. in. is fed into the system through an external supply connection in the spine of the centre fuselage (fig.2, item 7). The procedure for defuelling the aircraft is as follows:—

- (1) Ensure that the refueller is earthed and connect the bonding of the hose to the aircraft structure. Remove the sealing cap from the refuelling coupling in the port wheel bay and connect the refueller hose.
- (2) Connect a pneumatic servicing trolley (Ref. No. 4F/1805) to the external air pressurization connection in the spine of the centre fuselage and apply pressure.

**Note . . .**

*On Aircraft Pre-mod. 1325 wherever it is necessary to pressurize the fuel system using an external air supply connected to the ground pressurization connection, the integrity of the non-return valve fitted in the pipe line between the air filter and the engine must first be established by disconnecting the flexible air pressurizing hose at the engine end, connecting and starting the external air supply and blowing air through the disconnected hose; if the non-return valve has failed, detached parts of the valve will be discharged from the open end of the hose. Where no defects are found shut off external air supply, reconnect flexible hose and proceed with normal pressurization. Change non-return valve if found defective.*

- (3) Set the refueller control to DEFUEL.
- (4) Turn the L.P. cock to OFF and the selector cocks to AUTO. Connect an external power supply or set the battery master switch to ON. Set the engine master switch to ON.

- (5) Remove the locking pin from the lever of the defuelling cock, disengage the hinged locking plate from the lever and turn the cock (fig.2 item 17) to ON.
- (6) Start the refueller pump to draw out fuel.
- (7) As soon as the refueller commences to suck air, switch on the booster pumps to ensure that all fuel in the system is drained off. Switch off the booster pumps as soon as the refueller commences to suck air again and stop the refueller pump. Disconnect the external power supply or set the battery master switch to OFF. Set the engine master switch to OFF.
- ◀ (8) Turn the defuelling cock to OFF, move the hinged locking plate to engage with the lever of the cock and lock in position with the locking pin.

**Note . . .**

*During initial assembly of the hinged locking plate to the defuelling cock, the hinged plate attachment bolt, Part No. F.250214 must be adjusted so that the slot of the plate engages with the lever of the cock allowing no movement of the lever in the fully closed position (Sect.4, Chap.2). The stops on the cock are internal, it is therefore essential that the cock be turned to its full extent to ensure that it is fully closed.*

- (9) Disconnect and remove the defuelling equipment, re-fit the sealing cap on the refuelling coupling and the cap and access panel of the air pressurization connection.

**Draining water from fuel system**

5. Drainage of water and sediment that may have accumulated in the fuel system is facilitated by the provision of small drain valves located at the lowest points in the fuel system, together with a small plug in the engine filter casing. The position of these valves is indicated in fig.2, items 16, 18 and 27. These valves and drain plug must be used periodically to draw off a few pints of fuel and any water and sediment that may have accumulated. To use the valves, re-

move the sealing caps and insert a suitable length and diameter of hose into each valve in turn. Inserting the hose pushes open the spring loaded valve, which closes again automatically when the hose is removed. A suitable container should be made available for the reception of the drained fluid. This fluid must afterwards be discarded. When the drainage of water is completed, replace the sealing caps, replace and secure the access panels. When draining water from 230 gallon drop tanks the drain plugs in the tanks must not be unscrewed more than three turns, using Allen Key (Ref. 1C/6252).


**Refilling hydraulic reservoir****Note . . .**

*Every care must be taken to ensure that only clean hydraulic fluid is introduced into the system. Fluid drained from the system during bleeding must NOT be put back into the reservoir. Hydraulic fluid has a detrimental effect on paint, electrical cables, rubber, etc., and although a drip tray is provided at the filler neck of the reservoir, great care must be taken to ensure that no fluid is spilled on such parts. The specification of the fluid to be used is given in the Leading Particulars.*

6. Access to the filler cap of the hydraulic reservoir is obtained by removing an access panel from the top surface of starboard wing fillet (fig. 2, item 5). The filler cap is provided with a sight glass to facilitate the checking of the fluid level in the reservoir.

Proceed as follows:—


If, with the aircraft standing on its alighting gear with the hydraulic accumulators inflated with air but not charged with oil, and with the landing flaps and air brake up, the fluid level is no longer visible through the sight glass, the reservoir must be topped up. To top up, remove the filler cap slowly, to release any built-up pressure that may exist in the reservoir, and pour in fluid until it reaches the top of the filler neck. A container fitted with a flexible nozzle should be used to facilitate the operation. When topping up is completed, replace the filler cap securely and mop up any spilled fluid.

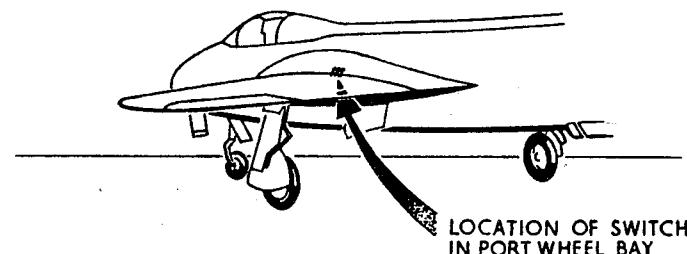

**KEY TO FIG. 2A—Drop tank refuelling selector switch**

The drop tanks will be refuelled during refuelling according to the position of the switch as follows:—

Drop Tanks		
Switch position	Fitted	Refuelled
I	Inner and outer	All
	Outer only	Outer
	Inner only	No
II	All configurations	None
III	Inner and outer	Inner
	Outer only	No
	Inner only	Inner

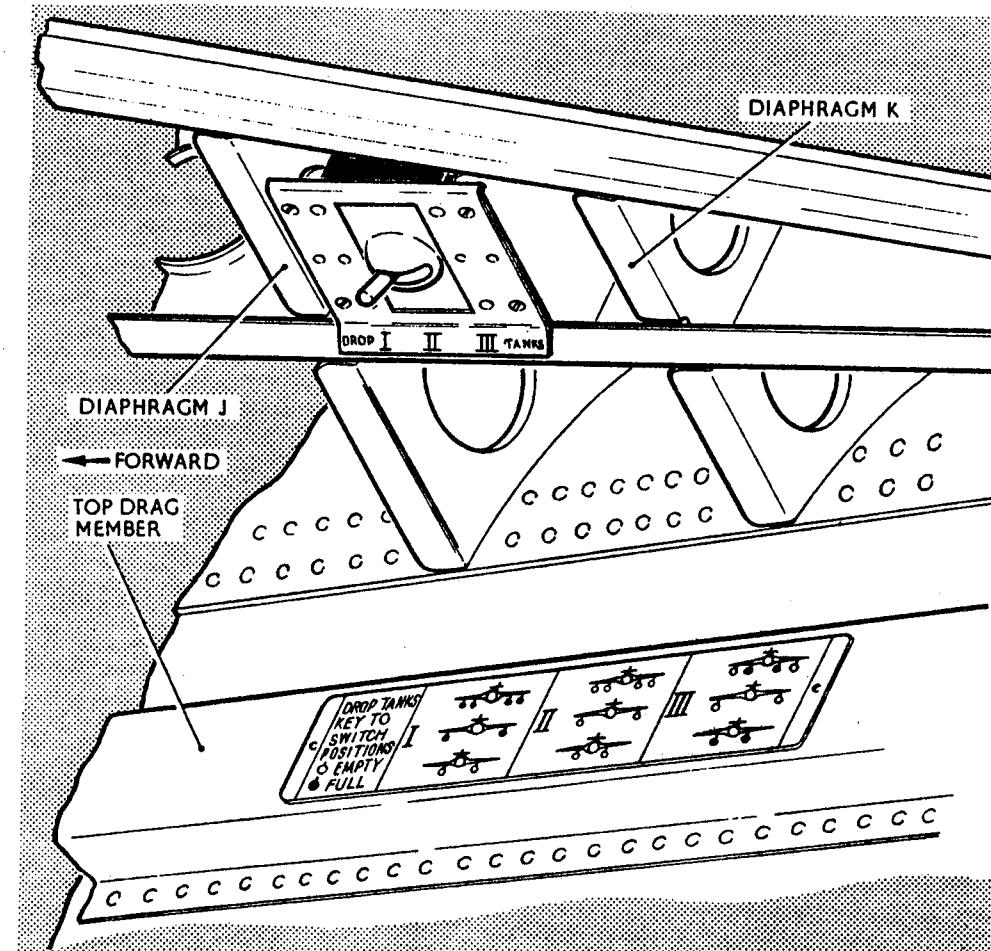

**Fig. 2A. Drop tank refuelling selector switch**

## RESTRICTED

**WARNING**

When high pressure air is admitted to a closed volume previously contaminated with inflammable substances, spontaneous combustion or "die-selling" may take place.

The conditions most conducive to this occurrence are when the closed volume is small (as in a pressure gauge) and the inflation is carried out quickly so that there is a rapid rise in pressure.

The techniques required for the avoidance of such conditions are cleanliness of equipment and the admission of high pressure air slowly.

When charging or testing the pressure in undercarriage shock absorbers, hydraulic accumulators, pneumatic valves, gauges and similar pneumatic or hydraulic components, it is essential to ensure that:—

- (1) All equipment used, including test gauge adapters and feed connections from the pressure source, must be free from contamination by dirt, grease, fluid or oil.
- (2) Adapter control screws or cocks which admit high pressure air to the component or test gauge must be opened slowly to prevent a rapid rise of pressure.

**Charging hydraulic emergency and anti-G air bottles**

7. The high pressure air bottles for the emergency operation of the alighting gear and landing flaps and the anti-G air bottles are mounted at the rear of the cabin. It is essential to ensure that these bottles are fully charged before each flight. Pressure gauges are installed in the cabin to register the pressure in the bottles; should the indicated pressure be below that given in the Leading Particulars, the bottles must be recharged to the correct pressure through the in situ charging valve (fig.2, item 21).

**Note . . .**

If either the alighting gear or flaps emergency system has been used, it will be necessary to reset the air release valves, after which the hydraulic system must be primed and bled. The air bottles must then be recharged.

**Charging wheel brake accumulators**

8. Access to the hydraulic accumulators for the wheel brakes, together with their charging connection is from within the nose wheel bay. The pressure is indicated on the brake accumulator pressure gauge in the cabin. *If after dissipating the hydraulic pressure, by operating the brake lever a number of times, the pressure shown on the gauge is below that stipulated in the Leading Particulars, the accumulators must be recharged through the charging connection (fig.2, item 23).*

**Charging aileron boosters accumulator**

9. The hydraulic accumulator for the aileron boosters, together with its charging connection and associated pressure gauge, is accessible from within the starboard wheel bay. *The hydraulic pressure should be dissipated by operating the aileron controls until the hydro-booster jacks cease to operate. The air pressure should then be checked and if the pressure shown on the gauge is below that stipulated in the Leading Particulars the accumulator must be recharged through the adjacent charging connection (fig.2, item 2).*

**Charging elevator booster accumulator**

10. Access to the hydraulic accumulator for the elevator booster together with its charging connection, may be obtained by removing an access panel (fig.2, item 6) in the port side of the dorsal fin, just forward of the tail plane. The access panel is provided with a window to enable the accumulator pressure to be checked by reference to a pressure gauge located adjacent to the accumulator. On completion of recharging operations the valve cap must be replaced, tightened and the outer sleeve of the cap wire-locked to the hexagon of the valve body.

*If, after dissipating the hydraulic pressure by operating the elevator control until the hydro-booster jack ceases to operate, the pressure indicated on the gauge is below that stipulated in the Leading Particulars, the accumulator must be recharged.*

11. The aileron and elevator selector valves are fitted with an override device which enables

Power Off to be selected manually, so ensuring that it is always possible for servicing operations to be carried out by the use of handpump. The operating procedure is contained in Sect.3, Chap. 6.

**Charging oxygen cylinders****WARNING**

It is essential in the interests of safety that oxygen installations are kept free from oil, grease or moisture.

12. The three oxygen cylinders are mounted in the front fuselage, two being mounted vertically with their valves uppermost between frames 4 and 6 on the starboard side of the aircraft, and the other one on the port side where it lies athwart frame 5 with its valve facing forward. A charging valve, common to all three cylinders, is mounted on the forward face of frame 6 just below the rear of the starboard pair of cylinders. Access to the cylinders and charging valve may be obtained from within the nose wheel bay. The cylinders may be recharged in situ through the charging valve to the pressure quoted in the Leading Particulars, or the cylinders may be replaced by fully-charged cylinders as described in Sect.3, Chap.10 of this volume. The charging valve is provided with a protective cover to keep it free from oil and grease. This cover must be removed before charging can be effected and replaced immediately after charging has been satisfactorily completed. The procedure for in situ charging is described in the relative equipment publication.

**Batteries**

13. The main and standby batteries are carried in the radio bay in the front fuselage, access being obtained via the radio access doors (fig. 2, item 20). These batteries must be checked periodically for state of charge as described in Sect.5, Chap. 1, which also contains instructions for the changing of the batteries.

**Note . . .**

*Before attempting to connect the batteries ensure that the Cannon plugs are not shorting against the aircraft structure.*

## RESTRICTED

### Topping-up liquid starter fuel tank

14. A small access panel in the top port side of the centre fuselage (fig.2, item 3) gives access to the filler for the liquid starter fuel tank. Pre Mod.1362 a dipstick is fitted and is marked for four starts (approx.  $\frac{1}{2}$  gall. per start). The tank should be topped up to the upper mark on the dipstick. Post Mod. 1362 no dipstick is provided and the tank should be topped up until the bottom of the filter is just covered. (Care should be taken to ensure that no liquid is spilled as it is detrimental to electric cables, etc.)

### Topping-up cold air unit

15. A small hole in the top starboard side of the centre fuselage (fig.2, item 4), between frames 27 and 28 gives access to the cold air unit dipstick and filler orifice. The oil level in the unit should be examined daily and topped-up as necessary with oil as specified in the Leading Particulars until it reaches the full mark on the dipstick. The oil should be poured through the dipstick orifice in small quantities, otherwise a false level will be indicated on the dipstick.

### Refilling engine oil sump

16. The engine oil sump is filled under pressure through a self-sealing connection which is accessible through the main engine access door (fig.2, item 8). The sump is provided with a sight glass to indicate the oil level. If the level is low, as indicated by the sight glass, oil should be pumped in through the self-sealing connection until the level is correct. The oil specification is given in the Leading Particulars.

#### Note . . .

*It is not necessary to prime the oil system, although it is advisable to turn the engine over to ensure oil circulation and pressure indication before running the engine. After the initial ground run, the level should be re-checked and the sump replenished if necessary.*

### Refilling accessories gearbox and turret

17. The accessories gearbox and the turret which is incorporated in the drive assembly,

are each provided with a filler and dipstick. Access to the gearbox filler is through an access door on the underside of the fuselage forward of the rear spar (fig.2, item 13) and that of the turret through a larger door situated just aft of the rear spar (fig.2, item 10). Before checking the level, ensure that the dipstick of each unit is pressed right home before removing. If the level is low, as indicated by the dipstick, replenish until the oil is level with the overflow pipe. The specification of the oil for topping up both units is given in the Leading Particulars.

### Refilling fuel filter de-icing tank (pre Mod. 1396)

18. The fuel filter de-icing tank is located between frames 31 and 32 on the port side of the engine bay and the contents indicator is mounted on the gearbox filler access door landing adjacent to the replenishment couplings. The tank is replenished as follows:-

- (1) Remove the blanks from the two self-sealing couplings and connect a replenishing can to the larger coupling.
- (2) Connect a short length of hose to the smaller coupling.
- (3) Feed fluid, as specified in the Leading Particulars, into the system until it flows from the short hose.
- (4) Remove the hoses and refit the blanks to the couplings.
- (5) Depress the plunger at the side of the pointer on the contents indicator dial, move the pointer to FULL and release the plunger to hold the pointer in this position.

### Priming the fuel system

19. After any component in the engine fuel system has been disconnected, the aircraft fuel tanks have been drained, the engine has been newly installed or has been inhibited, the engine fuel system must be primed in accordance with the procedure described in the engine publication.

#### Note . . .

*The high-pressure fuel pumps are fuel lubricated consequently they will suffer damage*

*if the engine is turned over when the pumps are dry. It is essential, therefore, to ensure that the engine is not turned before the system is primed. To obviate the risk of fire when starting the engine, mop up any fuel that may have been spilled. It may be necessary to bleed the system again if fluctuations of rev/min are experienced during the initial ground run after bleeding, as such fluctuations may be due to trapped air having moved round into the pumps under running conditions.*

### Armament safety break

20. An armament safety break which consists of a plug assembly is located above the starboard glare shield in the cabin. The plug must be removed from its socket and placed in the adjacent stowage, to which it is attached by a short length of cable, during the loading of stores or servicing of equipment except when carrying out functional checks. The plug is labelled ARMAMENT SAFETY BREAK with an arrow pointing upward which are visible when the plug is in the socket. When the plug is removed and stowed the label SAFE is visible.

### Precautions prior to running the engine

#### WARNING

*Before attempting to start the engine, ensure that all personnel are at a safe distance from the air intakes and jet exhaust and take the necessary action to prevent any person walking into these danger zones (fig.1) and also the starter exhaust when starting the engine.*

21. Before running the engine ensure that there is no requirement to bleed the engine fuel system (para.19). Remove the air intake, jet pipe and centre fuselage sealing covers. Examine the engine and air intake ducts to ensure that they are free from accumulations of fuel, oil or any loose articles. The air intake safety guards must be fitted prior to ground running the engine.

**Starting preliminaries**

22. Before starting the engine, the aircraft should be headed into wind with the tail pointing away from other aircraft. Main wheels should be effectively chocked in accordance with A.P. 119 series. For full power engine run and especially when slam acceleration and deceleration checks are being made, double chained chocks must be used.

**Engine starting**

23. The engine is started by means of a Plessey (*iso propyl nitrate liquid fuel*) starter. A description of the starter installation is given in Sec. 4, Chap. 1. For a description of engine starting procedure refer to A.P. 101B-1307-12.

**Running up engine with batteries removed**

24. Running up the engine with the batteries removed is not possible on this aircraft as the engine starter cannot be energized from an external supply.

**Undercarriage deflection check**

25. The main and nose undercarriage shock absorbers must be checked in accordance with the instructions detailed in Sect. 3, Chap. 5 and recharged as necessary.

**Checking tyre pressures**

26. Due to the heavy loads imposed on the tyres of this aircraft, it is most important to ensure that the correct inflation pressures are maintained. When checking the pressures, as called for in the Servicing Schedule, a tyre pressure gauge must always be used.

**Air drier**

27. The air drier for the dry-air sandwich of the windscreens is located on the rear face of frame 7 just forward of the cabin port shelf and is connected to the valve on the windscreens by a rubber tube. The system must be examined as follows:-

(1) Examine the windscreens for signs of internal misting and moisture deposits. The presence of moisture indicates leaking connections, a cracked transparent panel, saturated silica gel or a blanked off air drier.

(2) Examine the system for damage and security and check the colour of the silica gel crystals in the air drier tube. The crystals, which are normally blue in colour, should be changed when they turn red. Use silica gel Ref. No. 33C/790, when replenishing the air drier tube.

(3) On replacement of an air drier ensure that it is not taped or otherwise blanked off.

**Note . . .****Pre S.T.N./Hunter/54**

*Before attempting to remove the air drier tube, the windscreen dry-air sandwich must be sealed against the ingress of moisture by unscrewing and removing the banjo bolt and rubber tube from the windscreen valve connection. The valve is spring loaded and will close thus sealing the windscreen. The instructions for the re-assembly of the banjo and banjo bolt are given in fig. 2B.*

**Post S.T.N./Hunter/54**

*Before attempting to remove an air drier, the windscreen dry air sandwich must be sealed against the ingress of moisture by blanking off that end of the rubber tube disconnected from the air drier. See fig. 2B for assembly of banjo.*

**Removal of locking devices and covers**

28. Before flight, remove the following locking devices, as well as any weather covers that may be fitted:-

- (1) Control surface locking clamps (*always before flying controls locking gear*).
- (2) Flying controls locking gear.
- (3) Air intake sealing covers, or safety guards if they have been fitted. Jet pipe and pitot head sealing covers. Any other covers.
- (4) Any picketing equipment and attachments.
- (5) Undercarriage safety stops.
- (6) Pilot's ladders.

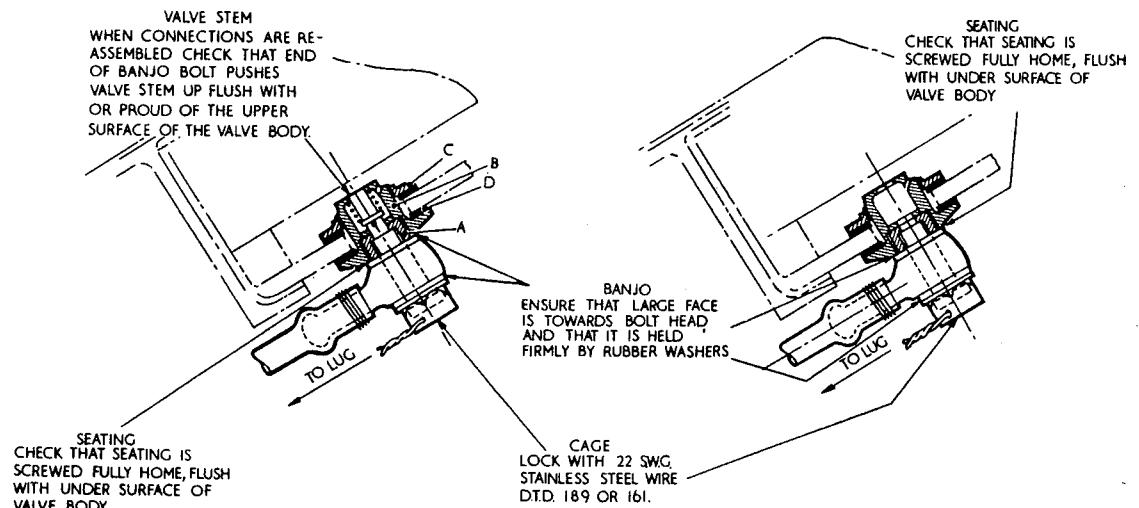


Fig. 2B Windscreen air drier banjo assembly

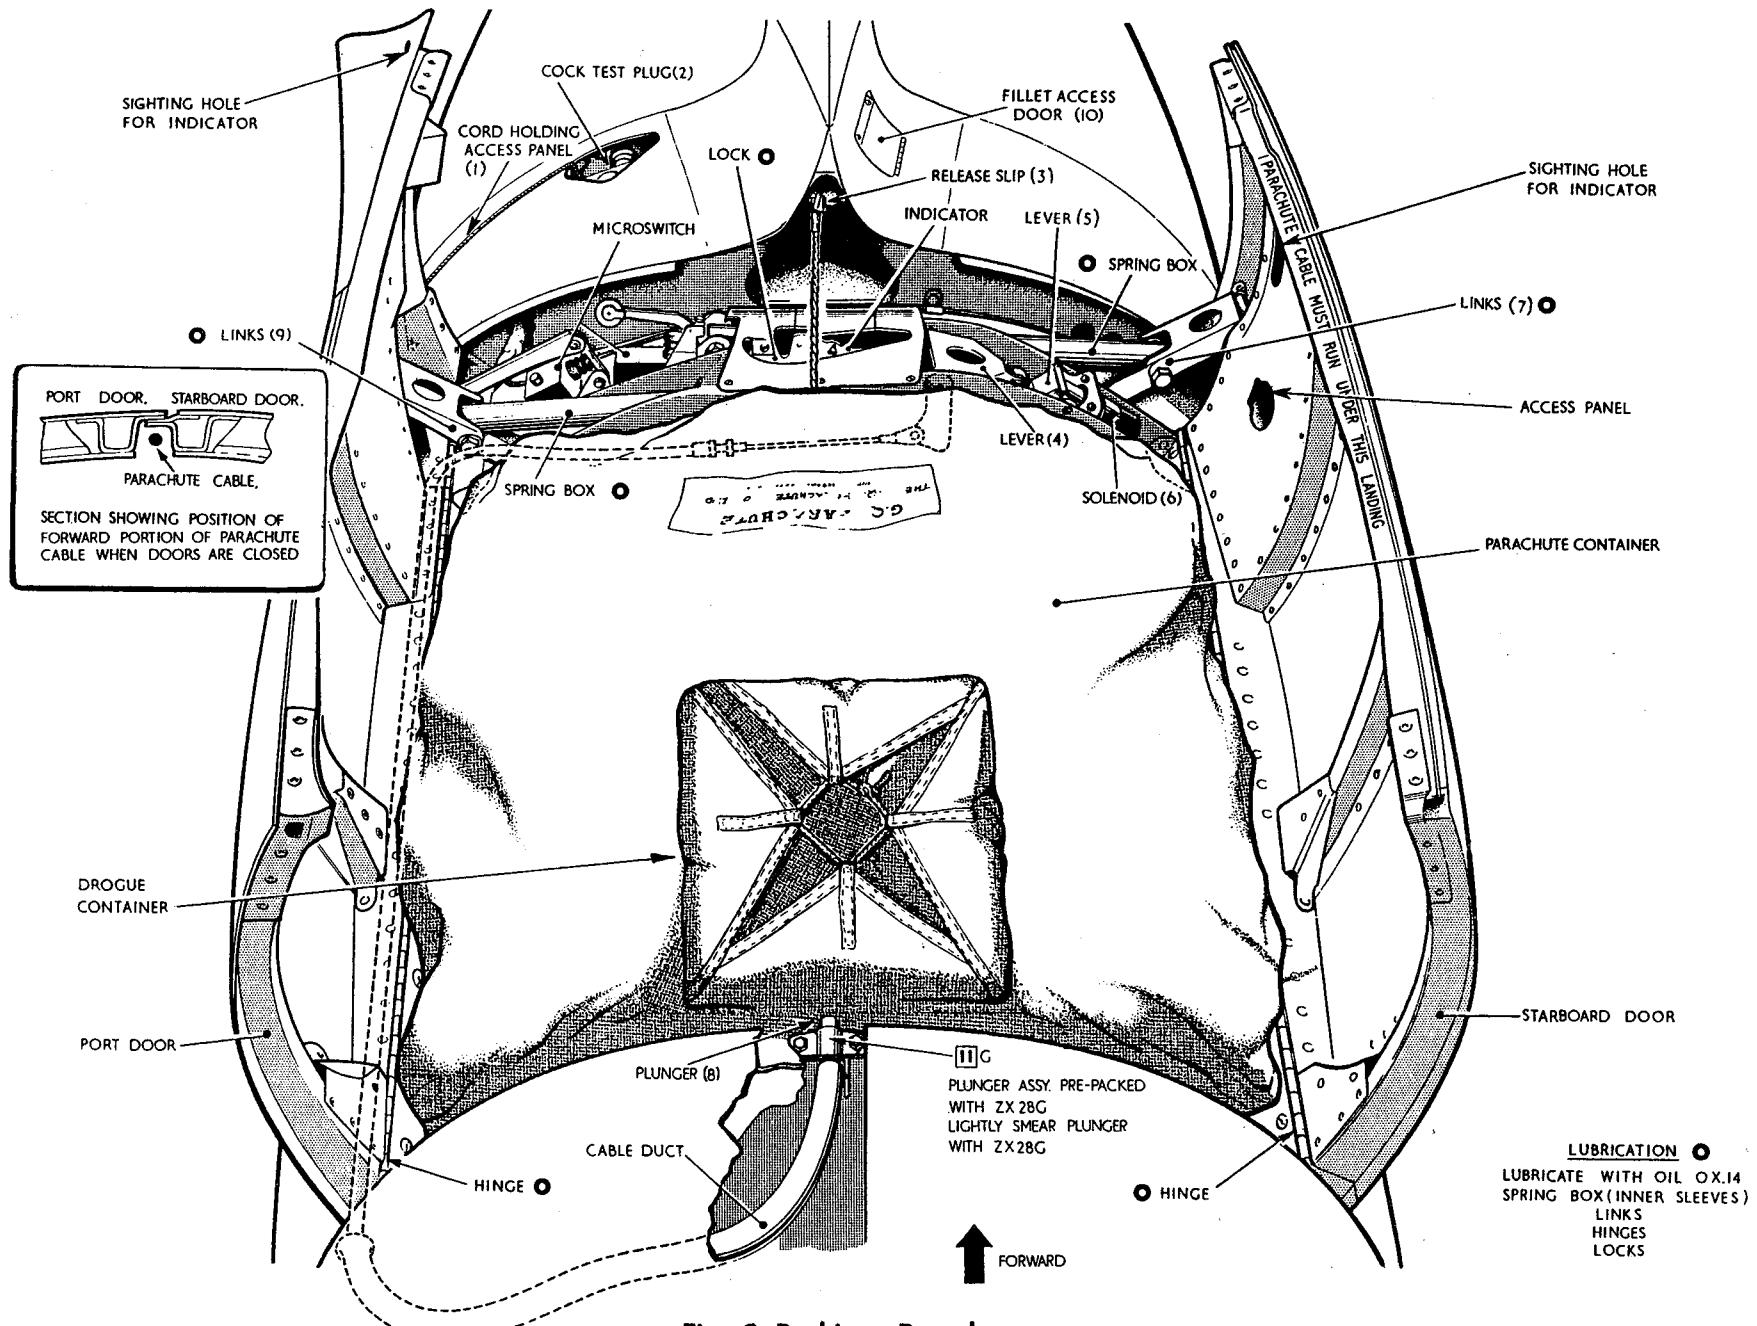


Fig. 3 Braking Parachute

**Assembly of braking parachute (fig. 3)**

29. The braking parachute is housed in a fairing located above the tail cone and is streamed through two hinged doors which are opened upon operation of a spring-loaded release gear, the actuation of which is initiated electrically by means of control switches in the cabin. A description and illustration of the release gear will be found in Sect. 3, Chap. 1. The sequence of the assembly of the parachute into its container above the tail cone is as follows:—

**Note...**

*Before attempting to refit a braking parachute or close the parachute compartment doors it must be ensured that the selector switch in the cabin is in the JETTISON/OFF position.*

- (1) Open the fillet door (10) adjacent to the parachute release. This door, when opened, operates a micro-switch which cuts off the electrical supply to the release slip. It must be left open until the parachute is fitted and the parachute doors closed.
- (2) Place the parachute into the container, insert the shackle into the jaws of the release unit and close the jaws by hand, gaining access through the fillet door (10).
- (3) Check that the release slip is cocked by using the test plug (2) after removing access panel (1). The cocking test is described in Sect. 5, Chap. 1.
- (4) Depress the lever (4) on the starboard side of the parachute housing, ensuring that it engages fully with the lever (5) operating the solenoid (6). (Sect. 3, Chap 1, fig. 5A).

(5) Ease the links (7) attached to the spring box, upwards and close the starboard door after first ensuring that the parachute cable is laid so that it will lie under the landing of the door when the door is closed.

(6) Hold the starboard door down to restrain the drogue, cut and remove the cord securing the drogue flaps, ease the links (9) attached to the spring box, upwards and close the port door, pressing down firmly to ensure engagement of the door locks.

**WARNING**

**It is important to ensure that the parachute pack has not been jammed between the doors and the landings and that the pack has not moved to the rear of the housing so that a high load is placed on the rear door lock when the doors are closed.**

◀(7) Check the engagement of the door locks through the sighting holes in the doors. The front lock is correctly engaged when the tip of the indicator (painted fluorescent orange) is in line with the red line on the rectangular white patch around the sighting hole. The rear lock is correctly engaged when the front face of the locking plunger (8) is in line with the red line on a similar white patch around the sighting hole. The correctly-locked relationships of the indicator, plunger and markings is illustrated in Sect.3, Chap.1. ▶

(8) Finally, and before each flight, check again that the release slip is cocked as in sub para. (3) of this para.

(9) Close the fillet door (10).

(10) Place the parachute test switch in the cabin to the TEST position and check that the two filaments in the warning lamp glow to indicate that the electrical circuit is serviceable. Return the switch to the normal position.

**Mechanical opening of parachute doors**

30. In the event of electrical failure, or if it is necessary to open the parachute doors for any purpose, the following procedure should be adopted:—

- (1) Isolate the electrical services from the parachute release by opening the fillet door (10).
- (2) Remove the access panel from the forward end of the starboard parachute door, apply hand pressure to the doors to prevent them springing open, depress the lever (5) with a suitable tool and gradually release the pressure on the doors to allow them to rise, under control.

**Note...**

*Once the parachute doors have been opened the drogue flaps will fly open, allowing the drogue to rise. The parachute will, therefore, have to be removed, repacked and eventually reassembled to the container as described in para. 29.*

*(The removal of the parachute is described in Sect.3, Chap.1)*

**Note...**

*All pivot points as well as the spring box assemblies for both port and starboard doors are to be lubricated, at those periods laid down in the Servicing Schedule, as detailed in fig.3. The E.M. release unit must be serviced in accordance with the instructions given in A.P. 110 series.* ▶

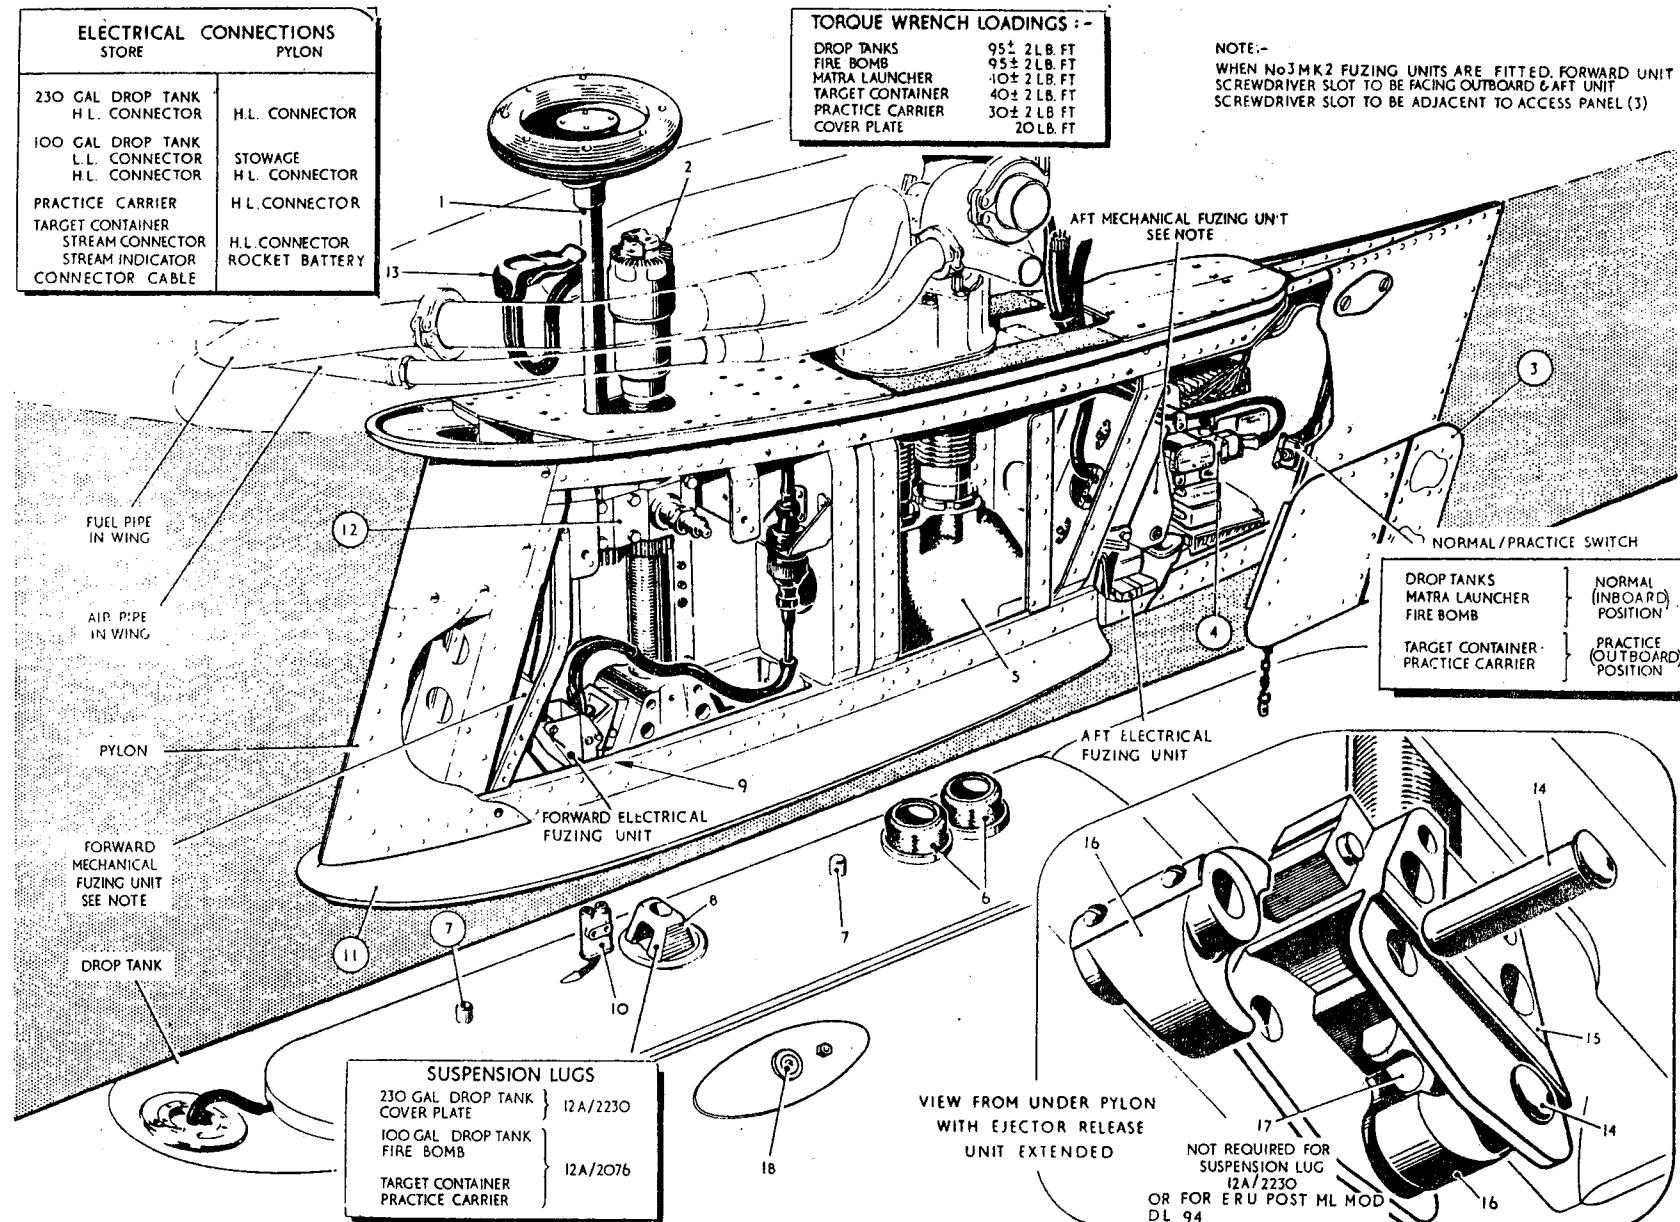


Fig.4 Loading of stores on inboard pylon

21476-21684

F.S./7

**Fitting and removal of inboard drop tanks (Fig. 4)****WARNING**

Personnel handling explosive release and ejector units, as fitted to the inboard pylons on this aircraft, should be conversant with the safety precautions detailed in A.P.1664E, Vol.1, Part 1, Chap.1. During loading/unloading the radio installations are not to be operated.

31. Prior to fitting the 230 gal drop tanks, the spigot bushes on the pylon must be checked for excessive wear. If the measurement across the worn portion of the rear bush or across the minor axis of the front bush exceeds 0.525 in. the bush should be replaced.

**Note . . .**

230 gallon drop tanks held in store should be inhibited and when this is completed a warning label fixed to the tank, adjacent to the filler cap, with transparent adhesive tape. Before fitting a tank from store, therefore, all traces of inhibiting oil must be removed by washing out the tank with lead free gasoline (Ref. 34A/9100447 or 34C/9100454) and the warning label removed. Care must be taken to ensure that scrupulous cleanliness is observed and that no foreign matter is introduced into the tank.

The procedure for the fitting of the drop fuel tanks to the inboard pylons is described in the following sub-para.:—

- (1) Disconnect the armament safety break, remove the rear door (3) and disconnect the pylon safety break (4). Place the NORMAL/PRACTICE switch in the inboard (NORMAL) position.
- (2) Position the drop tank under the pylon and lubricate the front and rear locating spigots (7) with anti-seize compound ZX 28G. Inspect the sealing rings at (6) for serviceability and smear the outer surface of the rings with ZX-36 (Ref. 34B/1459).
- (3) Remove the access panel (26FX/10085) in the wing top skin. Attach a crutching tool shaft (1), (M.L. Aviation Ltd.,

D.L.617-41B or D.L.617-113B) complete with handle (M.L. Aviation Ltd., D.L.617-348C) into the socket of the crutching mechanism (12) of the ejector release unit (2) and turn in an anti-clockwise direction to lower the unit sufficiently to enable the jaw pins (14) in the bottom of the housing (15) to be removed.

**Note . . .**

*The threads of the ejector release unit must be regreased with ZX-28G before each loading.*

- (4) With the ejector release unit lowered, a firm pressure on the end of the jaw pins will release the spring lock in the jaws and allow the pins to be withdrawn and the jaws (16) to be removed. Remove adapter (17), in the bottom of the housing.

**Note . . .**

*The adapter (17) is only used on E.R.U's Pre M.L. Mod. D.L.94 for 100-gallon drop tanks and other stores fitted with suspension lugs No. 29*

*It is important that the top of the suspension lug should not be forced up against the adapter (17), as the use of undue force imparts a shear load to the rivet securing the plunger wedge to the piston tube assembly. If this rivet is sheared, any store subsequently carried with the ejector release unit in this condition will be inadvertently released.*

*When loading a store on E.R.U's Post Mod. M.L.94 a check must be made with a  $\frac{1}{8}$  in. dia. rod through the inspection hole in the housing to ensure that the piston is fully home and the split pin undamaged.*

- (5) Carefully raise the drop tank using hoists and a sling so that one jaw, hooked in the suspension lug, can be secured to the jaw housing with a jaw pin. Then hook the other jaw in the suspension lug and secure to the jaw housing with the remaining jaw pin. Ensure that the flat on the head of each jaw pin is engaged with the shoulder on the jaw housing.

- (6) Plug in the unsleeved connector (10) on the drop tank to the sleeved connector (9) on the pylon.

**Note . . .**

*If 100 gallon drop tank is being fitted, the sleeved connector on the tank is plugged into the stowage on the pylon and the unsleeved connector from the tank plugged into the sleeved connector on the pylon.*


- (7) By means of the crutching tool raise the tank until the fore and aft spigots (7) are engaged in the holes provided in the sole plate (11) of the pylon, and the tank adapters (6) are making contact with the fuel and air valves in the valve body (5). Check that the electrical cable from the tank to the plug (10) is not trapped between the tank and the sole plate.
- (8) Apply the final crutching load by using a torque wrench (Ref. I.L./171) set to  $95 \pm 2$  lb ft, attached to the adapter on the crutching tool.
- (9) Remove the torque wrench and crutching tool, connect socket (13) to the breech cap and replace the access panel in the wing.
- (10) Reconnect the safety break (4) and replace the rear door (3) on the pylon.
- (11) Fit the special bracing strut between the drop tank and the wing as described on fig. 5 after filling the drop tank with fuel.
- (12) Immediately before flight replace the armament safety break.

32. The removal of the inboard drop fuel tanks is a reversal of the above procedure.

**Note . . .**

*To prevent swinging of the release unit when the pylon is installed with no stores fitted, cover plate (Part No. B.2354.38) with suspension lug (Ref. 12A/2230) must be fitted on the underside of the pylon and cruched up with the torque wrench set to 20 lb ft.*

**RESTRICTED**

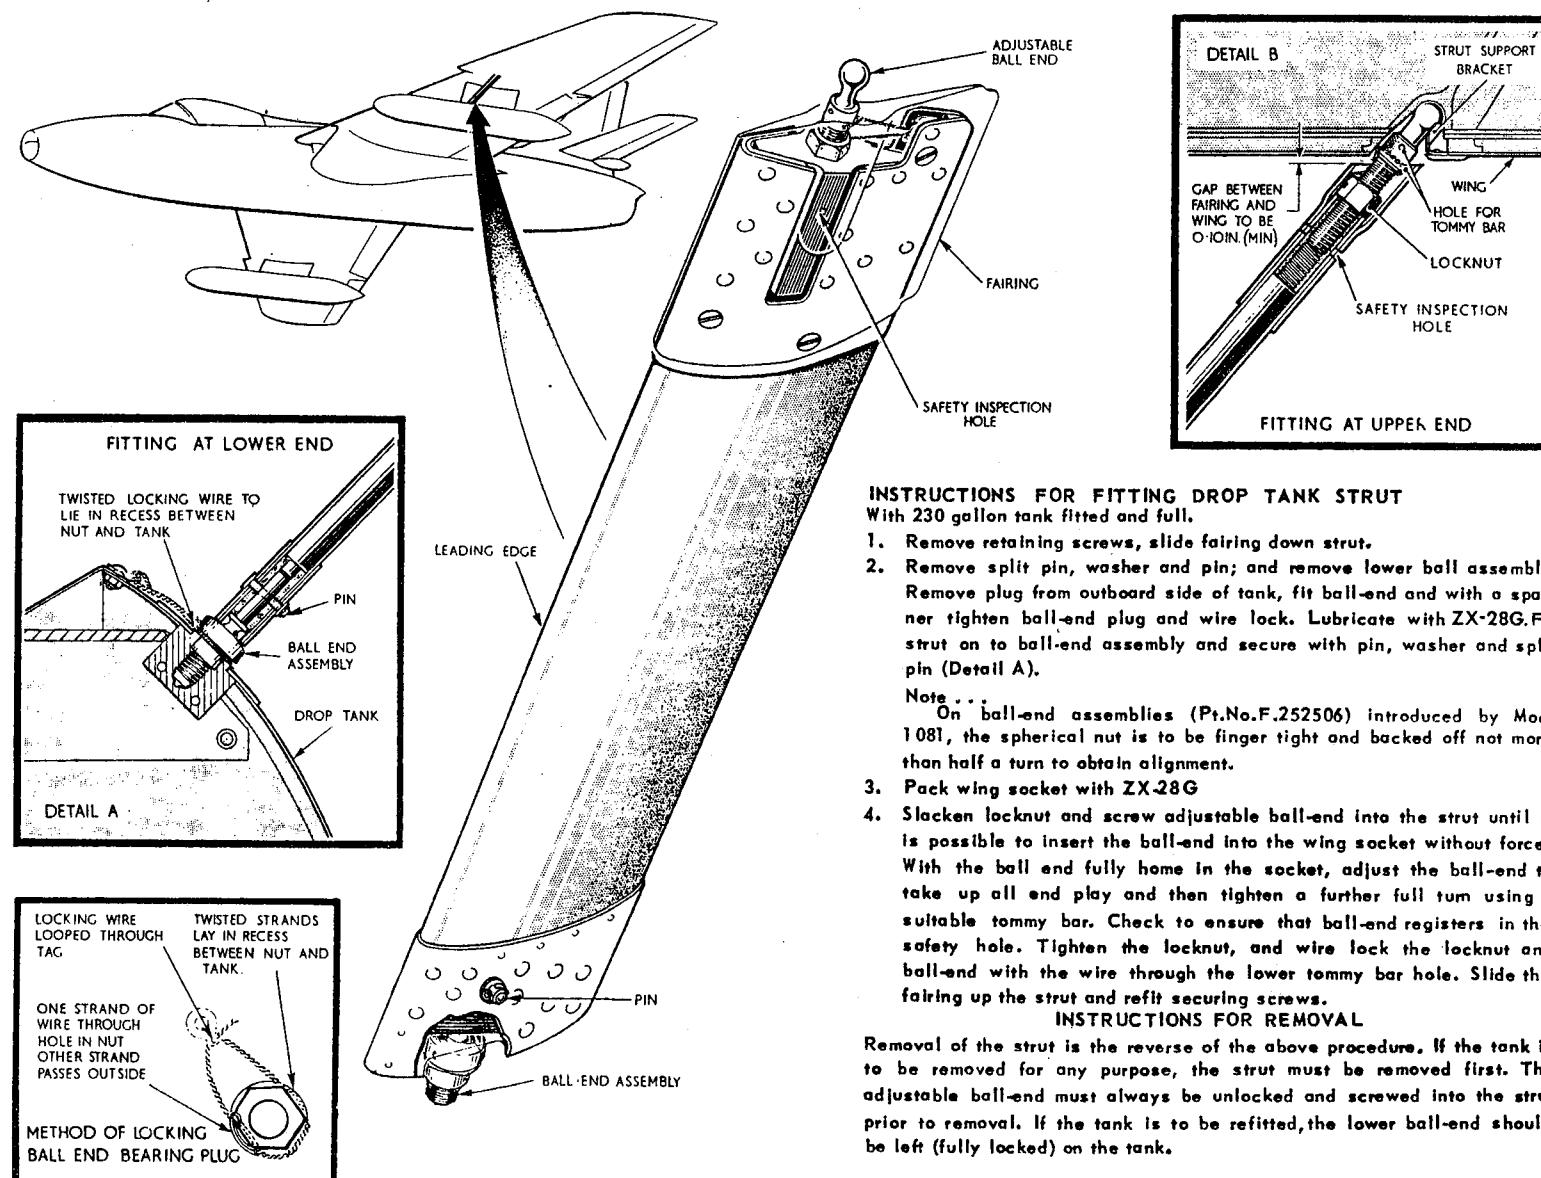

**Fig.5 Fitting drop tank strut**

4 Lubricant detail corrected  
**RESTRICTED**

14413-22456

**INSTRUCTIONS FOR FITTING DROP TANK STRUT**  
With 230 gallon tank fitted and full.

1. Remove retaining screws, slide fairing down strut.
2. Remove split pin, washer and pin; and remove lower ball assembly. Remove plug from outboard side of tank, fit ball-end and with a spanner tighten ball-end plug and wire lock. Lubricate with ZX-28G. Fit strut on to ball-end assembly and secure with pin, washer and split pin (Detail A).

**Note**

On ball-end assemblies (Pt.No.F.252506) introduced by Mod. 1081, the spherical nut is to be finger tight and backed off not more than half a turn to obtain alignment.

3. Pack wing socket with ZX-28G
4. Slacken locknut and screw adjustable ball-end into the strut until it is possible to insert the ball-end into the wing socket without force. With the ball end fully home in the socket, adjust the ball-end to take up all end play and then tighten a further full turn using a suitable tommy bar. Check to ensure that ball-end registers in the safety hole. Tighten the locknut, and wire lock the locknut and ball-end with the wire through the lower tommy bar hole. Slide the fairing up the strut and refit securing screws.

**INSTRUCTIONS FOR REMOVAL**

Removal of the strut is the reverse of the above procedure. If the tank is to be removed for any purpose, the strut must be removed first. The adjustable ball-end must always be unlocked and screwed into the strut prior to removal. If the tank is to be refitted, the lower ball-end should be left (fully locked) on the tank.

**Fuel flow check with drop tanks fitted**

33. After the fitment of previously unused drop tanks, tanks which have been broken down for servicing or whenever pylons or pylon fuel valves have been replaced, it is recommended that the following flow checks are made. These checks are to ensure that the wing fuel system and drop tank flow is satisfactory and are applicable to both inboard and outboard tanks:—

**Fuel flow check using aircraft booster pumps.**

- (1) Refuel the aircraft. Leave the refueller connected with the engine running but with the pump clutch disconnected.
- (2) Connect an external power supply of not less than 26 volts D.C. to the external supply plug.
- (3) Connect an air trolley delivering between 10–100 lb. per sq. in. pressure to the air pressurization connection. Select Wings on the tank selection switches.
- (4) Turn the defuelling cock to ON and L.P. cock to OFF and turn ON the air pressure from the trolley.
- (5) Turn the refueller defuelling valve to ON leaving the pump clutch disconnected.

**Note . . .**

*The refueller pump is not to be operated during this test.*

- (6) Switch ON the aircraft booster pumps and check the rate of flow by timing the gallons gone meter on the refueller.

The rate of flow will probably not stabilize until after the first 10 gallons have passed, therefore the timing should commence at 10 gallons gone.

- (7) From timing the gallons gone meter the rate of flow should be controlled to 48 gallons per minute maximum by throttling the flow at the defuelling cock. The acceptable flow rate is between 31 and 48 gallons per minute.
- (8) Transfer pressure switches may operate and is acceptable at high rates of flow provided the out of balance condition at the end of the test is within the limits (sub-para. 10).
- (9) If the transfer switches operate below a flow rate of 33 gallons per minute the cause must be investigated.
- (10) Defuelling is to be continued until one of the aircraft fuel gauges is reading approximately 960 lb. At this point switch OFF the booster pumps, shut off the air supply and the refueller valve. Check that the port and starboard fuel gauges read within 120 lb. of each other. If outside this limit the cause must be investigated.
- (11) When this test is satisfactorily concluded, remove the air supply from the spine connection and replace the blanking cap. Close and lock the defuelling cock. Select AUTO on the tank selection switches. Refuel the aircraft.

**Note . . .**

*If the refueller is fitted with a serviceable and accurate flowmeter the rate of flow may be read directly from the flowmeter and timing is unnecessary.*

**Ground running check (alternative to fuel flow check operations 1 to 11).**

If more convenient the engine may be ground run as follows as an alternative to the fuel flow check:—

- (12) With the pylons and drop tanks fitted, the system is to be emptied by defuelling.
- (13) Pressure refuel the system keeping an accurate check on the quantity of fuel required to fill the system.
- (14) Start the engine and run up to maximum rev/min as quickly as possible.
- (15) Reduce rev/min to 7,500 and with both booster pumps ON and tanks selector switches selected to WING, continue engine run for 10½ minutes.
- (16) After 10½ minutes increase rev/min to maximum, switch OFF the port booster pump and continue for a further 2½ minutes. During this time the fuel transfer failure warning must not operate.
- (17) At the end of this 2½ minute period, switch ON the port booster pump and switch OFF the starboard pump and continue for a further 2½ minutes. During this time the fuel transfer failure warning must not operate. (Total time at max. rev/min 5 minutes).
- (18) Stop engine in the normal manner and return tank selector switches to AUTO. Refuel the aircraft.

**Note . . .**

*If the fuel transfer failure warning operates the cause must be investigated.*

**RESTRICTED**

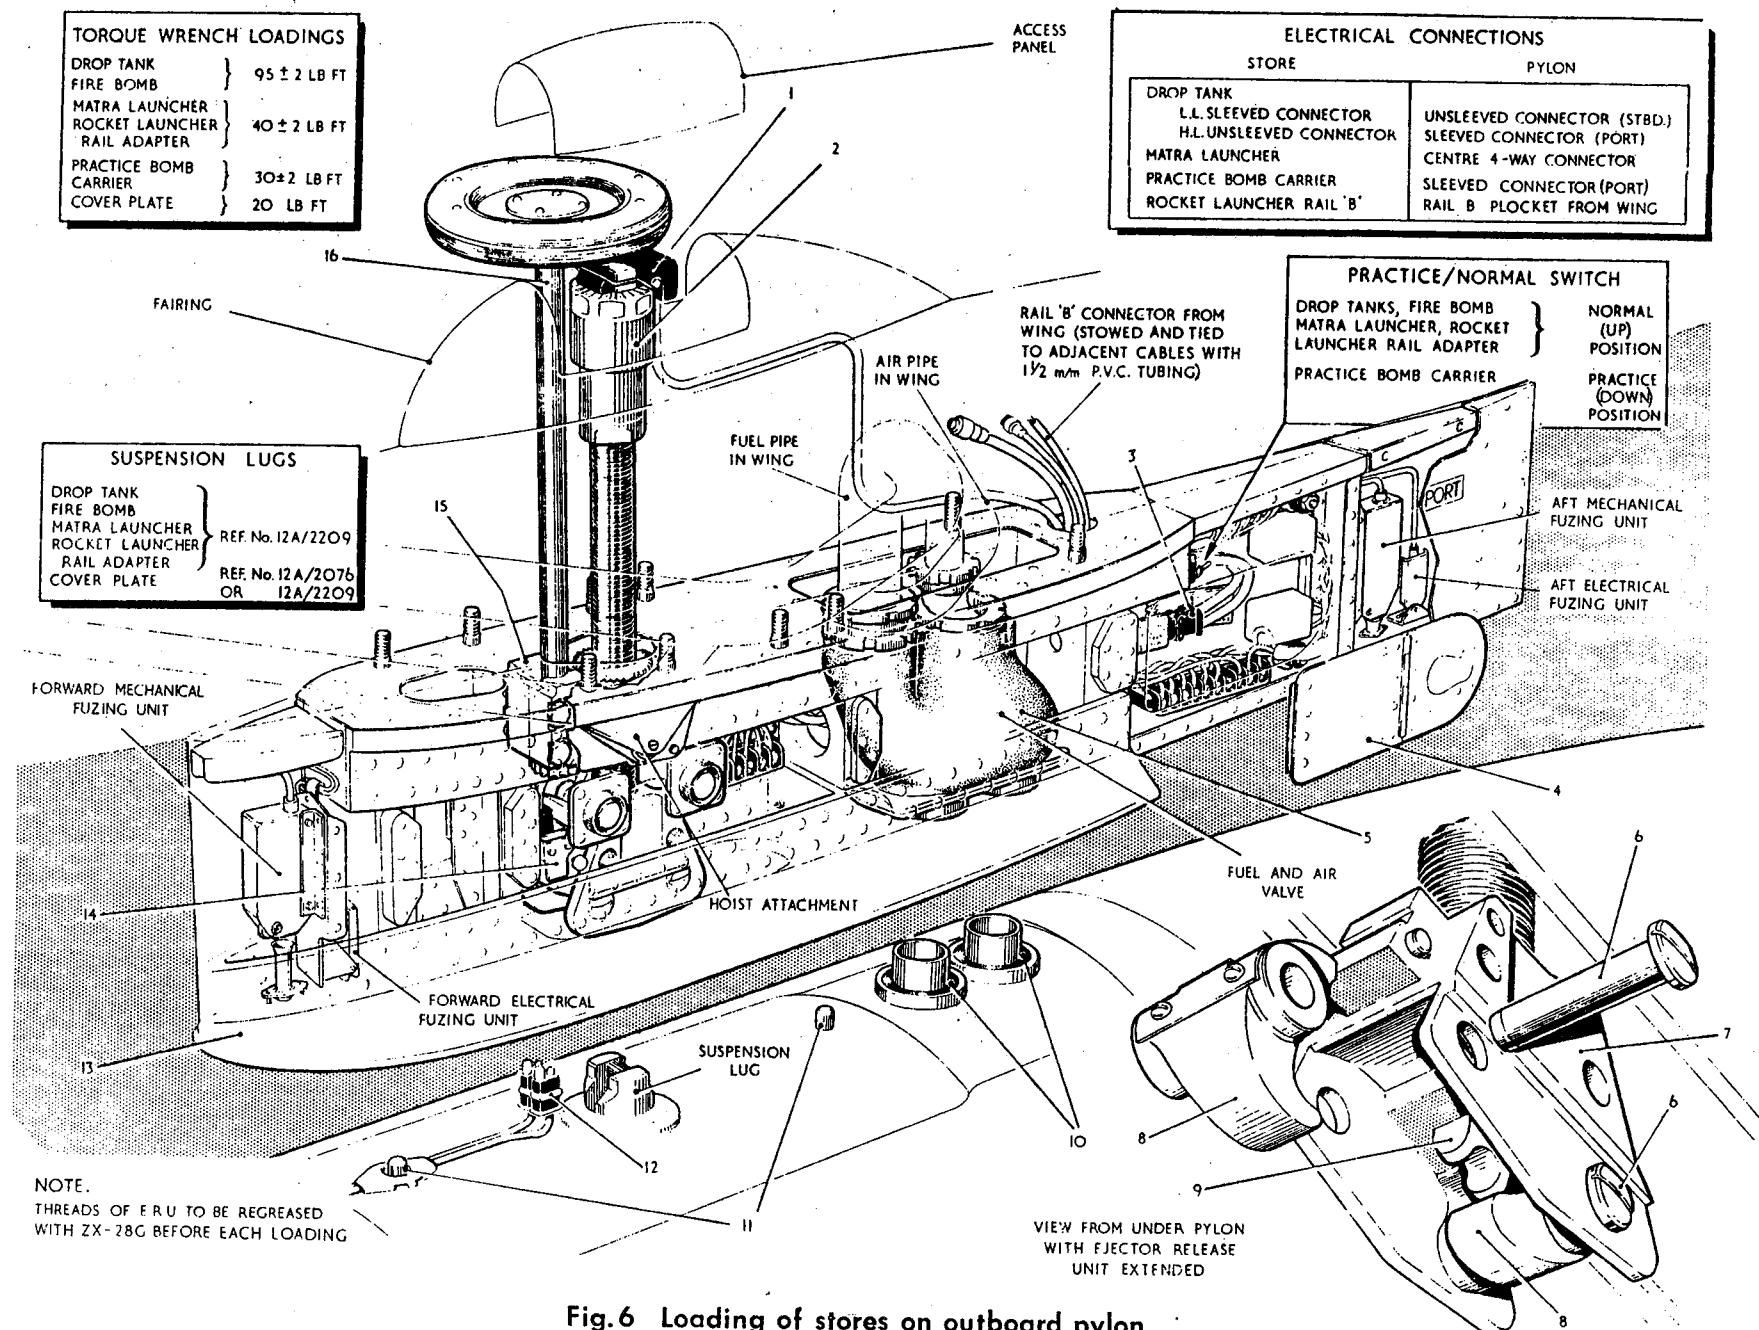


Fig.6 Loading of stores on outboard pylon

4 Lubrication detail corrected

**RESTRICTED**

21468-22499/

**Fitting and removal of outboard drop tanks (fig. 6)**  
**WARNING**

Personnel handling explosive release and ejector units, as fitted to the outboard pylons on this aircraft, should be conversant with the safety precautions detailed in A.P.1664E, Vol.1, Part 1, Chap.1. During loading/unloading radio installations must not be operated.

34. The procedure for fitting the drop fuel tanks to the outboard pylons is described as follows :—

*When loading a store on E.R.U's Post Mod. M.L.94 a check must be made with a  $\frac{1}{8}$  in. dia. rod through the inspection hole in the housing to ensure that the piston is fully home and the split pin undamaged.*

- (1) Disconnect the armament safety break, remove the rear door (4) and disconnect the pylon safety break (3). Ensure that the PRACTICE/NORMAL switch is in the up (NORMAL) position.
- (2) Position the drop tank under the pylon and lubricate the front and rear locating spigots (11) with anti-seize compound ZX-28G. Inspect the sealing rings at (10) for serviceability and smear the outer surface of the rings with ZX-36 (Ref. 34B/1459).
- (3) Remove the access panel from the fairing on the wing top skin and ensure that the breech cap end of connector (1) is stowed in the fairing. Attach a crutching tool shaft (16) (M.L. Aviation Ltd., D.L.617-41B or D.L.617-113B) complete with handle (M.L. Aviation Ltd., D.L.617-348C) into the socket of the crutching mechanism (15) of the ejector release unit (2) and turn in an anti-clockwise direction to lower the unit sufficiently to enable the jaw pins (6) in the bottom of the housing (7) to be removed.
- Note . . .**  
*The threads of the ejector release unit must be regreased with ZX-28G before each loading.*
- (4) With the ejector release unit lowered, a firm pressure on the end of the jaw pins will release the spring lock in the jaws and allow the pins to be withdrawn and the jaws (8) to be removed.
- Note . . .**  
*On E.R.U's Pre M.L. Mod. D.L.94 the adapter (9) must be in position when fitting 100 gallon drop tanks and other stores fitted with suspension lugs No. 29.*
- It is important that the top of the suspension lug should not be forced up against the adapter (9), as the use of undue force imparts a shear load to the rivet securing the plunger wedge to the piston tube assembly. If this rivet is sheared any store subsequently carried with the ejector release unit in this condition will be inadvertently released.*
- (5) Carefully raise the drop tank using hoists and a sling so that one jaw, hooked in the suspension lug, can be secured to the jaw housing with a jaw pin. Then hook the other jaw in the suspension lug and secure to the jaw housing with the remaining jaw pin. Ensure that the flat on the head of each pin is engaged with the shoulder on the jaw housing.
- (6) Make the appropriate electrical connections between drop tank and pylon.
- (7) By means of the crutching tool raise the tank until the fore and aft spigots (11) are engaged in the holes provided in the sole plate (13) of the pylon, and the tank adapters (10) are making contact with the fuel and air valves in the valve body (5). Check that the electrical cables from the tank to the connectors (12) are not trapped between the tank and the sole plate.

- (8) Apply the final crutching load by using a torque wrench (Ref. I.L.171) set to  $95 \pm 2$  lb ft, attached to the adapter on the crutching tool.
- (9) Remove the torque wrench and crutching tool, connect socket (1) to the breech cap and replace the access panel in the wing fairing.
- (10) Reconnect the safety break (3) and replace the rear door (4) on the pylon.
- (11) Immediately before flight replace the armament safety break.

35. The removal of the outboard drop fuel tanks is a reversal of the fitting procedure.

**Note . . .**

*To prevent swinging of the release unit when the pylon is installed with no stores fitted, cover plate (Part No. B.235438) with suspension lugs (Ref. 12A/2076 or 12A/2209) must be fitted on the underside of the pylon and crutched up with the torque wrench set to 20 lb ft.*

**Fitting and removing Matra launcher or Fire bomb**  
**35A.** The procedure for fitting and removal of the Matra launcher or Fire bomb is similar to that for the drop tanks (para. 34 and 35) with the following exceptions :—

**Matra launcher**

The connector on the Matra launcher is plugged into the centre 4-way connector in the pylon and the torque wrench is loaded to  $40 \pm 2$  lb ft.

**Fire bomb**

Make the necessary mechanical/electrical fuzing connections appropriate to the type of bomb fitted.

## RESTRICTED

### Hood and windscreen spray drains.

36. Three polythene bottles (*Sect. 3, Chap. 8, Fig. 6*) are provided for the drainage of any water that may exist in the hood and windscreen spray pipes. The bottles are provided with straps by which they are secured with pip-pins to mountings at frames 8 and 10 on the starboard side of the cabin and at frame 12 on the port side. Flexible drain pipes are attached to, and feed into, the caps of the bottles. Each bottle contains sponge rings, which are taped together to form single elements and to facilitate the removal of the elements from the bottles. At the periodicities specified in the relevant Servicing Schedules, the bottles with straps still attached, should be unscrewed from their respective caps, after first removing the pip-pins. The sponge elements should then be removed by means of the tapes, the elements squeezed dry, the bottles emptied and the elements replaced in the bottles. When replacing the bottles, it is essential to ensure that they are screwed fully home into their respective caps to ensure an effective seal before the pip-pins are refitted to secure the bottles into their mountings. Ensure that the vent holes in the caps are not obstructed.

### Hood jettison control

37. Before every flight, ensure that the hood jettison control has not been wholly or partly operated. This can be checked by examining the release unit to ensure that the painted red lines on the lever and body of the release unit correspond. If they do not, the release unit must be set to the loaded position as described in *Sect. 3, Chap. 1*.

This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

