

## CONTENTS

A.P.4347L & S, Vol.1, Book 2

A.L.18, Oct.64

BOOK 1	Leading particulars	
	Introduction	
	Section 1-Controls and exits... ... ... ... ... ... ...	Chapter 1-Pilot's controls and equipment 2-Crews' controls and equipment. (Not applicable) 3-Emergency controls, equipment and exit.
	Section 2-Ground handling and preparation for flight ... ...	Chapter 1-Ground handling 2-Preparation for flight 3A-Loading and C.G. data. 3B-Aircraft weighing 4-General servicing 5-Change of role. (Not applicable) 6-Procedure following hazardous incidents
	Section 3-Airframe ... ... ... ... ... ... ...	Chapter 1-Fuselage 2-Main planes 3-Tail unit 4-Flying controls 5-Alighting gear 6-Hydraulic system 7-Pneumatic system. (Not applicable) 8-Air conditioning system. 9-De-icing system. (Not applicable) 10-Oxygen system 11-Emergency system 12-Vacuum system (Not applicable) 13-Anti-'G' system
	Section 4-Power unit installation ... ... ... ...	Chapter 1-Power unit 2-Fuel system 3-Oil system (Not applicable) 4-Cooling system (Not applicable) 5-Fire protection system
BOOK 2	Section 5-Electrical system and instrument installation ...	Chapter 1-Electrical system 2-Instrument installation
	Section 6-Radio installation... ... ... ... ...	Chapter 1-Wireless installation 2-Radar installation
BOOK 1	Section 7-Armament installation ... ... ... ...	Chapter 1-Pyrotechnics 2-R.P. equipment 3-Guns (Not applicable) 4-Bombing equipment (Not applicable)

Note . . . The List of Chapters on each Section marker card indicates the contents of the Section.

RESTRICTED

This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

