

RADIO—I.F.F./S.S.R. INSTALLATION

Ref. No.	Part No.	Description					No. Off	Material Specification	M.R. Class of Store	Place No.
		1	2	3	4	5				
—	E.325633	I.F.F./S.S.R. 1520, INSTALLATION ASSEMBLY					—	—	—	MC.1
		(Mod. 1319)								
	B.295711	Aerial, bottom, group					1	—		
10B/4280400	—	Aerial, type 100B					1	—	A.	
6098091	B.295710	Mounting					1	—	C.	
10B/4280400	—	Aerial, type 100B					1	—	A.	
	A.325478	Angle, mounting, plug (Mod. 1383, 1387)					1	L.72		
	B.293130	Beam, mounting					1	—		
	C.290019	Beam, junction, I.F.F./S.S.R., group					1	—		
10H/9114121	S.T.C.	Base, relay holder					1	—	C.	
	LP.736720									
	F.290020	Bracket					1	L.72		
	F.290588	Bush, earth					1	BS.2966		
5E/9516201	—	Cable, electric, type B.19/0.0076, black					QR	EL.1930	C.	
5E/9012998	—	Cable, uninyvin 16					QR	—	C.	
	B.290866/1	Diagram, wiring					1	Photo		
10H/0590109	Belling Lee	Fuse, lamp					1	—	C.	
	L693/1									
5920-99-059-0137	Belling Lee	Fuse, 500 m.a.					1	—	C.	
	L754/0.5									
5X/9491421	—	Grommet					1	—	C.	
5K/9524106	SP.93/B6	Grommet					2	—	C.	
10H/0590170	Belling Lee	Holder, fuse					1	—	C.	
	L575									
10H/0590231	Belling Lee	Holder, fuse					1	—	C.	
	L1382									
	B.290018	Lid					1	—		
10AS/1002528	—	Plate					1	—	C.	
10H/1428247	Thorn	Plug, sealing					3	—	C.	
	10-101033-10									
5X/9725202	Thorn	Plug, sealing					1	—	C.	
	10-101033-11									
10H/9564097	Thorn	Receptacle, jam nut					1	—	C.	
	PT07-SE-10-6S									
10H/9564095	Thorn	Receptacle, jam nut					1	—	C.	
	PT07-SE-12-10S									
10H/9572599	Thorn	Receptacle, jam nut					1	—	C.	
	PT07-SE-14-5P									
10F/0530473	—	Relay, type SM.5A-M4					1	—	C.	
	Std.1606/32/B20	Screw, for lid					4	—		
	Std.2133/11	Sleeve					17	—		
	Std.2134/11	Sleeve					11	—		
10AS/1002129	—	Spring, retaining					1	—	C.	
5X/9709513	Hellermann	Terminal, ring					6	—	C.	
	HC.294D									
5X/4491755	Hellermann	Terminal, ring					2	—	C.	
	HC.296D									
5X/9014365	Hellermann	Terminal, ring					2	—	C.	
	HC.300									
5X/1930218	Hellermann	Terminal, ring					3	—	C.	
	HC.304D									
	Std.1507/1/025	Tube, distance					2	—		
	D.332326	Cable, S.S.R.1, control unit to B/H connector and S.S.R.8 (See Cable Chart) (Mod. 1429)					1	—		
	D.323905	Cable, S.S.R.2, B/H connector to T/R set, J/B inverter and mode C/B (See Cable Chart) (Mod. 1383, 1387)					1	—		
	B.291426	Cable, S.S.R.3, J/B to aerial switch unit and aerial test switch (See Cable Chart)					1	—		

RADIO—I.F.F./S.S.R. INSTALLATION

Ref. No.	Part No.	Description					No. Off	Material Specification	M.R. Class of Store	Place No.
		1	2	3	4	5				
11	B.334530	Cable, S.S.R.4, J/B to C/B and inverter (Mod. 1429) (See Cable Chart)					1	—		
10HB/117171	B.290338	Cable, S.S.R.5, T/R set to aerial switch unit (See Cable Chart)					1	—	B.	
	B.290340	Cable, S.S.R.6, aerial switch unit to upper aerial (See Cable Chart)					1	—		
	B.290339	Cable, S.S.R.7, aerial switch unit to lower aerial (See Cable Chart)					1	—		
11	C.332327	Cable, S.S.R.8, warning panel to S.S.R.1 (Mod. 1429) (See Cable Chart)					1	—		
	B.314837	Cable, S.S.R.11, (See Cable Chart) (Mod. 1383, 1387)					1	—	C.	
10H/	Thorn	Cap, protective (Mod. 1383, 1387)					1	—	C.	
	10-101964-143									
10H/	Hellermann	Cap, protective (Mod. 1383, 1387)					2	—	C.	
	416125-10									
26VA/6044412	Std.2045/17/26	Clip, for cable					1	—	C.	6
	Std.2045/21/22	Clip, for cable					2	—		6
26VA/6176651	Std.2076/35/22	Clip, for cable					1	—	C.	6
11	26VA/6041125	Std.2046/15/26					1	—	C.	6
	5CW/4405544	Cover, safety, for switch aerial					1	—	C.	
	20154	Guard, cable					1	—	C.	
	B.224016	Inverter, type 182					1	—	A.	
5UB/4357513	—	Link, chain					1	—	C.	
9881	A.228302	Mounting, radio					1	—		
	C.289891	Plate, nut					1	—	C.	MC.1
9890	A.224242	Plate, switch, aerial					1	L.72	C.	
1506491	A.296743	Receptacle, jam nut					1	—	C.	
10H/	Thorn									
	PTBJ-22-55PS									
	F.217996	Strip, bonding					1	—		
4652	Std.1299/3	Stud, earth point					1	S.95.B	C.	4
5CW/1047694	—	Switch, S.P., change over, centre off, aerial					1	—	C.	
10D/6895-99-	—	Transponder, type X.16298					1	—	A.	
956-3378	—									
5UB/4352384	—	Tray, inverter, M2228A					1	—	B.	
10AR/5895-99-	—	Tray, transponder, type X.16946					1	—	B.	
107-5637	—									
10L/5895-99	—	Unit, control, type X.16929					1	—	A.	
956-3379	—									
10AE/5895-99-	—	Unit, switch, aerial, type X.16941					1	—	A.	
107-1521	—									
9889	A.212860	Washer, sealing					1	—	C.	



This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.