

Chapter 2A

CONTROLS AND EQUIPMENT AT CREW STATIONS (MK.1A)

LIST OF CONTENTS

	<i>Para.</i>
<i>General</i>	1

LIST OF ILLUSTRATIONS

	<i>Fig.</i>
<i>Controls and equipment at crew stations</i>	1

General

1. Fig.1 of this chapter illustrates the location of controls and equipment introduced with the E.C.M. equipment and A.R.I.18089 in Mk.1A aircraft, it also illustrates controls and equipment repositioned at crew stations because of the introduction of this equipment. With these exceptions controls and equipment at crew stations are the same as Mk.1 aircraft which are described and illustrated in Chapter 2 of this Section.

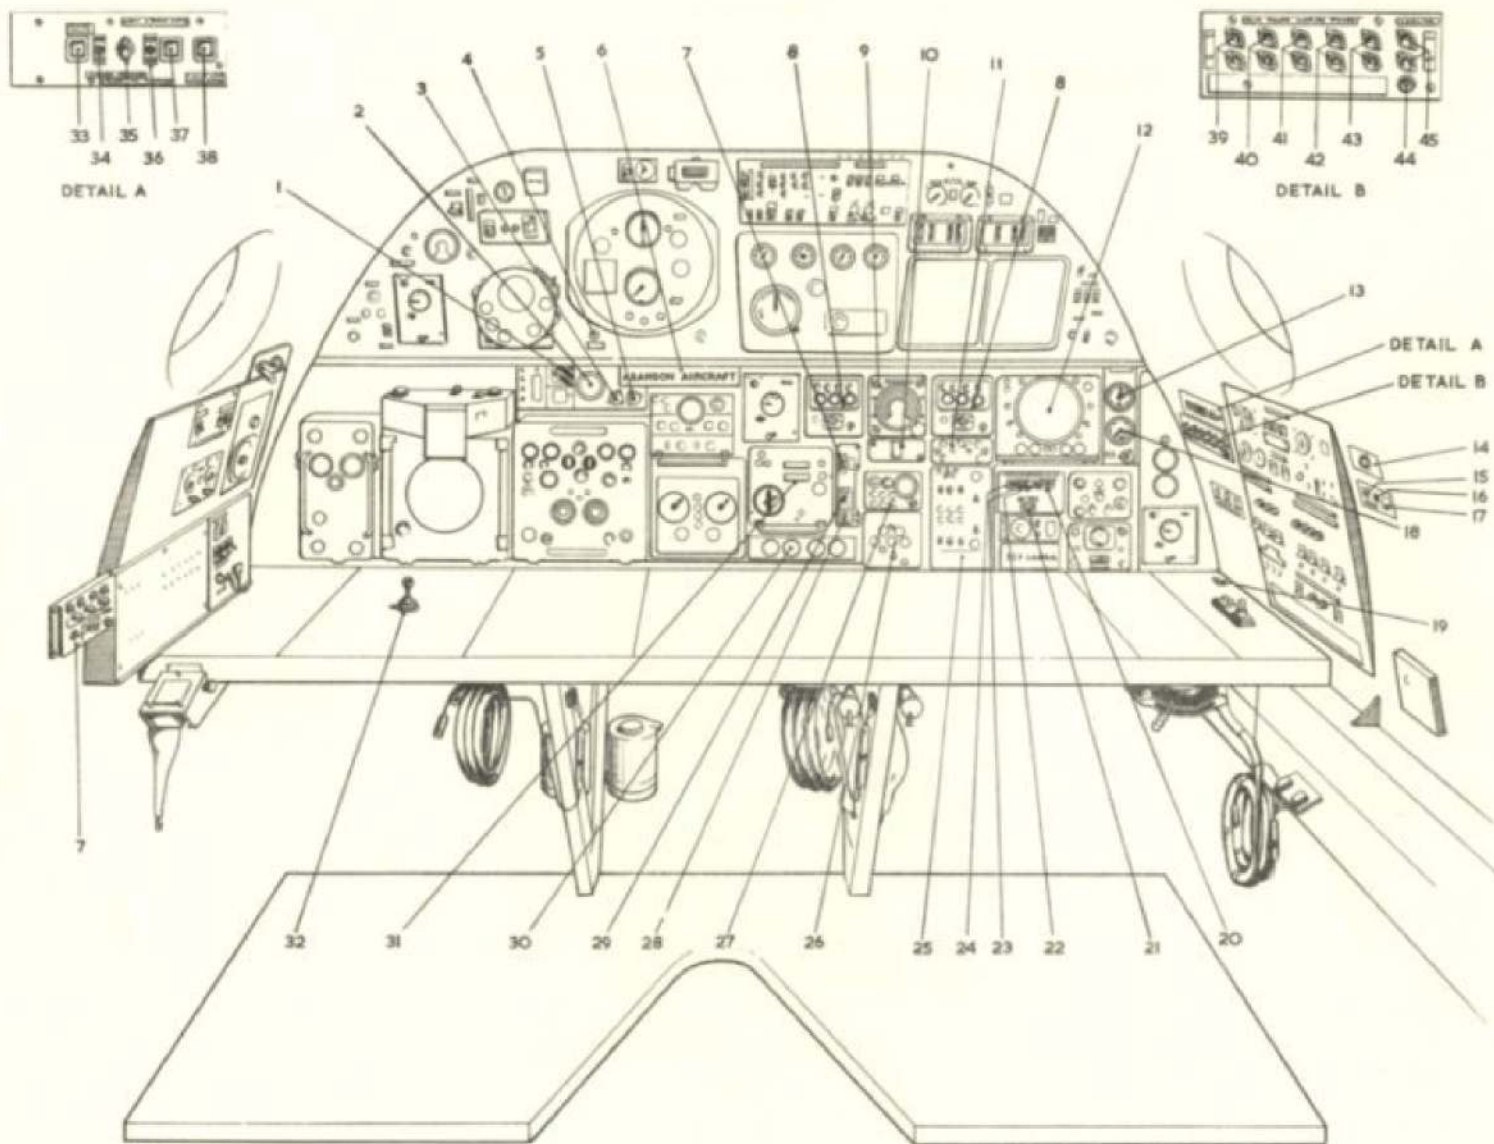


Fig.1. Controls and equipment at crew stations

RESTRICTED

KEY TO FIG.1

CONTROLS AND EQUIPMENT AT CREW'S STATION

- | | | |
|---|---|--|
| 1. EMERGENCY DOOR OPEN SWITCH | 15. FLIGHT INSTRUMENTS SUPPLY | 29. TAIL WARNING DIMMER SWITCH |
| 2. FORWARD THROW INDICATOR | 16. FLIGHT INSTRUMENTS SUPPLY
SELECTOR SWITCH | 30. FUEL CONTENTS GAUGES PANEL |
| 3. NAVIGATOR'S INSTRUMENT
LIGHTING DIMMER SWITCH | 17. FLIGHT INSTRUMENTS SUPPLY
FREQUENCY METER | 31. GROUND POSITION INDICATOR
MK.4 |
| 4. T.R.U. AIR CHARGING POINT -
A.R.I.5924 | 18. TURBO-ALTERNATOR VOLTMETER | 32. CONTROL UNIT, TYPE 626 - A.R.I.
18089 |
| 5. NAVIGATOR'S CHARTBOARD
LIGHT DIMMER SWITCH | 19. PRESS TO TRANSMIT SWITCH -
A.R.I.18089 | 33. TURBO-ALTERNATOR AIR VALVE
POSITION INDICATOR |
| 6. ABANDON AIRCRAFT WARNING
SIGN | 20. EXTERNAL INTERCOMMUNICATION
ON/OFF SWITCH | 34. TURBINE CONTROL SWITCH |
| 7. MONITOR/ALARM SWITCH -
A.R.I.18089 | 21. H.F. SUPPLY CIRCUIT BREAKER | 35. ALTERNATOR RESET SWITCH |
| 8. CONTROL UNITS, TYPE 7681 -
A.R.I.18089 | 22. H.F. TRANSMITTER OUTPUT
SWITCH | 36. ALTERNATOR CONTROL SWITCH |
| 9. A.D.F. CONTROLLER | 23. CONFERENCE INTERCOMMUNICA-
TION SWITCH | 37. POWER SUPPLY INDICATOR |
| 10. SHORTING PLUG PLATE (Provision
for voice range filter) | 24. INTERCOMMUNICATION CONTROL
SWITCH | 38. GROUND SUPPLY INDICATOR |
| 11. CONTROL UNIT, TYPE 13436 (post
Mod.930) - A.R.I.18074 | 25. CONTROL UNIT, TYPE 9456 -
A.R.I.18075 | 39. A.R.I.18076 NO.1 AND A.R.I.18074
ON/OFF SWITCHES |
| 12. CONTROL AND INDICATOR UNIT,
TYPE 6935 - A.R.I.5919 | 26. CONTROL INDICATOR, TYPE 9562 -
A.R.I.18105 | 40. A.R.I.18076 NO.2 AND A.R.I.18075
NO.1 ON/OFF SWITCHES |
| 13. TURBO-ALTERNATOR FRE-
QUENCY METER | 27. CONTROL UNIT, TYPE 9422 -
A.R.I.18076 | 41. A.R.I.18076 NO.3 AND A.R.I.18075
NO.2 ON/OFF SWITCHES |
| 14. I.L.S. CONTROL UNIT | 28. AIRBORNE WARNING DIMMER
SWITCH | 42. A.R.I.18105 ON/OFF SWITCHES |
| | | 43. A.R.L.5919 ON/OFF SWITCHES |
| | | 44. E.C.M. COOLING SYSTEM WARNING
INDICATOR |
| | | 45. E.C.M. COOLING SYSTEM ON/OFF
SWITCHES |

RESTRICTED

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

