



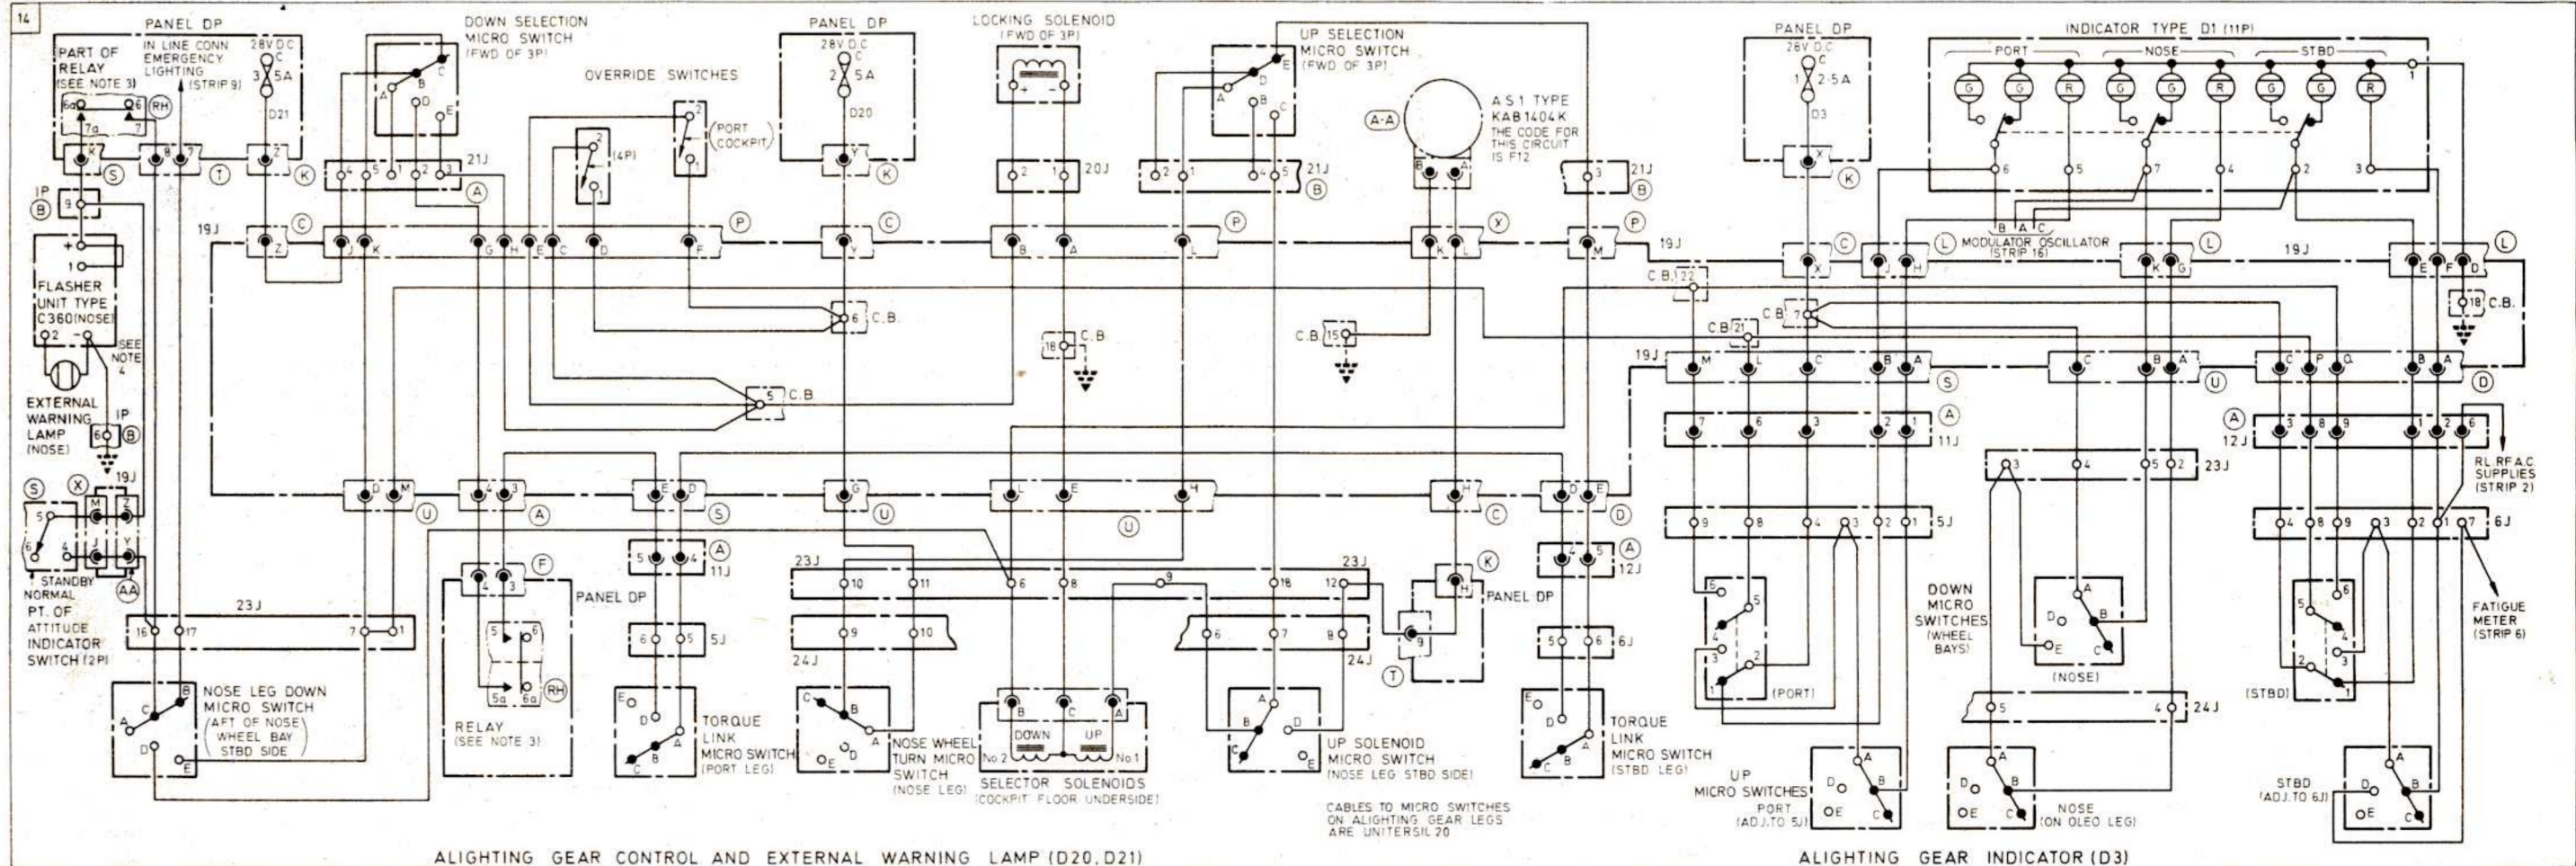

ALIGHTING GEAR CONTROL AND EXTERNAL WARNING LAMP (D20, D21)

ALIGHTING GEAR INDICATOR (D3)

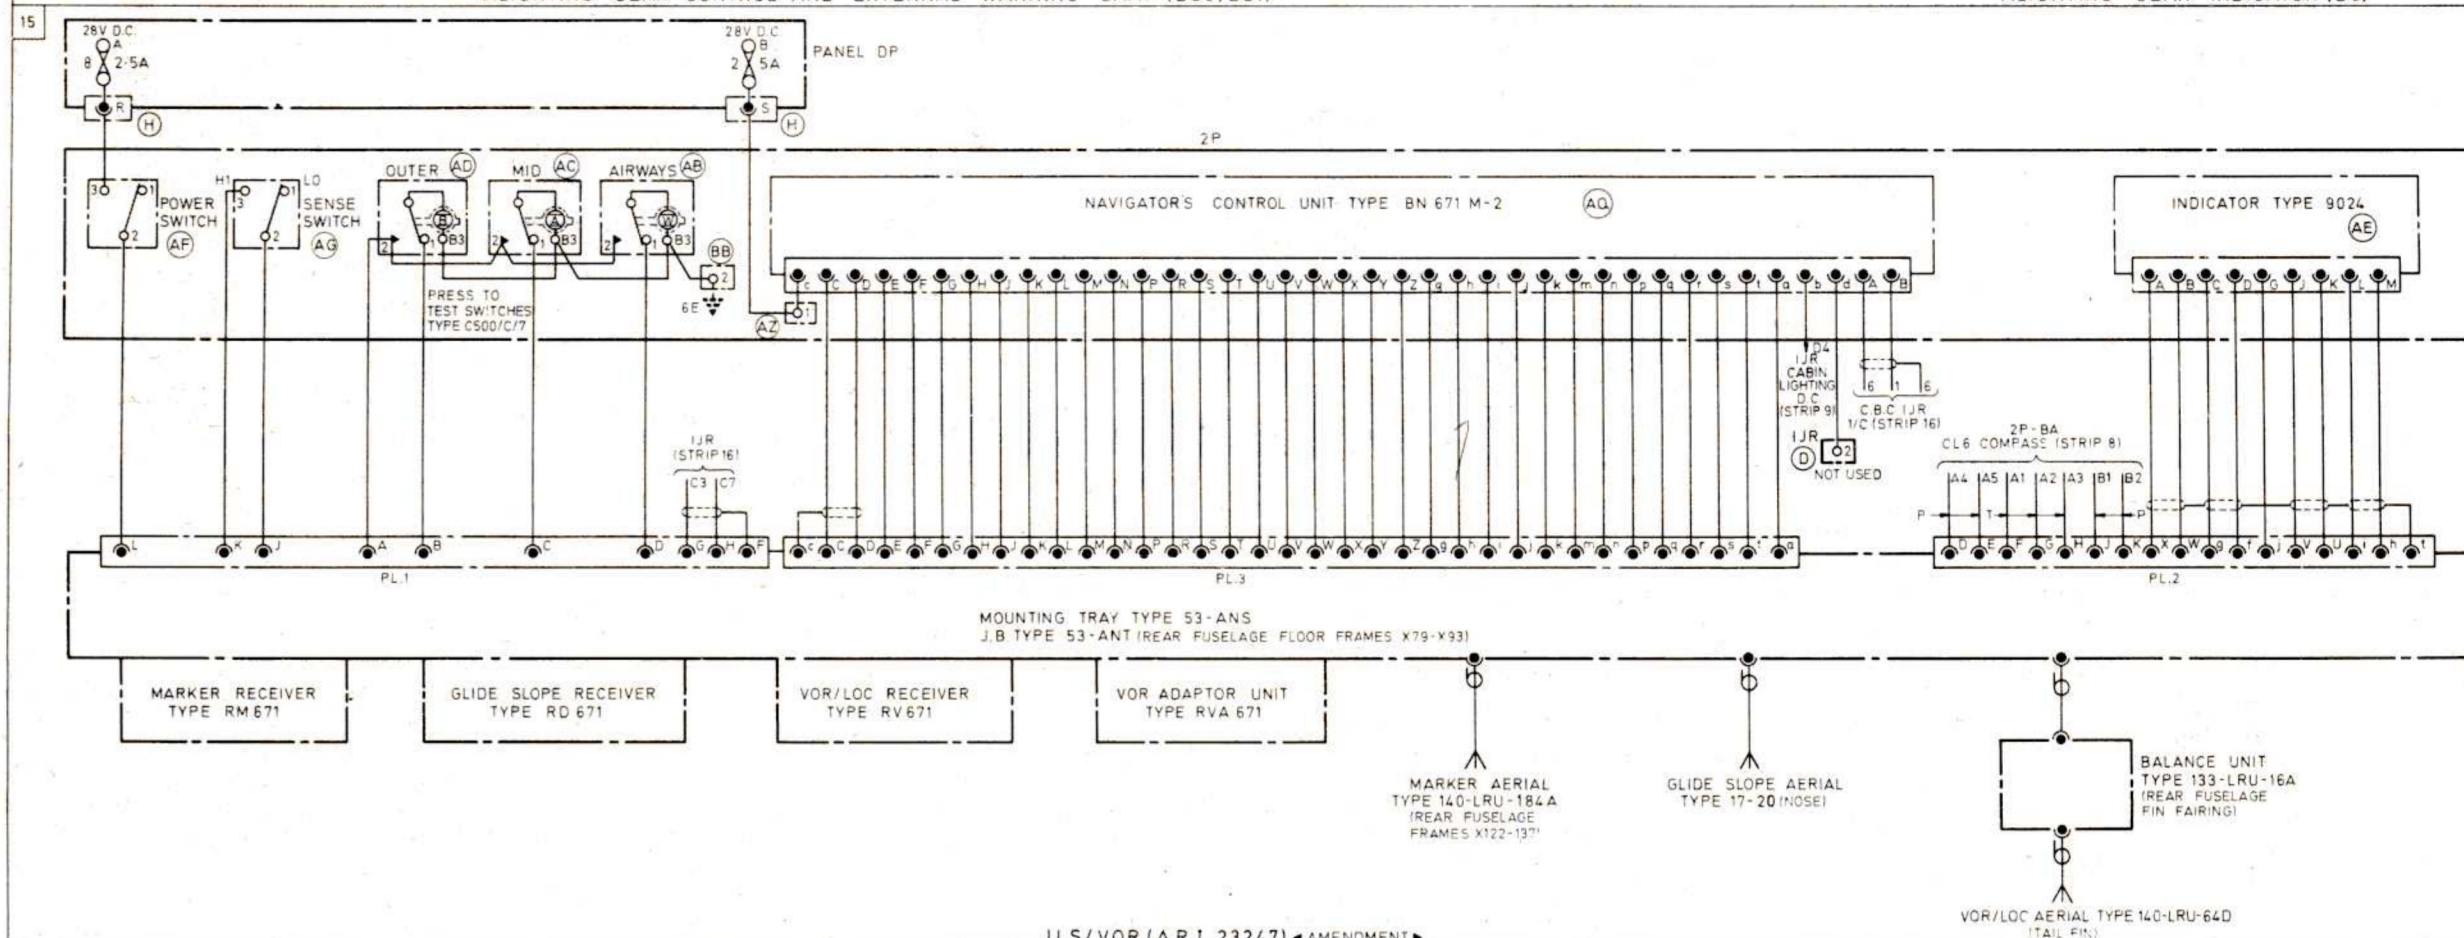

- NOTES
1. ALL CABLES ON STRIP 14 ARE UNINVTN 20 (6 AMP) UNLESS OTHERWISE STATED
 2. FOR EARTHING SHOWN DOTTED SEE STRIP 12
 3. RELAY RH. SEE AIRSPEED SWITCH CIRCUIT (STRIP 7)
 4. FOR INTERNALS OF FLASHER UNIT SEE AP 113F-0605-13A

- LOCATIONS
- PANELS
 DP - COCKPIT STBD
 1P - NOSE COMPARTMENT AND BULKHEAD
 2P - COCKPIT INSTRUMENT PANEL
 3P - COCKPIT INST. PANEL PORT EXTENSION
 4P - CENTRE PEDESTAL
 11P - PORT INSTRUMENT PANEL
- JUNCTIONS
 1/JR - PORT D SECTION
 5/J - PORT MAIN WHEEL BAY
 6/J - STBD MAIN WHEEL BAY
 11/J - PORT WING ROOT FWD VENTRAL COMPT
 12/J - STBD WING ROOT FWD VENTRAL COMPT
 19/J - FWD OF 2P
 20/J - FWD OF 4P
 21/J - FWD OF 3P
 23/J - COCKPIT FLOOR UNDERSIDE
 24/J - FRONT BULKHEAD

ILS/VOR (A.R.I. 23247) - AMENDMENT