

RESTRICTED

The following information should be used in conjunction with ELA Sheet 1 (JET PROVOST T Mk. 3)

CENTRALISED WARNING (circuit code W14) Amend as follows:-

LOCATION
(see ELB Sht.3)

1	INDICATOR UNIT, type 17130 (AS)	..	..	..	..	C
2	ATTENTION-GETTER INDICATORS (AV, AW, AX, AY) (4)	..	..	..	..	C
3	Delete - substitute:- MASTER CONTROL UNIT, type D10040	..	..	..	..	D

HYDRAULIC PRESSURE WARNING (circuit code D12)

35 Delete

ICE WARNING (circuit code H5) } Delete this
Items 45-50 } section
substitute - (in place of G Mk.4F COMPASS -
Items 71-74):-

CL6 COMPASS (circuit code F5)

43	PRECESSION AMPLIFIER, type A	..	..	..	..	D
44	INDICATOR, type C6 (AK)	..	..	..	..	C
45	CORRECTOR CONTROL BOX, type A	..	..	..	..	D
46	DETECTOR UNIT	..	..	..	..	D
47	COMPASS/DG SWITCH (AM)	..	..	..	..	C
48	ANNUNCIATOR METER (AH)	..	..	..	..	C
49	GYRO COMPASS UNIT, type B	..	..	..	..	D
50	JB and SERVO AMPLIFIER	..	..	..	..	D

TURN AND SLIP AND ATTITUDE INDICATOR (circuit codes F1, F2)

62	TURN and SLIP INDICATOR (H)	..	..	..	..	C
64	ATTITUDE INDICATOR SWITCH (S)	..	..	..	..	C
65	ATTITUDE INDICATOR (J)	..	..	..	..	C

Add:-

AIRSPEED SWITCH (circuit code M9)

71	AIRSPEED SWITCH	..	..	..	..	D
72	RELAY, type 10B No.13 (RH)	..	..	..	..	A

SERVO ALTIMETER

76	ALTIMETER Mk.22J	..	..	..	..	C
77	AC TEST POINT	..	..	..	..	D

INTERIOR LIGHTING - Now to be as follows:-

TRIM LAMP (circuit code L1) } Delete this
Items 78-79 } section

EMERGENCY LIGHTING (circuit code W13)

LOCATION
(see ELB Sht.3)

84	SWITCH (K)	..	..	..	..	C
85	LIGHT ASSEMBLY UNITS	..	..	..	(2)	C
86	COMPASS LAMP and SWITCH	..	..	..	..	C
87	RESISTOR	..	..	..	..	C
88	STANDBY ALTIMETER and COMPASS LAMPS (1 BRIDGE)	..	..	..	(2)	C

INSTRUMENT PANEL DC LIGHTING (circuit code L1)

92	RAD./INST. DIMMER SWITCH (D)	..	..	..	..	C
93	BRIDGE LAMPS (BD, V, G, C, U, W, L, C)	..	..	..	(8)	C

INSTRUMENT PANEL AC LIGHTING AND SUPPLIES

95	COCKPIT LIGHTING SWITCH (C)	..	..	..	..	C
96	RELAY, type D2362 (B)	..	..	..	..	D
97	CONTROL PANEL type 12	..	..	..	..	B
98	INVERTER, type 100C	..	..	..	..	B
99	DIMMER SWITCH (B)	..	..	..	..	C
100	TRANSFORMER (A)	..	..	..	..	D
101	LIGHT ASSEMBLY UNITS (C, D, E, F, G, H, J)	..	..	..	(7)	C
102	ELECTRO-LUMINESCENT PANELS (BC, J, D)	..	..	..	(3)	C

RADIO AND RADAR EQUIPMENT - Amend as follows:-

ARI 18124/1, ARI 23057, ULTRASONIC A/G POS. INDICATOR
MODULATOR AND AUDIO WARNING

129	UHF POWER SWITCH (S)	..	..	..	..	C
130	STANDBY UHF CHANNEL A GUARD SWITCH (R)	..	..	..	..	C
131	STATION BOX (B)	..	..	..	..	C
138	Delete - substitute:- MIC/TEL TB'S	..	..	..	(4)	D

ARI 23013 } Delete this
Items 166 to 173 } section
substitute:-

ARI 23238 DME

165	CONTROL UNIT (AR)	..	..	..	..	C
166	DISTANCE INDICATOR	..	..	..	..	C
167	INTERROGATOR	..	..	..	..	B
168	AERIAL	..	..	..	..	D

continued on next sheet

JET PROVOST T Mk. 3A
ELECTRICAL LOCATION

CENTRALISED WARNING-ALIGHTING GEAR-
FLYING INSTRUMENTS and CONTROLS-
INTERIOR and EXTERIOR LIGHTING-
RADIO and RADAR EQUIPMENT

AP 101B-2303-10
Issued JAN 75

ELB Sheet 1