

The following information should be used in conjunction with Sheets ELA1 & 2 (JET PROVOST T Mk. 3)

Add:-

LOCATION
(see ELB Sht.2)

ARI 23247 ILS/VOR

170	POWER SWITCH ..	..	..	..	..	..	C
171	SENSE SWITCH ..	..	..	..	..	..	C
172	PRESS-TO-TEST SWITCHES (AB, AC, AD)	..	..	..	..	(3)	C
173	NAVIGATOR'S CONTROL UNIT (AQ)	..	..	..	..	..	C
174	INDICATOR (AE)	..	..	..	..	..	C
175	MOUNTING TRAY and JB	..	..	..	..	..	D
176	MARKER AERIAL ..	..	..	..	..	..	D
177	GLIDESLOPE AERIAL	..	..	..	..	..	D
178	BALANCE UNIT ..	..	..	..	..	..	D
179	VOR/LOC AERIAL	..	..	..	..	..	D

EARTH POINTS

Add:-

3E	..	..	..	..	..	..	..	D
----	----	----	----	----	----	----	----	---

ELECTRICAL JUNCTIONS

Add:-

13J	..	}	LOC.	KEY	26J	..	..	}	LOCATION
14J	..				27J	..	..		
15J	..			LOCATION	28J	..	..		
18J	..			NOT	32J	..	..		
22J	..			KNOWN	33J	..	..		
23J	..			34J	..	..			
25J	..			151J	..	..	..		KEY

Use Mk.3 sheet ELA2 for this section:-

LOCATION

POWER SUPPLIES

DC POWER SUPPLIES, DISTRIBUTION (circuit code P)
& EMERGENCY BATTERY (circuit code W13)

Delete:-

Item 11

12 to read:-

BATTERIES 25V 18AH AS ON SHT ELA2

RADIO SUPPLIES (circuit codes R4, 5, 6, 8)
Items 38-47

} Delete this
section

FUEL CONTENTS GAUGE (circuit code E2)

73 to read:-

FUEL CONTENTS SELECTOR SWITCHES (P, Q) (2) C - (see sht ELA2)

Delete:-

Item 74

FUEL LOW PRESSURE WARNING (circuit code E7)

Delete:-

Item 78

JET PROVOST T Mk. 3A
ELECTRICAL LOCATION

WIRELESS EQUIPMENT-EARTH POINTS-
JUNCTIONS-POWER SUPPLIES-ENGINE SERVICES

AP 101B-2303-10
ISSUED JAN 75

ELB Sheet 2