ROVER AIRBORNE AUXILIARY POWER PLANT Mk. 10201

GENERAL AND TECHNICAL INFORMATION, MINOR REPAIR AND FITS, CLEARANCES AND REPAIR TOLERANCES

INTRODUCTION

LEADING PARTICULARS

OPERATING LIMITATIONS

LIST OF SECTIONS

Note.—A list of chapters appears at the beginning of each section

- 1 Description
- 2 Preservation and preparing for installation
- 3 Starting and ground checking
- 4 Servicing
- 5 Minor repair
- 6 Fits, clearances and repair tolerances

: