

ROVER AIRBORNE AUXILIARY POWER PLANT MK. 10301

GENERAL AND TECHNICAL INFORMATION  
AND MINOR REPAIR

INTRODUCTION

LEADING PARTICULARS

OPERATING LIMITATIONS

LIST OF SECTIONS

Note . . . A list of chapters appears at the beginning of each section

1. Description
2. Preservation and preparing for installation
3. Starting and ground checking
4. Routine servicing
5. Minor repair
6. Test stand

