

CONTENTS

Preliminary material

Title page  
Amendment record  
Modification record

CONTENTS LIST

Contents (this leaf)

INTRODUCTION

Memorandum of instructions  
Catalogue instructions

INDEX OF REFERENCE NUMBERS

INDEX OF NATO STOCK NUMBERS

INDEX OF PART NUMBERS

DETAILED PARTS LIST

Chapters

48-0	IPN starting systems
48-1	Airframe group
48-1-1	Fuel pump, air blower and motor unit
48-1-2	H.P. switch and solenoid valve assembly
48-1-3	Ignition switch assembly
48-1-4	Ignition unit assembly
48-1-5	Control unit assembly
48-2	Engine group
48-2-1	Starter motor assembly

This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

