

CONTENTS

CONTENTS

Introduction

PART 1 – DESCRIPTION AND MANAGEMENT OF SYSTEMS

Chapter 1 – ELECTRICAL SYSTEM

	Para.
DESCRIPTION	
Basic system	1
Main generator supply	2
Alternator supply	3
Standby generator supply	4
Instrument supplies	5
Battery supply	6
Emergency battery	7
CONTROLS AND INDICATORS	
Battery switch	8
Generator switch	9
Instrument supply system control	10
AC and DC reset buttons	11
Voltmeter	12
Supply failure warnings	13
NORMAL USE	
Pre-flight and starting	14
In flight	15
After landing and shut-down	16
MALFUNCTIONING	
AC supply failure	17
Generator failure	18
Generator overvolting	19
Main air turbine malfunction	20
Instrument supply change-over in flight	21

Chapter 2 – FUEL SYSTEM

DESCRIPTION	
Basic system	1
Fuel tanks	2
Fuel tank capacities	3
Fuel transfer to main tanks	4
Fuel transfer within the main tanks	5
Fuel hydraulic system	6
Fuel feed to the engines	7
Wing-to-wing transfer system	8
Ground refuelling system	9
Flight refuelling system	10

RESTRICTED

PART 1 – continued

Chapter 2 – FUEL SYSTEM – continued

	Para.
CONTROLS AND INDICATORS	
LP cock switches	11
DC pump switches	12
Wing-to-wing transfer	13
Fuel contents gauges	14
Ventral fuel transfer switch	15
Fuel pressure warnings	16
Vent valve heating	17
Flight refuelling controls	18
Ventral tank fuel pressure gauge	19
NORMAL USE	
Before starting the engines	20
Starting the engines and checks after starting	21
In flight	22
Flight with low contents	23
After flight	24
MALFUNCTIONING	
Fuel pressure warning	25
Wing-to-wing transfer valve failure	26
Fuel contents gauge failure	27
Ventral tank fuel transfer failure	28
Venting of ventral tank fuel	29

Chapter 3 – ENGINES AND REHEAT

DESCRIPTION	
Avon Mk. 302C engines	1
Fuel system	2
Airflow control	3
Oil system	4
Starting	5
Relighting	6
Anti-icing	7
Reheat	8
Operation of reheat	9
Automatic cancellation of reheat	10
CONTROLS AND INDICATORS	
Throttles/HP cocks	11
Throttle servo control	12
Starting and relighting controls	13
Jet pipe temperature control	14
Engine instruments	15
Anti-icing control	16
Engine and reheat warnings	17

PART 1 – continued

Chapter 3 – ENGINES AND REHEAT – continued

									Para.
			NORMAL USE						
Starting the engines	18
Engine ground running	19
Take-off	20
			MALFUNCTIONING						
Engine fails to start	21
Engine and reheat failures			22
Throttle seizure in reheat			23
Malfunctioning of the anti-icing system			24

Chapter 4 – WARNING SYSTEMS AND FIRE PROTECTION SYSTEMS

WARNING SYSTEMS

[illegible]

ENGINE FIRE PROTECTION SYSTEM

[illegible]

Chapter 5 – HYDRAULIC SYSTEM

DESCRIPTION

[illegible]

Chapter 6 – POWER FLYING CONTROLS AND TRIMMERS

DESCRIPTION

[illegible]

PART 1 – continued

Chapter 6 – POWER FLYING CONTROLS AND TRIMMERS – continued

	CONTROLS AND INDICATORS	Para.
Controls	5
Trim switches and indicators	6
Power controls failure warnings	7
	NORMAL USE	
Pre-flight checks	8
In flight	9
	MALFUNCTIONING	
Power control failure	10
Trimmer malfunction	11
Hydraulic feel failure	12

Chapter 7 – AIRCRAFT SERVICES AND CONTROLS

	DESCRIPTION AND CONTROLS	
Undercarriage	1
Undercarriage control and position indication	2
Undercarriage emergency lowering	3
Wheels and brakes	4
Flaps	5
Flaps control and position indication	6
Airbrakes	7
Airbrake controls and position indication	8
Brake parachute	9
Brake parachute controls	10
Airfield arrester hook	11

Chapter 8 – CANOPY, COCKPIT SERVICES AND LIGHTING

	COCKPIT CANOPY	
General description	1
Normal operating controls	2
Indicators and warnings	3
Canopy opening in power failure conditions	4
Canopy jettison	5
	LIGHTING	
Normal internal lighting	6
Emergency internal lighting	7
External lighting	8
	COCKPIT AIR CONDITIONING AND PRESSURIZATION	
Cockpit air conditioning system	9
Cockpit pressurization	10
	CONTROLS AND INDICATORS	
Cockpit air controls	11
Cockpit temperature control	12

PART 1 – continued

Chapter 8 – CANOPY, COCKPIT SERVICES AND LIGHTING – continued

	Para.
NORMAL USE	
Pressurization and temperature control	13
MALFUNCTIONING	
Pressurization failure	14
Temperature control failures	15
Emergency decompression	16
Smoke or mist in the cockpit	17
WINDSCREEN DE-MISTING AND RAIN DISPERSAL	
Windscreen heating	18
Hot air de-misting	19
Canopy interspace de-misting	20
Rain dispersal	21

Chapter 9 – FLIGHT AND NAVIGATION INSTRUMENTS

DESCRIPTION	
General information	1
Integrated flight instrument system – general	2
Standby systems	3
Dynamic reference system	4
Air data system	5
IFIS DISPLAYS	
Attitude indicator	6
Navigation display	7
Speed display	8
Height and vertical speed display	9
STANDBY INSTRUMENTS AND CONTROLS	
Standby flight instruments	10
Pitot heaters	11
Standby compass	12
Accelerometer	13
NORMAL USE	
Pre-flight checks	14

Chapter 10 – FLIGHT CONTROL SYSTEM

DESCRIPTION	
Facilities provided	1
Basic system	2
Safety devices	3
Autostabilization	4
Programmed climb	5
Height or height and heading lock	6
Attitude hold	7
Auto/FD ILS modes (Track and Glide)	8
Auto-throttle	9

PART 1 – continued

Chapter 10 – FLIGHT CONTROL SYSTEM – continued

	Para.
CONTROLS AND INDICATORS	
FCS engage switch	10
Pilot's controller	11
Heading selector (Navigation display)	12
Flight director	13
Autopilot trim indicator	14
Throttle servo control	15
NORMAL USE	
Pre-flight checks	16
Mode engagement sequence	17
Autostabilization	18
Programmed climb	19
Height or height and heading lock	20
Attitude hold	21
Auto/FD ILS modes (Track and Glide)	22
Track mode as a height and heading lock	23
Auto-throttle	24
FCS as a GCA aid	25
MALFUNCTIONING	
FCS/autostabilizer defects	26
Aircraft response to defects	27
Action following malfunction	28
Instrument power supply change-over	29

Chapter 11 – AIRCREW EQUIPMENT ASSEMBLY AND ASSOCIATED SYSTEMS

AIRCREW EQUIPMENT ASSEMBLY (AEA)	
Composition of the AEA	1
Features of the ejection seat	2
Seat height adjustment	3
Go-forward control	4
Personal equipment connector	5
Combined harness quick-release box	6
Leg restraint cords and adjusting controls	7
Manual separation from the seat	8
Rip-cord D-ring	9
Normal operation of the seat on ejection	10
Clothing	11
ANTI-G AND AVS SYSTEMS	
Anti-g system	12
Air-ventilated suit system	13
OXYGEN SYSTEMS	
General information	14
Contents indication	15
Pressure demand regulator	16
Emergency oxygen system	17
Protection afforded by the AEA	18

PART 1 – continued

Chapter 11 – AIRCREW EQUIPMENT ASSEMBLY AND ASSOCIATED SYSTEMS – continued

	Para.
USE OF THE AEA	
Pre-flight checks	19
Strapping-in procedure	20
Leaving the seat after landing	21
Abandoning the aircraft in flight	22

Chapter 12 – COMMUNICATION RADIO AND RADAR INSTALLATIONS

Communication, radio and radar installations	1
R/T communication	2
Standby UHF	3
External intercomm.	4
Telebriefing	5
UHF homing	6
Tacan	7
ILS	8
IFF Mk. 10 (SIF)	9

Chapter 13 – SEARCH AND ATTACK RADAR

DESCRIPTION	
GENERAL INFORMATION	
Basic radar	1
Cathode ray tube and range indication	2
INTRODUCTION TO AI23S	
Air-to-air mode	3
Air-to-ground mode	4
MAIN UNITS	
Radar unit	5
Transmitter	5(a)
Scanner	5(b)
Receiver	5(c)
Ranging units	5(d)
Red computer	5(e)
CRT and visual recorder	6
Gyroscope unit	7
Marker unit	8
Hand control unit	9
SWITCHES, CONTROLS AND INDICATORS	
SWITCHES	
Light fighter sight switch	10
Computer switch	11
Brilliance knob	12
Polarised light screen knob	13
Master armament selector (MAS)	14
Visual recorder camera switch	15
AI23S HAND CONTROL UNIT	
Main on/off switch	16

PART 1 – continued

Chapter 13 – SEARCH AND ATTACK RADAR – continued

	Para.
Normal/standby switch	17
Transmitter on/off switch	18
Control handle	19
Control handle locking lever	20
40 n.m./10 n.m. scale switch	21
Target reject and 60 n.m. scale lever	22
Acquisition marker range control	23
1-1/2-1/4- bar scan switch	24
Phase selector	25
Receiver manual gain control	26
Visident switch	27
CATHODE RAY TUBE	
Screen layout	28
Search phase	29
Multibar scan and loss of scan cover in elevation	30
Acquisition phase	31
Track phase	32
Breakaway	33
Vis-ident	34
Radar ranging, air-to-air	35
Radar ranging, air-to-ground	36

NORMAL USE

RUN-UP AND COOLING	
Run-up	37
Cooling	38
Overheating	39
PRE-FLIGHT CHECKS	
Checks before engine start	40
Checks after engine start	41
Sighter burst	42
Collision cover in the climb	43
OPERATION IN FLIGHT	
Search phase and pre-attack checks	44
Acquisition phase	45
Track phase	46
Failure to lock and loss of lock	47
Post attack checks	48
Aerobatic checks	49
Pre-landing checks	50
After landing checks	51

Chapter 14 – ARMAMENT AND ASSOCIATED SYSTEMS

DESCRIPTION

General information	1
Aircraft safety devices	2
Firestreak missile	3
Firestreak pack	4
Firestreak arming and firing	5

PART 1 – continued

Chapter 14 – ARMAMENT AND ASSOCIATED SYSTEMS – continued

	Para.
Firestreak missile and pack safety devices	6
Red Top missile	7
Red Top pack	8
Red Top arming and firing	9
Red Top missile and pack safety devices	10
Aden guns pack	11
2-inch rocket	12
2-inch rocket launchers and pack	13
SNEB 68 mm rocket and MATRA launcher	14
Bombs, 1000 lb	15
Reconnaissance pack	16
Light fighter sight – general function	17
G90 camera	18
Power supplies	19

CONTROLS AND INDICATORS

Grouped controls and indicators	20
LF SIGHT switch	21
Light fighter sight – description	22
Armament trigger	23
Control column CAMera button	24
LFS caging button	25
Weapon jettison push button	26
Reconnaissance pack camera controls and indicators	27
2-inch rocket launcher emergency extend switch and ground extend switch	28
Firestreak cooling-air pressure gauge	29

NORMAL USE

Pre-flight checks	30
In flight checks	31

PART 2 – LIMITATIONS

Chapter 1 – AIRFRAME LIMITATIONS

General	1
Weight limitations	2
CG limits	3
Maximum speeds	4
Minimum speeds	5
G limitations	6
Altitude limitations	7
Stalling and spinning	8
Rolling manoeuvres	9
Aircraft approach limitations	10
Airfield restrictions	11
Crosswind limitations	12

PART 2 – continued

Chapter 2 – EQUIPMENT LIMITATIONS AND MISCELLANEOUS RESTRICTIONS

	Para.
Flight control system	1
Weapon firing or jettisoning limits	2
Carriage or Red Top missiles without wings	3
ILS	4
Emergency arrester hook	5

Chapter 3 – ENGINE LIMITATIONS

Avon Mk. 302C operating limitations	1
Oil pressure	2
Reheat time restriction	3

PART 3 – HANDLING

Chapter 1 – PREPARATION FOR FLIGHT

External checks	1
Ejection seat checks	2
Internal checks	3

Chapter 2 – STARTING, TAXYING AND TAKE-OFF

Engine starting and checks after starting	1
Engine handling on the ground	2
Failure to start	3
Taxying	4
Take-off performance considerations	5
Take-off in icing conditions	6
Checks before take-off	7
Take-off	8
Take-off with asymmetric underwing stores (operational contingency only)	9
Take-off emergencies	10
After take-off	11

Chapter 3 – HANDLING IN FLIGHT

Climbing	1
Engine handling in flight	2
Reheat handling in flight	3
Engine handling with anti-icing in operation	4
General flying	5
High speed flying	6
Flight conditions involving high structural loads	7
Stalling in 1g flight	8
G-stalling	9
Spinning	10
Formation flying	11
Flight refuelling	12
Range and endurance	13
Flight in turbulence	14
Aerobatics	15
Descent procedures	16

PART 3 – continued

Chapter 4 – OPERATIONAL HANDLING

	Para.
Breakaway after an air-to-air attack	1
Breakaway after an air-to-ground attack	2

Chapter 5 – CIRCUIT AND LANDING PROCEDURES

Approach and landing	1
Precautionary landing	2
Brake parachute failure	3
Use of the wheel brakes	4
Overshoot procedure	5
Instrument approach	6
Auto – ILS approach	7
Flapless landing	8
Crosswind landing	9
Roller landings	10
Landing at weights above the normal maximum landing weight	11
Checks after flight	12

Chapter 6 – SINGLE-ENGINE FLYING AND RELIGHTING

Stopping an engine	1
Single-engine flying	2
Relighting an engine in flight	3
Relighting in icing conditions	4
Single-engine landing and overshooting	5

PART 4 – EMERGENCY PROCEDURES

Chapter 1 – ENGINE AND FUEL SYSTEM EMERGENCY PROCEDURES

Engine failure on take-off	1
Reheat failure on take-off	2
Engine failure in flight	3
Oil pressure warning	4
Engine or reheat fires in flight	5
Fuel warnings	6
Ventral tank fuel transfer failures	7
Fuel leak	8

Chapter 2 – ELECTRICAL EMERGENCY PROCEDURES

General information	1
Main generator failure	2
Double generator failure	3
Battery failure	4
AC supplies failure	5
Air turbine failure or burst air duct	6

PART 4 – continued

Chapter 3 – AIRFRAME EMERGENCIES

	Para.
Service hydraulic system failure	1
Hydraulic feel failure	2
Flying controls hydraulic system failure	3
Undercarriage emergencies	4
Oxygen emergencies	5
Cockpit pressure failure	6
Overpressurization	7
Smoke, noxious fumes or mist in the cockpit	8
Cockpit temperature control failure	9
Weapon jettisoning	10
Canopy jettisoning	11
Autostabilizer/autopilot malfunction	12

Chapter 4 – ABANDONING AND EMERGENCY LANDING PROCEDURES

Abandoning the aircraft	1
Landing on an unprepared surface	2
Landing with the undercarriage in abnormal positions	3
Landing with a burst tyre	4
Engaging a runway arrester barrier	5
Engaging a runway arrester wire	6

PART 5 – CONTROLS AND INDICATORS

Cockpit controls and indicators	1
---------------------------------	---