

## CONTENTS

## CONTENTS

## Introduction

## PART 1 – DESCRIPTION AND MANAGEMENT OF SYSTEMS

## Chapter 1 – ELECTRICAL SYSTEM

	DESCRIPTION	Para.
Basic system . . . . .		1
Main generator supply . . . . .		2
Alternator supply . . . . .		3
Standby generator supply . . . . .		4
Instrument supplies . . . . .		5
Battery supply . . . . .		6
Emergency battery . . . . .		7
	CONTROLS AND INDICATORS	
Battery switch . . . . .		8
Generator switch . . . . .		9
Instrument supply system control . . . . .		10
AC and DC reset buttons . . . . .		11
Voltmeters . . . . .		12
Supply failure warnings . . . . .		13
	NORMAL USE	
Pre-flight and starting . . . . .		14
In flight . . . . .		15
After landing and shut-down . . . . .		16
	MALFUNCTIONING	
AC supply failure . . . . .		17
Generator failure . . . . .		18
Generator overvolting . . . . .		19
Main air turbine malfunction . . . . .		20
Instrument supply change-over in flight . . . . .		21

## Chapter 2 – FUEL SYSTEM

	DESCRIPTION	
Basic system . . . . .		1
Fuel tanks . . . . .		2
Fuel tank capacities . . . . .		3
Fuel transfer to main tanks . . . . .		4
Fuel transfer within the main tanks . . . . .		5
Fuel hydraulic system . . . . .		6
Fuel feed to the engines . . . . .		7
Wing-to-wing transfer system . . . . .		8
Ground refuelling system . . . . .		9
Flight refuelling system . . . . .		10

## PART 1 – continued

## Chapter 2 – FUEL SYSTEM – continued

	Para.
<b>CONTROLS AND INDICATORS</b>	
LP cock switches . . . . .	11
DC pump switches . . . . .	12
Wing-to-wing transfer . . . . .	13
Fuel contents gauges . . . . .	14
Ventral fuel transfer switch . . . . .	15
Fuel pressure warnings . . . . .	16
Vent valve heating . . . . .	17
Flight refuelling controls . . . . .	18
Ventral tank fuel pressure gauge . . . . .	19
<b>NORMAL USE</b>	
Before starting the engines . . . . .	20
Starting the engines and checks after starting . . . . .	21
In flight . . . . .	22
Flight with low contents . . . . .	23
After flight . . . . .	24
<b>MALFUNCTIONING</b>	
Fuel pressure warning . . . . .	25
Wing-to-wing transfer valve failure . . . . .	26
Fuel contents gauge failure . . . . .	27
Ventral tank fuel transfer failure . . . . .	28
Venting of ventral tank fuel . . . . .	29

## Chapter 3 – ENGINES AND REHEAT

<b>DESCRIPTION</b>	
Avon Mk. 302C engines . . . . .	1
Fuel system . . . . .	2
Airflow control system . . . . .	3
Oil system . . . . .	4
Starting . . . . .	5
Relighting . . . . .	6
Anti-icing . . . . .	7
Reheat . . . . .	8
Operation of reheat . . . . .	9
Automatic cancellation of reheat . . . . .	10
<b>CONTROLS AND INDICATORS</b>	
Throttles/HP cocks . . . . .	11
Throttle servo control . . . . .	12
Starting and relighting controls . . . . .	13
Jet pipe temperature control . . . . .	14
Engine instruments . . . . .	15
Anti-icing control . . . . .	16
Engine and reheat warnings . . . . .	17

## PART 1 – continued

## Chapter 3 – ENGINES AND REHEAT – continued

	Para.
<b>NORMAL USE</b>	
Starting the engines . . . . .	18
Engine ground running . . . . .	19
Take-off . . . . .	20
<b>MALFUNCTIONING</b>	
Engine fails to start . . . . .	21
Engine and reheat failures . . . . .	22
Throttle seizure in reheat . . . . .	23
Malfunctioning of the anti-icing system . . . . .	24

## Chapter 4 – WARNING SYSTEMS AND FIRE PROTECTION SYSTEMS

<b>WARNING SYSTEMS</b>	
Standard warning system . . . . .	1
SWS indicator unit . . . . .	2
SWS associated controls . . . . .	3
Auxiliary warning system . . . . .	4
<b>ENGINE FIRE PROTECTION SYSTEM</b>	
Fire zones . . . . .	5
Fire extinguishers . . . . .	6
Fire detection . . . . .	7
Fire warnings . . . . .	8
Testing the fire detection and warning system . . . . .	9
Inertia crash switches . . . . .	10
<b>COCKPIT FIRE PROTECTION</b>	
Hand-operated extinguisher . . . . .	11

## Chapter 5 – HYDRAULIC SYSTEM

<b>DESCRIPTION</b>	
General . . . . .	1
Pumps . . . . .	2
Reservoirs . . . . .	3
Accumulators . . . . .	4
Pressure regulator . . . . .	5
Services system pressure gauge . . . . .	6
Controls systems failure warnings . . . . .	7
Operation of guided weapons and airbrakes . . . . .	8
Checking the services pumps . . . . .	9

## Chapter 6 – POWER FLYING CONTROLS AND TRIMMERS

<b>DESCRIPTION</b>	
General . . . . .	1
Ailerons . . . . .	2
Tailplane . . . . .	3
Rudder . . . . .	4

PART 1 – continued

Chapter 6 – POWER FLYING CONTROLS AND TRIMMERS – continued

	Para.
<b>CONTROLS AND INDICATORS</b>	
Controls . . . . .	5
Trim switches and indicators . . . . .	6
Power control failure warnings . . . . .	7
<b>NORMAL USE</b>	
Pre-flight checks . . . . .	8
In flight . . . . .	9
<b>MALFUNCTIONING</b>	
Power control failure . . . . .	10
Trimmer malfunction . . . . .	11
Hydraulic feel failure . . . . .	12

Chapter 7 – AIRCRAFT SERVICES AND CONTROLS

<b>DESCRIPTION AND CONTROLS</b>	
Undercarriage . . . . .	1
Undercarriage control and position indication . . . . .	2
Undercarriage emergency lowering . . . . .	3
Wheels and brakes . . . . .	4
Flaps . . . . .	5
Flaps control and position indication . . . . .	6
Airbrakes . . . . .	7
Airbrake controls and position indication . . . . .	8
Brake parachute . . . . .	9
Brake parachute controls . . . . .	10
Airfield arrester hook . . . . .	11

Chapter 8 – CANOPY, COCKPIT SERVICES AND LIGHTING

<b>COCKPIT CANOPY</b>	
General description . . . . .	1
Normal operating controls . . . . .	2
Indicators and warnings . . . . .	3
Canopy opening in power failure conditions . . . . .	4
Canopy jettison . . . . .	5
<b>LIGHTING</b>	
Normal internal lighting . . . . .	6
Emergency internal lighting . . . . .	7
External lighting . . . . .	8
<b>COCKPIT AIR CONDITIONING AND PRESSURIZATION</b>	
Cockpit air conditioning system . . . . .	9
Cockpit pressurization . . . . .	10
<b>CONTROLS AND INDICATORS</b>	
Cockpit air controls . . . . .	11
Cockpit temperature control . . . . .	12

## PART 1 – continued

## Chapter 8 – CANOPY, COCKPIT SERVICES AND LIGHTING – continued

	Para.
NORMAL USE	
Pressurization and temperature control . . . . .	13
MALFUNCTIONING	
Pressurization failure . . . . .	14
Temperature control failures . . . . .	15
Emergency decompression . . . . .	16
Smoke or mist in the cockpit . . . . .	17
WINDSCREEN DE-MISTING AND RAIN DISPERSAL	
Windscreen heating . . . . .	18
Hot air de-misting . . . . .	19
Canopy interspace de-misting . . . . .	20
Rain dispersal . . . . .	21

## Chapter 9 – FLIGHT AND NAVIGATION INSTRUMENTS

DESCRIPTION	
General information . . . . .	1
Integrated flight instrument system – general . . . . .	2
Standby systems . . . . .	3
Dynamic reference system . . . . .	4
Air data system . . . . .	5
IFIS DISPLAYS	
Attitude indicator . . . . .	6
Navigation display . . . . .	7
Speed display . . . . .	8
Height and vertical speed display . . . . .	9
STANDBY INSTRUMENTS AND CONTROLS	
Standby flight instruments . . . . .	10
Pitot heaters . . . . .	11
Standby compass . . . . .	12
Accelerometer . . . . .	13
NORMAL USE	
Pre-flight checks . . . . .	14

## Chapter 10 – FLIGHT CONTROL SYSTEM

DESCRIPTION	
Facilities provided . . . . .	1
Basic system . . . . .	2
Safety devices . . . . .	3
Autostabilization . . . . .	4
Programmed climb . . . . .	5
Height or height and heading lock . . . . .	6
Attitude hold . . . . .	7
Auto/FD ILS modes (Track and Glide) . . . . .	8
Auto-throttle . . . . .	9

## PART 1 – continued

## Chapter 10 – FLIGHT CONTROL SYSTEM – continued

	Para.
<b>CONTROLS AND INDICATORS</b>	
FCS engage switches . . . . .	10
Pilot's controller . . . . .	11
Heading selector (Navigation display) . . . . .	12
Flight director . . . . .	13
Autopilot trim indicator . . . . .	14
Throttle servo control . . . . .	15
<b>NORMAL USE</b>	
Pre-flight checks . . . . .	16
Mode engagement sequence . . . . .	17
Autostabilization . . . . .	18
Programmed climb . . . . .	19
Height or height and heading lock . . . . .	20
Attitude hold . . . . .	21
Auto/FD ILS modes (Track and Glide) . . . . .	22
Track mode as a height and heading lock . . . . .	23
Auto-throttle . . . . .	24
FCS as a GCA aid . . . . .	25
<b>MALFUNCTIONING</b>	
FCS/autostabilizer defects . . . . .	26
Aircraft response to defects . . . . .	27
Action following malfunction . . . . .	28
Instrument power supply change-over . . . . .	29

## Chapter 11 – AIRCREW EQUIPMENT ASSEMBLY AND ASSOCIATED SYSTEMS

<b>AIRCREW EQUIPMENT ASSEMBLY (AEA)</b>	
Composition of the AEA . . . . .	1
Features of the ejection seat . . . . .	2
Seat height adjustment . . . . .	3
Go-forward control . . . . .	4
Personal equipment connector . . . . .	5
Combined harness quick-release box . . . . .	6
Leg restraint cords and adjusting controls . . . . .	7
Manual separation from the seat . . . . .	8
Rip-cord D-ring . . . . .	9
Normal operation of the seat on ejection . . . . .	10
Clothing . . . . .	11
<b>ANTI-G AND AVS SYSTEMS</b>	
Anti-g system . . . . .	12
Air-ventilated suit system . . . . .	13
<b>OXYGEN SYSTEMS</b>	
Main oxygen system . . . . .	14
Emergency oxygen system . . . . .	15
Protection afforded by the AEA . . . . .	16

## PART 1 – continued

## Chapter 11 – AIRCREW EQUIPMENT ASSEMBLY AND ASSOCIATED SYSTEMS – continued

	Para.
USE OF THE AEA	
Pre-flight checks . . . . .	17
Strapping-in procedure . . . . .	18
Leaving the seat after landing . . . . .	19
Abandoning the aircraft in flight . . . . .	20

## Chapter 12 – COMMUNICATION, RADIO AND RADAR INSTALLATIONS

Communication, radio and radar installations . . . . .	1
R/T communication . . . . .	2
Standby UHF . . . . .	3
Intercommunication . . . . .	4
Telebriefing . . . . .	5
UHF homing . . . . .	6
Tacan . . . . .	7
ILS . . . . .	8
IFF Mk. 10 (SIF) . . . . .	9

## Chapter 13 – SEARCH AND ATTACK RADAR

DESCRIPTION	
GENERAL INFORMATION	
Basic radar . . . . .	1
Cathode ray tube and range indication . . . . .	2
INTRODUCTION TO AI23S	
Air-to-air mode . . . . .	3
Not applicable to Mk. 55 . . . . .	4
MAIN UNITS	
Radar unit . . . . .	5
Transmitter . . . . .	5(a)
Scanner . . . . .	5(b)
Receiver . . . . .	5(c)
Ranging units . . . . .	5(d)
Red computer . . . . .	5(e)
CRT and visual recorder . . . . .	6
Gyroscope unit . . . . .	7
Marker unit . . . . .	8
Hand control unit . . . . .	9

## SWITCHES, CONTROLS AND INDICATORS

SWITCHES	
Light fighter sight switch . . . . .	10
Computer switch . . . . .	11
Brilliance knob . . . . .	12
Polarised light screen knob . . . . .	13
Master armament selector (MAS) . . . . .	14
Visual recorder camera switch . . . . .	15
AI23S HAND CONTROL UNIT	
Main on/off switch (pupil only) . . . . .	16



# RESTRICTED

## PART 1 – continued

### Chapter 13 – SEARCH AND ATTACK RADAR – continued

	Para.
Normal/standby switch (pupil only) . . . . .	17
Transmitter on/off switch . . . . .	18
Control handle . . . . .	19
Control handle locking lever . . . . .	20
40 n.m./10 n.m. scale switch . . . . .	21
Target reject and 60 n.m. scale lever . . . . .	22
Acquisition marker range control . . . . .	23
1-2-4- bar scan switch . . . . .	24
Phase selector . . . . .	25
Receiver manual gain control . . . . .	26
Vis-ident switch . . . . .	27
<b>CATHODE RAY TUBE</b>	
Screen layout . . . . .	28
Search phase . . . . .	29
Multibar scan and loss of scan cover in elevation . . . . .	30
Acquisition phase . . . . .	31
Track phase . . . . .	32
Breakaway . . . . .	33
Vis-ident . . . . .	34
Radar ranging, air-to-air . . . . .	35
Not applicable to Mk. 55 . . . . .	36

#### NORMAL USE

<b>RUN-UP AND COOLING</b>	
Run-up . . . . .	37
Cooling . . . . .	38
Overheating . . . . .	39
<b>PRE-FLIGHT CHECKS</b>	
Checks before engine start . . . . .	40
Checks after engine start . . . . .	41
Sighter burst . . . . .	42
Collision cover in the climb . . . . .	43
<b>OPERATION IN FLIGHT</b>	
Search phase and pre-attack checks . . . . .	44
Acquisition phase . . . . .	45
Track phase . . . . .	46
Failure to lock and loss of lock . . . . .	47
Post attack checks . . . . .	48
Aerobatic checks . . . . .	49
Pre-landing checks . . . . .	50
After landing checks . . . . .	51

### Chapter 14 – ARMAMENT AND ASSOCIATED SYSTEMS

	DESCRIPTION	
General information . . . . .		1
Aircraft safety devices . . . . .		2
Firestreak missile . . . . .		3
Firestreak pack . . . . .		4
Firestreak arming and firing . . . . .		5

## PART 1 – continued

## Chapter 14 – ARMAMENT AND ASSOCIATED SYSTEMS – continued

	Para.
Firestreak missile and pack safety devices . . . . .	6
Red Top missile . . . . .	7
Red Top pack . . . . .	8
Red Top arming and firing . . . . .	9
Red Top missile and pack safety devices . . . . .	10
2-inch rocket . . . . .	11
2-inch rocket launchers and pack . . . . .	12
Light fighter sight – general function . . . . .	13
G90 camera . . . . .	14
Power supplies . . . . .	15

## CONTROLS AND INDICATORS

Master armament selector (MAS) . . . . .	16
Firestreak armed time indicator . . . . .	17
Red Top pure air pressure gauge . . . . .	18
C.R.T./L.F.S. switch . . . . .	19
Light fighter sight – description . . . . .	20
Grouped controls and indicators . . . . .	21
Missile jettison control . . . . .	22
Control column camera or mute switch . . . . .	23
Armament trigger . . . . .	24
Firestreak cooling-air pressure gauge . . . . .	25
2-inch rocket launcher ground extend switch . . . . .	26

## NORMAL USE

Pre-flight checks . . . . .	27
In flight checks . . . . .	28

## PART 2 – LIMITATIONS

## Chapter 1 – AIRFRAME LIMITATIONS

General . . . . .	1
Weight limitations . . . . .	2
CG limitations . . . . .	3
Maximum speeds . . . . .	4
Minimum speeds . . . . .	5
G limitations . . . . .	6
Altitude limitations . . . . .	7
Stalling and spinning . . . . .	8
Rolling manoeuvres . . . . .	9
Aircraft approach limitations . . . . .	10
Airfield restrictions . . . . .	11
Crosswind limitations . . . . .	12

PART 2 – continued

Chapter 2 – EQUIPMENT LIMITATIONS AND MISCELLANEOUS RESTRICTIONS

	Para.
Flight control system . . . . .	1
Weapon firing or jettisoning limits . . . . .	2
Carriage of Red Top acquisition and drill rounds without wings . . . . .	3
ILS . . . . .	4
Emergency arrester hook . . . . .	5

Chapter 3 – ENGINE LIMITATIONS

Avon Mk. 302C operating limitations . . . . .	1
Oil pressure . . . . .	2
Reheat time restriction . . . . .	3

PART 3 – HANDLING

Chapter 1 – PREPARATION FOR FLIGHT

External checks . . . . .	1
Checks on entering the cockpit and ejection seat checks . . . . .	2
Internal checks . . . . .	3

Chapter 2 – STARTING, TAXYING AND TAKE-OFF

Engine starting and checks after starting . . . . .	1
Engine handling on the ground . . . . .	2
Failure to start . . . . .	3
Taxying . . . . .	4
Take-off performance considerations . . . . .	5
Take-off in icing conditions . . . . .	6
Checks before take-off . . . . .	7
Take-off . . . . .	8
Take-off emergencies . . . . .	9
After take-off . . . . .	10

Chapter 3 – HANDLING IN FLIGHT

Climbing . . . . .	1
Engine handling in flight . . . . .	2
Reheat handling in flight . . . . .	3
Engine handling with anti-icing in operation . . . . .	4
General flying . . . . .	5
High speed flying . . . . .	6
Flight conditions involving high structural loads . . . . .	7
Stalling in 1g flight . . . . .	8
G-stalling . . . . .	9
Spinning . . . . .	10
Formation flying . . . . .	11
Flight refuelling . . . . .	12
Range and endurance . . . . .	13
Flight in turbulence . . . . .	14
Aerobatics . . . . .	15
Descent procedures . . . . .	16

## PART 3 – continued

## Chapter 4 – OPERATIONAL HANDLING

Breakaway after attack	...	...	...	...	...	...	...	...	...	Para. 1
------------------------	-----	-----	-----	-----	-----	-----	-----	-----	-----	------------

## Chapter 5 – CIRCUIT AND LANDING PROCEDURES

Approach and landing	...	...	...	...	...	...	...	...	...	1
Precautionary landing	...	...	...	...	...	...	...	...	...	2
Brake parachute failure	...	...	...	...	...	...	...	...	...	3
Use of the wheel brakes	...	...	...	...	...	...	...	...	...	4
Overshoot procedure	...	...	...	...	...	...	...	...	...	5
Instrument approach	...	...	...	...	...	...	...	...	...	6
Auto – ILS approach	...	...	...	...	...	...	...	...	...	7
Flapless landing	...	...	...	...	...	...	...	...	...	8
Crosswind landing	...	...	...	...	...	...	...	...	...	9
Roller landings	...	...	...	...	...	...	...	...	...	10
Landing at weights above the normal maximum landing weight	...	...	...	...	...	...	...	...	...	11
Checks after flight	...	...	...	...	...	...	...	...	...	12

## Chapter 6 – SINGLE-ENGINE FLYING AND RELIGHTING

Stopping an engine	...	...	...	...	...	...	...	...	...	1
Single-engine flying	...	...	...	...	...	...	...	...	...	2
Relighting an engine in flight	...	...	...	...	...	...	...	...	...	3
Relighting in icing conditions	...	...	...	...	...	...	...	...	...	4
Single-engine landing and overshooting	...	...	...	...	...	...	...	...	...	5

## PART 4 – EMERGENCY PROCEDURES

## Chapter 1 – ENGINE AND FUEL SYSTEM EMERGENCY PROCEDURES

Engine failure on take-off	...	...	...	...	...	...	...	...	...	1
Reheat failure on take-off (TTC warning remains on AWP)	...	...	...	...	...	...	...	...	...	2
Engine failure in flight	...	...	...	...	...	...	...	...	...	3
Oil pressure warning	...	...	...	...	...	...	...	...	...	4
Engine or reheat fires in flight	...	...	...	...	...	...	...	...	...	5
Fuel warnings	...	...	...	...	...	...	...	...	...	6
Ventral tank fuel transfer failures	...	...	...	...	...	...	...	...	...	7

## Chapter 2 – ELECTRICAL EMERGENCY PROCEDURES

General information	...	...	...	...	...	...	...	...	...	1
Main generator failure	...	...	...	...	...	...	...	...	...	2
Double generator failure	...	...	...	...	...	...	...	...	...	3
Battery failure	...	...	...	...	...	...	...	...	...	4
AC supplies failure	...	...	...	...	...	...	...	...	...	5
Air turbine failure or burst air duct	...	...	...	...	...	...	...	...	...	6

PART 4 – continued

Chapter 3 – AIRFRAME EMERGENCY PROCEDURES

	Para.
Services hydraulic system failure . . . . .	1
Hydraulic feel failure . . . . .	2
Flying controls hydraulic system failure . . . . .	3
Undercarriage emergencies . . . . .	4
Oxygen emergencies . . . . .	5
Cockpit pressure failure . . . . .	6
Overpressurization . . . . .	7
Smoke, noxious fumes or mist in the cockpit . . . . .	8
Cockpit temperature control failure . . . . .	9
Missile jettisoning . . . . .	10
Canopy jettisoning . . . . .	11
Autostabilizer/autopilot malfunction . . . . .	12

Chapter 4 – ABANDONING AND EMERGENCY LANDING PROCEDURES

Abandoning the aircraft . . . . .	1
Landing on an unprepared surface . . . . .	2
Landing with the undercarriage in abnormal positions . . . . .	3
Landing with a burst tyre . . . . .	4
Engaging a runway arrester barrier . . . . .	5
Engaging a runway arrester wire . . . . .	6

PART 5 – CONTROLS AND INDICATORS

Cockpit controls and indicators . . . . .	1
Cockpit controls and indicators . . . . .	2

•