

INDEX OF ASSEMBLIES

Assembly	Drawing No	Page No.
AIRCRAFT		
General Arrangement	E.A3.00.1	A.1
	E.H8.00.1	A.1
ARMAMENT		
Bomb Gear	E.H8.97.1	8A.1
Attack Bomb Sight	E.H8.97.31	8B.1
Air Defence	E.H8.97.11	8C.1
Bomb Pylon Port	E.H8.97.17	8D.1
Bomb Pylon Starboard	E.H8.97.19	8D.1
Bomb Sight	E.H8.97.7	8E.1
CONTROLS		
Engine Control - Centre Fuselage	E.A1.47.125	CA.1
Engine Control - Nose Fuselage	E.H8.47.5	CB.1
Engine Control - Port Wing	E.A2.47.291	CC.1
Engine Control - Starboard Wing	E.A2.47.292	CD.1
CONTROLS		
Flying	H8.45.3	DA.1
Flying	H8.45.12	DB.1
Flying	H8.45.3	DC.1
Flying	A1.45.12	DD.1
Flying Control - Wing	A1.45.14	DE.1
Mechanical	E.A1.20.701	DF.1
Mechanical	E.A1.20.700	DG.1
Auto	E.H8.45	DH.1
ELECTRICAL		
Electrical	E.H8.81.1	E.A1
Electrical	E.H8.81.5	E.B.1
Electrical	E.H8.81.11	E.C.1
Electrical	E.H8.81.9	E.D.1
Electrical	E.H8.81.10	E.E.1
EQUIPMENT		
Equipment	E.H8.80.1	GA
Equipment	NOT USED	GB
EQUIPMENT		
Equipment	E.A1.88.2	F.1
FUSELAGE		
Centre Fuselage	E.H8.00.7	KA.1
Port Wing	E.H8.00.5	KB.1
Starboard Wing	E.H8.00.9	KC.1

	Drawing No	Page No
MAIN PLANE Mainplane (Left) P Mainplane (Right) P Aileron (Left) Aileron (Right) Control Locking (Left) P Control Locking (Right) P Wing (Left) Wing (Right) Wing (Left) Wing (Right) Wing (Left) Wing (Right)	E H8.00.11 E H8.00.12 E A9.00.109 E A9.00.110 E A3.00.1053 E A3.00.1054 E A3.00.5174 E A3.00.5175 E A3.20.1 E A3.20.2	LA.1 LA.1 LB.1 LB.1 LC.1 LC.1 LD.1 LD.1 LE.1 LE.1
POWER INST Power Inst (Left) Power Inst (Right) Power Inst (Left) Power Inst (Right) Power Inst (Left) Power Inst (Right) Power Inst (Left) Power Inst (Right) Power Inst (Left) Power Inst (Right)	E A1.00.28 E A1.00.63 E A1.00.55 E A1.00.23 E A1.00.59 E A1.00.57 E B6.00.53 E A1.00.21 E A1.00.22	N.1 N.1 N.2 N.1 N.3 N.3 N.3 N.1 N.1
QUARTER Quarter (Left) Quarter (Right)	E A1.50.395 E A1.50.396 E A1.51.1 E A1.51.2 E A4.00.101 E A4.00.104	PA.1 PB.1 PC.1 PD.1 PE.1 PF.1
QUARTER Quarter (Left) Quarter (Right)	E H8.82.25	QA.1 QB.1

A