

ARMAMENT

BOMB GEAR

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Rpts No.
					M.R. L.M.	
	E.H8.97.1	ARMAMENT, GENERAL ARRANGEMENT Spares for:-	-	-	-	
11A/3688	E.A3.97.115	. ADAPTOR, beam, forward, light series bomb carrier	4	-	A	BA1/1
11A/3689	E.A3.97.117	. ADAPTOR, beam, forward, light series bomb carrier	4	-	A	BA1/2
		Attaching parts for E.A3.97.115 and E.A3.97.117:-				
28D/1011240	A25/5E	. Bolt, 1/2" BSF	2	-	C	BA1/3
28M/1011475	A27/EP	. Nut, 1/2" BSF	2	-	C	BA1/4
28W/9416644	SP.47/E	. Washer, single coil	2	-	C	-
11A/3690	E.A3.97.111	. ADAPTOR, beam, rear, light series bomb carrier	2	-	A	BA1/5
11A/3691	E.A3.97.113	. ADAPTOR, beam, rear, light series bomb carrier	2	-	A	BA1/6
		Attaching parts for E.A3.97.111 and E.A3.97.113:-				
28D/1011244	A25/8E	. Bolt, 1/2" BSF	2	-	C	BA1/7
28M/1011475	A27/EP	. Nut, 1/2" BSF	2	-	C	BA1/8
28W/9416644	SP.47/E	. Washer, single coil	2	-	C	-
	-	. ADAPTOR, for M.L. twin carrier	2	-	-	-
	ARR.9583-140C	. ADAPTOR, Kit, for C.B.L.S. 25 lb. store	2	-	-	-
	ARR.9583-99C	. ADAPTOR, Kit, for C.B.L.S. 5" store	2	-	-	-
	E.H8.97.147	. BEAM, BOMB, FORWARD, SECONDARY, ASSEMBLY	1	-	-	BA1/9
		Spares for:-				
	E.A1.97.11	. BEAM, BOMB, ASSEMBLY	1	-	-	BA2/1
		Spares for:-				
	E.A1.97.377	. BRACKET, crutch, bolt	4	-	-	BA2/2
		Attaching parts for E.A1.97.377:-				
	E.A3.97.199	. Bolt, special	2	-	-	BA2/3
28D/1011301	A25/8J	. Bolt, 3/8" BSF	2	-	C	BA2/4
28M/1011473	A27/JP	. Nut, 3/8" BSF	2	-	C	BA2/5
11A/3825	E.A1.97.251	. BUSH, eccentric, 5/8" bore	4	DTD.683	C	BA2/6
11A/3824	E.A1.97.253	. BUSH, eccentric, 3/8" bore	4	DTD.683	C	BA2/7
	E.A1.97.131	. CLEAT, pin	2	-	-	BA2/8
		Attaching parts for E.A1.97.131:-				
28D/1011240	A25/5E	. Bolt, 1/2" BSF	2	-	C	BA2/9
28M/1011475	A27/EP	. Nut, 1/2" BSF	2	-	C	BA2/10
28W/9419405	SP.15/E	. Washer	2	-	C	-
11A/3701	E.A1.97.383	. CRUTCH, bolt, c/w pad	4	-	C	BA2/11
11A/5465	E.A3.97.579	. CRUTCH, bolt, assembly	10	-	C	BA2/12
11A/3838	E.A2.97.87	. PEG, triple carrier, locating	5	-	C	BA2/13
11A/3840	E.A3.97.413	. PEG, triple carrier, locating	1	-	C	BA2/14

**ARMAMENT
BOMB GEAR**

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip.	Part No.
					M.R. L.M.	
11A/3841	E.A1.97.133	PIN, beam locating	2	-	C	BA2/16
28P/1011036	SP.9/G8	Attaching parts for E.A1.97.133:-	2	-	C	BA2/16
	E.A1.97.135	Pin, split	1	-	-	BA2/17
	E.A9.97.1091	Washer	1	-	-	BA2/18
	E.A9.97.1091	Washer	1	-	-	BA2/18
5CZ/868	S.I.S.2057	BLOCK, terminal, type 'B' 5 way No.1	3	-	C	BA3/1
28M/10286	AGS.2001/A/1	Attaching parts for S.I.S.2057:-	2	-	C	BA3/2
	A33/A24	Nut, 6 BA	2	-	C	BA3/3
11A/3827	E.A3.97.461	BOLT, special eye, assembly, at frame 21	2	DTD.683	C	BA2/19
11A/3828	E.A3.97.463	BOLT, special eye, assembly, at frame 17	2	DTD.683	C	BA2/20
11A/3796	E.A3.97.313	BOLT, special bearing, bomb, release unit	2	S.97	C	BA2/21
7725	E.A3.81.1135	BOLT, special cocking test plug, retaining	3	-	-	BA2/22
	EEAS.133	BRACKET, clip, mounting	6	-	C	BA2/23
28D/1010658	A25/1B	Attaching parts for EEAS.133:-	1	-	C	BA2/24
	28M/1278189	Bolt, 4 BA	1	-	C	BA2/25
28E/9436947	E.A3.81.1843	CABLE, assembly, from emergency release unit to socket No.2	1	-	-	BA3/4
	E.A3.81.1845	CABLE, assembly, from release unit to socket No.2	1	-	-	BA3/5
	E.G4.81.1899	CABLE, assembly, from terminal block to release socket No.3	1	-	-	BA3/6
	E.G4.81.1895	CABLE, assembly, from terminal block to release socket No.2	1	-	-	BA3/7
	E.G4.81.1893	CABLE, assembly, from terminal block to release socket No.1	1	-	-	BA3/8
	E.A3.81.1853	CABLE, assembly, from terminal block to jettison socket No.1	1	-	-	BA3/9
	E.A3.81.1855	CABLE, assembly, from terminal block to jettison socket No.2	1	-	-	BA3/10
	E.A3.81.1857	CABLE, assembly, from terminal block to jettison socket No.3	1	-	-	BA3/11
	E.A3.81.1859	CABLE, assembly, from terminal block to bomb jettison supply, socket	1	-	-	BA3/12
	E.G4.81.1897	CABLE, assembly, from terminal block to bomb release supply, socket	1	-	-	BA3/13
	E.G4.81.1909	CABLE, assembly, from terminal block to practice bomb socket 4-6	1	-	-	BA3/14
	E.G4.81.1907	CABLE, assembly, from terminal block to practice bomb socket 3-5	1	-	-	BA3/15
	AS.3180-4B	CLIP	1	-	C	BA3/16
	AS.3180-5B	CLIP	3	-	C	BA3/17
	AS.1900/C	CLIP	1	-	-	BA3/18
28E/1201809	AS.3180-6B	CLIP	1	-	C	BA3/19
28E/9000882	AS.3180-7B	CLIP	1	-	C	BA3/20
	AS.1900/F	CLIP	2	-	-	BA3/21
28E/8018278	AS.1900/G	CLIP	6	-	-	BA3/22
	AS.3180-8B	CLIP	1	-	C	BA3/23

**ARMAMENT
BOMB GEAR**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mati. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		Attaching parts for AS.3180-4B, AS.3180-5B, AS.1900/C, AS.3180-6B, AS.3180-7B, AS.1900/F, AS.1900/G, and AS.3180-8B:-				
28D/1010658	A25/1B	Bolt, 4 BA (As Required)	1	-	C	-
28D/9133011	A25/2C	Bolt, 2 BA (As Required)	1	-	C	-
28M/1278189	AGS.2001/B/1	Nut, 4 BA (As Required)	1	-	C	-
28M/1278190	AGS.2001/C/1	Nut, 2 BA (As Required)	1	-	C	-
	AS.2295/3	CLIP, spring	2	-	-	BA3/24
	AS.2295/5	CLIP, spring	2	-	-	BA3/25
	AS.2295/7	CLIP, spring	1	-	-	BA3/26
	AS.2295/8	CLIP, spring	1	-	-	BA3/27
11A/3684	†	COVER, dust, emergency release unit	2	-	C	BA2/26
	STANDARD INSULATOR					
5K/4868	S.I.C.617.BL.283	GROMMET, rubber, 3/16" i/d.	1	-	C	BA3/28
	STANDARD INSULATOR					
5K/4869	S.I.C.655.A.603	GROMMET, rubber, 3/8" i/d	4	-	C	BA3/28
	STANDARD INSULATOR					
5K/4870	S.I.C.672.2	GROMMET, rubber, 5/8" i/d	8	-	C	BA3/30
	C.S.P.368 CC	GROMMET	2	-	-	BA3/31
11A/3674	†	HOUSING, release unit	3	-	B	BA2/27
28M/10295	AGS.2001/QA/1	NUT, 5/8" BSF bearing, bolt securing	2	-	C	BA2/28
11A/3837	E.A3.81.1821	PIN, connector block retaining	6	-	C	BA3/32
5C/455	†	PLUG, flat, 2 pin	3	-	C	BA3/33
11A/3673	†	UNIT, emergency release No.3 MK 1	1	-	A	BA2/29
	E.A3.97.419	UNIT, emergency release	1	-	-	BA2/30
		Spares for:-				
	E.A3.97.349	UNIT, emergency release, assembly	1	-	-	BA2/31
5D/1478	†	UNIT, fusing No.2 MK 1	3	-	A	BA2/32
	E.A3.97.415	UNIT, lanyard retraction, assembly	1	-	-	BA2/33
		Spares for				
11A/3792	†	UNIT, retraction MK 2	3	-	A	BA2/34
	E.86.97.463	UNIT, lanyard retraction assembly	1	-	-	BA2/35
11A/4715	†	UNIT, emergency release No.3	2	-	A	BA2/38
	E.H8.97.173	UNIT, manual release, assembly	1	-	-	BA2/37
		Spares for:-				
	E.A3.97.445	CABLE, Bowden, No.1 slip, assembly	1	-	-	BA2/38
	E.A3.97.593	CABLE, Bowden, No.2 slip, assembly	1	-	-	BA2/39
	E.A3.97.449	CABLE, Bowden, No.3 slip	1	-	-	BA2/40
	AS.3181/3B	CLIP, 'P', fixing cables	23	-	-	BA2/41
	E.A3.97.297	COVER, spring, No.1 slip assembly	1	-	-	BA2/42
	E.A3.97.299	COVER, spring, No.2 slip, assembly	1	-	-	BA2/43
	E.A3.97.301	COVER, spring, No.3 slip, assembly	1	-	-	BA2/44
	E.A3.97.539	PULLEY, assembly	3	-	-	BA2/45
	E.A3.97.577	SPRING, No.2 slip, cable	1	-	-	BA2/46
	TERRY COM.2	SPRING, No.1 & No.3 slip, cable (Cut 1.75")	2	-	-	BA2/47
11A/3787	E.A3.97.315	WASHER, special, under bearing bolt securing nut	2	-	C	BA2/48
		Attaching parts for E.H8.97.147:-				
28FP/30	AV.DELA618	Pin, pip, quick release, 3/8" dia.	2	H.T.S.	C	BA1/10
28FP/52	AV.DELA1018	Pin, pip, quick release, 5/8" dia.	2	H.T.S.	C	BA1/11

ARMAMENT

BOMB GEAR

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mett. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.H8.97.149	BEAM, BOMB REAR SECONDARY, ASSEMBLY Spares for:-	1	-	-	BA1/12
	E.H8.97.179	BEAM - BOMB, ASSEMBLY Spares for:-	1	-	-	BA4/1
11A/4122	E.A1.97.173	ANGLE, cleat	2	DTD.683	C	BA4/2
11A/3701	E.A1.97.363	BOLT, crutch, assembly	4	-	C	BA4/3
11A/5465	E.A3.97.579	BOLT, crutch, self-locking, assembly	8	-	C	BA4/4
11A/4121	E.A1.97.171	BRACKET, forward, fin support	1	DTD.683	C	BA4/5
	E.A1.97.172	BRACKET, forward, fin support Attaching parts for E.A1.97.171 and E.A1.97.172:-	1	DTD.683	C	BA4/6
28D/1010030	A25/7C	Bolt, 2 BA	1	-	C	BA4/7
28D/12534	A25/9C	Bolt, 2 BA	2	-	C	BA4/8
28M/1006473	A27/CT	Nut, 2 BA	1	-	C	BA4/9
28M/9403520	A27/CP	Nut, 2 BA	2	-	C	BA4/10
	E.A1.97.377	BRACKET, crutch bolt Attaching parts for E.A1.97.377:-	4	-	-	BA4/11
28D/1011301	A25/8J	Bolt, 3/8" BSF	2	-	C	BA4/12
	E.A3.97.219	Bolt, special, 3/8" BSF	2	-	C	BA4/13
28M/1011473	A27/JP	Nut, 3/8" BSF	2	-	C	BA4/14
	E.A1.97.209	BRACKET, crutch bolt Attaching parts for E.A1.97.209:-	8	-	-	BA4/15
28D/9435710	A25/11C	Bolt, 2 BA	5	-	C	BA4/16
28M/9403520	A27/CP	Nut, 2 BA	5	-	C	BA4/17
28W/9419475	SP.15/C	Washer, 2 BA	5	-	C	-
	E.A3.97.545	BRACKET, for 300 gallon tank strap at frame 24, c/w bushes Attaching parts for E.A3.97.545:-	2	-	-	BA4/18
28D/1008145	A25/6E	Bolt, 1/2" BSF	2	-	C	BA4/19
28D/1011242	A25/7E	Bolt, 1/2" BSF	2	-	C	BA4/20
28D/1212751	A25/11J	Bolt, 3/8" BSF	4	-	C	BA4/21
28M/1011475	A27/EP	Nut, 1/2" BSF	4	-	C	BA4/22
28M/1011473	A27/JP	Nut, 3/8" BSF	4	-	C	BA4/23
	E.A3.97.501	Washer, special, packing	2	-	-	BA4/24
	E.A3.97.547	BRACKET, for 300 gallon tank strap at frame 27, port, c/w bushes	1	-	-	BA4/25
	E.A3.97.548	BRACKET, for 300 gallon tank strap at frame 27, starboard, c/w bushes Attaching parts for E.A3.97.547 and E.A3.97.548:-	1	-	-	BA4/26
28D/7002428	A25/6C	Bolt, 2 BA	2	-	C	BA4/27
28D/1010030	A25/7C	Bolt, 2 BA	2	-	C	BA4/28
28D/1011246	A25/11E	Bolt, 1/2" BSF	4	-	C	BA4/29
28M/9403520	A27/CP	Nut, 2 BA	4	-	C	BA4/30
28M/1011475	A27/EP	Nut, 1/2" BSF	4	-	C	BA4/31
	E.A3.97.503	Washer, special, packing	4	-	-	BA4/32

ARMAMENT
BOMB GEAR

Ref. No.	Part No.	Description	No. off	Metl. Spec.	Cl. of Equip.	Plate No.
					M.H. L.M.	
		1 2 3 4 5 6				
11A/3838	E.A2.29.87	. . . PEG, triple carrier, locating	5	-	C	BA4/33
	E.H8.97.119	. . . PIN, beam, locating	2	-	C	BA4/34
		Attaching parts for E.H8.97.119:-				
28P/1011036	SP.9/G8	. . . Pin, split	2	-	C	BA4/35
	E.A1.97.135	. . . Washer	2	-	-	
12056	E.A3.97.381	. . . PLATE, wearing	6	-	C	BA4/36
		Attaching parts for E.H8.97.179:-				
28D/15428	A25/7Q	. . Bolt, 5/8" BSF	2	-	C	BA4/37
28W/9416650	SP.47/Q	. . Washer	2	-	C	
5CZ/868	S.I.S.2057	. . BLOCK, terminal, type 'B', 5-way No.1	3	-	C	BA5/1
		Attaching parts for S.I.S.2057:-				
28M/10286	AGS.2001/A1	. . Nut, 6BA	2	-	C	BA5/2
28S/9992531	A33/A24	. . Screw, 6BA	2	-	C	BA5/3
11A/3798	E.A3.97.313	. . BOLT, special, bearing, bomb release unit	2	S.65	C	BA4/38
	E.A3.81.1135	. . BOLT, special, cocking test plug, retaining	3	-	+	BA4/39
	E.A3.81.1867	. . CABLE, assembly, from terminal block to bomb jettison supply socket	1	-	-	BA5/4
	E.G4.81.1903	. . CABLE, assembly, from terminal block to bomb release supply socket	1	-	-	BA5/5
	E.A3.81.1873	. . CABLE, assembly, from bomb release unit No.5 to bomb release socket No.6	1	-	-	BA5/6
	E.A3.81.2813	. . CABLE, assembly, from terminal block to bomb release socket No.6	1	-	-	BA5/7
	E.G4.81.1901	. . CABLE, assembly, from terminal block to bomb release socket No.4	1	-	-	BA5/8
	E.A3.81.1881	. . CABLE, assembly, from terminal block to bomb jettison socket No.4	1	-	-	BA5/9
	E.A3.81.1883	. . CABLE, assembly, from terminal block to bomb jettison socket No.5	1	-	-	BA5/10
	E.A3.81.2811	. . CABLE, assembly, from terminal block to bomb jettison socket No.6	1	-	-	BA5/11
	E.A3.81.1887	. . CABLE, assembly, from terminal block to practice bomb socket No.1 and No.2	1	-	-	BA5/12
	E.A3.81.1871	. . CABLE, assembly, from emergency release unit plug to emergency release	1	-	-	BA5/13
5K/2993	AS.1900/A	. . CLIP	3	-	C	BA5/14
5K/2995	AS.1900/C	. . CLIP	1	-	C	BA5/15
5K/2997	AS.1900/E	. . CLIP	2	-	C	BA5/16
5K/3003	AS.1901/A	. . CLIP	1	-	C	BA5/17
28E/1201807	AS.3180/5B	. . CLIP	1	-	C	BA5/18
28E/8018278	AS.3180/8B	. . CLIP	2	-	C	BA5/19
28E/1201810	AS.3180/10B	. . CLIP	1	-	C	BA5/20
		Attaching parts for AS.1900/A, AS.1900/C, AS.1900/E AS.1901/A, AS.3180/5B, AS.3180/8B and AS.3180/10B:-				
28D/1010658	A25/1B	. . Bolt, 4BA, (as required)	AR	-	C	
28M/10287	AGS.2001/B/1	. . Nut, 4BA, (as required)	AR	-	C	
28S/9992522	A32/B18	. . Screw, 4BA (as required)	AR	-	C	

**ARMAMENT
BOMB GEAR**

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
11A/3684	↑ STANDARD INSULATOR	. . COVER, dust, emergency release unit	1	—	C	BA4/40
5K/4869	S.I.C.655 A.803 STANDARD INSULATOR	. . GROMMET	4	—	C	BA5/21
5K/4871	S.I.C.2040 STANDARD INSULATOR	. . GROMMET	6	—	C	BA5/22
5K/4870	S.I.C.672.2 STANDARD INSULATOR	. . GROMMET	1	—	C	BA5/23
5K/4868	S.I.C.617 BL.283 SP.40/024	. . GROMMET	5	—	C	BA5/24
	C.S.P.3.C6	. . GROMMET	2	—	—	BA5/26
	C.S.P.3.C12CC	. . GROMMET	1	—	—	BA5/27
28M/10296	AGS.2001/QA/1	. . GROMMET	1	—	—	BA5/28
11A/3837	E.A3.81.1821	. . NUT, 5/8" BSF, bearing bolt securing	1	—	C	BA4/41
6C/456	↑	. . PIN, connector block retaining	6	DTD.683	C	BA5/29
5D/1478	↑	. . PLUG, flat, 2 pin	3	—	C	BA5/30
11A/3673	↑	. . UNIT, fusing, No.2, Mk.1, assembly (S.O.O.)	1	—	A	BA4/42
		. . UNIT, emergency release No.3, Mk.1, assembly (S.O.O.)	1	—	A	BA4/43
	E.A3.97.415	. . UNIT, lanyard retraction assembly	2	—	—	BA4/44
		Spares for:-				
11A/3792	↑	. . UNIT, retraction, Mk.2	3	—	A	BA4/45
	E.A3.97.445	. . CABLE, Bowden, No.1 slip, assembly	1	—	—	BA4/46
	E.A3.97.593	. . CABLE, Bowden, No.2 slip, assembly	1	—	—	BA4/47
	E.A3.97.449	. . CABLE, Bowden, No.3 slip	1	—	—	BA4/48
	AS.3181/3B	. . CLIP, 'P', fixing cables	23	—	—	BA4/49
	E.A3.97.297	. . COVER, spring, No.1 slip assembly	1	—	—	BA4/50
	E.A3.97.299	. . COVER, spring, No.2 slip, assembly	1	—	—	BA4/51
	E.A3.97.301	. . COVER, spring, No.3 slip, assembly	1	—	—	BA4/52
	E.A3.97.539	. . PULLEY, assembly	3	—	—	BA4/53
	E.A3.97.577	. . SPRING, No.2 slip, cable	1	—	—	BA4/54
	TERRY	. . SPRING, No.1 and No.3 slip, cable	2	—	—	BA4/55
	COM.2	(cut 1.75")				
	E.A3.97.421	. . UNIT, manual release assembly	1	—	—	BA4/56
		Spares for:-				
	E.A3.97.577	. . SPRING	1	—	—	BA4/57
	E.A3.97.348	. . UNIT, manual release assembly	1	—	—	BA4/58
		Attaching parts for E.H8.97.149:-				
11A/3842	E.A1.97.175	. Pin, bomb beam attachment	2	—	C	BA1/13
	AKK.6652.748B	. CABLE, for C.B.L.S. external	2	—	—	BA1/14
	AKK.6652.747C	. CABLE, for C.B.L.S. internal	2	—	—	BA1/15
11A/4228	↑	. CARRIER, triple, Mk.2	2	—	A	BA1/16
	Spec.Arm/Can/1	. CARRIER, twin, M.L.	2	—	—	BA1/17
	—	. CARRIER, bomb, light stores, type 100E	6	—	—	BA1/18
11A/1082731	A.1832/96	. COVER, dust, for emergency release housing Mk.1, No.1	6	—	C	BA1/20
11A/3684	A.5022/91	. COVER, dust, for release unit, Mk.1, No.1	4	—	C	BA1/21
11A/3682	E.A1.97.313	. CRUTCH, FRONT, ASSEMBLY	2	—	S	BA1/22
		Spares for:-				
11A/3836	E.A1.97.311	. . BOLT, special, front, crutch	1	DTD.683	C	BA1/23
11A/3834	E.A1.97.303	. . NUT, special, lock	1	DTD.683	C	BA1/24
11A/3835	E.A3.97.511	. . PAD, CRUTCH, FRONT, ASSEMBLY	1	—	S	BA1/25
		Spares for:-				
	E.A1.97.306	. . LINING, front crutch pad	1	FERODO	—	BA1/26
	E.A1.97.309	. . PAD, crutch, front	1	DTD.683	—	BA1/27
	E.A1.97.307	. . PLATE, bolt retaining	1	DTD.683	—	BA1/28

ARMAMENT
BOMB GEAR

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
11A/3834 11A/3833	E.H8.97.163	CRUTCH, REAR, ASSEMBLY Spares for:-	2	-	-	BA1/29
	E.A1.97.319	BOLT, crutch, rear, special	1	DTD.683	-	BA1/30
	E.A1.97.303	NUT, special, lock	1	DTD.683	C	BA1/31
	E.A3.97.509	PAD, CRUTCH REAR, ASSEMBLY Spares for:-	1	-	B	BA1/32
	E.A1.97.316	LINING, rear crutch pad	1	FERODO	-	BA1/33
	E.A1.97.317	PAD, crutch, rear	1	DTD.683	-	BA1/35
	E.H8.97.11	DEFLECTOR AND FRAME, GROUP (See Page BC.1)	1	-	-	BA1/35
	12A/NIV †	LUG, suspension, No.45 Mk.1 (Alternative to 12A/2307 or 12A/2262)	8	-	B	BA1/37
	12A/2307 †	LUG, suspension, No.43 Mk.2 (Alternative to 12A/NIV or 12A/2262)	8	-	B	
	12A/2262 †	LUG, suspension, No.43 Mk.1 (Alternative to 12A/NIV or 12A/2307)	8	-	B	
	12A/2319 †	LUG, suspension, No.29 Mk.4 (Alternative to 12A/2209 or 12A/2076)	2	-	B	
	12A/2209 †	LUG, suspension, No.29 Mk.2 (Alternative to 12A/2319 or 12A/2076)	2	-	B	
	12A/2076 †	LUG, suspension, No.29 Mk.1 (Alternative to 12A/2319 or 12A/2209)	2	-	B	
	E.H8.97.17	PYLON, BOMB, PORT, ASSEMBLY (See Page BD.1)	1	-	-	
E.H8.97.169	E.H8.97.19	PYLON, BOMB, STARBOARD, ASSEMBLY (See Page BD.3)	1	-	-	BA1/36
	E.H8.97.169	RELEASE, EMERGENCY, FOR 5000 LB ASSEMBLY	1	-	-	
	E.A3.97.355	Spares for:- RELEASE, manual	1	-	-	BA1/30

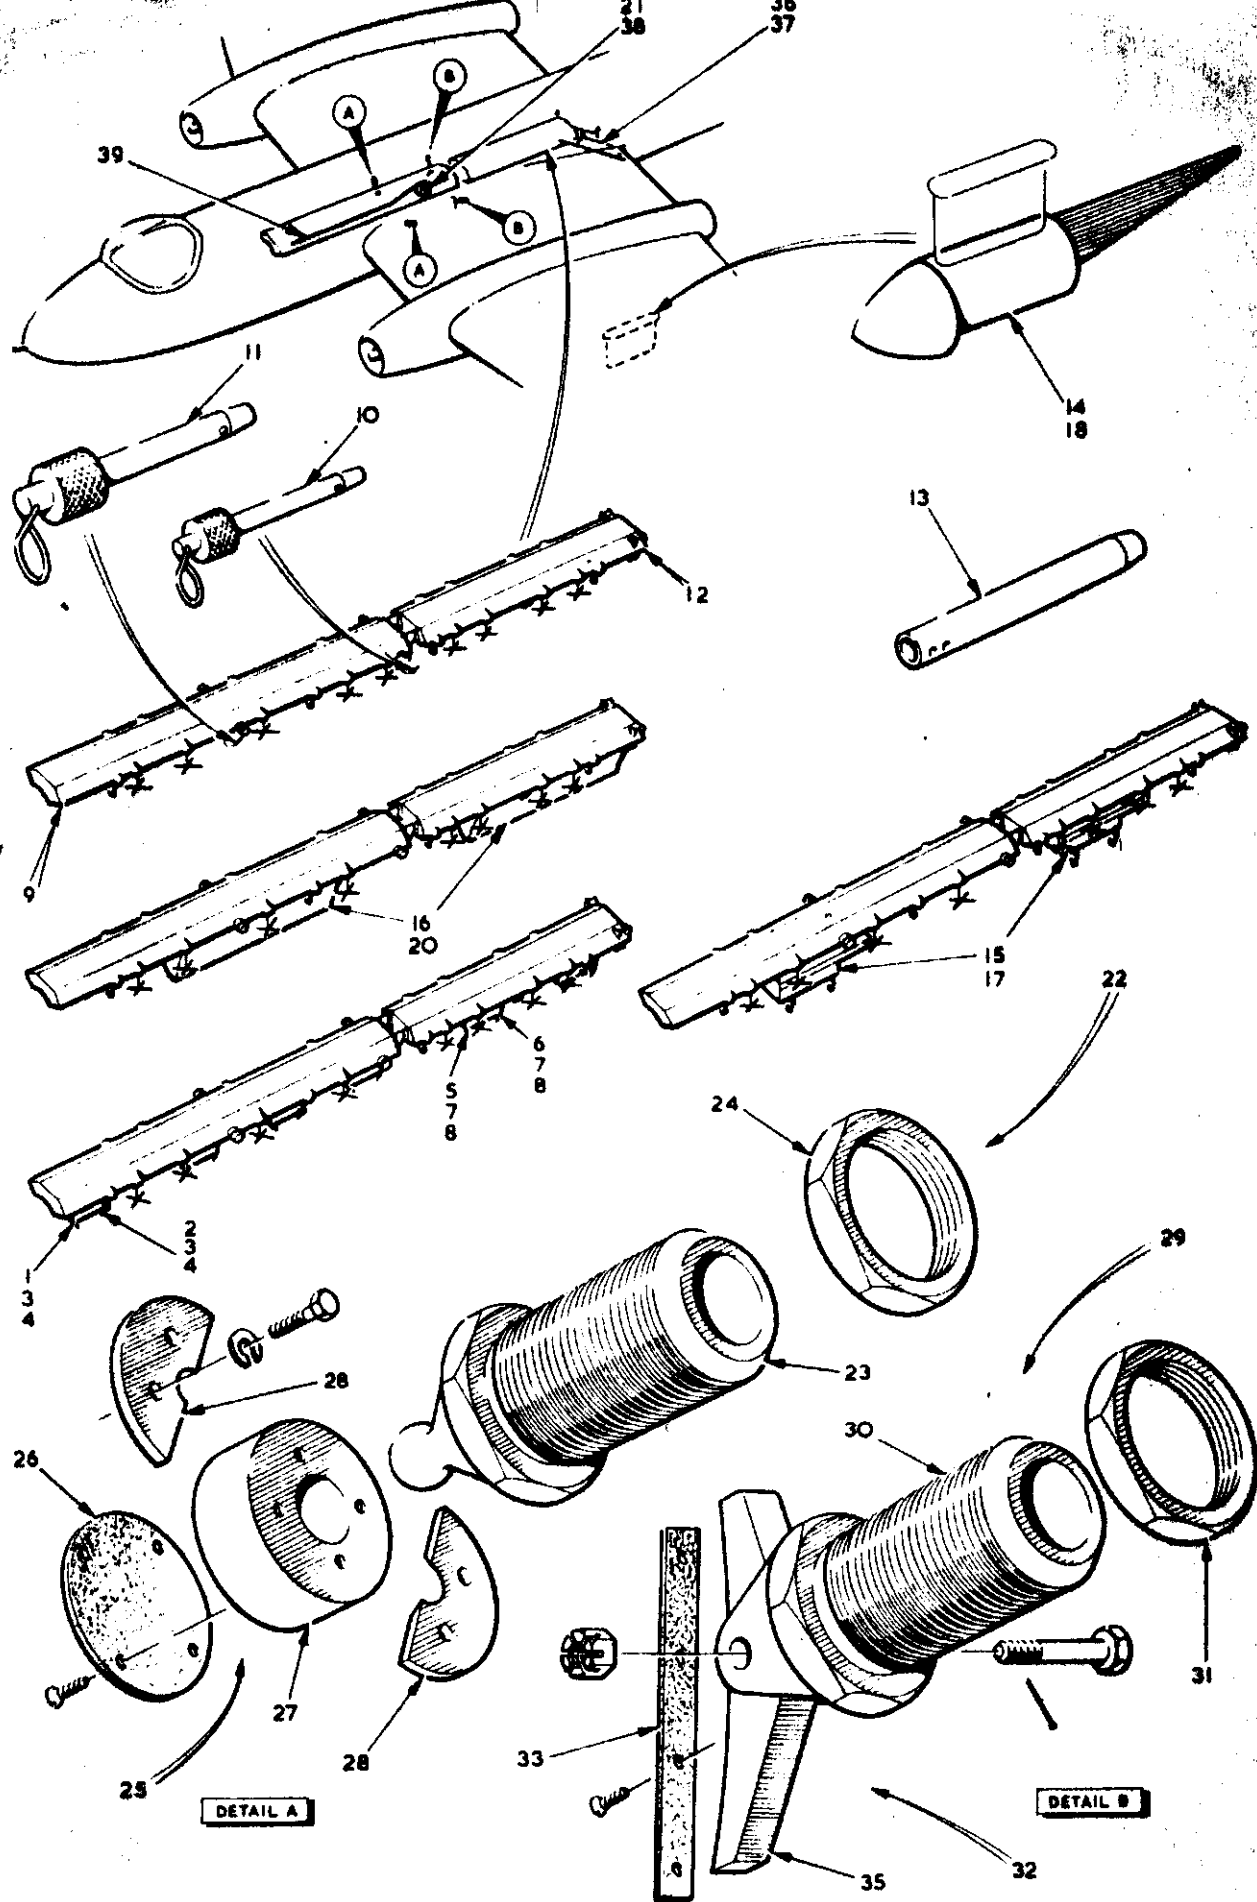


FIG. I BOMB GEAR

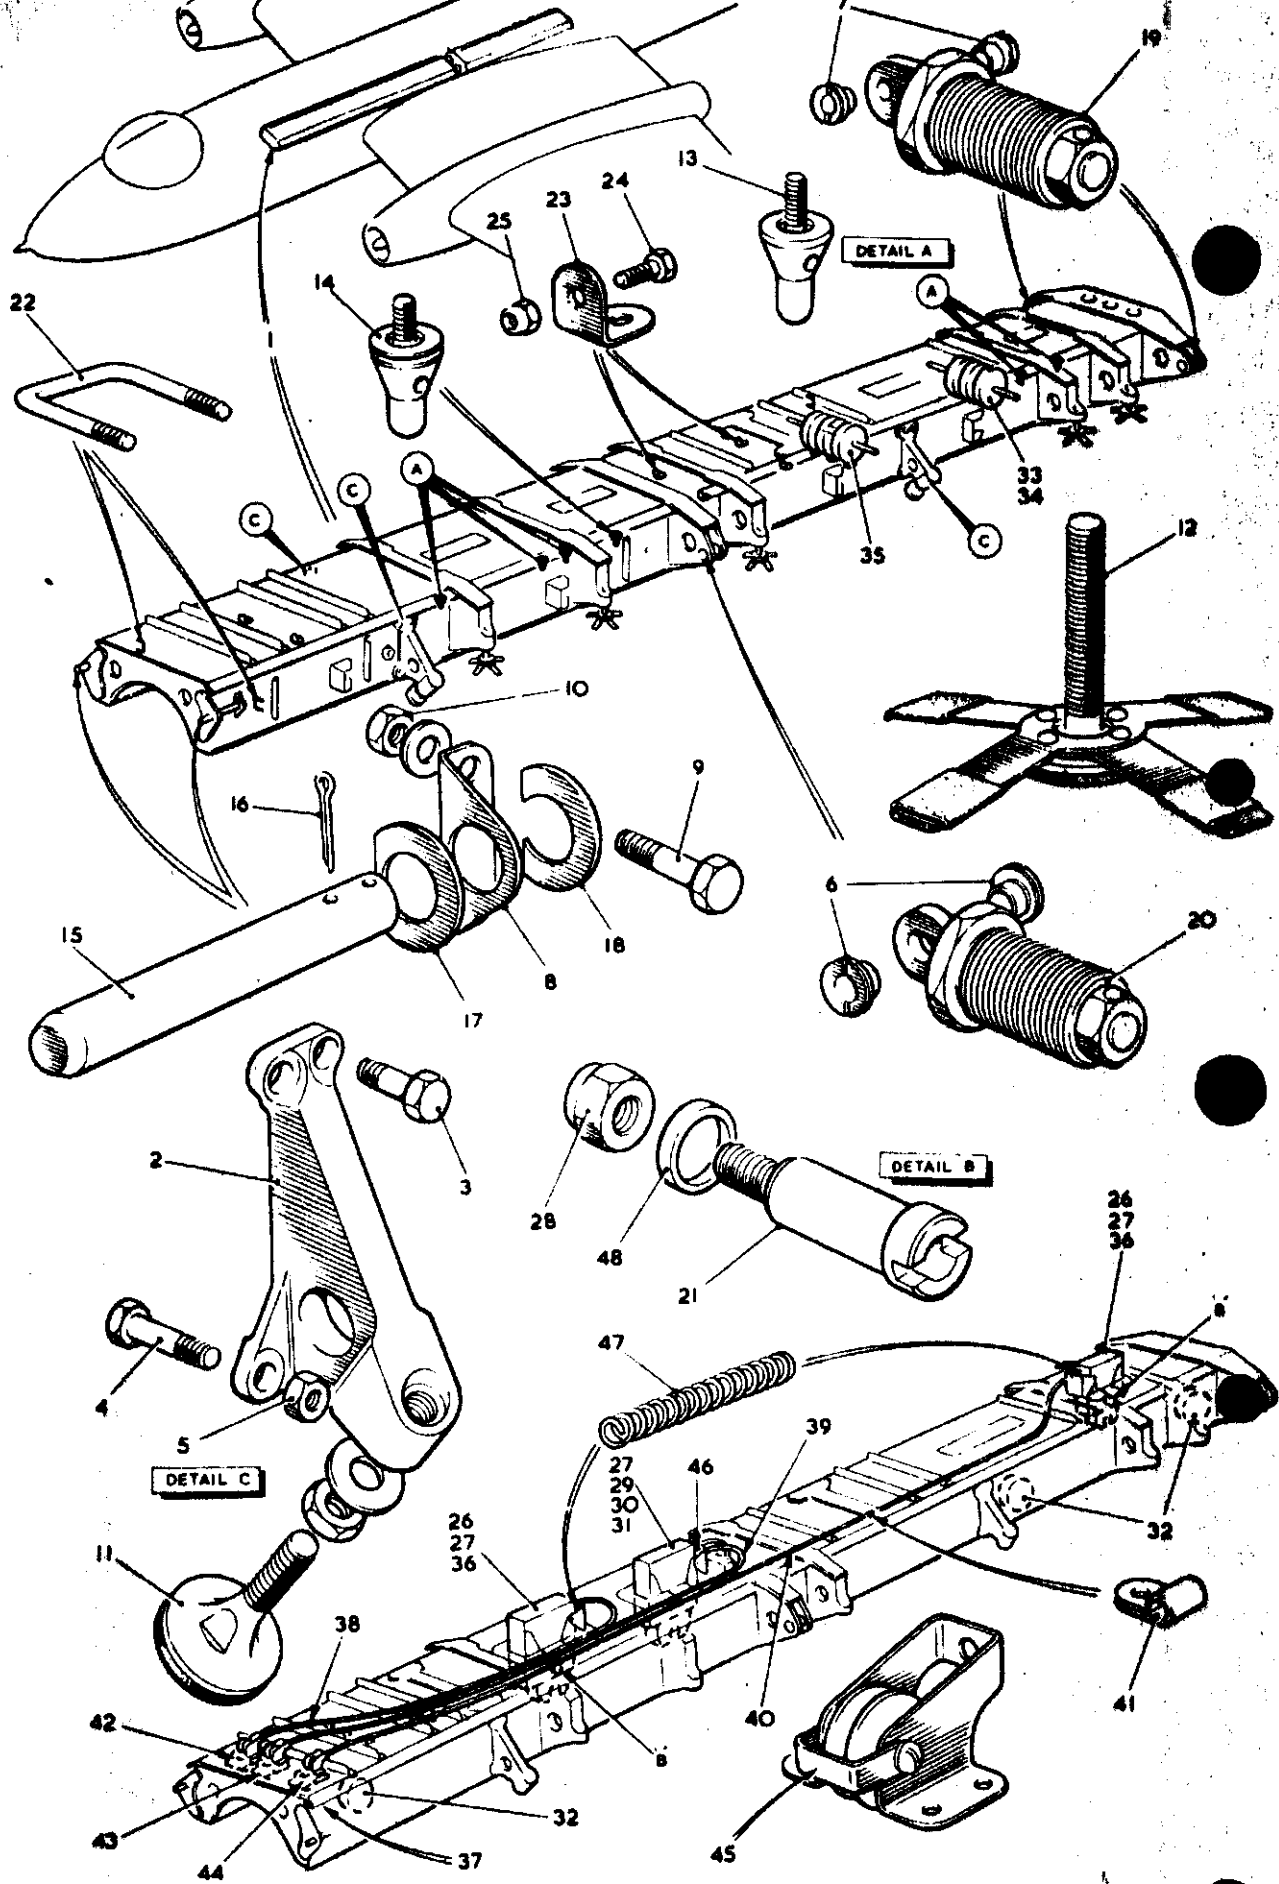
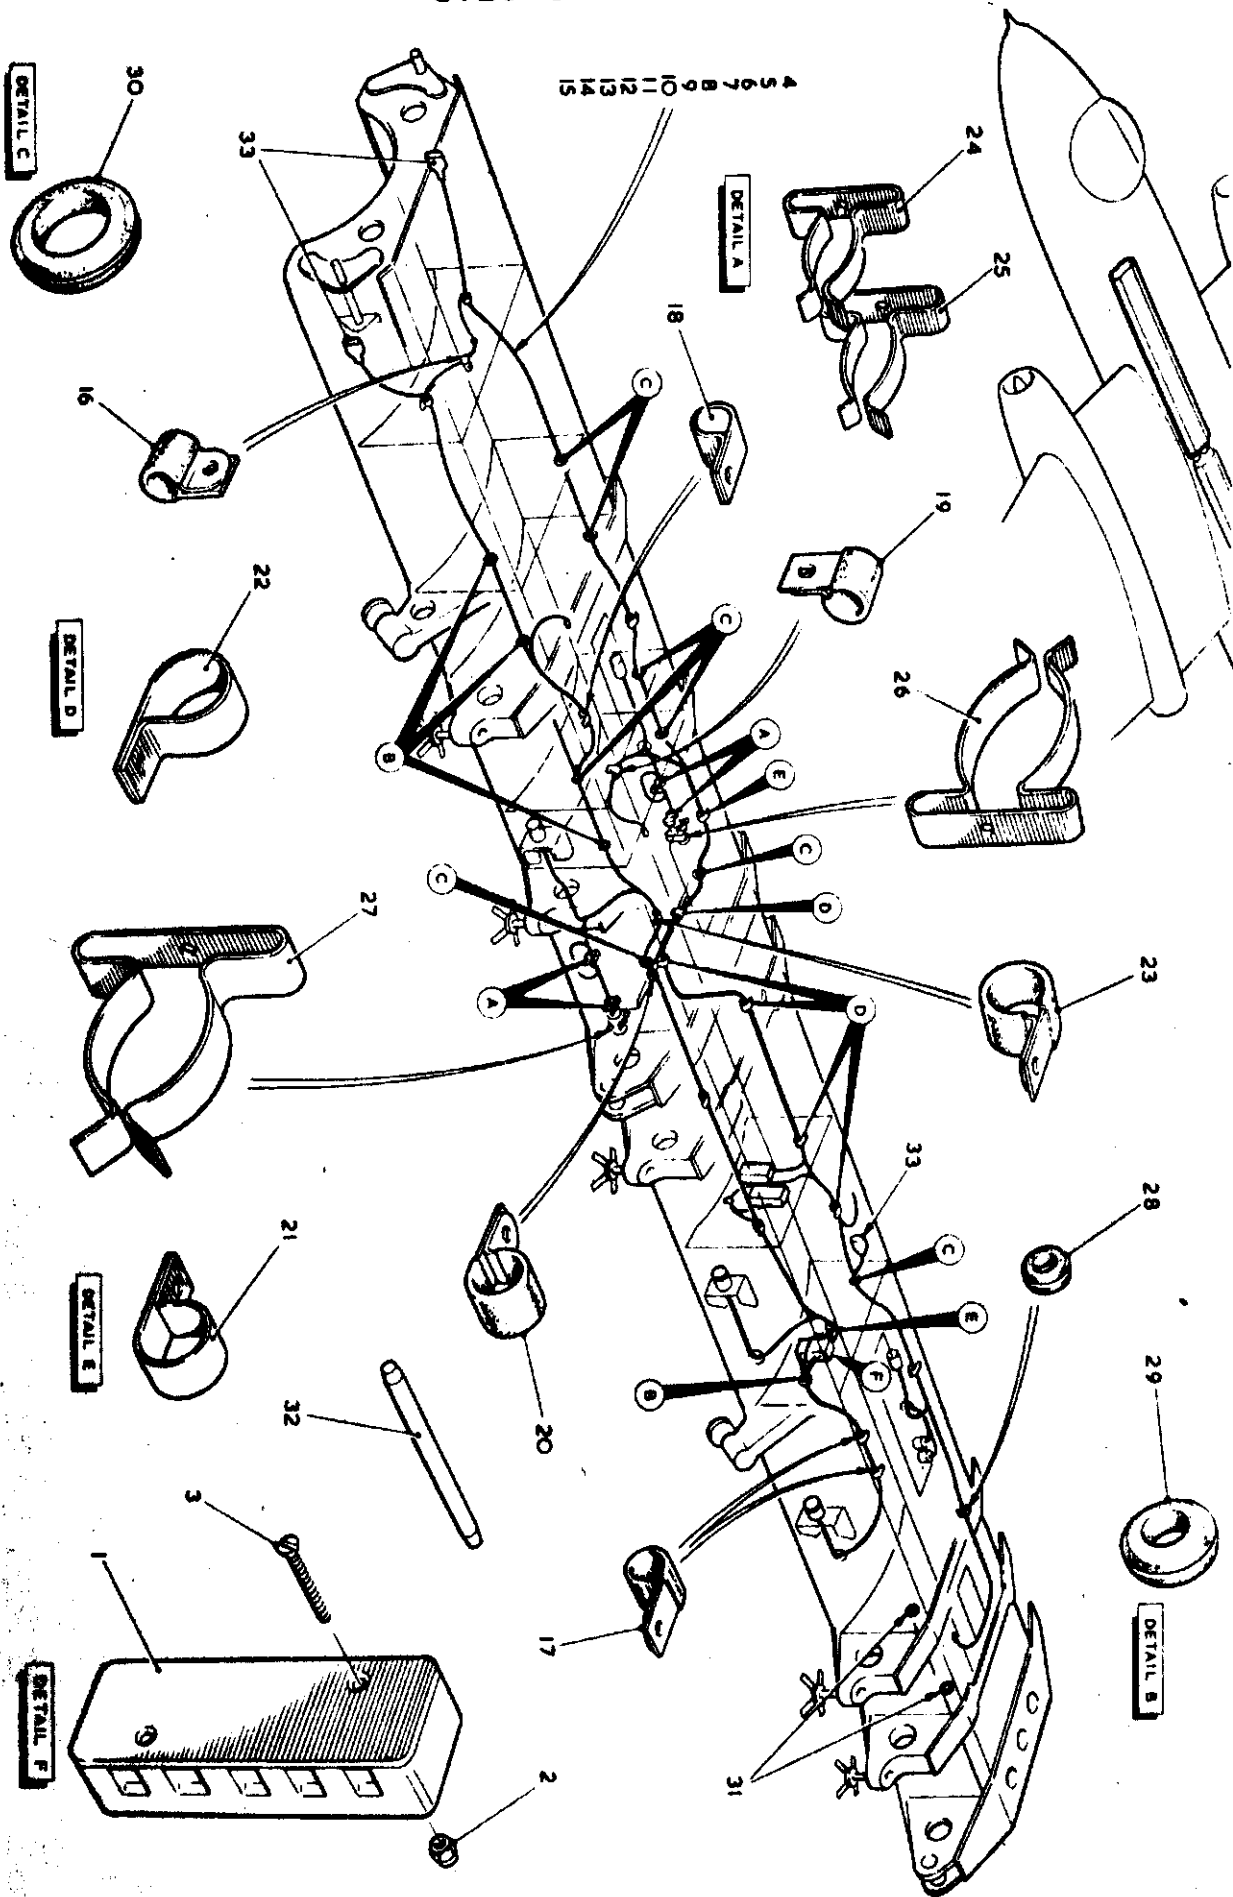


FIG.2 BOMB GEAR

CODE A B

SECT 8A

FIG. 3 BOMB GEAR



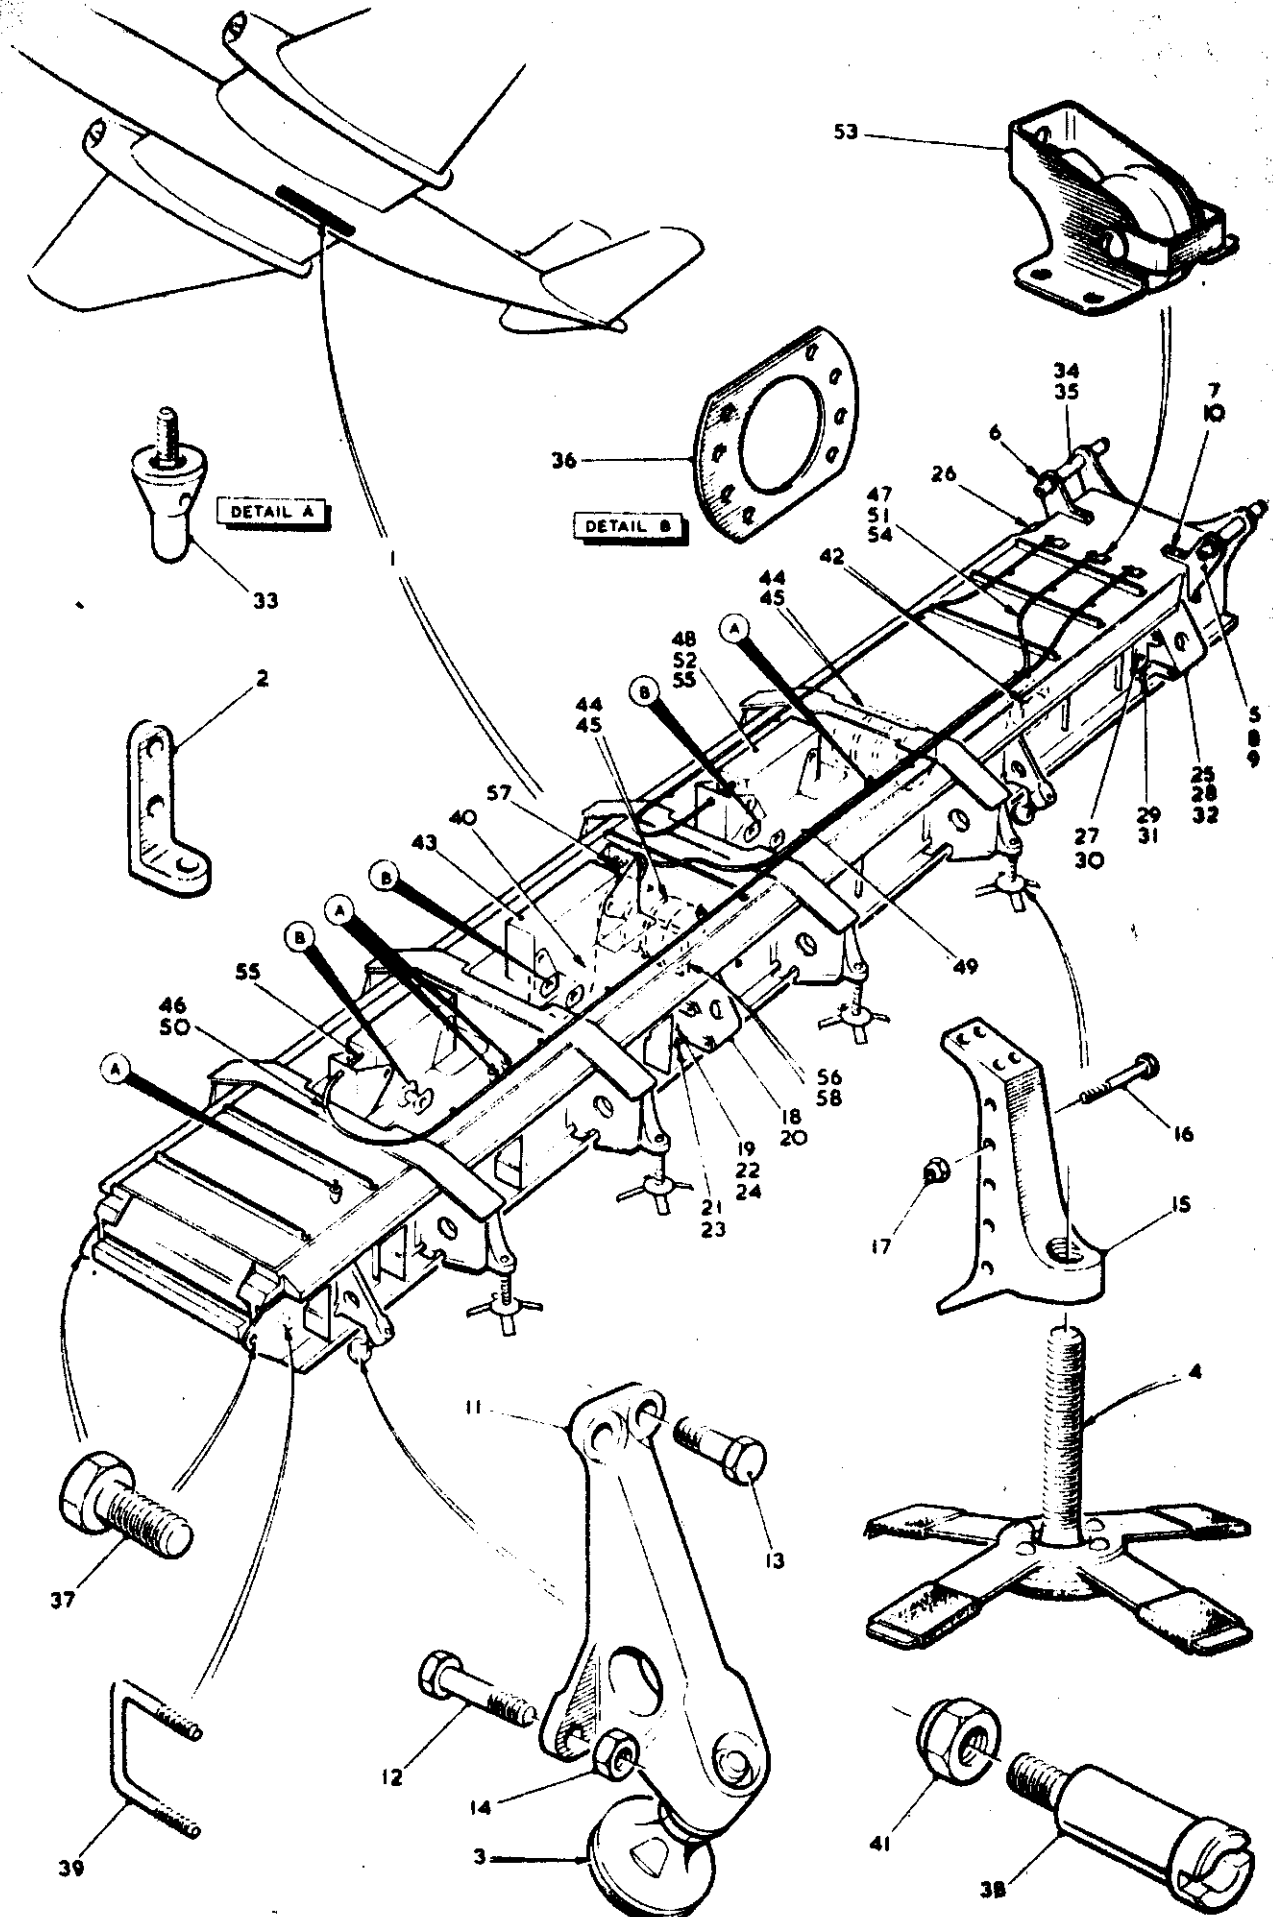


FIG.4 BOMB GEAR

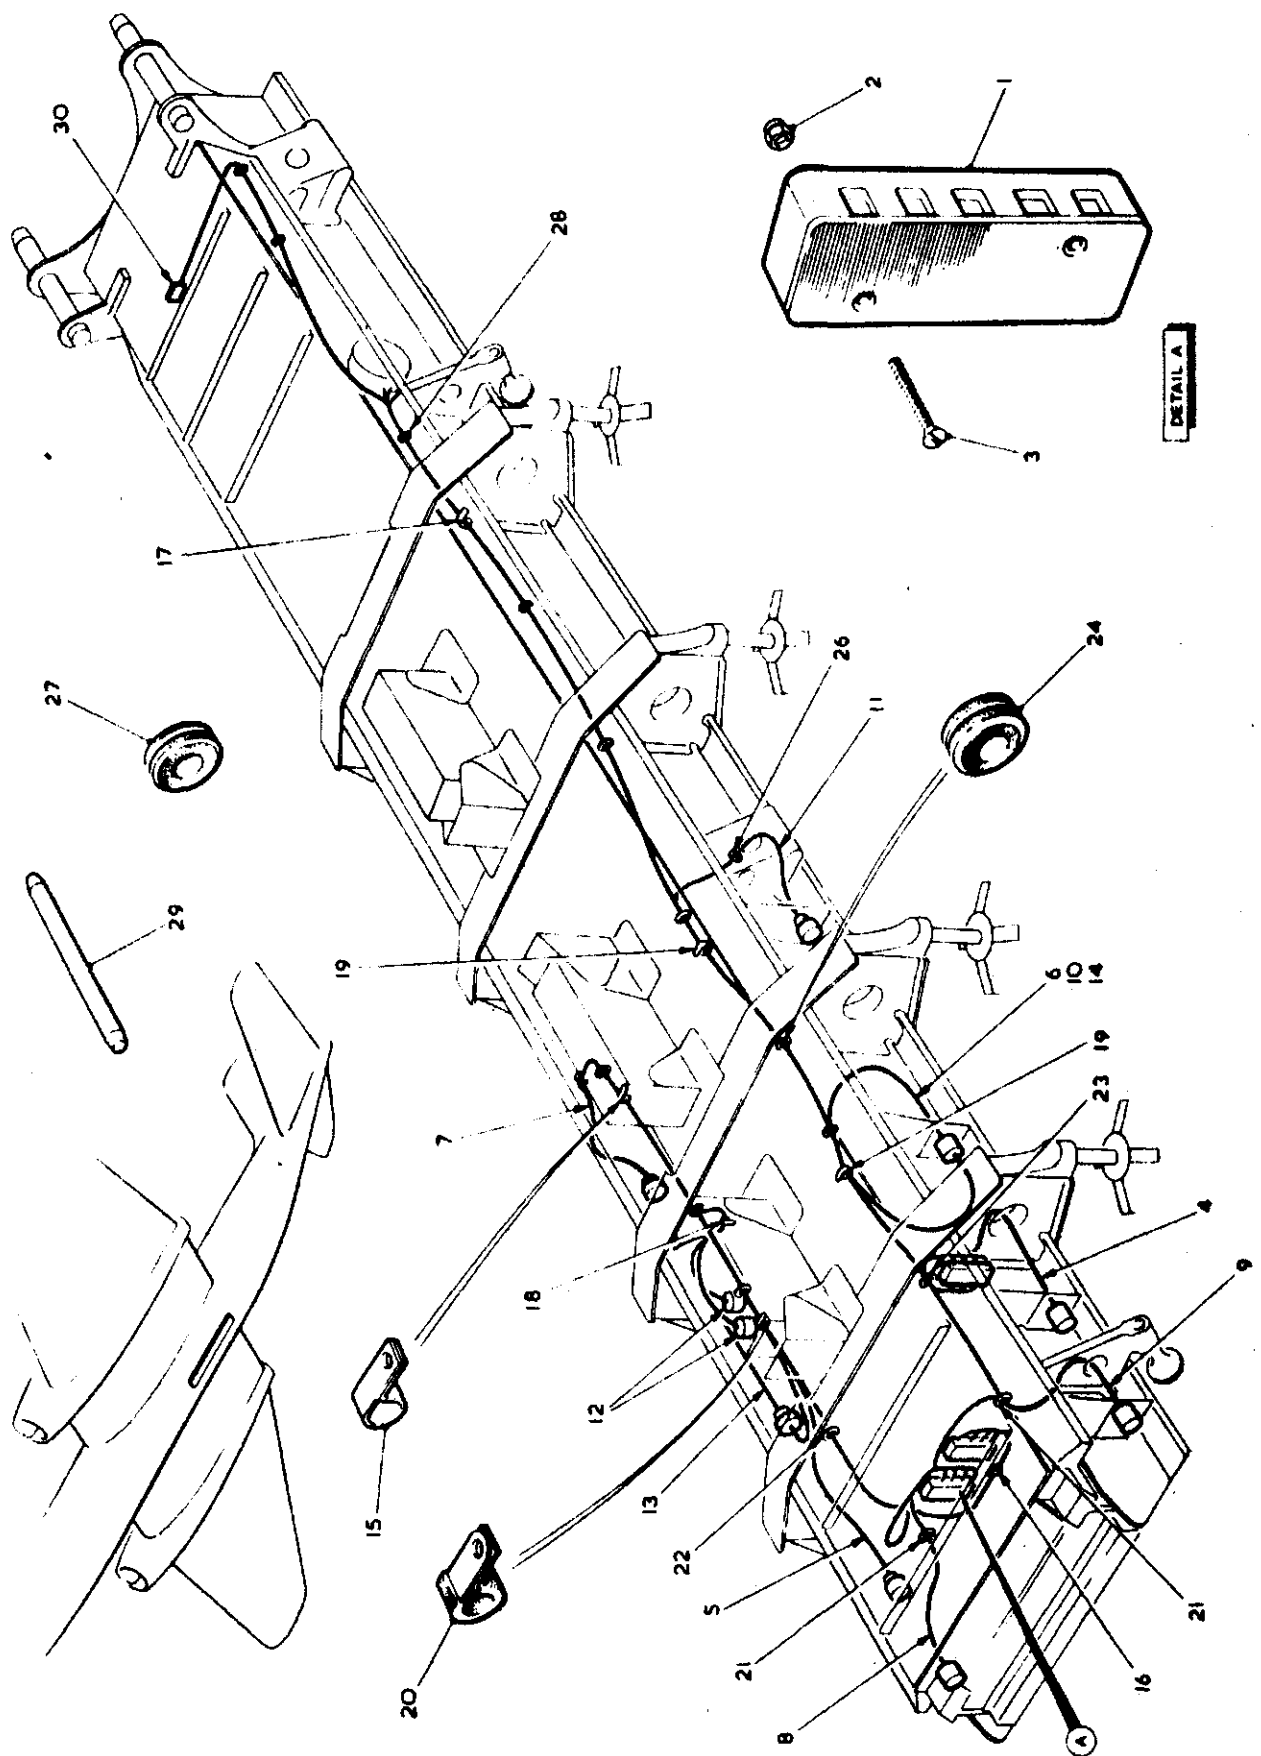


FIG.5 BOMB GEAR

CODE AB

SECT BA

B ARMA IENT

ARMAMENT
SIGHT, ATTACK, S.F.O.M.

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
28M/10282 28W/9471273	E.H8.97.31	SIGHT, ATTACK, S.F.O.M. ASSEMBLY	—	—	—	1 1
	E.H8.97.35	Spares for:- ARM, support	1	—	—	1 2
	E.H8.97.39	Attaching parts for E.H8.97.35:- Bolt, 1/4" BSF	1	Monel	—	1 3
	AGS.2002/E/3	Nut, 1/4" BSF	1	—	C	1 4
	SP.124/E	WASHER	1	—	C	1 5
28D/1213234 28M/10282 28W/9471273	E.H8.97.33	BRACKET, mounting Attaching parts for E.H8.97.33:-	1	—	—	1 6
	A.61/13/E	Bolt 1/4" BSF	1	—	C	1 7
	AGS.2002/E/3	Nut, 1/4" BSF	1	—	C	1 8
	SP.124/E	Washer	1	—	C	1 9
	E.H7.97.91	SIGHT, attack, type 83D (modified) Attaching parts for E.H7.97.91:-	1	—	—	1 10
28M/10282 28W/9471273	E.H8.97.41	Bolt, 1/4" BSF	1	—	—	1 11
	AGS.2002/E/3	Nut, 1/4" BSF	1	—	C	1 12
	SP.124/E	Washer	1	—	C	1 13
	E.H8.97.37	SPIGOT, mounting Attaching parts for E.H8.97.37:-	1	—	—	1 14
	E.H6.97.37	Bolt, special, 4BA	3	Monel	—	1 15
28W/9129100 28W/9149474	SP.56/B	Washer, double coil	3	—	C	1 16
	SP.15/B	Washer	3	—	C	1 17
28W/9128921	E.H9.97.19	BRACKET, gunsight mounting Attaching parts for E.H9.97.19:-	1	—	—	1 18
	E.86.97.445	Bolt, special	8	—	—	1 19
	SP.56/C	Washer double coil	8	—	C	1 20

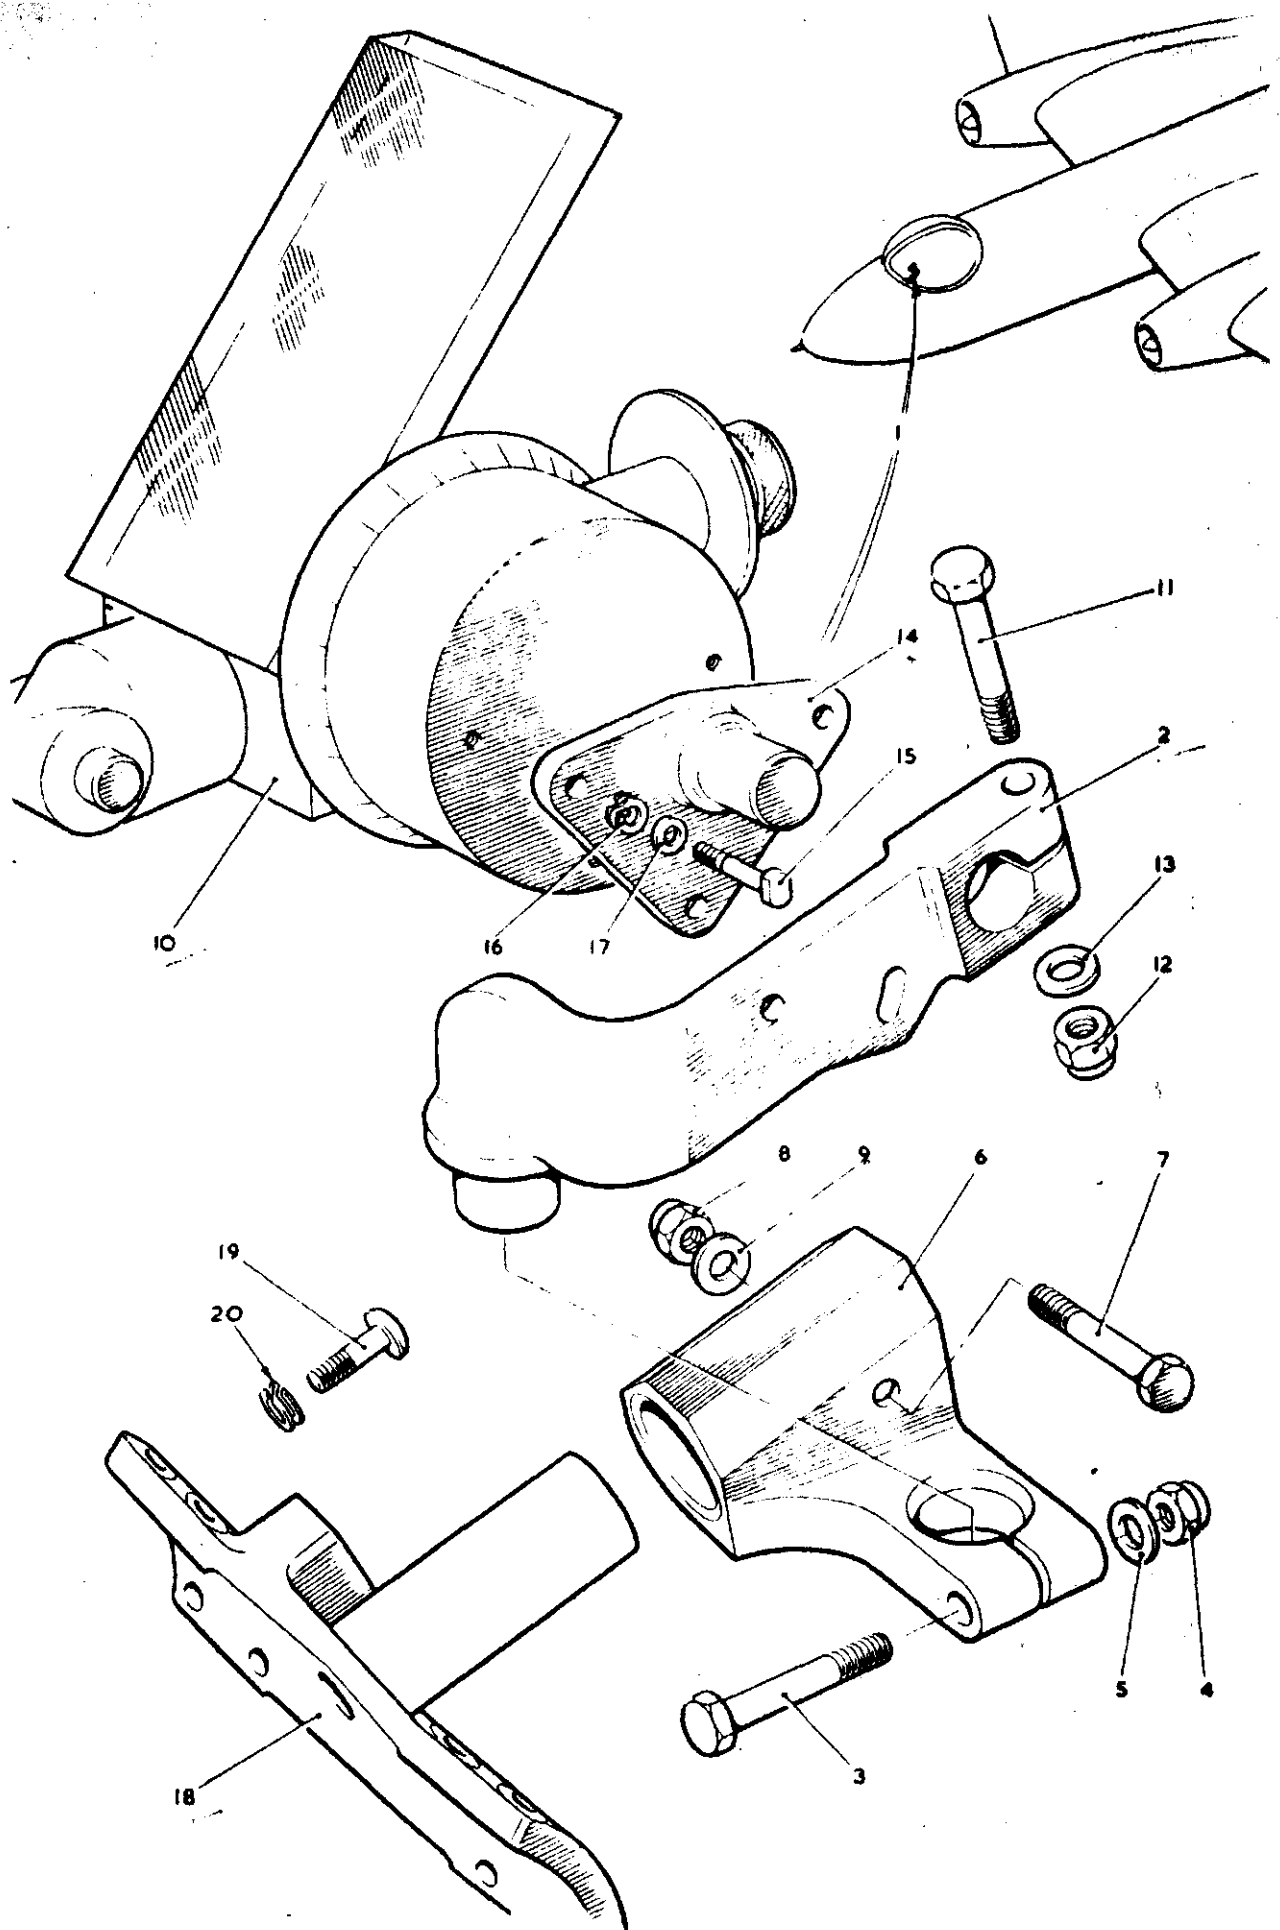


FIG.1 SIGHT ATTACK S.F.O.M.

ARMAMENT
AIR DEFLECTOR IN BOMB BAY

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E H8.97.11	DEFLECTOR AND FRAME, GROUP	1	—	—	1 1
42446	E.B6.97.801	Spares for: DEFLECTOR, ASSEMBLY	1	—	B	1 2
	E.B6.97.803	Spares for: PLATE	1	—	—	1 3
	E.H8.97.193	DEFLECTOR, PANEL, ASSEMBLY, UPPER	1	—	—	1 4
42517	E B6.97.645	Spares for: DEFLECTOR, ASSEMBLY	1	—	B	1 5
	E B6.97.561	Spares for: FIN, recess, port	1	—	—	1 6
	E.B6.97.562	FIN, recess, starboard	1	—	—	1 7
28D/1212805	AS.1248/9C	Attaching parts for E.B6.97.561 and E.B6.97.562:	6	—	C	1 8
28M/1278190	AGS.2001/C/1	Bolt, 2 BA	6	—	C	1 9
28W/9419475	SP.15/C	Nut, 2 BA	6	—	C	1 10
		Washer				
28FP/1469	AVDEL S.5260/813	PIN, "pip", double lock	1	—	C	1 11
	E.B6.97.633	PLATE, COVER, ASSEMBLY	1	—	—	1 12
42520	E B6.97.635	Spares for: KNOB	2	—	C	1 13
		Attaching parts for E.B6.97.635:				
28M/1278190	AGS.2001/C/1	Nut, 2 BA	1	—	C	1 14
42519	E.B6.97.631	PLATE, cover, sub-assembly	1	—	C	1 15
42518	E.B6.97.625	STUD	3	—	C	1 16
		Attaching parts for E.B6.97.625:				
28M/1278190	AGS.2001/C/1	Nut, 2 BA	1	—	C	1 17
28W/9419475	SP.15/C	Washer	1	—	C	1 18
		Attaching parts for E B6.97.801, E.B6.97.307 or E.B6.97.643:				
28D/1212750	A25/9J	Bolt, 3/8" BSF	4	—	C	1 19
28M/10292	AGS.2001/J/1	Bolt, 3/8" BSF	4	—	C	1 20
28W/9419477	SP.15/J	Washer	4	—	C	1 21
33645	E.B6.97.303	FRAME, ASSEMBLY	1	—	B	1 22
		Spares for:				
	E.B6.97.327	BRACKET, lower, port	1	L.77	—	1 23
	or					
33637	E.B6.97.365	BRACKET	1	L.65	C	—

ARMAMENT

AIR DEFLECTOR IN BOMB BAY

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.B6.97.329 or 33638 E.B6.97.367	BRACKET, lower, starboard	1	L.77	—	1 24
		BRACKET, lower, starboard Attaching parts for E.B6.97.327 and E.B6.97.329 or E.B6.97.365 and E.B6.97.367:-	1	L.65	C	1 25
28D/1215333	AS.1246/7E	Bolt, 1/4" BSF	3	—	C	1 26
28M/9480017	AGS.2001/E/1/66	Nut, 1/4" BSF	3	—	C	1 27
33644	E.B6.97.377 or BROWN BROS. BBH.104/8	Packing, radius	3	L.72	C	1 28
	BBH.101/FN/ 08/10 and BBH.104/8	Collar	3	—	—	1 29
	BBH.101/FN/ 08/10 and BBH.104/8	Pin, 1/4" high shear	3	—	—	1 30
	E.B6.97.333 or 33639 E.B6.97.369	BRACKET, upper, port	1	L.77	—	1 32
	E.B6.97.335	BRACKET, upper, port	1	L.65	C	—
	or 33640 E.B6.97.371	BRACKET, upper, starboard	1	L.77	—	1 33
		BRACKET, upper, starboard Attaching parts for E.B6.97.333 and E.B6.97.335 or E.B6.97.369 and E.B6.97.371:-	1	L.65	C	—
33641	E.B6.97.341	Collar, 2 1/4" o.d. x 8 SWG	2	T.45 or S.93	C	1 34
	E.B6.97.345 or 33642 E.B6.97.373	LINK, connecting, for upper brackets at frame 27	2	L.77	—	1 35
		LINK, connecting, for upper brackets at frame 27	2	L.77	C	1 36
33643	E.B6.97.347	Attaching parts for E.B6.97.345 or E.B6.97.373:- Bolt, shouldered	1	—	C	1 37
28M/1011476	A27/JS	Nut, 3/8" BSF	1	—	C	1 38
28W/9419466	SP.13/J	Washer	1	—	C	1 39
12653	E.A9.97.665	Attaching parts for E.H8.97.11:- Bolt, 5/8" BSF	2	—	C	1 40
33643	E.B6.97.347	Bolt, shouldered	2	S.96	C	1 41
28M/1011476	A27/JS	Nut, 3/8" BSF	2	—	C	1 42
28M/13145	A27/QS	Nut, 5/8" BSF	2	—	C	1 43
28W/9419466	SP.13/J	Washer	2	—	C	1 44
28W/9419470	SP.13/9	Washer	2	—	C	1 45

**ARMAMENT
PYLONS - BOMB**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Ct. of Equip.	Plate No.
					M.R. L.M.	
11A/4877 28D/1214302 28M/1086618 28W/9419474	E.H8.97.17	PYLON, TO WING, PORT, ASSEMBLY Consisting of:-	1	-	-	
	E.H8.97.49	PYLON, BOMB, PORT ASSEMBLY Spares for:-	1	-	-	BD1/1
	E.A9.97.613	BRACKET, mounting, for plug Attaching parts for E.A9.97.613:-	1	L.65	C	BD1/2
	AS.1242/88	Bolt, 4 BA	2	-	C	BD1/3
	AGS.2002/B/1	Nut, 4 BA	2	-	C	BD1/4
	SP.15/B	Washer	2	-	C	
	E.A9.97.615	BUSH, for blanking screw, emergency release access	2	S.1	-	BD1/5
	E.H8.81.801	CABLE ASSEMBLY, P.L.1 from J.B.17/18 to fusing unit	1	-	-	BD1/6
	E.H8.81.805	CABLE ASSEMBLY, PL.2 from J.B.17/18 to bomb slip (alternative to E.H8.81.807)	1	-	-	BD1/7
	E.H8.81.807	CABLE ASSEMBLY, PL.2 from J.B.17/18 to bomb slip (alternative to E.H8.81.805)	1	-	-	
	H.TO.813-38	CLIP, securing cables	1	-	-	BD1/8
	H.TO.813-4B	CLIP, securing cables	1	-	-	BD1/9
	H.TO.813-5B	CLIP, securing cables Attaching parts for H.TO.813-38, H.TO.813-4B & H.TO.813-5B	1	-	-	BD1/10
	A25-½B	Bolt, 4 BA	1	-	C	BD1/11
	AS.1242-7B	Bolt, 4 BA, csk. hd	2	-	C	BD1/12
28D/1007971 28D/124301 28M/1086618 28M/1278189 26DK/9852	AGS.2002/B/1	Nut, 4 BA	1	-	C	BD1/13
	AGS.2001/B/1	Nut, 4 BA	2	-	C	BD1/14
	EEAS.238-1A	Washer, 'D'	3	-	C	
	E.G4.97.777	CONDUIT, ASSEMBLY, for fusing wire	1	-	-	BD1/15
	E.A9.97.611	JACK, BOMB PYLON SCREW, ASSEMBLY Spares for:-	1	-	-	BD1/16
	↑	HOUSING, release	1	-	B	BD1/17
	M.L.AVIATION					
	DO.2008-1B	JACK, screw	1	-	A	BD1/18
	E.A9.97.583	LEVER, trip mechanism	1	-	C	BD1/19
	E.A9.97.584	LEVER, trip mechanism Attaching parts for E.A9.97.583 and E.A9.97.584	1	-	C	BD1/20
	A33/A14	Screw, 6 BA	4	-	C	BD1/21
	E.A9.97.1361	PIN, special, release unit mounting	1	-	C	BD1/22
	E.A9.97.1381	SLIP, attachments Attaching parts for E.A9.97.1381	1	-	C	BD1/23
	A25/10E	Bolt, ½" BSF	4	-	C	BD1/24
	AGS.2001/E/1/66	Nut, ½" BSF	4	-	C	BD1/25
	SP.15/E	Washer	4	-	C	BD1/26

**ARMAMENT
PYLONS - BOMB**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.A9.97.549	Attaching parts for E.A9.97.611:- Housing, spigot	2	S.96	-	BD1/26
28D/1007319	AS.1242/48	Attaching parts for E.A9.97.549:- Bolt, 4 BA, csk. hd.	4	-	C	BD1/27
28D/1214299	AS.1242/38	Bolt, 4 BA, csk. hd.	6	-	C	BD1/28
11A/4890	E.A9.97.551	SPICOT	2	S.96	C	BD1/29
30A/3055	†	WIRE, locking	AR	-	C	
11A/4883	E.A9.97.565	PANEL, access, aft fusing unit, assembly	1	-	B	BD1/30
11A/4884	E.A9.97.567	PANEL, access, forward fusing unit, assembly	1	-	B	BD1/31
	E.A9.97.1601	PLATE, cover (only fitted when launcher is not fitted)	1	-	-	BD1/32
	E.G4.97.841	Attaching parts for E.A9.97.1601:- Bolt, mushroom hd.	8	-	-	BD1/33
28W/9416644	SP.46/E	Washer, single coil	8	-	C	
	E.H8.97.57	PLATE, BOMB SOLE, ASSEMBLY Spares for:-	1	-	-	BD1/34
	E.G4.97.817	BUSH, threaded	8	S.97	-	BD1/35
	E.G4.97.751	EYE-BOLT	1	-	-	BD1/36
	E.G4.97.841	Attaching parts for E.H8.97.57:- Bolt, mushroom hd.	8	-	-	BD1/37
28W/9416644	SP.47/E	Washer, single coil	8	-	C	
	E.H6.97.43	PYLON, external store	1	-	-	BD1/38
11A/4888	E.A9.97.617	SCREW, special, emergency release cocking plunger	2	-	C	BD1/39
5D/2051	†	UNIT, fusing, No.3 Mk.2	1	-	A	BD1/40
28D/8317	AS.1242/15C	Attaching parts for 5D/2051:- Screw, 2 BA	3	-	C	BD1/41
28M/1278190	AGS.2001/C/1	Nut, 2 BA	3	-	C	BD1/42
	E.A9.97.637	Piece, distance	2	-	-	BD1/43
	E.A9.97.639	Piece, distance	1	-	-	BD1/44
33646	E.86.97.465	Attaching parts for E.H8.97.49:- Bolt, special	4	-	C	BD1/45
33647	E.86.97.467	Bolt, special	16	-	C	BD1/46
	E.H8.97.53	PADS, SOLEPLATE ADAPTOR, ASSEMBLY Spares for:-	2	-	-	BD1/47
	E.H8.97.55	PAD, adaptor	2	-	-	BD1/48
28D/1212827	AS.1242/9E	Attaching parts for E.H8.97.55:- Bolt, 1/4" BSF csk. hd.	6	-	C	BD1/49
28M/9480017	AGS.2001/E/1	Nut, 1/4" BSF	6	-	C	BD1/50
28W/9128796	SP.126/E	Washer	6	-	C	

**ARMAMENT
PYLONS - BOMB**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.H5.97.19	PYLON, TO WING, STARBOARD, ASSEMBLY Spares for this assembly are identical with those for assembly Part No E.H8.97.17, on Page 801, except for the following deletions and additions	1	—	—	
	E.H8.97.49	Delete PYLON, BOMB, PORT, ASSEMBLY	1		—	
	E.H6.97.43	PYLON, external store	1		—	
	E.H8.97.51	Add. PYLON, BOMB, STARBOARD ASSEMBLY	1		—	
	E.H6.97.45	PYLON, external store	1		—	

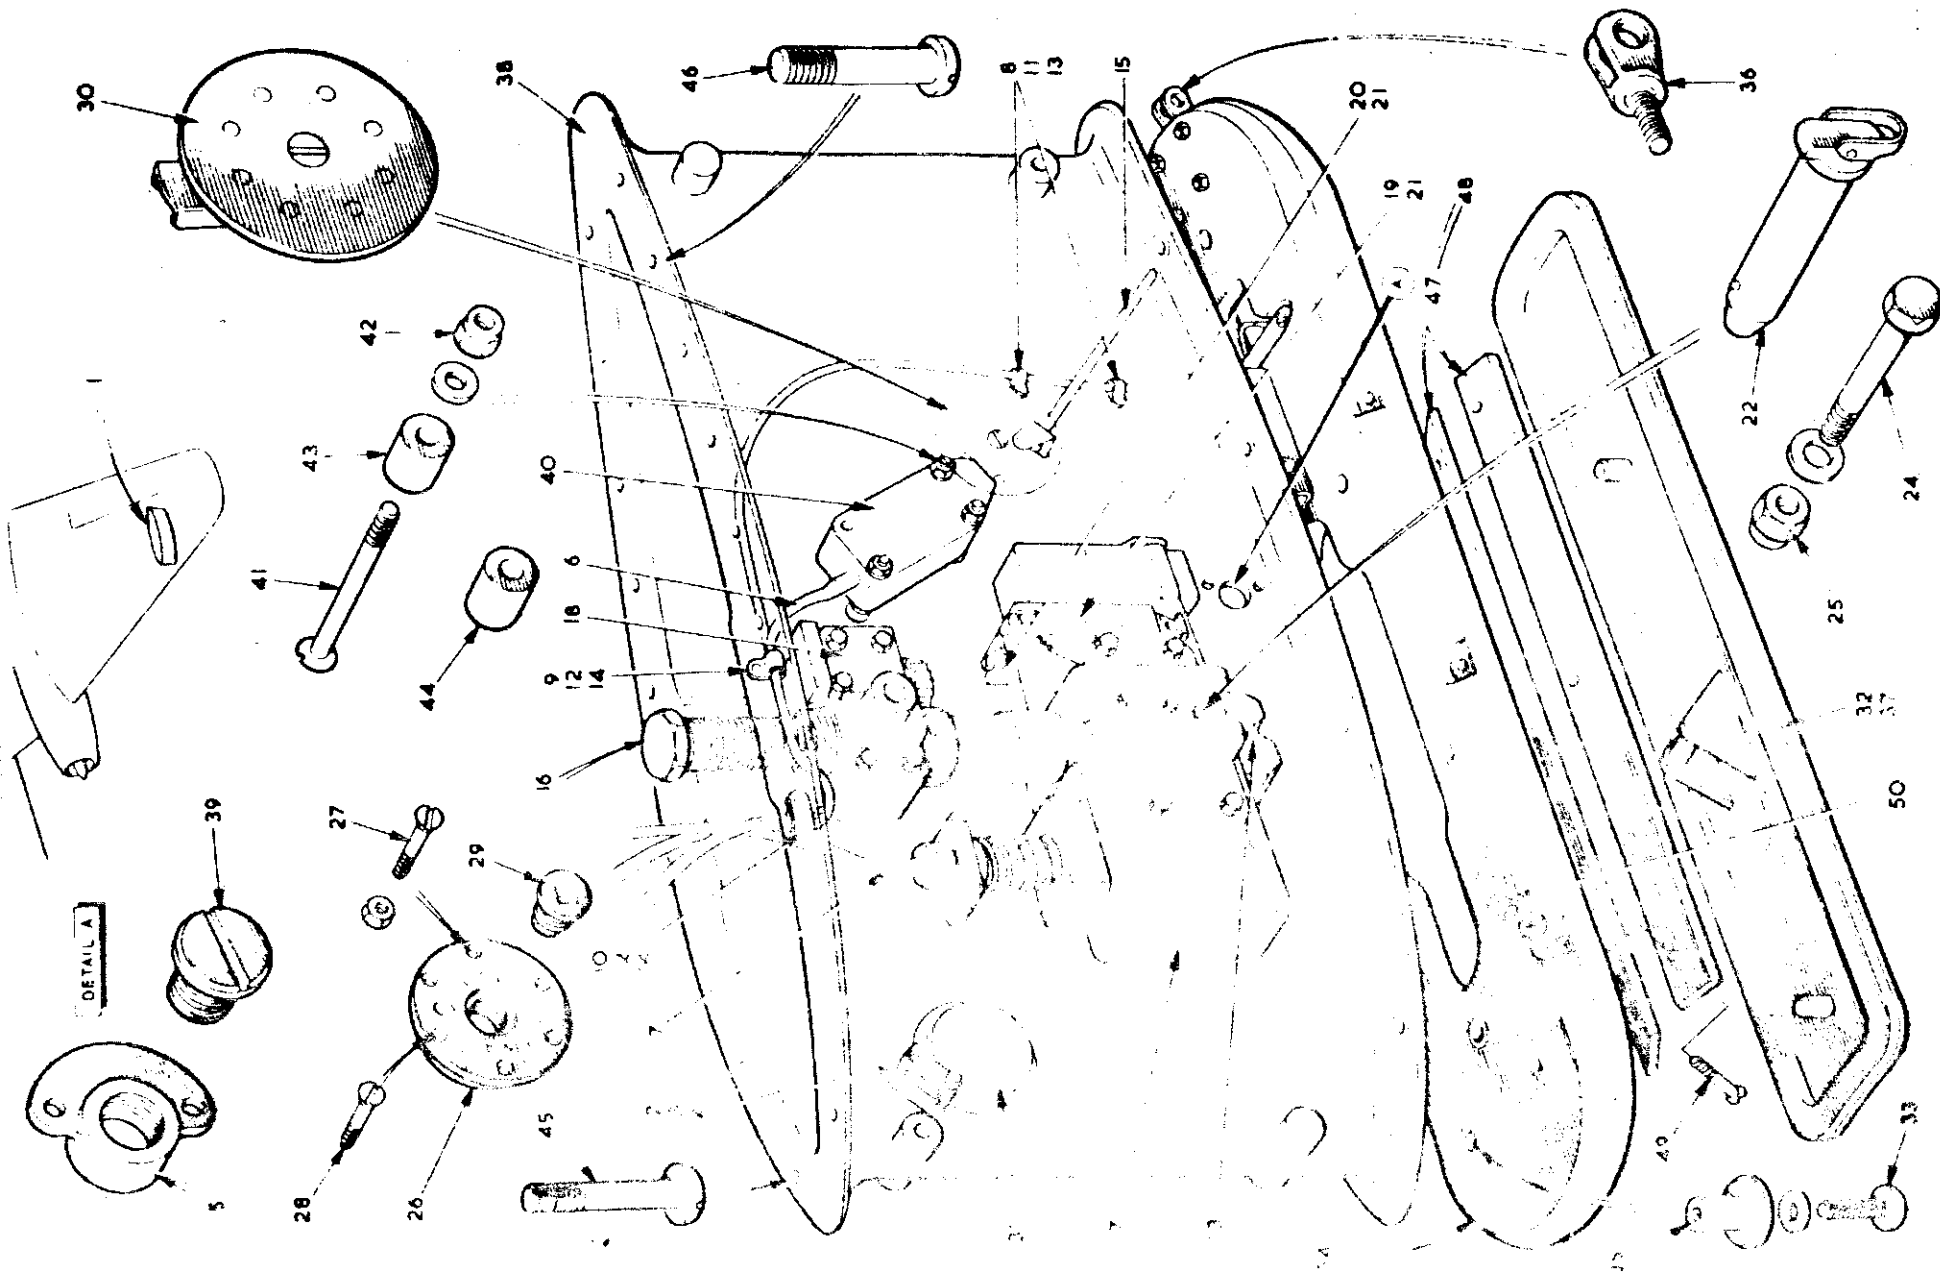


FIG. 1
EXPLOSIONS - BOMB

COOP A B

SECRET

 DOMESTIC TERRORISM

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.		State No.
					M.R.	L.M.	
		1 2 3 4 5 6	7 8 9 10 11				
	E.H8.97.7	BOMB SIGHT, Mk.T4 AND EQUIPMENT, ASSEMBLY	—	—	—	—	
	E.H8.97.23	AMPLIFIER, TYPE 'A' ASSEMBLY (Alternative to SOAG M/c Tools 97.874) Spares for:-	1	—	—	—	BE1/1
	DUBILIER BR 4415 BELLING LEE L.562 E.H8.81.815 SOAG M/c SOAG M/C 97.874	CAPACITOR, Electrolytic 4 uf FUSE, 500 M A TRANSFORMER AMPLIFIER, Type 'A' (Alternative to E.H8.97.23)	2 1 1 1	— — — —	— — — —	— — — —	BE1/2 BE1/3 BE1/4
	E.H8.81.933	BOX, JUNCTION, ASSEMBLY Spares for	1	—	—	—	BE1/5
5X/3268	†	BLOCK, terminal	2	—	C	—	BE1/6
	E.A3.81.595	COVER, assembly	1	—	—	—	BE1/7
10H/19101	†	PLUG, assembly	1	—	C	—	BE1/8
9/4595	†	CAM, connector, airspeed	1	—	A	—	BE1/9
9/4535	†	CARD, levelling	1	—	C	—	BE1/10
9/4567	†	COMPUTER	1	—	A	—	BE1/11
109/94	†	DRIVE, flexible	1	—	B	—	BE1/12
9/4380	†	GEAR-BOX, flexible drive	1	—	A	—	BE1/13
9/4566	†	HEAD, sighting	1	—	A	—	BE1/14
6A/409	†	HOLDER, deviation card	1	—	C	—	BE1/15
109J8/271	†	HOSE, connection, pilot and static line	2	—	B	—	BE1/16
109J8/295	†	HOSE, connection, supply line	1	—	B	—	BE1/17
	E.A3.97.9	MOUNTING, SIGHTING HEAD, ASSEMBLY Spares for:	1	—	—	—	BE1/18
973	E.A3.97.35	BOLT, special, pivot tie bar anchor	1	S.11	C	—	BE1/19
974	E.A3.97.33	GATE, bombsight mounting	1	DTD.304	C	—	BE1/20
975	E.A3.97.43	PIN, hinge	1	—	C	—	BE1/21
28FP/21	A.522	PIN, 'pip', tie bar, locking	1	—	C	—	BE1/22
2154	E.A3.97.247	PLATE, bombsight base Attaching parts for E.A3.97.247:	1	—	C	—	BE1/23
28D/9133012	A25/3C	Bolt, 2BA	2	—	C	—	BE1/24
28D/1011238	A25/3E	Bolt, 1/4" BSF	2	—	C	—	BE1/25
28M/1278190	AGS.2001/C/1	Nut, 2BA	2	—	C	—	BE1/26
28M/1201610	AGS.2001/E/1	Nut, 1/4" BSF	2	—	C	—	BE1/27
	EEAS.1HR	Washer, packing, 12 SWG	2	L.72	—	—	
2155	E.A3.97.251	ROD, TIE, BOMBSIGHT MOUNTING BRACKET, ASSEMBLY Consisting of:	1	—	C	—	BE1/28
	E.A3.97.249	BAR, tie	1	DTD.683	—	—	BE1/29
	E.A3.97.37	LUG, tie-bar, L.H.	1	DTD.683	—	—	BE1/30
	E.A3.97.38	LUG, tie-bar, R.H.	1	DTD.683	—	—	BE1/31
28M/15236	A29/EPL	NUT, lock, 1/4" BSF, L.H.	1	—	C	—	BE1/32
28M/13376	A29/EP	NUT, lock, 1/4" BSF, R.H.	1	—	C	—	BE1/33
981	EEAS.20/2DR	TAB, locking, 20 SWG	1	L.72	C	—	

ARMAMENT
BOMB SIGHT, MK.T4 ASSEMBLY

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.A3.97.49	MOUNTING, BOMBSIGHT COMPUTOR, ASSEMBLY Spares for:-	1	-	-	BE2/1
2049	E.A3.97.185	LATCH, computer, securing Attaching parts for E.A3.97.185:-	1	L.72	C	BE2/2
978	E.A3.97.77	Bolt, special pivot	1	M.S.	C	BE2/3
28M/1278190	AGS.2001/C/1	Nut, 2BA	1	-	C	BE2/4
28W/9419402	SP.13/C	Washer	1	-	C	
18845	E.A3.97.83	PEG, locating	2	-	C	BE2/5
28FP/7002000	A.403	PIN, quick release, computer latch locating	1	-	C	BE2/6
6818	E.A3.97.71	PLATE, computer attachment Attaching parts for E.A3.97.71:-	2	-	C	BE2/7
28D/9436920	A25/1C	Bolt, 2BA	2	-	C	BE2/8
1884	E.A3.97.79	PLATFORM, mounting Attaching parts for E.A3.97.79:-	1	-	B	BE2/9
28D/1007979	AS.1246/1B	Bolt, 4BA	14	-	C	BE2/10
29H/4100	TERRY No.169-1	RING, split	1	-	C	BE2/11
9/4578	†	PANEL, control Attaching parts for Ref. 9/4578:-	1	-	B	BE2/12
28D/10471	AS.1248/11C	Bolt, 2BA	3	-	C	BE2/13
9/3350	†	PLATE, mounting Attaching parts for Ref. 9/3350:-	1	-	B	BE2/14
28D/1011301	A25/BJ	Bolt, 3/8" BSF	3	-	C	BE2/15
28M/1011473	A27/JP	Nut, 3/8" BSF	3	-	C	BE2/16
28W/9419466	SP.13/J	Washer	3	-	C	
5CY/2866	E.A2.10.707 †	RAMP, bomb aimer's, assembly SUPPRESSOR, Type B4 Attaching parts for Ref. 5CY/2866:-	1 1	- -	- -	BE2/17 BE2/18
28D/1008149	A25/2B	Bolt, 4BA	2	-	C	BE2/19
28W/9419474	SP.15/B	Washer, 4BA	2	-	C	
	E.A3.81.2053	SWITCH AND LEAD, firing	1	-	-	BE2/20
	E.A3.97.87	SWITCH, PUSH BUTTON, ASSEMBLY Spares for:-	-	-	-	BE2/21
5CZ/430	†	BLOCK, terminal Attaching parts for Ref. 5CZ/430:-	1	-	C	BE2/22
28M/9403518	A27/AP	Nut, 6BA	2	-	C	BE2/23
28S/1200062	A33/A20	Screw, 6BA	2	-	C	BE2/24
28W/9419464	SP.13/A	Washer	2	-	C	
10A/13766	E.A3.97.87A †	BRACKET BRACKET, strainer	1 1	L.72 -	- C	BE2/25 BE2/26
5K/2724	AGS.1765	COVER, spring, switch	2	-	C	BE2/27
5CW/898	†	SWITCH, push button Attaching parts for Ref. 5CW/898:-	2	-	B	BE2/28
28M/9403518	A27/AP	Nut, 2BA	2	-	C	BE2/29
28S/9419437	A31/A16	Screw, 2BA	2	-	C	BE2/30
28W/9419464	SP.13/A	Washer	2	-	C	

ARMAMENT
BOMB SIGHT, MK.T4, ASSEMBLY

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
5K/2729	†	Transfer	1	—	C	BE2/31
5K/2740	†	Transfer	1	—	C	BE2/32
28D/9128739	AS.1248//4B	Attaching parts for E A3 97 87 Bolt, 4BA	4	—	C	BE2/33
9/4816	†	UNIT. gyro control Attaching parts for Ref 9/4816	1	—	A	BE2/34
28D/1010658	A25/1B	Bolt, 4BA	4	—	C	BE2/35
28W/9419474	SP.15/B	Washer	4	—	C	BE2/36

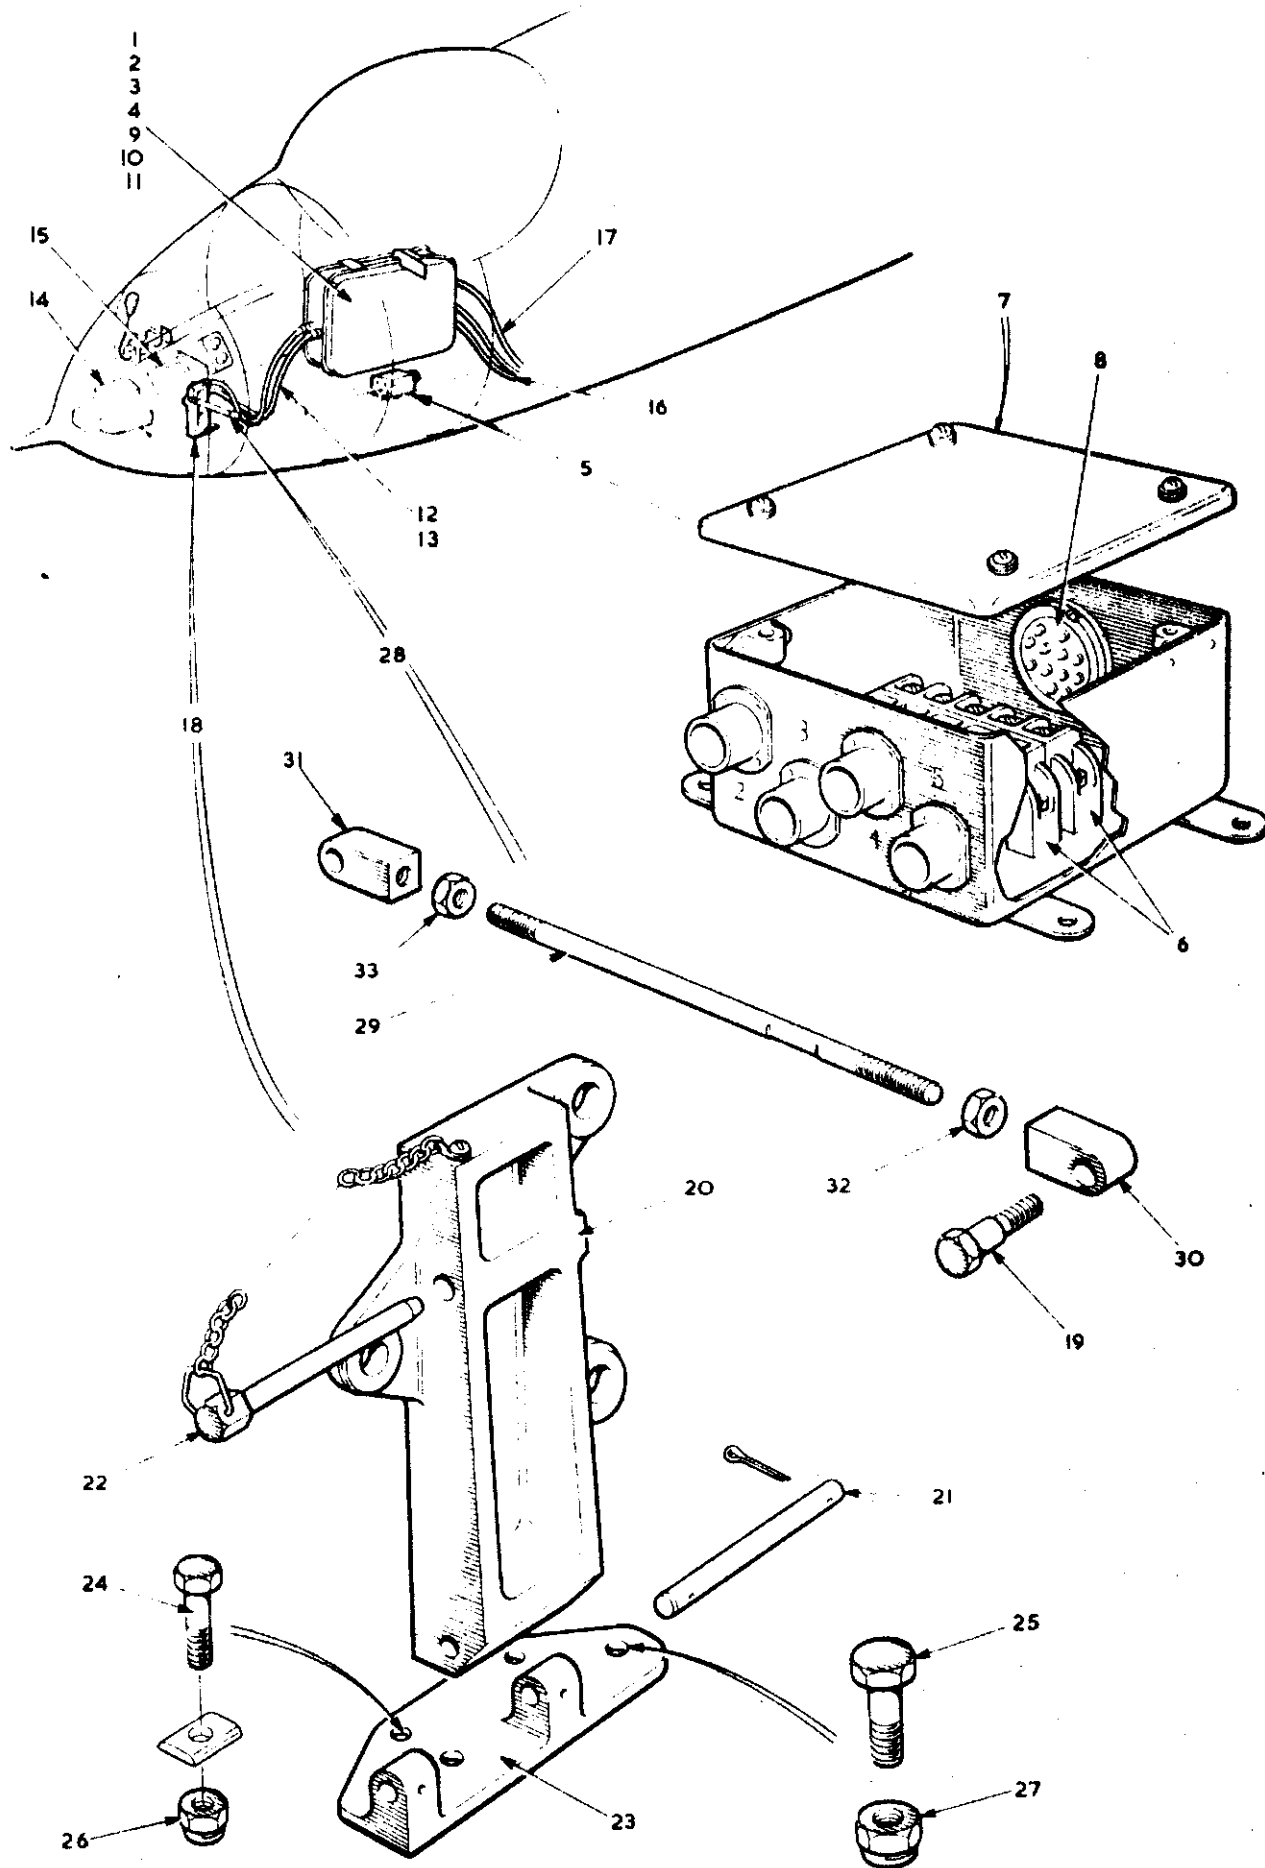


FIG. I BOMB SIGHT MK T4 ASSEMBLY

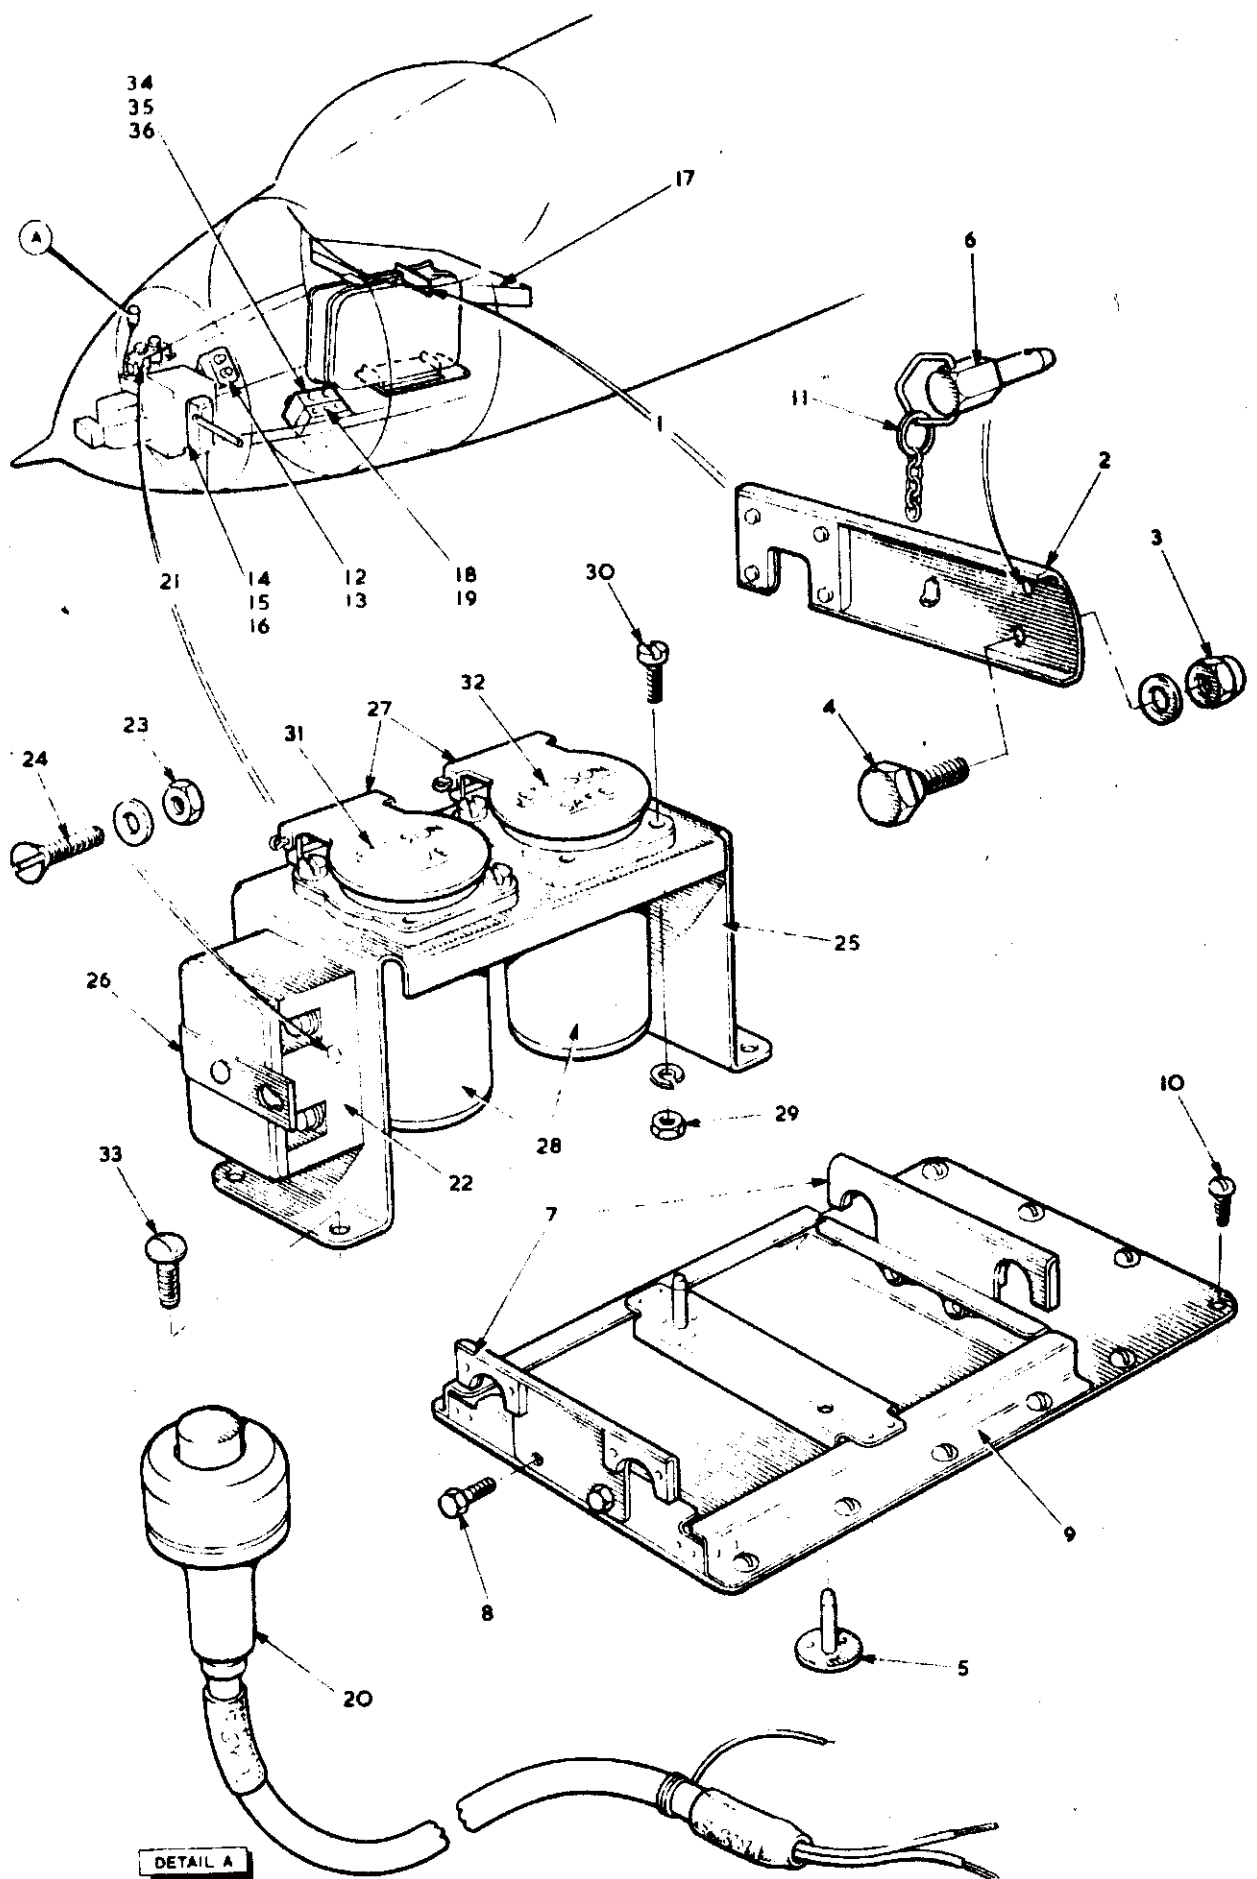


FIG.2 BOMB SIGHT MK T4 ASSEMBLY