

EQUIPMENT
GROUND AND MAINTENANCE

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.A188.2	GROUND EQUIPMENT ASSEMBLY	—	—	—	
4Q/2622	E.A188.17	ADAPTOR, storage jacking	1	—	B	F1/1
4G/4137	E.A188.18	ADAPTOR, storage torque wrench (Mod. 2506)	1	—	B	
4G/4137	—	ADAPTOR, re-charging	2	—	B	
4G/4137	—	ENGINE STAND, engine stand	1	—	B	
95087	E.A388.15	ACHMED WHEEL STEERING, ASSEMBLY	1	—	A	F1/2
20170	E.A388.57	ACHMED STEERING ARM	1	—	A/MR	
21121	E.A388.47	BAR, inter-communication	2	—	C/MR	
21124	E.A388.49	BAR, inter-communication	2	—	C/MR	
21124	E.A388.51	BAR, inter-communication	2	—	C/MR	
40141	E.A388.52	BAR, inter-communication	2	—	C/MR	
95469	E.A388.53	BAR, inter-communication	2	—	C/MR	
26190	E.A388.54	ADAPTOR	2	—	C/MR	
27532	E.A388.55	ADAPTOR	1	—	C/MR	
27532	E.A388.57	ADAPTOR	1	—	C/MR	
27532	E.A388.58	ADAPTOR	2	—	C/MR	
27532	E.A388.59	ADAPTOR	2	—	C/MR	
95460	E.A388.60	WASHER, engine	2	—	C/MR	
95494	833C	CARTON, fuel	2	—	C	
95539	L.P.S. 17111	ASS. STICK, triple bomb carrier (Mod. 2671)	1	—	B	
95022	E.A388.61	ATTACHMENT, TOWING ARM	1	—	A	F1/3
		ASSEMBLY				
		Spares for this assembly are identical with those of assembly Part No. 26190, except for the following details: adaptation to plate				
26190	E.A388.65	PIN, adaptor	2	—	C/MR	
25733	E.A388.37	ADAPTOR	2	—	C/MR	
4G/2732	—	ADAPTOR	2	—	A	
95099	E.A388.201	BLOCK, for depressing fuel ring cover when inserting or withdrawing fuel tanks No. 1 and No. 2	2	—	B	F2/1
27Q/32500	DOWTY MT. 1002	BLOCK, split, for air brakes	1	—	B	F1/4
95490	E.A388.209	BLOCK, canopy (Mod. 14833)	32	S.97	C	
95490	E.A388.210	BLOCK, canopy (Mod. 14833)	2	—	B	F7/1
21870	E.A388.210	BLOCK, split, for air brakes	2	S.94 or S.95	C	F7/2
95013	E.A388.70	BRIDGE, detachable, for wing slinging	1	—	B	F1/5
4G/4139	—	BRIDGE, towing main undercarriage	1	—	B	
95012	E.A138.80	CLASPS, retain on bomb door	2	—	B	
1971	E.A388.81	CLAMP, ALERON, LOCKING, ASSEMBLY	1	—	B	F5/1
		Spares for				
6799	E.A388.102	PENNANT	2	—	C	F5/2
6800	E.A388.103	PENNANT, assembly	1	—	C	F5/3

EQUIPMENT
GROUND AND MAINTENANCE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
1972	E.A.3.88.102	CLAMP, AILERON, LOCKING, ASSEMBLY Spares for	1	—	B	F5/4
6799	E.A.3.88.103	PENNANT	2	—	C	F5/5
20732	E.A.3.88.104	STRAP, assembly	1	—	C	F5/6
1957	E.A.3.88.105	CLAMP, ELEVATOR, LOCKING, STARBOARD, ASSEMBLY Spares for:-	1	—	B	F5/7
20736	E.A.3.88.106	PENNANT	1	—	C	F5/8
28FP/29	A.1	P.N. "Pip"	2	—	C	F5/9
13142	E.A.3.88.107	CLAMP, ELEVATOR LOCKING, PORT (MOD. 2134) Spares for:-	1	—	B	F5/10
20736	E.A.3.88.108	PENNANT	1	—	C	F5/11
28FP/29	A.1	P.N. "Pip"	2	—	C	F5/12
1468	E.A.3.88.109	CLAMP, ELEVATOR LOCKING, ASSEMBLY Spares for:-	2	—	B	F5/13
28FP/29	A.1	P.N. "Pip"	1	—	C	F5/14
6747	TERRY EX.12	SPRING	1	—	C	F5/15
19298	E.A.3.88.110	COVER, used for protecting and depressing stud rings when assembling or with- drawing fuel tanks No. 1 and No. 2	2	—	B	F2/18
	E.A.3.88.111	COVERS, AIRCRAFT, ASSEMBLY Spares for:-	—	—	—	
27D/2812	E.A.3.88.112	COVER, nose (Pre-Mod. 1027)	1	—	B	
27D/2848	E.A.3.88.113	COVER, nose (Mod. 1027)	1	—	B	
27D/2809	E.A.3.88.114	COVER, coupe	1	—	B	
27D/2815	E.A.3.88.115	COVER, engine	2	—	B	F6/1
27D/2811	E.A.3.88.116	COVER, jet pipe	2	—	B	F6/2
27D/2807	E.A.3.88.117	COVER, main wheel	2	—	B	F6/3
27D/2816	E.A.3.88.118	COVER, nose wheel	2	—	B	F6/4
27D/2817	E.A.3.88.119	COVER, pressure head	1	—	B	
27D/2818	E.A.3.88.120	COVER, equipment door	1	—	B	F6/5
95001	E.A.3.88.121	CRADLE, for handling detachable wing tanks	1	—	A	
95002	E.A.3.88.122	CRADLE, retraction test for use at frame 13	1	—	A	
95003	E.A.3.88.123	CRADLE, retraction test for use at frame 29	1	—	A	
95004	E.A.3.88.124	CRADLE, for bomb trolley	1	—	A	
95072	E.A.3.88.125	DISC, setting engine control 12 SWG	2	L.72	B	F2/2
95454	*	EXTRACTOR fuse (Locally manufactured)	1	—	C	
95455	E.A.3.88.126	EXTRACTOR, rubber, blow back rod (Mod. 1912)	1	—	C	F2/3
95107	A.1	EXTRACTOR, and assembly tool for wheels	1	—	A	
95047	E.A.3.88.127	EXTRACTOR, wing to fuselage pick ups	1	—	A	F2/4
95044	E.A.3.88.128	EXTRACTOR, for oil service tube lever	1	—	A	F2/5
95108	E.A.3.88.129	EXTRACTOR, for anti-ice lever	1	—	A	F2/6
27D/2819	E.A.3.88.130	EXTRACTOR, hydraulic pump alignment	1	—	B	
	E.A.3.88.131	EXTRACTOR, ASSEMBLY DRAWING, PORT	—	—	—	F6/6
95025	E.A.3.88.132	EXTRACTOR, wing lifting gantry, forward port	1	—	B	F6/7
95026	E.A.3.88.133	EXTRACTOR, wing lifting gantry, centre, port	1	—	B	F6/8
95027	E.A.3.88.134	EXTRACTOR, wing lifting gantry, aft, port	1	—	B	F6/9
95028	E.A.3.88.135	EXTRACTOR, wing lifting gantry, forward, port	1	—	B	F6/10
95029	E.A.3.88.136	EXTRACTOR, wing lifting gantry, centre, port	1	—	B	F6/11
95030	E.A.3.88.137	EXTRACTOR, wing lifting gantry, aft, port	1	—	B	F6/12

EQUIPMENT
GROUND AND MAINTENANCE

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.A1.88.92	FORMER, ASSEMBLY DRAWING, STARBOARD	—	—	—	F6/13
95031	E.A1.88.92A	FORMER, wing lifting gantry, forward, starboard	1	—	B	F6/14
95032	E.A1.88.92B	FORMER, wing lifting gantry, centre, starboard	1	—	B	F6/15
95033	E.A1.88.92C	FORMER, wing lifting gantry, aft, starboard	1	—	B	F6/16
95034	E.A1.88.92D	FORMER, wing lifting gantry, forward, starboard	1	—	B	F6/17
95035	E.A1.88.92E	FORMER, wing lifting gantry, centre, starboard	1	—	B	F6/18
95036	E.A1.88.92F	FORMER, wing lifting gantry, aft, starboard	1	—	B	F6/19
4Q/1245	†	GANTRY, lifting, main plane	2	—	A	F6/20
95115	E.A3.88.179	GAUGE, tailplane, incidence and dihedral	1	—	B	F6/21
95010	E.A1.88.93	GAUGE, wing incidence dihedral	1	—	B	F6/22
95040	E.A1.88.447	GAUGE, levelling cockpit lateral and fuselage longeron	1	—	B	F6/23
95093	E.A1.88.747	GAUGE, levelling cockpit longeron and fuselage lateral	1	—	B	F6/24
95100	E.A1.88.823	GAUGE, aileron, track tab angle checking	1	—	B	F3/1
95532	E.A1.88.893	GAUGE, inspection assembly of canopy to fuselage (Mod. 3536)	1	—	B	F3/2
95653	†	GAUGE, clearance aileron shroud screen (Supplied in set of three)	1 SET	—	B	
95272	E.A1.88.785	GEAR LIFTING COMPLETE AIRCRAFT, ASSEMBLY (MOD. 376) Spares for	2	—	A	F7/3
95526	E.A3.88.317	POLY, special, shrouded	2	S.97	C	F7/4
95527	E.A3.88.319	WASHER, special	2	MS	C	F7/5
95099	E.A1.88.817	POLY, R. TAKT DEBRIS, ASSEMBLY Spares for	2	—	B	F7/6
95503	E.A3.88.305	BOY, T. Key	2	MS	C	F7/7
1B/4467	†	GUN, lubricating	1	—	A	
95080	AT 81489	HAND, lubricating	1	—	A	
4Q/2321	†	HEAD, adaptor, for 15 ton pillar jack	2	—	A	F7/8
4Q/2626	E.A1.88.967	HEAD, adaptor, for 15 ton pillar jack	2	MS	A	F7/9
95037	E.A1.88.967	HEAD, adaptor, for 15 ton pillar jack	2	—	B	F7/10
95038	E.A1.88.967	HEAD, adaptor, for 15 ton pillar jack	2	—	A	F2/7
95039	E.A1.88.967	HEAD, adaptor, for 15 ton pillar jack	2	—	B	F2/8
95040	E.A1.88.967	HEAD, adaptor, for 15 ton pillar jack	2	—	B	F2/9
95041	E.A1.88.967	HEAD, adaptor, for 15 ton pillar jack	2	—	B	F2/10
95042	E.A1.88.967	HEAD, adaptor, for 15 ton pillar jack	2	—	B	F2/11
95043	E.A1.88.967	HEAD, adaptor, for 15 ton pillar jack	2	—	B	F3/3
95089	E.A1.88.723	INTESTER, main undercarriage pivot pin	1	—	B	F2/12
4Q/2732	†	JACK, hydraulic, fuselage	1	—	A	F7/11
4Q/2625	†	JACK, 10 ton, hydraulic main wing, type B	2	—	A	F7/12
4Q/2657	†	JACK, 10 ton, hydraulic main wing	2	—	A	F7/13
95044	†	JACK, 10 ton, hydraulic main wing	2	—	B	
95063	E.A1.88.295	JACK, 10 ton, hydraulic main wing	2	—	B	F2/13
12/19	E.A1.88.295	JACK, 10 ton, hydraulic main wing	2	S.11	C	F7/14
27Q/11743	E.A1.88.295	JACK, 10 ton, hydraulic main wing	2	—	A	
95015	E.A1.88.295	JACK, 10 ton, hydraulic main wing	2	—	B	F7/15
95294	E.A1.88.295	JACK, 10 ton, hydraulic main wing	2	—	B	F2/14
95295	E.A1.88.295	JACK, 10 ton, hydraulic main wing	2	—	B	F2/15
95074	E.A1.88.549	PLATE, setting throttle box, 16 SWG	1	L.72	B	F2/16

EQUIPMENT
GROUND AND MAINTENANCE

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
95270	E.A3.88.281	PLUG BLANKING CABIN PRESSURE CONTROL VALVE, ASSEMBLY Consisting of:-	1	—	B	F7/18
	†	CHAIN, retaining	QR	BRASS	—	F7/17
21084	E.A2.88.77	PENNANT	1	—	C	F7/18
	E.A3.88.283	PLUG	1	L.40	—	F7/19
	†	RING, split 3/4" o/d. x 1/16" dia.	2	—	—	F7/20
6A/2679	†	PLUG, protective, static vents	4	—	B	F2/17
95491	E.A1.88.891	PIN, locating (ST.8/4842)	6	—	C	F2/17
4G/2764	†	PUMP, type F, oleo	1	—	A	
1C/2161	†	SCREWDRIVER	1	—	B	
95071	E.A1.88.599	SEAL, engine dust	2	—	B	F8/10
95091	E.A1.88.797	SLAVE COWLING PORT ASSEMBLY	1	—	A	F7/21
		Spares for				
10699	E.A1.50.1055	COVER, plate debris guard attachment, plate	2	L.72	C	F7/22
95458	E.A1.88.802	PORT EXHAUST ASSEMBLY	2	—	C	F7/23
		Spares for				
21694	E.A1.88.813	SCREW, special	3	S.1	C	F7/24
21695	E.A1.88.849	SCREW, special	2	S.1	C	F7/25
21696	E.A1.88.851	SCREW, special	4	S.1	C	F7/26
95092	E.A1.88.798	SLAVE COWLING STARBOARD, ASSEMBLY	1	—	A	F7/27
		Spares for this assembly are identical with those for assembly Part No. E.A1.88.797				
95089	E.A1.88.742	SLEEVE MAIN UNDERCARRIAGE WHEEL LOCKING ASSEMBLY	2	—	A	F8/1
		Spares for				
21084	E.A2.88.77	PENNANT	2	—	C	F8/2
	AVIATION					
28FP/9432064	DEV. 4.8.17	PIN, Pin	2	—	C	F8/3
95008	E.A1.88.811	SLING, over frame, nose and tail lifting, complete	1	—	A	F8/4
95009	E.A1.88.819	SLING, tail frame	1	—	A	F8/5
95006	E.A1.88.817	SLING, centre fuselage lifting, complete	1	—	A	F8/6
95005	E.A1.88.816	SLING, forward fuselage lifting, ASSEMBLY	1	—	A	
		Spares for				
95560	E.A1.88.219	NUT	2	—	C	
28FP/50	A.930	PIN, Pin	1	—	C	
95007	E.A1.88.818	SLING, over fuselage lifting, complete	1	—	A	F8/7
95084	E.A1.88.861	SLING, tail and rudder	1	—	A	F8/8
95094	E.A1.88.817	SLING, combined nose and tail fuselage lifting	1	—	A	F8/9
1L/22	†	SCREW, 1/16" BSF, for explosive bolts	1	—	B	
1L/45	†	SCREW, for attachment points, 1/16" BSF	1	—	B	
1L/61	†	SCREW, for attachment points, 1/16" BSF	1	—	B	
95269	E.A3.88.292	WASHER, with crank pin plug (Mod 733)	1	—	B	
95064	E.A1.88.812	WASHER, for integral and dual tanks (Pre-Mod. 733)	1	DTD.224A	B	
95493	E.A1.88.877	SPANNER, nosewheel door (Mod. 2311)	1	—	B	F4/1
95054	E.A1.88.745	SPANNER, torque link, main undercarriage, special screw	1	DTD.124	B	F4/2
95056	E.A1.88.817	SPANNER, special, 'C', main under carriage oleo stop nut	1	—	B	F4/3
95057	E.A1.88.362	SPANNER, special, main undercarriage oleo piston	1	—	B	F4/4

EQUIPMENT
GROUND AND MAINTENANCE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
95249	HC 23364	BANJO, fitting	30	—	C	
95250	HC 23367	BANJO, fitting, double, 5/16"	8	—	C	
95251	16297	BANJO, fitting, angle reversing valve	1	—	C	
95252	HC 38058	BANJO, hose 1/4"	10	—	C	
95217	ALVIS AS 18151	BEARING, assembly, roller, cradle	8	—	A	
95218	AS 1856	BEARING, assembly, roller, store	8	—	A	
95253	HC 1318	BOLT, banjo, 1/4"	49	—	C	
95570	J 3177	BOOT, rubber, for size B, Mk. 3 socket	4	—	C	
95254	No 1331	BOOT, for reversing valve	1	—	C	
95530	HC 31727/4	BOOT, lifting cylinder	1	—	C	
95531	HC 41447	BOOT, lifting cylinder	1	—	C	
95484	AS 16014	BRACKET, stop (Mod. 1870, Alvis)	1	—	C	
95118	AS 16655	BRAKE, drum	2	—	A	
	GIRLING					
16L/21880	GB 24658	BRAKE, assembly, R H.	1	—	A	
	GIRLING					
16L/11890	GB 24659	BRAKE, assembly, L H	1	—	A	
95131	AS 16657	BUSH, bellcrank lever	1	—	C	
95141	AS 16655	BUSH, upper brake lever spindle and valve handle shaft	6	—	C	
95142	AS 16686	BUSH, lever, brake lever spindle	2	—	C	
95144	AS 16687	BUSH, bisector lever	2	—	C	
95133	AS 16716	BUSH, handbrake lever	1	—	C	
95159	AS 16981	BUSH, reversing lever	1	—	C	
95121	AS 16575	BUSH, stub axle swivel pin and lifting arm stop	8	—	C	
95146	AS 16684	BUSH, spindle brake lever	2	—	C	
95128	AS 16591	BUSH, tow bar yoke and plate	4	—	C	
95151	AS 16569	BUSH, tilting cylinder pin	2	—	C	
95152	AS 16816	BUSH, long transmitter shaft	2	—	C	
95153	AS 16817	BUSH, short transmitter shaft	2	—	C	
95157	AS 16987	BUSH, store roller	4	—	C	
95131	AS 17252	CAUCH, trigger, tow bar	1	MS	B	
95255	K 20100	CLIP, for boot	1	—	C	
95219	HC 41447	CYLINDER, L.H. ASSEMBLY	2	—	B	
		Spares for				
95531	HC 41447	BOOT	1	—	C	
95220	HC 21392	CYLINDER, R.H. ASSEMBLY	2	—	B	
		Spares for				
95530	HC 31727/4	BOOT	1	—	C	
95221	HC 25220004	CYLINDER, TABLE OPERATING, 4" STROKE	2	—	B	
		Spares for				
	HC 262578	BOOT, tow clip and fitter, assembly	1	—	—	
95222	HC 25220004	CYLINDER, table operating, 5" stroke	2	—	A	
16L/10800	K 44524	EXTENSION valve	4	—	B	
95226	MF 2604	EXTENSION valve ASSEMBLY	1	—	B	
	or					
	MF 2604					
		Spares for				
27M/9356	MF 2604	ELEMENT	1	—	C	
95247	HC 38058	FITTING, bulkhead	26	—	C	
16L/8300	15485	FITTING, bulkhead	8	—	C	
16L/10800	K 44524	GASKET, for banjo	54	—	C	
95257	K 44524	GASKET	70	—	C	

EQUIPMENT
GROUND AND MAINTENANCE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		* 2 3 4 5 6				
95325	E.A3.88.303	SPANNER, special, main undercarriage oleo bearing ring	1	STEEL	B	F4/5
95086	E.A3.88.135	SPANNER, special, main undercarriage oleo axle clamp (Mod.3.)	1	STEEL	B	F4/6
95065	E.A1.88.365	SPANNER, special, plug forward jacking point housing	1	—	B	F4/7
95046	E.A1.88.379	SPANNER, universal for attaching aileron to centre hinge bracket	1	MS	B	
95059	E.A1.88.385	SPANNER, special, for undercarriage pivot pin	1	MS	B	F4/8
95060	E.A1.88.387	SPANNER, special, for undercarriage pivot nut	1	MS	B	F4/9
95070	E.A1.88.531	SPANNER, special, for drop tank, assembly	1	MS	B	F4/10
10/3226	+	SPANNER, union main fuel feed	2	—	B	
95085	E.A1.88.615	SPANNER, special, main undercarriage oleo axle clamp (Pre-Mod.3)	1	STEEL	B	
95095	E.A1.88.749	SPANNER, forward bomb clutch	1	—	B	F4/11
95004	E.A1.88.23	SPICOT, forward jacking front fuselage	1	S.65	B	F8/1
95090	E.A1.88.799	STRUT, jury tailplane	1	—	B	F8/2
95262	E.A3.88.212	STRAP, metal for use with combined nose and centre fuselage sling	1	—	B	F8/3
	A3.88.221	TEMPLATES, NEUTRAL RIGGING, ASSEMBLY spares for:				F3/4
95265	E.A3.88.247	TEMPLATE, neutral rigging rudder	1	—	B	F3/5
95266	E.A3.88.257	TEMPLATE, neutral rigging aileron	1	—	B	F3/6
95267	E.A3.88.223	TEMPLATE, neutral rigging elevator	1	—	B	F3/7
95619	E.A3.88.5053	TEST SET, air ventilated suit	1	—	A	
95061	E.A1.88.351	TOOL, shock absorbing piston, centralising	1	—	A	F3/8
95062	E.A1.88.361	TOOL, special, combination main undercarriage oleo insertion and extraction of spherical bearing	1	—	A	F3/9
95101	E.A1.88.821	TOOL, setting	1	—	B	F3/10
	MARTIN BAKER					
95182	AM382/70/EE	TOOL, for cocking and uncocking snatch unit	1	—	A	
40/2251	+	TRESTLE, bomb loading	1	—	A	
40/2266	+	TRESTLE, fuselage jacking, Mk. 2	1	—	A	
	E.A1.88.87	TRESTLE, ALUM. FUSELAGE, ASSEMBLY spares for:	—	—	—	F1/6
95017	E.A1.88.87A	FORMER, forward	1	SPRUCE	B	F1/7
95018	E.A1.88.87B	FORMER, aft	1	SPRUCE	B	F1/8
40/2652	+	TRESTLE, wing jacking, Mk. 1	2	—	A	
95069	ALVIS S.4954	TROLLEY BOMB LOADING, HYDRAULIC, MK.1	1	—	A	
	or					
95111	18101	TROLLEY BOMB LOADING, HYDRAULIC, MK.2	1	—	A	
		spares for:				
95239	HC.345018	ADAPTOR, bomb loading, O.S.	1	—	C	
95240	HC.31222	ADAPTOR, hose pump, inner	2	—	C	
95241	HC.24319	ADAPTOR, tank and pump	3	—	C	
95242	HC.4969	ADAPTOR	3	—	C	
95243	HC.12114	ADAPTOR	4	—	C	
95244	HC.33438	ADAPTOR, cylinder to hose	3	—	C	
95155	AS.17986	ADAPTOR, pipe 16.5 dia	8	—	B	
95122	AS.16571	ARM, steering, O.S.	1	—	A	
95123	AS.16572	ARM, steering, N.S.	1	—	A	
95594	AS.16573	AXLE, front stub	1	—	B	

EQUIPMENT
GROUND AND MAINTENANCE

Ref. No.	Part No.	Description	No of	Mtl. Spec.	Cl. of Equip.		Plate No.
					M.R.	L.M.	
95258	KL 44519	BASKET, 3/8"	8		C		
95257	KL 44519	BASKET, 1/2"	8		C		
95256	KL 44519	BASKET, 3/4"	1		C		
95255	KL 44519	BASKET, 1"	2		B		
95254	KL 44519	BASKET, 1 1/2"	1		LM		
95253	KL 44519	BASKET, 2"	1		C		
95252	KL 44519	BASKET, 2 1/2"	1		C		
95251	KL 44519	BASKET, 3"	1		C		
95250	KL 44519	BASKET, 3 1/2"	1		C		
95249	KL 44519	BASKET, 4"	1		C		
95248	KL 44519	BASKET, 4 1/2"	1		C		
95247	KL 44519	BASKET, 5"	1		C		
95246	KL 44519	BASKET, 5 1/2"	1		C		
95245	KL 44519	BASKET, 6"	1		C		
95244	KL 44519	BASKET, 6 1/2"	1		C		
95243	KL 44519	BASKET, 7"	1		C		
95242	KL 44519	BASKET, 7 1/2"	1		C		
95241	KL 44519	BASKET, 8"	1		C		
95240	KL 44519	BASKET, 8 1/2"	1		C		
95239	KL 44519	BASKET, 9"	1		C		
95238	KL 44519	BASKET, 9 1/2"	1		C		
95237	KL 44519	BASKET, 10"	1		C		
95236	KL 44519	BASKET, 10 1/2"	1		C		
95235	KL 44519	BASKET, 11"	1		C		
95234	KL 44519	BASKET, 11 1/2"	1		C		
95233	KL 44519	BASKET, 12"	1		C		
95232	KL 44519	BASKET, 12 1/2"	1		C		
95231	KL 44519	BASKET, 13"	1		C		
95230	KL 44519	BASKET, 13 1/2"	1		C		
95229	KL 44519	BASKET, 14"	1		C		
95228	KL 44519	BASKET, 14 1/2"	1		C		
95227	KL 44519	BASKET, 15"	1		C		
95226	KL 44519	BASKET, 15 1/2"	1		C		
95225	KL 44519	BASKET, 16"	1		C		
95224	KL 44519	BASKET, 16 1/2"	1		C		
95223	KL 44519	BASKET, 17"	1		C		
95222	KL 44519	BASKET, 17 1/2"	1		C		
95221	KL 44519	BASKET, 18"	1		C		
95220	KL 44519	BASKET, 18 1/2"	1		C		
95219	KL 44519	BASKET, 19"	1		C		
95218	KL 44519	BASKET, 19 1/2"	1		C		
95217	KL 44519	BASKET, 20"	1		C		
95216	KL 44519	BASKET, 20 1/2"	1		C		
95215	KL 44519	BASKET, 21"	1		C		
95214	KL 44519	BASKET, 21 1/2"	1		C		
95213	KL 44519	BASKET, 22"	1		C		
95212	KL 44519	BASKET, 22 1/2"	1		C		
95211	KL 44519	BASKET, 23"	1		C		
95210	KL 44519	BASKET, 23 1/2"	1		C		
95209	KL 44519	BASKET, 24"	1		C		
95208	KL 44519	BASKET, 24 1/2"	1		C		
95207	KL 44519	BASKET, 25"	1		C		
95206	KL 44519	BASKET, 25 1/2"	1		C		
95205	KL 44519	BASKET, 26"	1		C		
95204	KL 44519	BASKET, 26 1/2"	1		C		
95203	KL 44519	BASKET, 27"	1		C		
95202	KL 44519	BASKET, 27 1/2"	1		C		
95201	KL 44519	BASKET, 28"	1		C		
95200	KL 44519	BASKET, 28 1/2"	1		C		
95199	KL 44519	BASKET, 29"	1		C		
95198	KL 44519	BASKET, 29 1/2"	1		C		
95197	KL 44519	BASKET, 30"	1		C		
95196	KL 44519	BASKET, 30 1/2"	1		C		
95195	KL 44519	BASKET, 31"	1		C		
95194	KL 44519	BASKET, 31 1/2"	1		C		
95193	KL 44519	BASKET, 32"	1		C		
95192	KL 44519	BASKET, 32 1/2"	1		C		
95191	KL 44519	BASKET, 33"	1		C		
95190	KL 44519	BASKET, 33 1/2"	1		C		
95189	KL 44519	BASKET, 34"	1		C		
95188	KL 44519	BASKET, 34 1/2"	1		C		
95187	KL 44519	BASKET, 35"	1		C		
95186	KL 44519	BASKET, 35 1/2"	1		C		
95185	KL 44519	BASKET, 36"	1		C		
95184	KL 44519	BASKET, 36 1/2"	1		C		
95183	KL 44519	BASKET, 37"	1		C		
95182	KL 44519	BASKET, 37 1/2"	1		C		
95181	KL 44519	BASKET, 38"	1		C		
95180	KL 44519	BASKET, 38 1/2"	1		C		
95179	KL 44519	BASKET, 39"	1		C		
95178	KL 44519	BASKET, 39 1/2"	1		C		
95177	KL 44519	BASKET, 40"	1		C		
95176	KL 44519	BASKET, 40 1/2"	1		C		
95175	KL 44519	BASKET, 41"	1		C		
95174	KL 44519	BASKET, 41 1/2"	1		C		
95173	KL 44519	BASKET, 42"	1		C		
95172	KL 44519	BASKET, 42 1/2"	1		C		
95171	KL 44519	BASKET, 43"	1		C		
95170	KL 44519	BASKET, 43 1/2"	1		C		
95169	KL 44519	BASKET, 44"	1		C		
95168	KL 44519	BASKET, 44 1/2"	1		C		
95167	KL 44519	BASKET, 45"	1		C		
95166	KL 44519	BASKET, 45 1/2"	1		C		
95165	KL 44519	BASKET, 46"	1		C		
95164	KL 44519	BASKET, 46 1/2"	1		C		
95163	KL 44519	BASKET, 47"	1		C		
95162	KL 44519	BASKET, 47 1/2"	1		C		
95161	KL 44519	BASKET, 48"	1		C		
95160	KL 44519	BASKET, 48 1/2"	1		C		
95159	KL 44519	BASKET, 49"	1		C		
95158	KL 44519	BASKET, 49 1/2"	1		C		
95157	KL 44519	BASKET, 50"	1		C		
95156	KL 44519	BASKET, 50 1/2"	1		C		
95155	KL 44519	BASKET, 51"	1		C		
95154	KL 44519	BASKET, 51 1/2"	1		C		
95153	KL 44519	BASKET, 52"	1		C		
95152	KL 44519	BASKET, 52 1/2"	1		C		
95151	KL 44519	BASKET, 53"	1		C		
95150	KL 44519	BASKET, 53 1/2"	1		C		
95149	KL 44519	BASKET, 54"	1		C		
95148	KL 44519	BASKET, 54 1/2"	1		C		
95147	KL 44519	BASKET, 55"	1		C		
95146	KL 44519	BASKET, 55 1/2"	1		C		
95145	KL 44519	BASKET, 56"	1		C		
95144	KL 44519	BASKET, 56 1/2"	1		C		
95143	KL 44519	BASKET, 57"	1		C		
95142	KL 44519	BASKET, 57 1/2"	1		C		
95141	KL 44519	BASKET, 58"	1		C		
95140	KL 44519	BASKET, 58 1/2"	1		C		
95139	KL 44519	BASKET, 59"	1		C		
95138	KL 44519	BASKET, 59 1/2"	1		C		
95137	KL 44519	BASKET, 60"	1		C		
95136	KL 44519	BASKET, 60 1/2"	1		C		
95135	KL 44519	BASKET, 61"	1		C		
95134	KL 44519	BASKET, 61 1/2"	1		C		
95133	KL 44519	BASKET, 62"	1		C		
95132	KL 44519	BASKET, 62 1/2"	1		C		
95131	KL 44519	BASKET, 63"	1		C		
95130	KL 44519	BASKET, 63 1/2"	1		C		
95129	KL 44519	BASKET, 64"	1		C		
95128	KL 44519	BASKET, 64 1/2"	1		C		
95127	KL 44519	BASKET, 65"	1		C		
95126	KL 44519	BASKET, 65 1/2"	1		C		
95125	KL 44519	BASKET, 66"	1		C		
95124	KL 44519	BASKET, 66 1/2"	1		C		
95123	KL 44519	BASKET, 67"	1		C		
95122	KL 44519	BASKET, 67 1/2"	1		C		
95121	KL 44519	BASKET, 68"	1		C		
95120	KL 44519	BASKET, 68 1/2"	1		C		
95119	KL 44519	BASKET, 69"	1		C		
95118	KL 44519	BASKET, 69 1/2"	1		C		
95117	KL 44519	BASKET, 70"	1		C		
95116	KL 44519	BASKET, 70 1/2"	1		C		
95115	KL 44519	BASKET, 71"	1		C		
95114	KL 44519	BASKET, 71 1/2"	1		C		
95113	KL 44519	BASKET, 72"	1		C		
95112	KL 44519	BASKET, 72 1/2"	1		C		
95111	KL 44519	BASKET, 73"	1		C		
95110	KL 44519	BASKET, 73 1/2"	1		C		
95109	KL 44519	BASKET, 74"	1		C		
95108	KL 44519	BASKET, 74 1/2"	1		C		
95107	KL 44519	BASKET, 75"	1		C		
95106	KL 44519	BASKET, 75 1/2"	1		C		
95105	KL 44519	BASKET, 76"	1		C		
95104	KL 44519	BASKET, 76 1/2"	1		C		
95103	KL 44519	BASKET, 77"	1		C		
95102	KL 44519	BASKET, 77 1/2"	1		C		
95101	KL 44519	BASKET, 78"	1		C		
95100	KL 44519	BASKET, 78 1/2"	1		C		
95099	KL 44519	BASKET, 79"	1		C		
95098	KL 44519	BASKET, 79 1/2"	1		C		
95097	KL 44519	BASKET, 80"	1		C		
95096	KL 44519	BASKET, 80 1/2"	1		C		
95095	KL 44519	BASKET, 81"	1		C		
95094	KL 44519	BASKET, 81 1/2"	1		C		
95093	KL 44519	BASKET, 82"	1		C		
95092	KL 44519	BASKET, 82 1/2"	1		C		
95091	KL 44519	BASKET, 83"	1		C		
95090	KL 44519	BASKET, 83 1/2"	1		C		
95089	KL 44519	BASKET, 84"	1		C		
95088	KL 44519	BASKET, 84 1/2"	1		C		
95087	KL 44519	BASKET, 85"	1		C		
95086	KL 44519	BASKET, 85 1/2"	1		C		
95085	KL 44519	BASKET, 86"	1		C		
95084	KL 44519	BASKET, 86 1/2"	1		C		
95083	KL 44519	BASKET, 87"	1		C		
95082	KL 44519	BASKET, 87 1/2"	1		C		
95081	KL 44519	BASKET, 88"	1		C		
95080	KL 44519	BASKET, 88 1/2"	1		C		
95079	KL 44519	BASKET, 89"	1		C		
95078	KL 44519	BASKET, 89 1/2"	1		C		
95077	KL 44519	BASKET, 90"	1		C		
95076	KL 44519	BASKET, 90 1/2"	1		C		
95075	KL 44519	BASKET, 91"	1		C		
95074	KL 44519	BASKET, 91 1/2"	1		C		
95073	KL 44519	BASKET, 92"	1		C		
95072	KL 44519	BASKET, 92 1/2"	1		C		
95071	KL 44519	BASKET, 93"	1		C		
95070	KL 44519	BASKET, 9					

EQUIPMENT
GROUND AND MAINTENANCE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
95168	AS.17195	PIPE, 3-way, to reversing valve, N.S., 87½" long	1	COPPER	C	
95169	AS.17196	PIPE, O.S. pump hose to 3-way N.S., 56½" long	1	COPPER	C	
95170	AS.17197	PIPE, 3-way, to hose adaptor N.S., 7½" long	1	COPPER	C	
95171	AS.17202	PIPE, filter to reversing valve, 58½" long	1	COPPER	C	
95172	AS.17203	PIPE, reversing valve to selector valve, 9½" long	1	COPPER	C	
95173	AS.17204	PIPE, bracket to selector valve, 24½" long	1	COPPER	C	
95174	AS.17205	PIPE, bracket to selector valve, 27½" long	1	COPPER	C	
95175	AS.17206	PIPE, bracket to selector valve, 97" long	1	COPPER	C	
95176	AS.17207	PIPE, bracket to selector valve, 97½" long	1	COPPER	C	
95177	AS.17208	PIPE, O.S. bracket to N.S. bracket, 72" long	1	COPPER	C	
95178	AS.17209	PIPE, O.S. bracket to N.S. bracket, 74½" long	1	COPPER	C	
95179	AS.17210	PIPE, O.S. bracket to N.S. bracket, 72½" long	1	COPPER	C	
95180	AS.17211	PIPE, O.S. bracket to N.S. bracket, 73½" long	1	COPPER	C	
95181	AS.17212	PIPE, hydroloc valve to hydroloc valve (arm) 24½" long	2	COPPER	C	
95182	AS.17213	PIPE, hydroloc valve to hydroloc valve (arm) 10½" long	2	COPPER	C	
95183	AS.17216	PIPE, No. 1, hydroloc valve (arm) to bracket (O.S.) 18½" long	1	COPPER	C	
95184	AS.17217	PIPE, No. 2, hydroloc valve (arm) to bracket (O.S.) 25½" long	1	COPPER	C	
95185	AS.17218	PIPE, No. 3, hydroloc valve (arm) to bracket (O.S.) 42" long	1	COPPER	C	
95186	AS.17219	PIPE, No. 4, hydroloc valve (arm) to bracket (O.S.) 27½" long	1	COPPER	C	
95187	AS.17220	PIPE, No. 5, hydroloc valve (arm) to bracket (on arm) (O.S.) 46" long	1	COPPER	C	
95188	AS.17221	PIPE, No. 2, hydroloc valve (arm) to bracket (on arm) (O.S.) 46½" long	1	COPPER	C	
95189	AS.17222	PIPE, No. 3, hydroloc valve (arm) to bracket (on arm) (O.S.) 40½" long	1	COPPER	C	
95190	AS.17223	PIPE, No. 4, hydroloc valve (arm) to bracket (on arm) (O.S.) 23½" long	1	COPPER	C	
95191	AS.17224	PIPE, jack to jack (forward and aft), 64½" long	1	COPPER	C	
95192	AS.17225	PIPE, jack to jack (forward and aft), 44½" long	1	COPPER	C	
95193	AS.17226	PIPE, jack to jack (lateral), 35½" long	1	COPPER	C	
95194	AS.17227	PIPE, jack to jack (lateral), 64½" long	1	COPPER	C	
95195	AS.17228	PIPE, hydroloc valve (arm) to 3-way rear end, 10½" long	1	COPPER	C	
95196	AS.17229	PIPE, hydroloc valve (arm) to 3-way rear end, 7½" long	1	COPPER	C	
95197	AS.17230	PIPE, pump hose adaptor (O.S.) to pump hose adaptor N.S. 94½" long	1	COPPER	C	
95198	AS.17231	PIPE, reversing valve to selector valve, 8½" long	1	COPPER	C	
95199	AS.17232	PIPE, bracket to 3-way, 4½" long	2	COPPER	C	
95200	AS.17233	PIPE, bracket to 3-way, 3½" long	2	COPPER	C	
95201	AS.17234	PIPE, hydroloc valve (arm) to bracket (N.S.) 46½" long	1	COPPER	C	
95202	AS.17235	PIPE, hydroloc valve (arm) to bracket (N.S.) 42½" long	1	COPPER	C	

EQUIPMENT
GROUND AND MAINTENANCE

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip.	Plant No.
					M.R. L.M.	
		1 2 3 4 5 6				
95203	AS.17236	PIPE, selector valve to bracket 101½" long	1	COPPER	C	
95204	AS.17237	PIPE, selector valve to bracket 101½" long	1	COPPER	C	
95205	AS.17238	PIPE, centre to bottom hydroloc valve, 8½" long	1	COPPER	C	
95206	AS.17239	PIPE, centre hydroloc valve to 3-way, 19½" long	1	COPPER	C	
95207	AS.17240	PIPE, bracket to 3-way N.S., 39½" long	1	COPPER	C	
95208	AS.17241	PIPE, bracket to 3-way N.S., 43" long	1	COPPER	C	
95209	AS.17242	PIPE, hydroloc valve (Bottom) to bracket N.S., 43½" long	1	COPPER	C	
95210	AS.17243	PIPE, centre to bottom hydroloc valve, 2" long	1	COPPER	C	
95211	AS.17242	PIPE, bottom hydroloc valve to 3-way, 13½" long	1	COPPER	C	
95212	AS.17245	PIPE, bracket O.S. to 3-way, 13½" long	1	COPPER	C	
95213	AS.17246	PIPE, bracket N.S. to 3-way, 18½" long	1	COPPER	C	
95214	AS.17247	PIPE, hydroloc valve (Centre) to bracket N.S. 42½" long	1	COPPER	C	
95215	AS.17248	PIPE, selector valve to bracket N.S., 104" long	1	COPPER	C	
95216	AS.17249	PIPE, selector valve to bracket N.S., 105½" long	1	COPPER	C	
95564	AS.16822	PLATE, keeper, lateral table	1	—	C	
95567	AS.17125	PLATE, pipe carrier	1	—	C	
95246	HCP 16902	PLUG, pump	2	—	C	
95224	HC.26140F	PUMP TRANSMITTER, ASSEMBLY Spares for:	2	—	A	
95622	HC.15236	PLUG-END	1	—	C	
	LOCK HEED					
95617	Z/86	SCREW, bleeder	1	—	C	
95135	AS.16245	QUADRANT, hand brake (Pre-Mod 1639, Alvis)	1	—	C	
95547	AS.19007	QUADRANT, hand brake (Mod. 1639, Alvis)	1	—	B	
95125	AS.16577	ROD, tie steering, 18" o.d. x 85 SWG x 25½" long	2	MS	B	
95550	AS.13004	ROD, hand brake (Mod. 1639, Alvis)	1	—	C	
95119	+	SEAL, oil hub Burtonwood No. 275-350)	4	—	C	
95569	ADS.4000/3C	SEAL, elevating cylinder head	1	—	C	
95467	AS.18033/2	SEAL, oil	8	—	C	
95158	AS.17006	SHAFT, store roller	4	—	B	
95160	AS.17934	SHAFT, valve handle	2	—	B	
95260	J.3704PH	SOCKET, assembly, steering tie rod, R.H.	2	—	B	
95261	J.3705LH	SOCKET, assembly, steering tie rod, L.H.	2	—	B	
95140	AS.16675	SPINDLE, brake lever	2	—	C	
95143	AS.16671	SPINDLE, bisector lever	1	—	C	
95145	AS.16673	SPINDLE, brake lever	2	—	B	
95147	N.1738	SPRING, brake return	2	—	C	
95158	AS.3720	SPRING, cradle retaining pin trigger	4	—	C	
95137	N.1464	SPRING, hand brake trigger rod	1	—	C	
95549	AS.19005	SPRING, hand brake (Mod. 1639, Alvis)	1	—	C	
95132	AS.17117	SPRING, tow bar catch	1	—	C	
95565	AS.16832	STOP, oil, lateral table	1	MS	C	
95116	AS.1641	STUD, wheel	32	—	C	
95223	HC.12544	TANK, supply	1	—	B	
16T/768	+	TUBE, inner	4	—	A	
16T/767	+	TYRE, standard tread, 10 ply 7" x 9	4	—	A	
95227	HC.19694A	VALVE, hydroloc	7	—	B	
95228	HC.28055S	VALVE, reversing	1	—	A	
95229	HC.42191	VALVE, ROTARY SELECTOR 4-WAY, ASSEMBLY Spares for:	1	—	B	
95648	HC.42237	SEAL	1	—	C	

EQUIPMENT
GROUND AND MAINTENANCE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
16T/766	WDM.685	WHEEL, road, 4 "32 x 9"	4	—	A	
95018	E.A128.85	TROLLEY MAINTENANCE GROUND PRESSURE CABIN ASSEMBLY Spare for	1	—	A	
95487	E.A288.52	WHEEL, trolley (Capowheel) T.82)	4	—	B	
95263	AS.181.52	TROLLEY POWER PACK ASSEMBLY (For use with Ref. 95111)	1	—	A	
95356	AS.181.20	ADAPTOR, control valve	1	—	C	
95239	HC.2650.00	ADAPTOR, 1/2" x 1/2"	1	—	C	
95373	HC.2650.00	ADAPTOR, 1/2" x 1/2"	1	—	C	
95241	HC.24.00	ADAPTOR	2	—	C	
95243	HC.24.00	ADAPTOR	1	—	C	
95387	HC.2650.00	ADAPTOR, 1/2" BSP x 3/8" BSP	1	—	C	
95388	HC.2650.00	ADAPTOR, 1/2" BSP x 3/8" BSP	1	—	C	
95389	HC.2650.00	ADAPTOR, 1/2" BSP x 1/2" BSP	2	—	C	
95393	HC.22.00	SEAL, 1/2"	3	—	C	
95390	No. 238	SEAL, 1/2"	1	—	B	
95253	HC.22.00	VOLT, 1/2"	4	—	C	
95365	AS.183.60	BUCKLE, and strap	4	—	B	
95244	AS.181.00	AC, support, etc	4	—	C	
	LOCK-HEED					
27M/8794	AVA.51.8	GAS, blanking, 1/8"	1	—	B	
27M/8926	AVA.51.8	GAS, blanking, 1/8"	1	—	B	
95396	HC.24.00	CL P, pipe, 1/2" double	2	—	C	
95395	HC.24.00	CL P, pipe, 1/2" single	2	—	C	
95348	AS.181.00	CL P, spring, foot	2	—	B	
	LOCK-HEED					
95381	HC.42.00	CONNECTION, 3-way, 1/2"	1	—	C	
95385	HC.42.00	CONNECTION, 3-way, 3/8"	1	—	C	
27M/8759	AVA.51.8	COUPLING, Avery, 1/2", half, union pressure line	1	—	B	
27M/8760	AVA.51.8	COUPLING, Avery, 1/2", half, union return line	1	—	B	
95361	AS.183.56	COVER, L.V.	1	CANVAS	B	
95362	AS.183.56	COVER, R.V.	1	CANVAS	B	
95363	AS.183.56	COVER, front	1	—	B	
42L/		ENGINE, Vickers, Mk 25 with reduction gear S.3309	1	—	—	
	LOCK-HEED					
95367	HC.42.00	FITTING, bulkhead, 1/2"	1	—	B	
95368	HC.42.00	FITTING, bulkhead, 3/8"	1	—	B	
95257	KL.44.00	GASKET, 1/2" BSP	9	—	C	
16L/10800	KL.44.00	GASKET, 1/2" BSP	4	—	C	
95258	KL.44.00	GASKET, 3/8" BSP	6	—	C	
95391	KL.44.00	GASKET, 1/2" BSP	1	—	C	
95392	KL.44.00	GASKET, 1/2" BSP	1	—	C	
95259	KL.44.00	GASKET, 1/2" BSP	1	—	C	
95300	KL.44.00	GASKET, 1/2"	2	—	C	
	WA.18.00					
95246	WC.192.00	HANDLE, roof	2	—	C	

EQUIPMENT
GROUND AND MAINTENANCE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plan No.
		1 2 3 4 5 6				
95376	LOCKHEED CM.3258/240 or CM.725/000/B240	HOSE, 1/4" H.P., 20 ft. long pressure line	1	—	B	
95377	CM.373C/240	HOSE, 3/8", 20ft. long return line	1	—	B	
95378	CM.374/F/18	HOSE, 1/2", 18" long pump suction	1	—	B	
95379	CM.328B/11	HOSE, 1/2", 11" long pump delivery	1	—	B	
95354	AS.18113	LUG, and base, assembly, foot pedal	1	—	B	
95343	AS.18124	NUT, support leg	4	—	C	
95369	LOCKHEED HCP.11505	NUT, for 3/8" bulkhead fitting	1	—	C	
95370	KL.46002	NUT, for 1/2" bulkhead fitting	1	—	C	
95380	HC.2446	OUTLET, straight, 3/8"	2	—	C	
95382	HC.2060	OUTLET, straight, 1/2"	1	—	C	
95384	HC.14027	OUTLET, straight, 3/8"	1	—	C	
95352	ALVIS AG.18118	PEDAL, foot, assembly, c/w ped	1	—	B	
95347	AS.18136	PIN, roof hinge	2	—	C	
95353	AS.18171	PIN, joint foot pedal and control valve adaptor	2	—	B	
95359	AG.18326	PIPE, control valve to 3-way, 1/2" o/d. x 20 SWG x 13" long, c/w nuts	1	—	C	
95400	AS.18327	PIPE, 3-way to relief valve, 1/2" o/d. x 20 SWG x 29" long, c/w nuts	1	—	C	
95401	AS.18328	PIPE, 3-way to bulkhead fitting 1/2" o/d. x 20 SWG x 24" long, c/w nuts	1	—	C	
95402	AS.18329	PIPE, tank to bulkhead fitting, 3/8" o/d x 18 SWG x 22" long, c/w nuts	1	—	C	
95403	AS.18330	PIPE, tank to relief valve, 3/8" o/d. x 18 SWG x 18" long, c/w nuts	1	—	C	
95404	AG.18331	PIPE, relief to 3-way, 3/8" o/d x 18 SWG x 29 1/2" long, c/w nuts	1	—	C	
95405	AS.18332	PIPE, 3-way, to control valve banjo, 3/8" o/d. x 18 SWG x 11" long, c/w nuts	1	—	C	
95406	AS.18333	PIPE, 3-way, to control valve outlet connector, 3/8" o/d x 18 SWG x 3 1/2" long, c/w nuts	1	—	C	
95349	AG.18142	PLATE, roof, spring clip	2	—	C	
95386	HCP.16901	PLUG, 1/2" BSP	1	—	C	
95380	HC.2060	PUMP, fluid	1	—	B	
95345	ALVIS AG.18118	ROOF, plate, assembly	1	—	B	
95396	ALVIS AG.18118	SCREW, self tapping, pipe clip	8	—	C	
95350	ALVIS AG.18118	STOWAGE, bin	1	—	B	
95374	ALVIS AG.18118	STRAP, for cover	5	—	B	
95342	AS.18113	STRUT, support leg	4	—	C	
95341	ALVIS AG.18118	SUPPORT, leg, assembly	4	—	B	
95347	ALVIS AG.18118	TANK, fluid supply, 3 gallons	1	—	B	
95348	ALVIS AG.18118	VALVE, blow, off	1	—	B	
95349	ALVIS AG.18118	VALVE, control (Mechanically operated)	1	—	B	
95349	ALVIS AG.18118	WASHER	15	—	C	

**EQUIPMENT
GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description	No. off	Mati. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	LOCKHEED					
95371	K.19210	WASHER, spring for 1/4" bulkhead fitting	1	—	C	
95372	K.19213	WASHER, spring for 3/8" bulkhead fitting	1	—	C	
95340	ALVIS.AS.18120	WHEEL, and axle, assembly, c/w tyre 14" x 3.9	2	—	A	
	—	TROLLEY BOMB LOADING CONVERSION SET	—	—	—	
		Spares for:-				
	LOCKHEED					
95244	HC.33438	ADAPTOR	5	—	C	
95249	HC.23364	BANJO, 5/16", pipe	4	—	C	
95383	HC.22379	BANJO, 3/8", pipe	1	—	C	
95253	HC.1218	BOLT, banjo	5	—	C	
95323	ALVIS.AS.18233	BRACKET, Avery coupling	1	—	B	
95324	AS.18234	BRIDGE, protector	1	—	B	
	AS.18239	BRIDGE, protector (Made from AS.17724, Ref. 95339 with one 9/32" hole)	1	—	B	
	LOCKHEED					
27M/8832	AVA.64/B	CAP, blanking, 1/4"	1	—	C	
27M/8775	AVA.64/C	CAP, blanking, 3/8"	1	—	C	
27M/8899	AVA.59/B	COUPLING, Avery, fixed half, 1/4" pressure line	1	—	C	
27M/8750	AVA.55/C	COUPLING, Avery, fixed half, 3/8" return line	1	—	C	
	HC.20402	FITTING, outlet, 5/16" pipe, 1/4" BSP	3	—	—	
95382	HC.2060	FITTING, outlet, 1/4" pipe, 1/4" BSP	1	—	C	
95257	KL.44521	GASKET, 1/4" BSP	9	—	C	
16L/10800	KL.44524	GASKET, banjo	5	—	C	
27BA/12069	AVX.272	OLIVE, 1/4"	1	—	C	
27BA/8983	AVX.265	OLIVE, 3/8"	1	—	C	
16L/2460	No.1234	PIECE, 3-way	1	—	B	
95330	ALVIS.AS.18361	PIPE, 5/16" o/d. x 42" long	1	COPPER	C	
95331	AS.18362	PIPE, 5/16" o/d. x 15" long	1	COPPER	C	
95332	AS.18363	PIPE, 5/16" o/d. x 13" long	1	COPPER	C	
95333	AS.18364	PIPE, 5/16" o/d. x 11" long	1	COPPER	C	
95334	AS.18365	PIPE, 5/16" o/d. x 9" long	1	COPPER	C	
95335	AS.18366	PIPE, 5/16" o/d. x 5" long	1	COPPER	C	
95336	AS.18367	PIPE, 1/4" o/d. x 12 1/2" long	1	COPPER	C	
95337	AS.18368	PIPE, 3/8" o/d. x 13 1/2" long	1	COPPER	C	
	LOCKHEED					
95338	HC.44873	RESTRICTOR	2	—	A	
16L/9752	18234	TUBE, nut 5/16"	14	—	C	
27M/4699	ADS.174A	TUBE, nut 1/4"	1	—	C	
27M/4310	ADS.174E	TUBE, nut, 3/8"	1	—	C	
	239	TUBE, nut 1/4"	1	—	—	
	31385	TUBE, nut, 3/8"	1	—	—	
95326	HC.44213	VALVE, change-over	1	—	A	
95327	HC.26907	VALVE, non-return	1	—	A	
4F/1714	†	TROLLEY, Mk. 1, pressure cabin testing	1	—	A	
5F/1685	†	TROLLEY, Mk. 1A, servicing, hydraulic	2	—	A	
1C/6239	†	WRENCH, torque for attachment bolts	1	—	A	
1C/6447	†	WRENCH, torque, pilot's canopy	1	—	A	
	JENKS BROS. LTD.					
1L/	EVT.360	WRENCH, torque for explosive bolts canopy to fuselage attachment (Mod.2536)	1	—	—	
25633	AS.17028	YOKE, bar towing	1	—	B	

EQUIPMENT
GROUND AND MAINTENANCE

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Ct. of Equip.	Plate No.
					M.R. L.M.	
	—	TRANSPORTATION EQUIPMENT	—	—	—	
95279	—	BEAM, transportation, fuselage nose (43G/SAL/180)	1	DEAL	8	
95280	—	BEAM, transportation, mid section front fuselage (43G/SAL/180)	1	DEAL	8	
95281	—	BEAM, transportation fuselage, rear section (rear) (43G/SAL/181)	1	DEAL	8	
95282	—	BEAM, transportation fuselage, rear section (front) (43G/SAL/181)	1	DEAL	8	
95285	—	BEAM, transportation fuselage, mid section (rear) (43G/SAL/182)	1	ASH	8	
95289	—	BEAM, transportation, main plane outer port (43G/SAL/194)	1	ASH	8	
95290	—	BEAM, transportation, main plane outer starboard (43G/SAL/194)	1	ASH	8	
95291	—	BEAM, transportation (support blocks) main plane (43G/SAL/195)	2	R.S.J.	8	
95286	—	BLOCK, transportation, main plane (43G/SAL/185)	2	ASH	8	
95287	—	BLOCK, transportation, main plane, rear (43G/SAL/185)	2	ASH	8	
95288	—	BLOCK, transportation, main plane centre (43G/SAL/185)	2	ASH	8	
95598	—	CLAMP, plate front, No. 2 universal trestle front and mid section transportation (41G/SAL/297)	1 SET	MS	8	
95599	—	CLAMP, plate, rear (41G/SAL/298)	1 SET	MS	8	
95283	—	PEDESTAL, transportation, tailplane (43G/SAL/183)	1	MS	8	
95284	—	PEDESTAL, transportation, tailplane (43G/SAL/184)	2	MS	8	

NOTE: The number off shown is the
quantity required for the transportation
of one aircraft

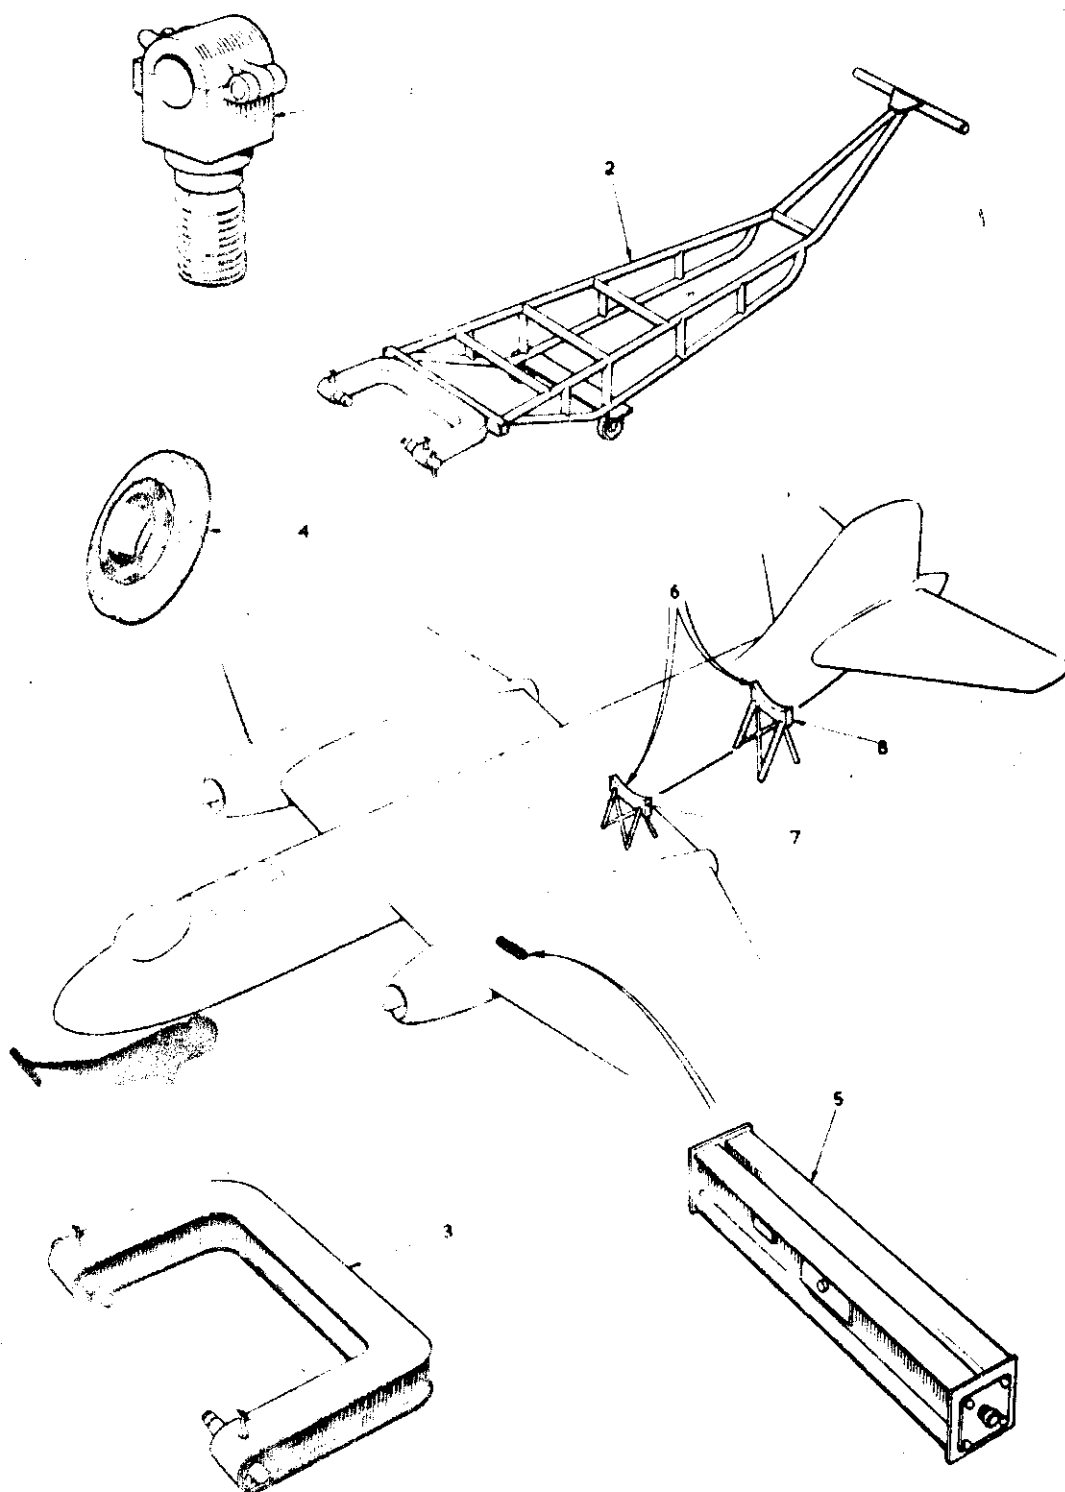 


FIG.1. EQUIPMENT - GROUND AND MAINTENANCE

A

SECT. PA

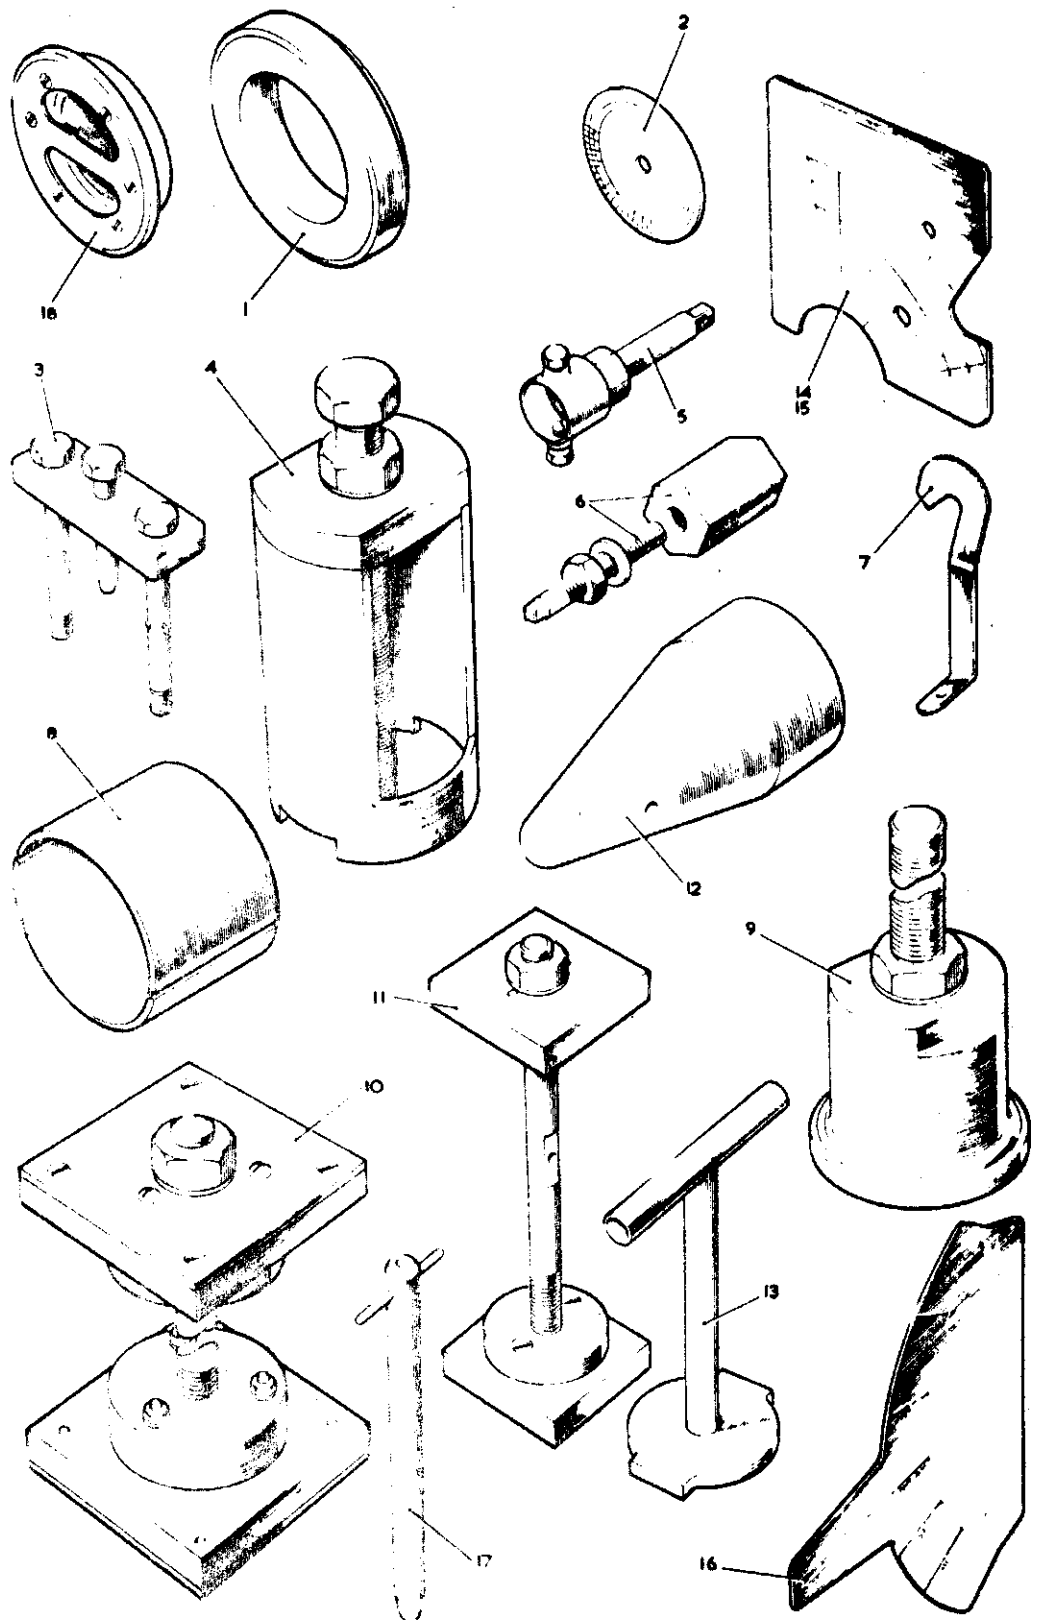 


FIG.2 EQUIPMENT GROUND AND MAINTENANCE

A.

SECT PA


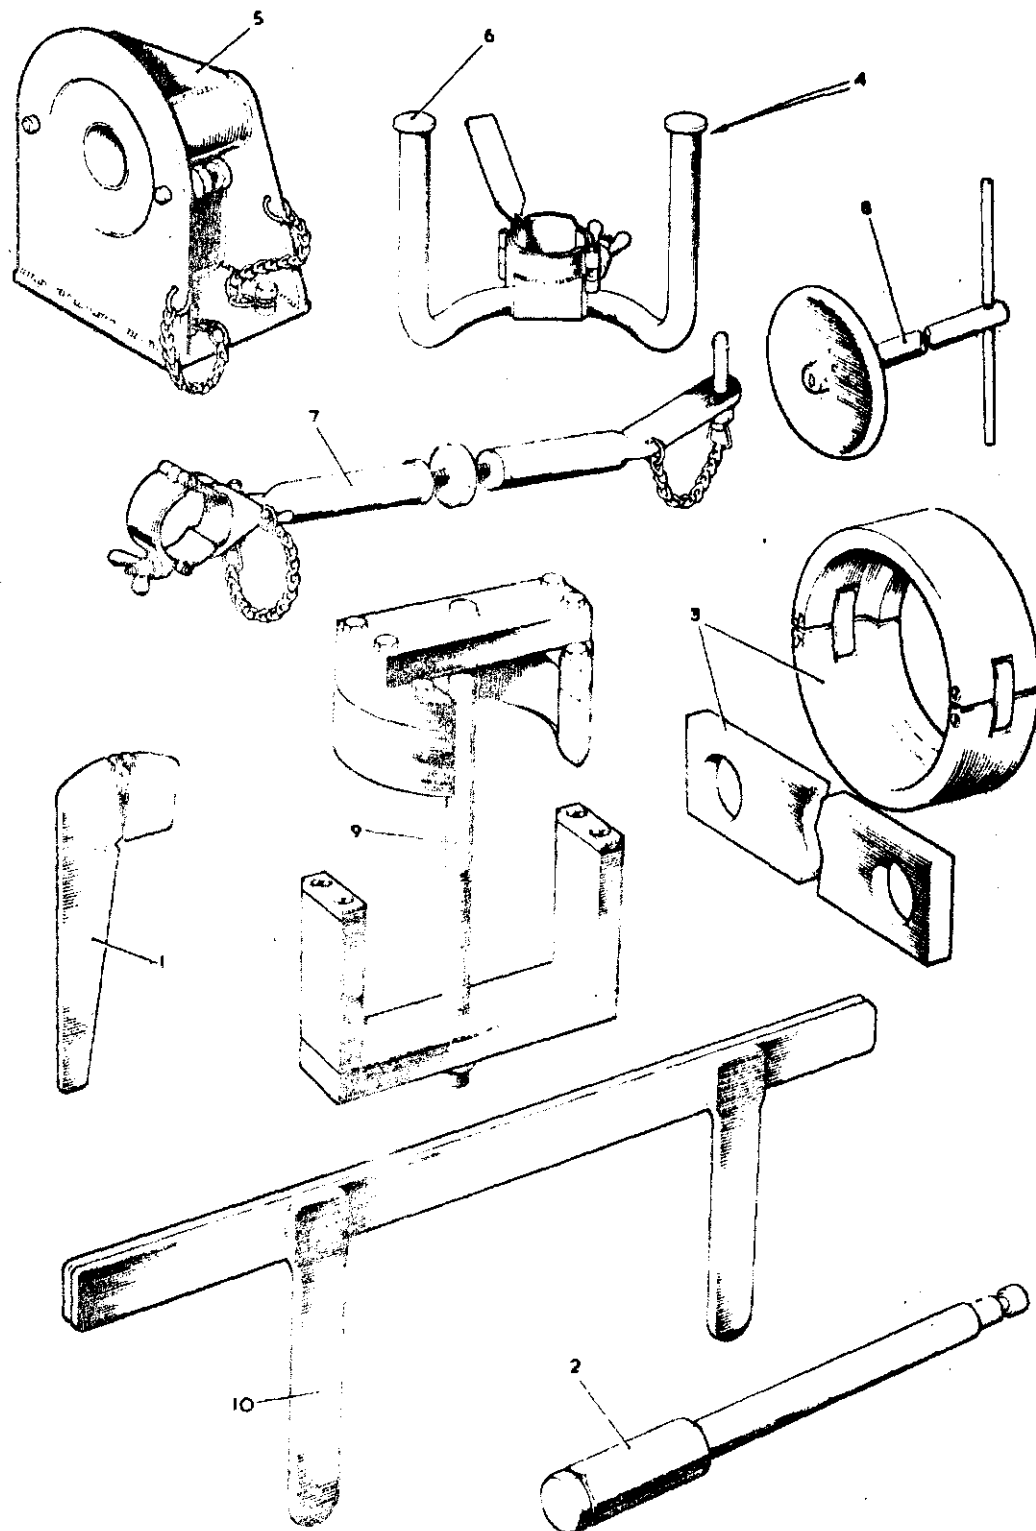 


FIG 3 EQUIPMENT GROUND AND MAINTENANCE


A.

SECT 9A

 STANDARD MAIN

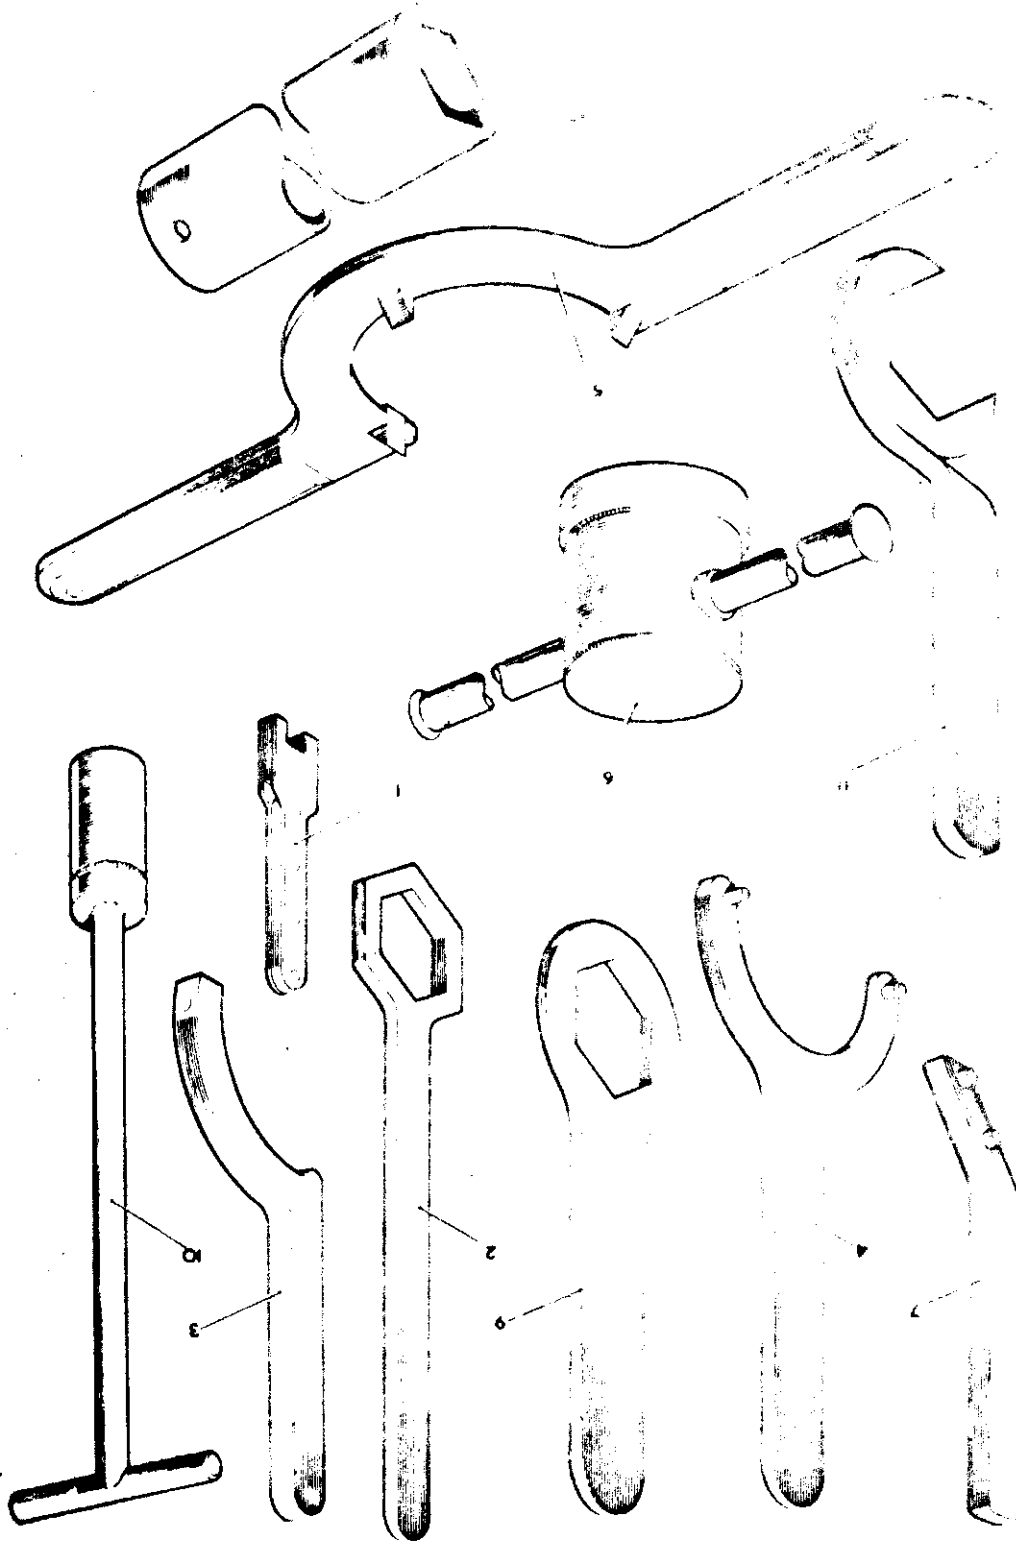

AND MAIN

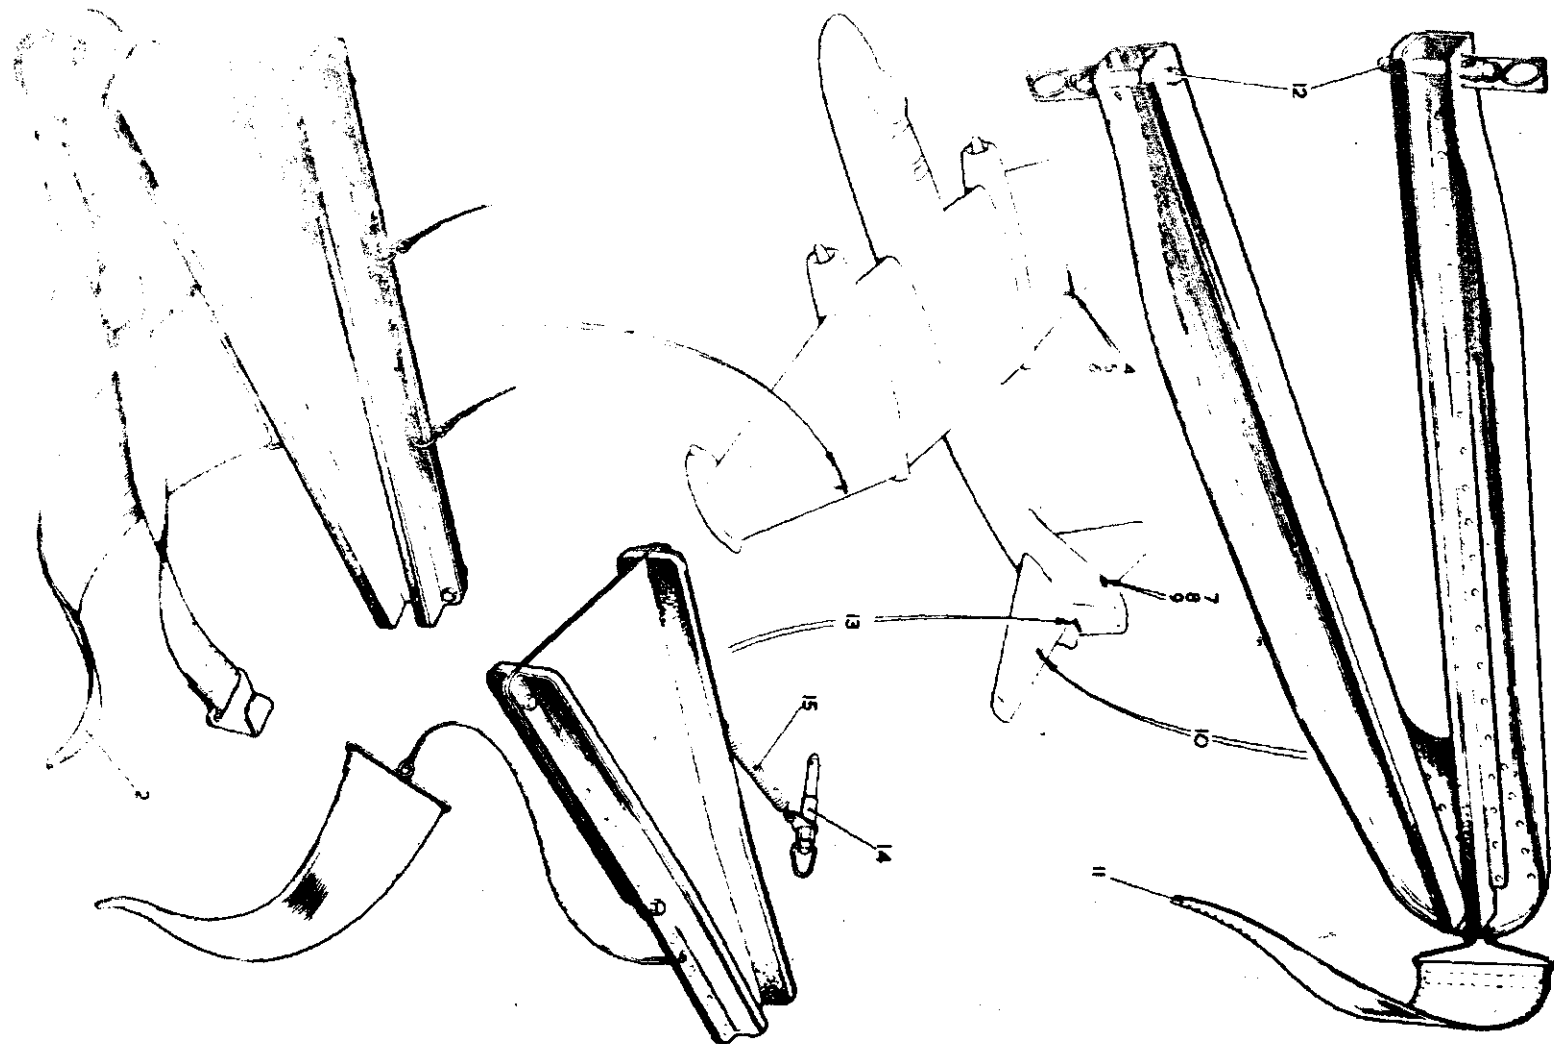 

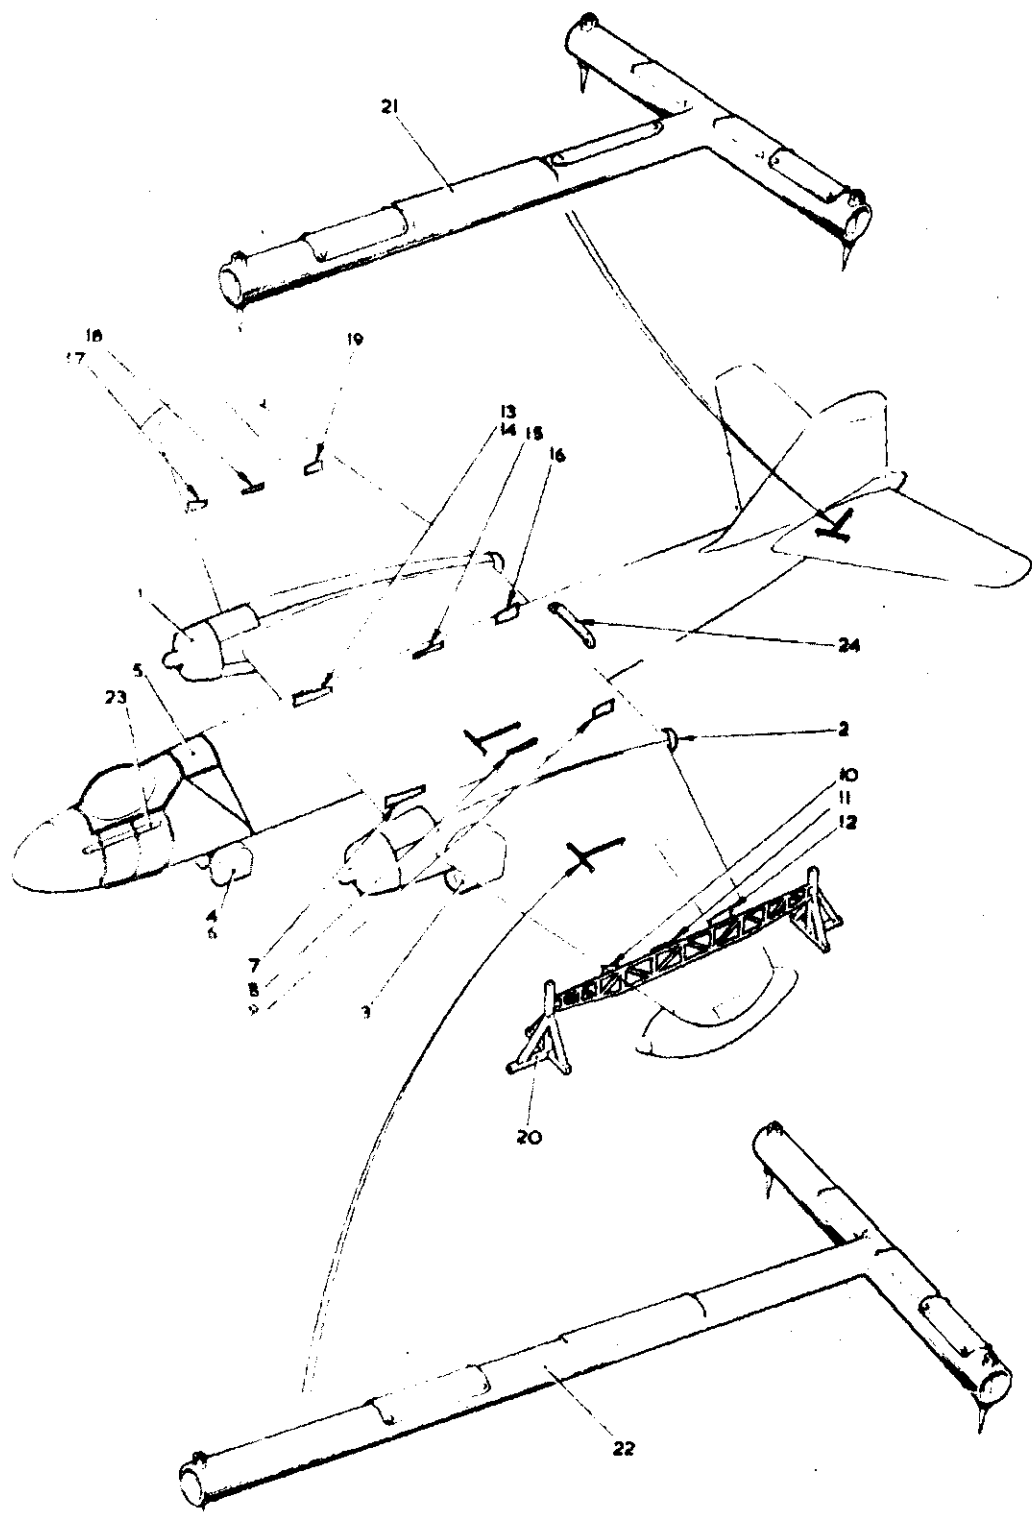 


FIG. 6 EQUIPMENT - GROUND AND MAINTENANCE

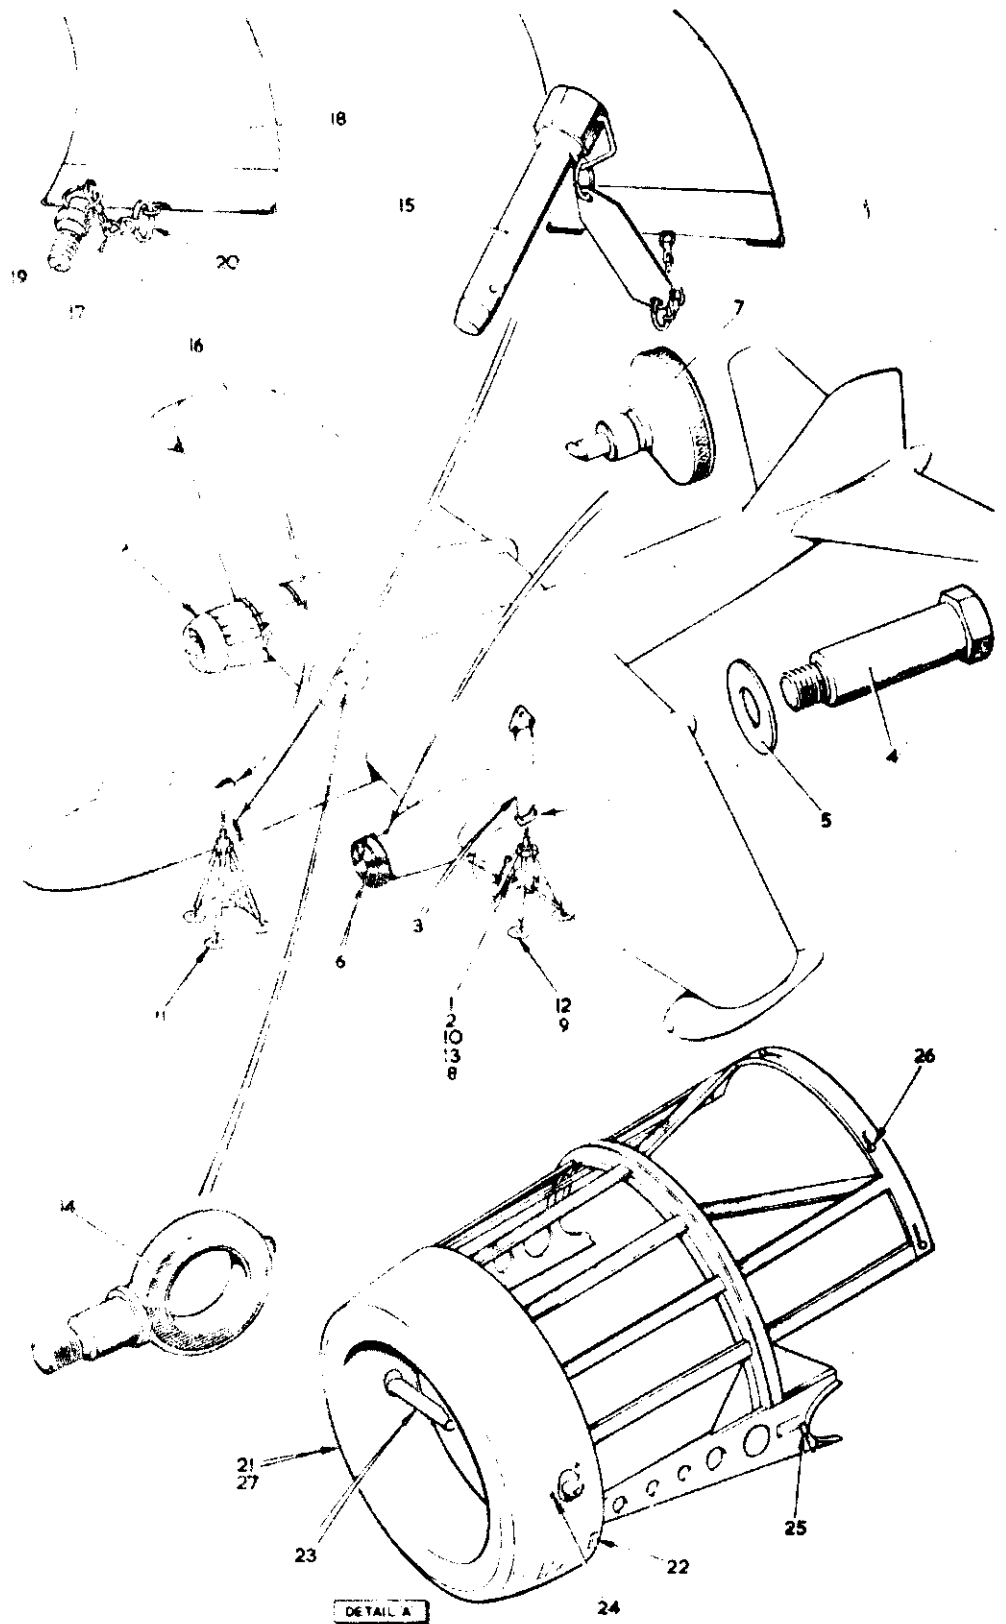 


FIG 7. EQUIPMENT - GROUND AND MAINTENANCE

A.

SECT. PA.

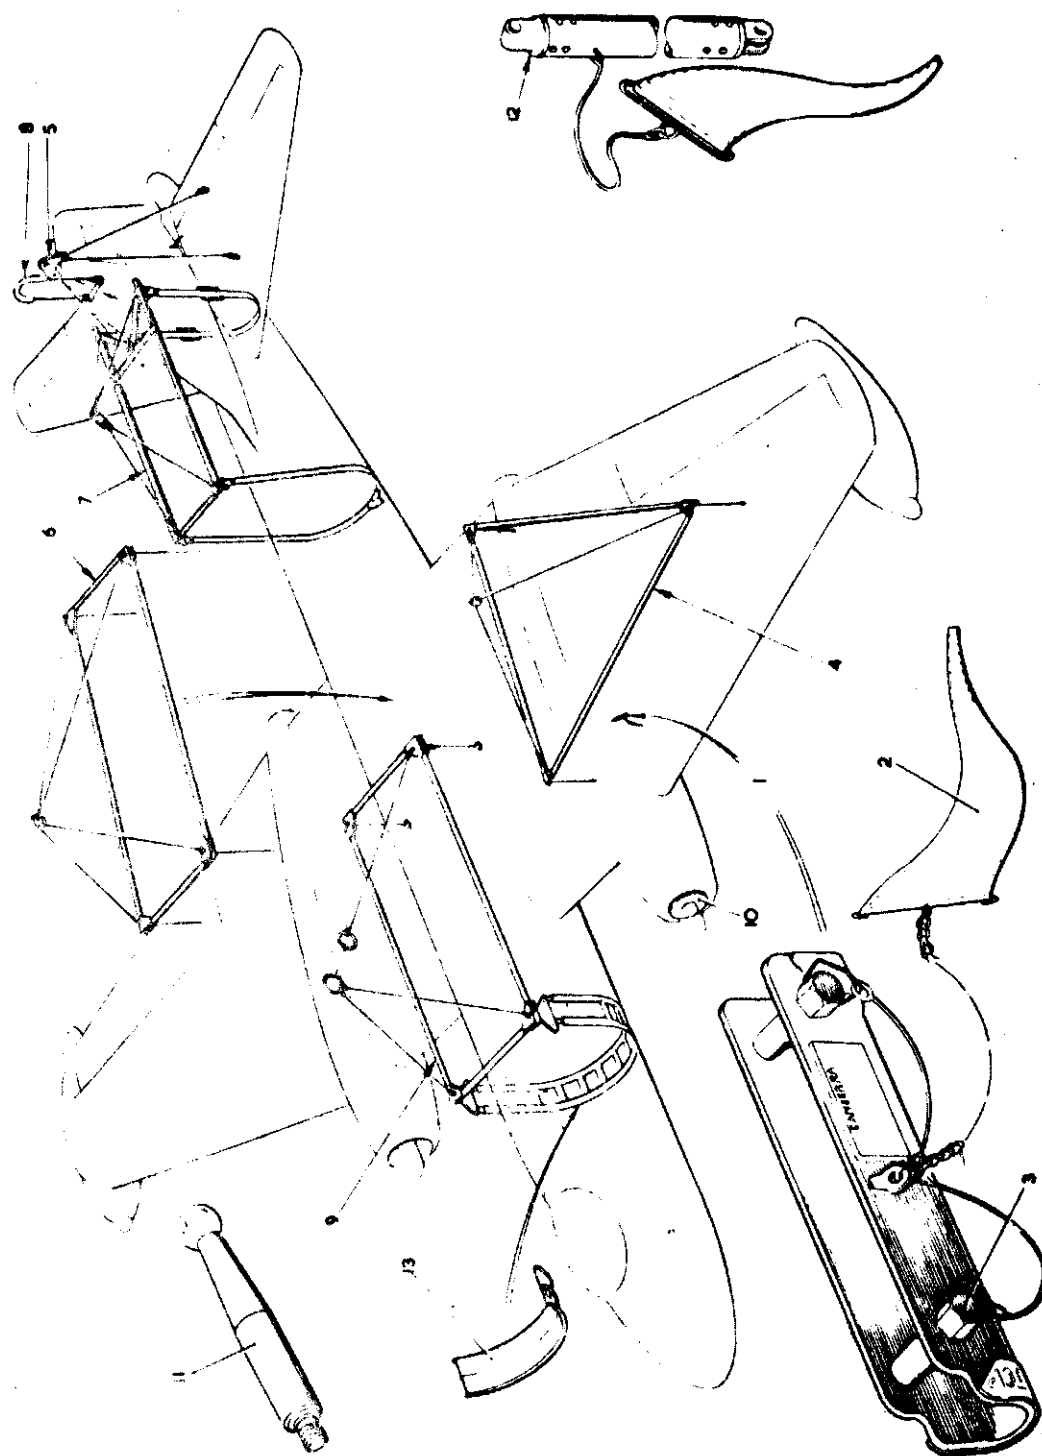 


FIG.8. EQUIPMENT -GROUND AND MAINTENANCE

A.

SECT PA