



PART 5

ILLUSTRATIONS

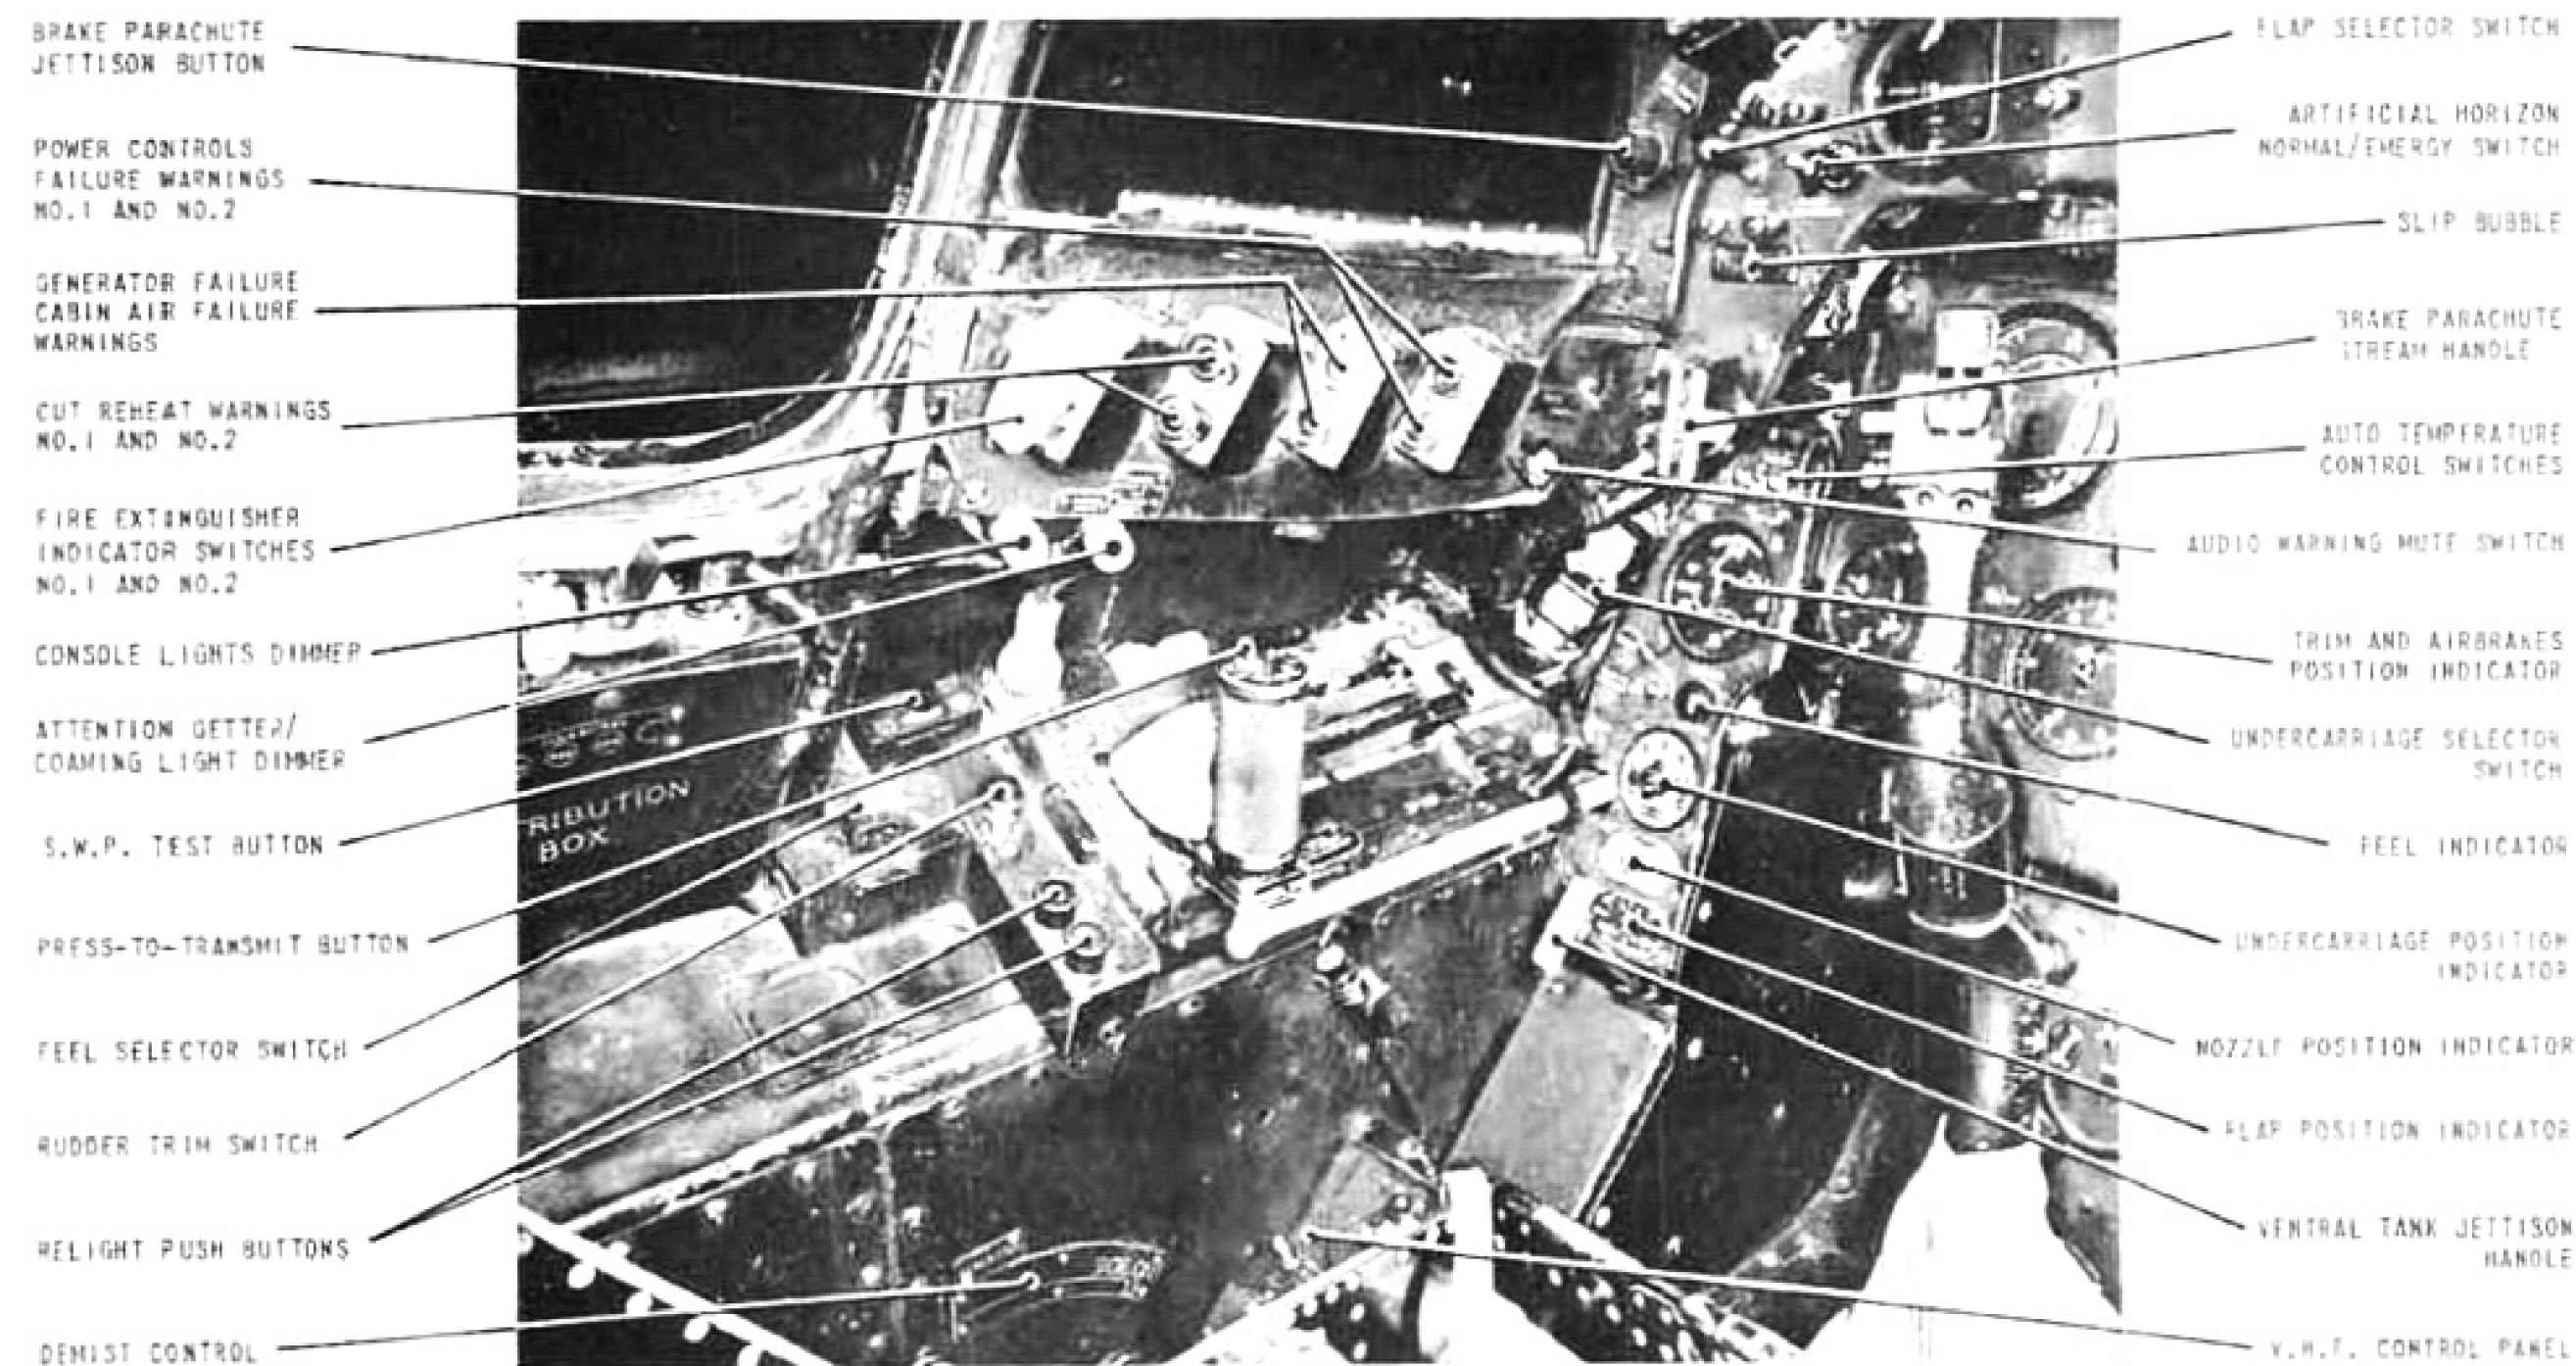

COCKPIT - PORT SIDE XA 487

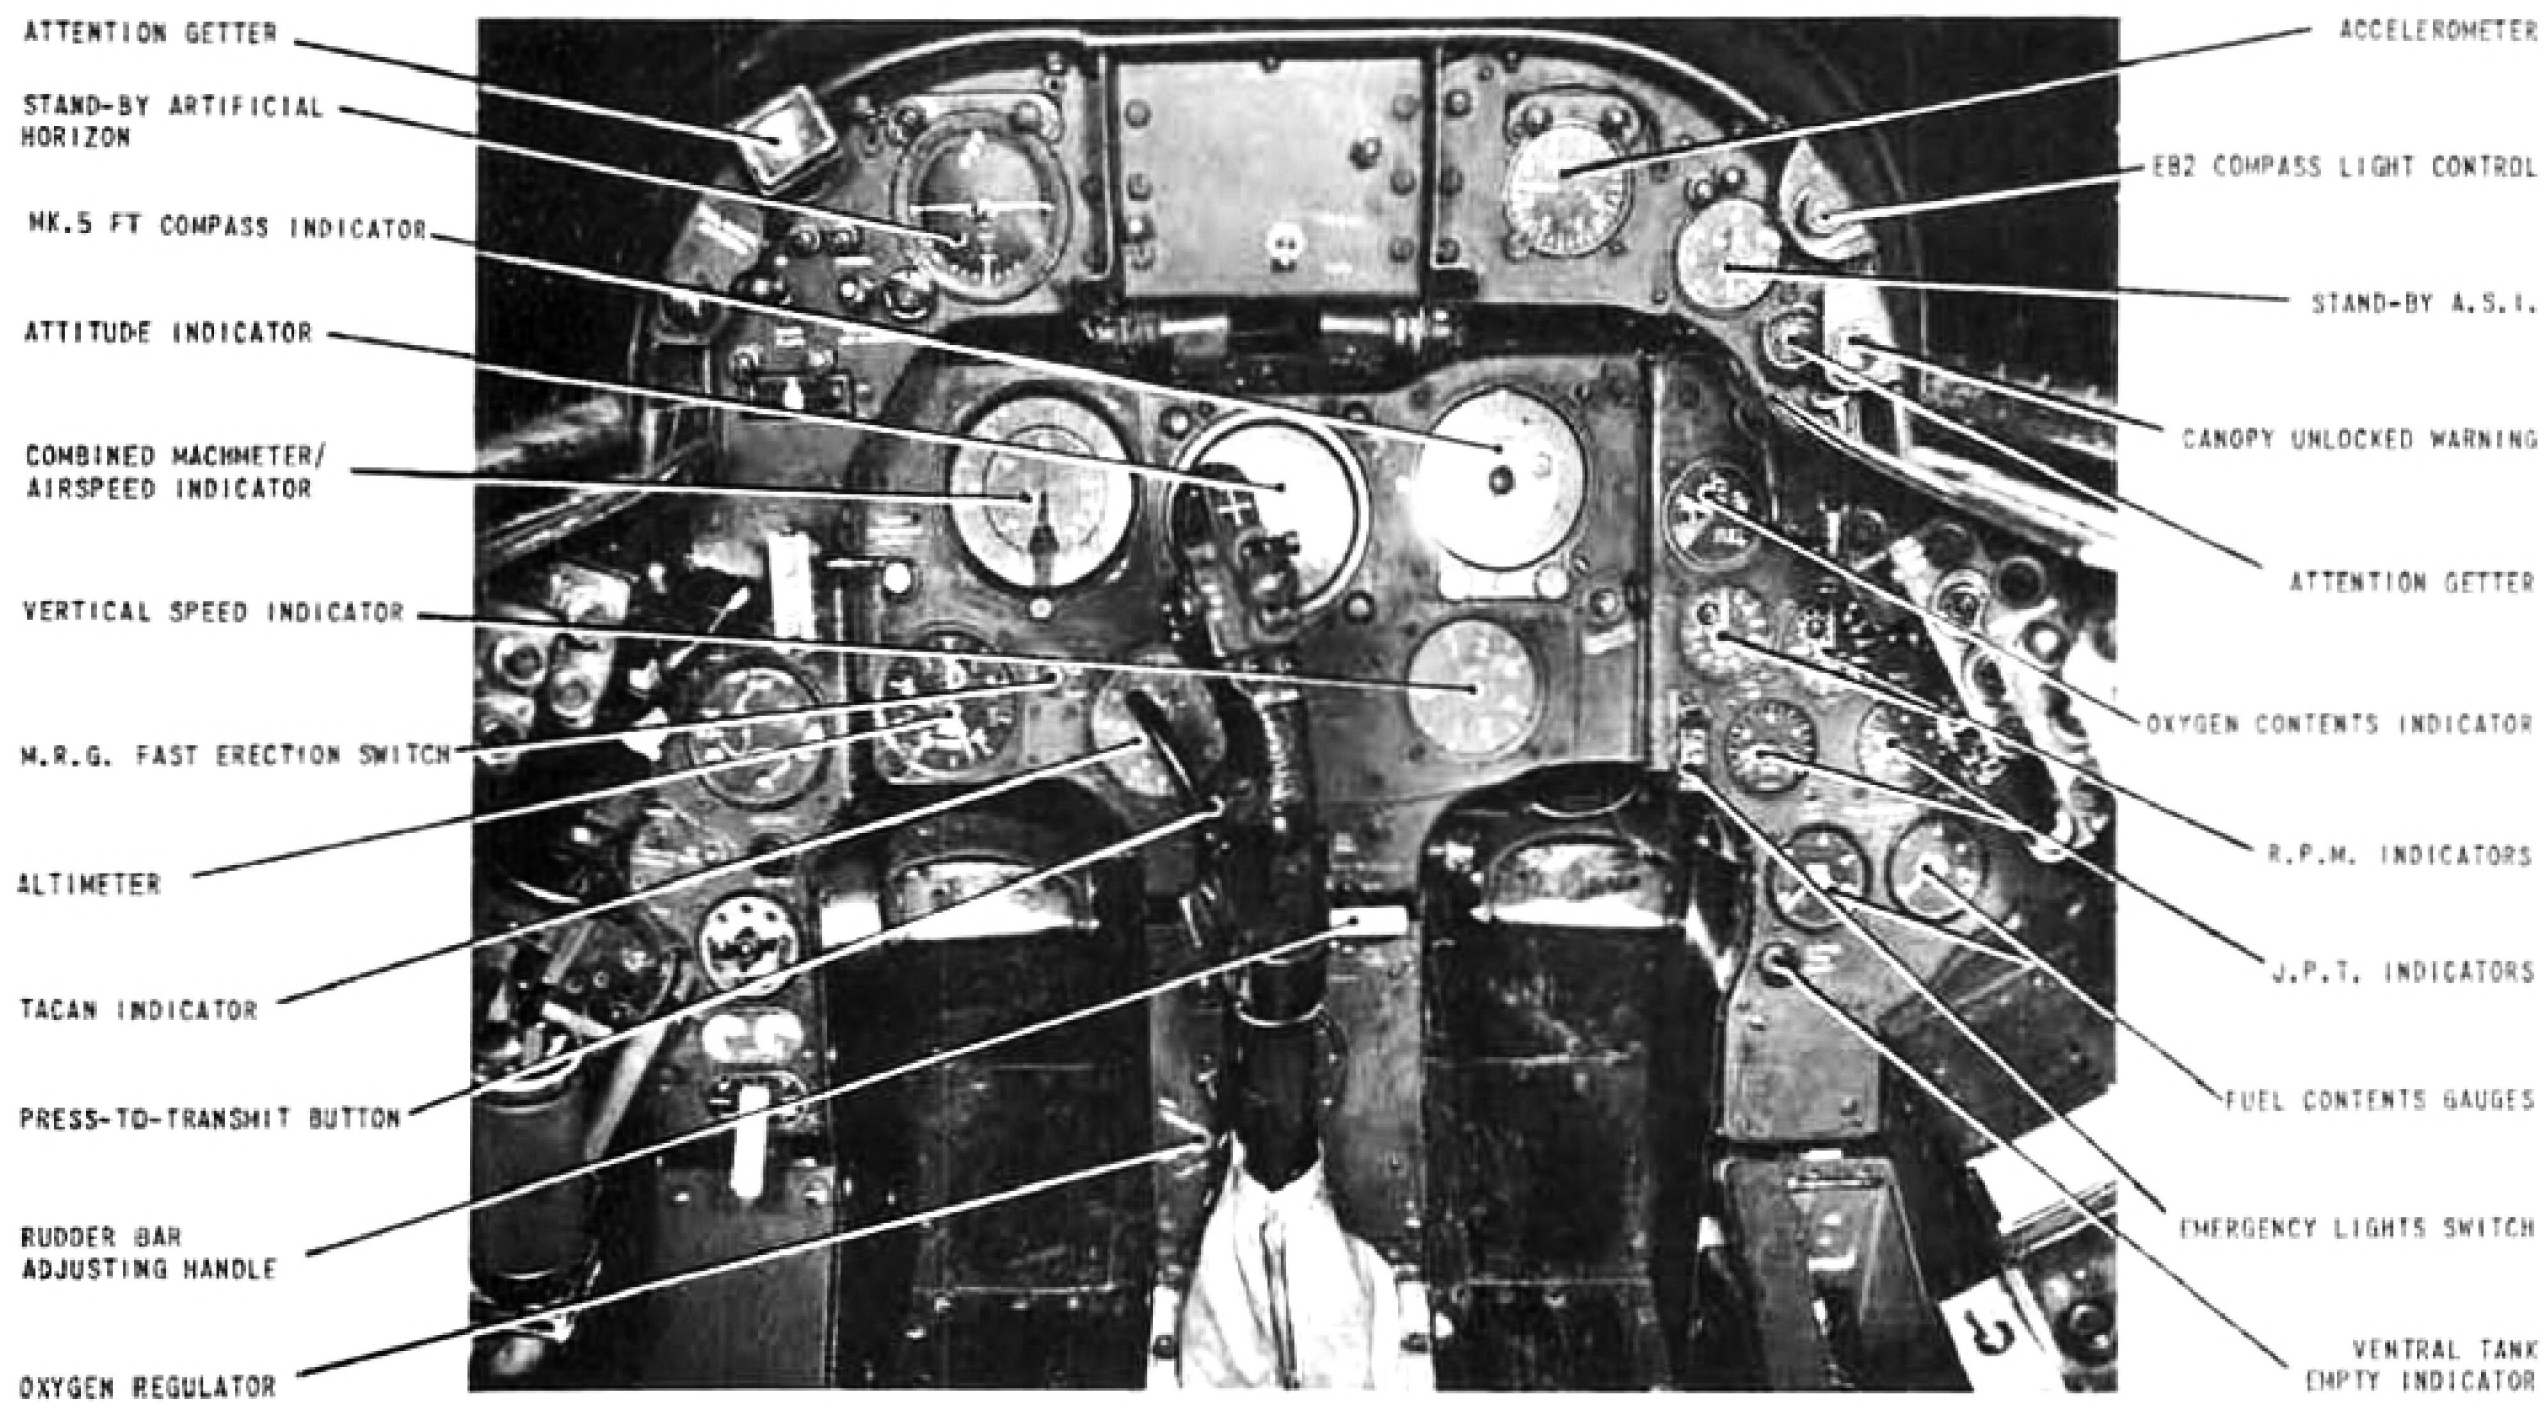

COCKPIT - FORWARD VIEW XA 487

AIR TURBINE UNDERSPEED/
ALTERNATOR FAIL WARNINGS

OIL PRESSURE WARNING
NO.1 AND NO.2

FUEL PRESSURE WARNINGS
NO.1 AND NO.2

OXYGEN FLOW INDICATOR

REHEAT TEMP. TRIP WARNING
NO.1 AND NO.2

MAIN INSTRUMENT PANEL/AUX.
WARNING PANEL/STARBOARD
CONSOLE LIGHTS DIMMER

BATTERY ISOLATING SWITCH

IGNITION SWITCHES
NO.1 AND NO.2

CABIN ALTIMETER

CABIN AIR SWITCH

COCKPIT TEMPERATURE SELECTOR

TACAN CONTROL UNIT

SEAT ADJUSTMENT SWITCH

ENGINE START MASTER SWITCHES
NO.1 AND NO.2

ENGINE START PUSH BUTTONS
NO.1 AND NO.2

NESA HEATER SWITCH

VENT VALVE AND PITOT HEATER
SWITCH

PT. AND STBD.
WINDSCREEN HEATER
SWITCH

CANOPY BLOWER SWITCH

ALTERNATOR AND GENERATOR
FIELD CIRCUIT BREAKERS

INSTRUMENT MASTER SWITCH

STANDBY INVERTER MANUAL
SELECTOR SWITCH

EXTERNAL LIGHTS
MASTER SWITCH

BRAKE PRESSURE GAUGE

NAVIGATION LIGHTS SWITCH

FUEL PUMPS/COCKS SWITCHES

TELEBRIEFING SWITCH
AND INDICATOR

