

EQUIPMENT AIRCRAFT - FATIGUE METER - INSTALLATION

Ref. No.	Part No.	Description	No. Off	Material Specification	M.R. Class of Store	Plate No.
5CZ/430	D. 233619	METER, FATIGUE, ASSEMBLY	-	-		
	-	Block, terminal	1	-	B.	
	B. 221106	Cable, FM. 1, group (See cable chart)	1	-		
	B. 216904	Cable, FM. 2, group (See cable chart)	1	-		
	F. 216906	Bracket, fuseholder	1	L. 72		
	A. 216905	Cable, FM. 3, group (See cable chart)	1	-		
6A/9668	B. 233682	Landing, for access panel assembly	-	-		
	B. 233766	Landing	1	-		
	-	Meter, fatigue Mk. 15 (Mod 1273)	1	-	A.	
	A. 223683	Panel, access	1	L. 72	C.	
	10087	Stud, earthing point	1	-	C.	
	1919	Std. 1341/3	Washer	1	L. 4, L.34 or L. 17	
4613	Std. 1335/C/18	Washer	1	L. 4, L.34 or L. 17	C.	
4659	Std. 1335/C/22	Washer	1	L. 4, L.34 or L. 17	C.	
10666	Std. 2008/C/325	Washer, tab (Mod. 951)	2	S. 84	C.	

EQUIPMENT AIRCRAFT - FATIGUE METER - INSTALLATION

Ref. No.	Part No.	Description	No. Off	Material Specification	M.R. Class of Store	Plate No.				
							1	2	3	4
28D/1010658	A25.1B	Bolt, 4 B.A.	...	...	...	...	-	-	-	-
28D/1008149	A25.2B	Bolt, 4 B.A.	...	...	...	...	-	-	-	-
28D/9133011	A25.2C	Bolt, 2 B.A.	...	...	...	...	-	-	-	-
28M/1006604	A.27.BT	Nut, 2 B.A.	...	...	...	...	-	-	-	-
28M/1011467	A27.ES	Nut, 1/4" B.S.F.	...	...	...	...	-	-	-	-
28M/10326	AGS.2002.A1	Nut, 6 B.A.	...	...	...	...	-	-	-	-
28M/10327	AGS.2002.B1	Nut, 4 B.A.	...	...	...	...	-	-	-	-
28M/10328	AGS.2002.C1	Nut, 2 B.A.	...	...	...	...	-	-	-	-
28M/7002430	AGS.2002.E1	Nut, 1/4" B.S.F.	...	...	...	...	-	-	-	-
28S/1200062	A33.A20	Screw, 6 B.A.	...	...	...	...	-	-	-	-
28W/9419473	SP.15A	Washer, 6 B.A.	...	...	...	...	-	-	-	-
28W/9419474	SP.15B	Washer, 4 B.A.	...	...	...	...	-	-	-	-
28W/9419486	SP.16B	Washer, 4 B.A.	...	...	...	...	-	-	-	-
28W/9419404	SP.16C	Washer, 2 B.A.	...	...	...	...	-	-	-	-



This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.