

## TABLE OF CONTENTS

## Chapter 72 - Engine

72-0	Engine - Not Applicable to this Catalogue
72-0-1	Engine Installation Fittings
72-0-2	Helicoil Wire Thread Inserts
72-1	Air Intake and Front Bearing Housing
72-2	Compressor Bleed Valve
72-3	Compressor Casings and Stators
72-4	Compressor Rotors and Shafts
72-5	Compressor Outlet Casings
72-6	Internal Wheelcase and Centre Bearing
72-7-1	External Wheelcase, Sump and Filters
72-7-2	Drive - External Wheelcase and Governor Pump
72-7-3	Oil Pumps
72-9	Drive - Generator and Synchroniser Alternator
72-10	Drive - Starter
R 72-11	Nozzle Box and Rear Bearing Housing
R	
72-11-3	Cooling Air Manifold (Rear Half)
72-12	Turbine Wheels and Shaft
72-13	Flame Tubes and Air Casing
72-14	Exhaust Unit
72-15	Fireproof Bulkhead - Not Applicable to this Catalogue
72-16	Starter Fairing
72-18	Oil Cooler
72-19	Governor Pump - Intake Guide Vanes Ram
72-20	Intake Guide Vanes Ram and Bleed Valve Control Unit
72-21	Front Suspension
72-22	Electrical Harness and Junction Box
72-23-1	Air Pipes and Fittings
72-23-2	Oil Pipes and Fittings
72-24	Viscosity Compensator, I.G.V. Ram Governor Pump

S-Av  
524  
525 Ct  
CQ/2