


6A/1825 - ~~0122ABD4~~


PARTS LIST MODEL S.104 FORM 5

Ref. No.	Description	Part No.	No. Off	Estimated requirement for 100 instruments
1	Cover Assembly	Specify Code No.	1	5
2	Sealing Screw	168862	1	10
3	Sealing Cup	168013	1	50
4	Glass	Specify Code No.	1	5
5	Bezel Ring	166781	1	10
6	Scale Plate	Specify Code No.	1	6
7	Shield	166787	1	6
8	Nut 6 B.A.	112243	4	—
9	Lockwasher 6 B.A.	156976	4	—
10	Screw 10 B.A. $\times \frac{3}{8}$ " (Spool)	150330	As required	—
11	Lockwasher 10 B.A. (Spool)	153367	As required	—
12	Pole Piece	Specify Code No.	1	—
13	Spools	Specify Code No.	As required	5 sets
14	Magnet Clamp	166975	1	—
15	Screw 6 B.A. Ch. Hd.	161865	1	—
16	Mounting Pillar	166964	1	6
17	Base	166928	1	1
18	Resistance Cover	162619	1	5
19	Drive Rivet	156575	2	10
20	Screw and Washer Assembly	157703	2	8
21	Mounting Pillar	166963	2	6
22	Magnet	156711	1	—
23	Lockwasher 10 B.A. Black (Scale)	159306	2	10
	Lockwasher 10 B.A. White (Scale)	153367	2	10
24	Screw 10 B.A. Black (Scale)	156396	2	10
	Screw 10 B.A. White (Scale)	158245	2	10
25	Screw 6 B.A. C'sk (Cover)	150146	2	20
30	Nut 12 B.A.	155125	5	—
31	Lockwasher 12 B.A.	155830	5	—
32	Pointer Stop L.H.	164703	1	10
33	Pointer Stop R.H.	164702	1	10
34	Bridge Assembly Top	164279	1	6
35	Magnet Shunt Assembly	Specify Code No.	1	—
36	Bridge Insulating Washer	154398	2	10
37	Bridge Assembly Bottom	161014	1	6
38	Bridge Insulating Bush	154397	As required	10
39	Core Std.	155580	1	—
40	Balance Weights	Specify Code No. 158012	As required	As required
41	Moving Element c/w Pointer, Springs and Balance Weights	Specify Code No. 171449	1	5
42	Core Clamp	157521	1	—
43	Washer 12 B.A. Large	156596	1	—
44	Spring	Specify Code No.	2	—
45	Pivot Nut	153320	2	10
46	Pointer Mounted	Specify Code No.	1	5
50	Core Screw 12 B.A.	164277	1	—
51	Magnet Shunt. Iron	164268	As required	—
52	Magnet Shunt. Thin	164267	As required	—
53	Magnet Shunt. Thick	164266	As required	—
54	Core Tapped	164278	1	—
55	Spacer Mounted	155922	1	—
56	Magnet Shunt Std.	155556	1	—

The items printed in blue should be stocked by the customer in order to cater for conditions arising due to careless handling or accidental damage. They are quoted for this purpose only and do not form part of a normal overhaul requirement.

NOTE : SANGAMO WESTON Code Number appears on front of Dial.

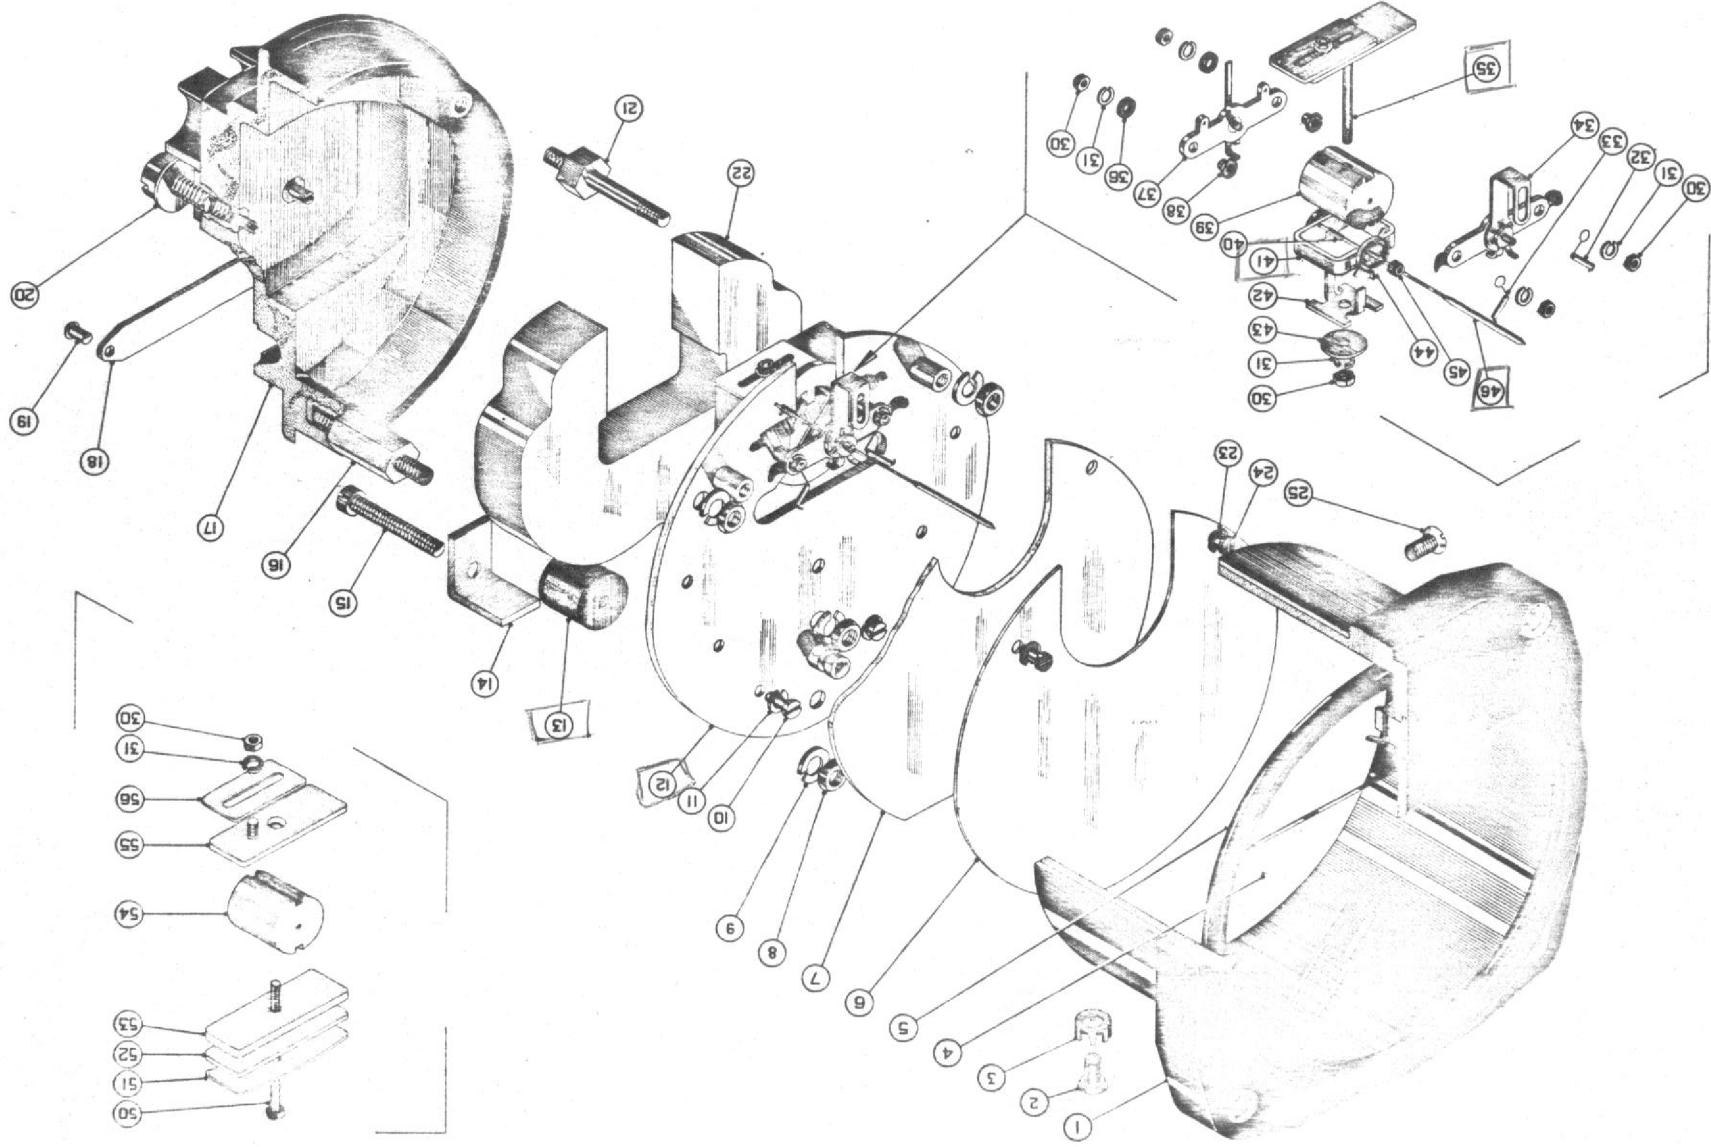

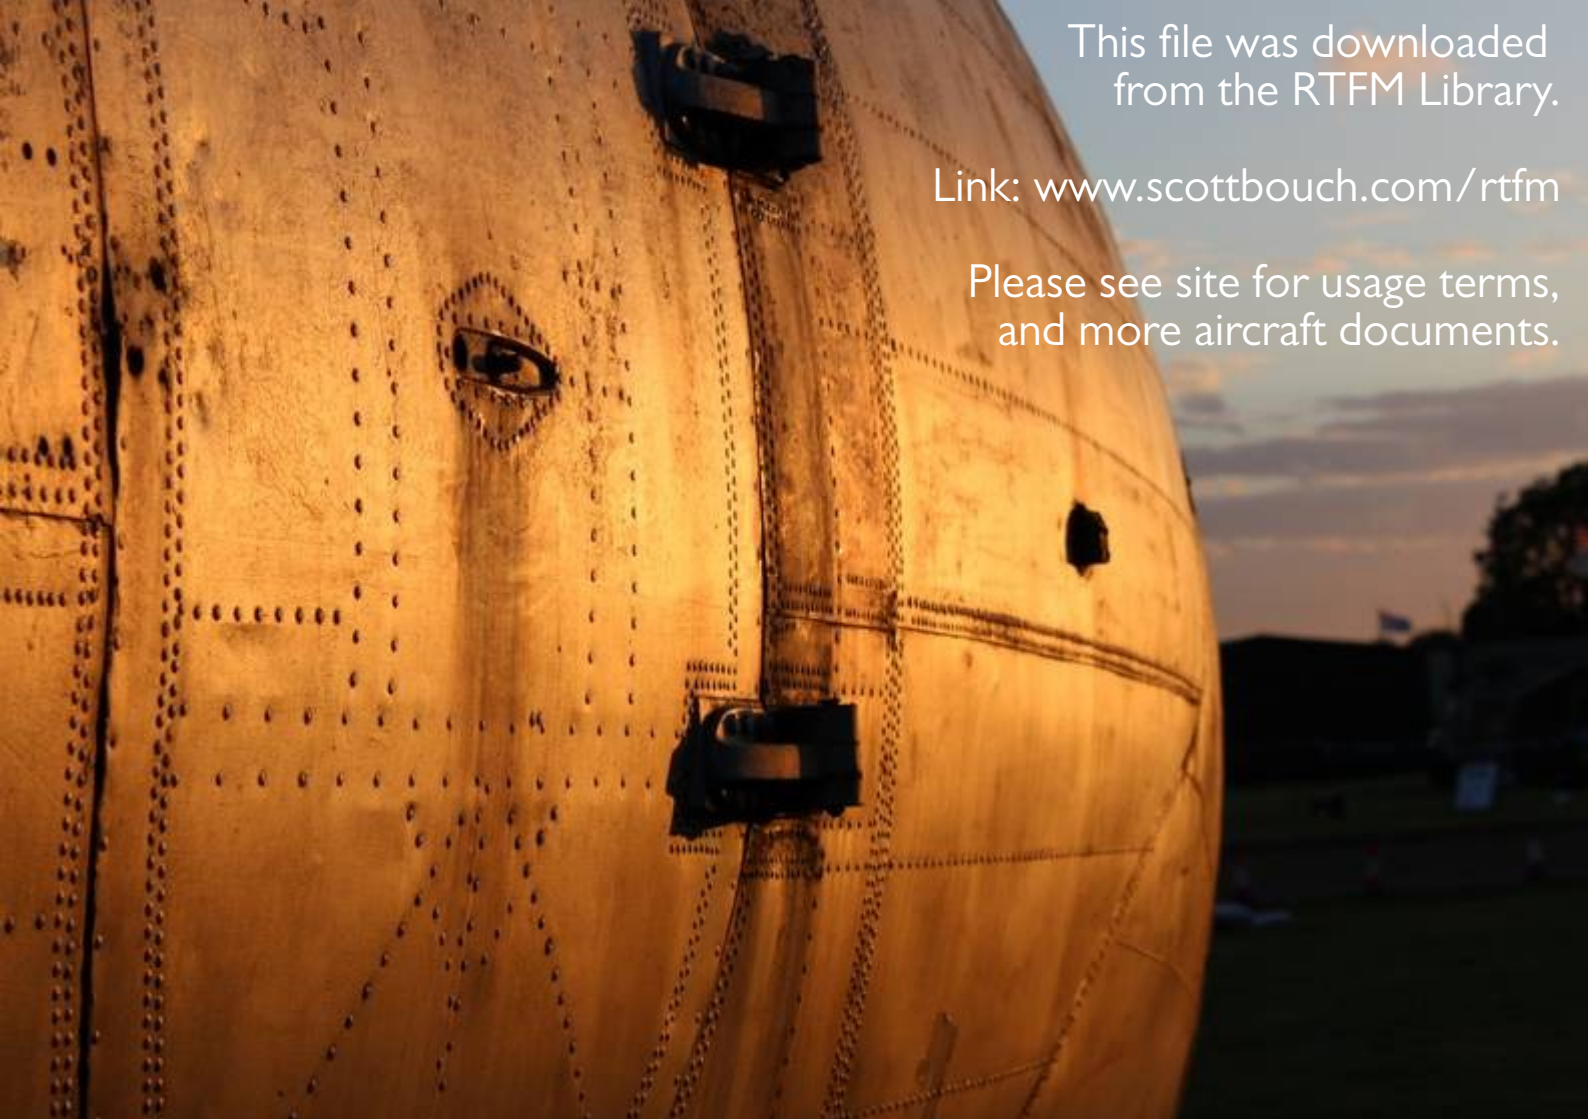

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.