

CHAPTER 5

ALIGHTING GEAR

RESTRICTED

Chapter 5 ALIGHTING GEAR

◀ Main and nose undercarriages

1. The types and part numbers of the main and nose undercarriage units are detailed in the 'Leading Particulars' of the manual (A.P. 101B-0400-series) appropriate to the mark of aircraft.

Alighting gear repair

2. Repair instructions and information for fits and clearances of the undercarriage units are detailed in:-

A.P. 1803P, Vol. 2 - Main undercarriage
unit

A.P. 1803E, Vol. 2 - Nose undercarriage
unit ▶

Attachment points

3. Information on fits, clearances and wear limits for the main and nose undercarriage attachment points is given in Chapters 2 and 3 respectively of this Volume.

This file was downloaded
from the RTFM Library.
Link: www.scottbouch.com/rtfm
Please see site for usage terms,
and more aircraft documents.

