

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
EA3.81.5	ELECTRICAL EQUIPMENT IN FRONT FUSELAGE, ASSEMBLY (PRE MOD.4937) (PRE MOD.5204)	—	—	
EA3.81.7005	ELECTRICAL EQUIPMENT IN FRONT FUSELAGE, ASSEMBLY (MOD.4937 — S.O.O.) (PRE MOD.5204)	—	—	
EA3.81.8005	ELECTRICAL EQUIPMENT IN FRONT FUSELAGE, ASSEMBLY (MOD.5204)	—	—	
EA3.81.6263	Spares for: · BOX, DISTRIBUTION, No.1 ASSEMBLY (Used on aircraft not embodying Mod.272) (Alt.R60/118)	1	—	
EA3.81.7159	· BOX, DISTRIBUTION, No.1, ASSEMBLY (PRE MOD.4937) (PRE MOD.5204)	1	—	
EA3.81.6671	· BOX, DISTRIBUTION, No.1, ASSEMBLY (MOD.4937 — S.O.O.) (PRE MOD.5204)	1	—	
EA3.81.8147	· BOX, DISTRIBUTION, No.1, ASSEMBLY (MOD.5204) Spares for:	1	—	EB1/1
EA3.81.1383	· BLOCK, fuse, 4 way (Pre Mod.4937) (Pre Mod.5204)	1	—	
EA3.81.7265	· BLOCK, fuse, 4 way (Mod.4937 — S.O.O.) (Mod.5204)	1	—	EB1/2
EA3.81.1385	· BLOCK, fuse, 4 way (Pre Mod.4937) (Pre Mod.5204)	1	—	
EA3.81.7269	· BLOCK, fuse, 4 way (Mod.4937 — S.O.O.) (Mod.5204) Attaching parts for EA3.81.1383, EA3.81.7265, EA3.81.1385 and EA3.81.7269:	1	—	EB1/3
A31B8	· Screw, 4BA	2	—	EB1/4
SP47B	· Washer, spring, 4BA	2	—	EB1/5
AS2651	· BLOCK, terminal, 2 way	1	—	EB1/6
703-1-00249	· BLOCK, terminal, 20 way Attaching parts for 703-1-00249:	10	—	EB1/7
A31B24	· Screw, cheese head, 4BA	2	—	EB1/8
EA3.81.2917	· BOX, shell	1	—	EB1/9
EA3.81.225	· BRACKET, fuse block mounting Attaching parts for EA3.81.225:	1	—	EB1/10
A31B16	· Screw, 4BA	2	—	EB1/11
EA3.81.801/1	· CABLE, ASSEMBLY, F18	1	—	
EA3.81.802/2	· CABLE, ASSEMBLY, F25	1	—	
EA3.81.2409/2	· CABLE, ASSEMBLY, F26	1	—	
EA3.81.804/2	· CABLE, ASSEMBLY, F27	1	—	
EA3.81.805/2	· CABLE, ASSEMBLY, F28	1	—	
EA3.81.806/2	· CABLE, ASSEMBLY, F29	1	—	
EA3.81.807/2	· CABLE, ASSEMBLY, F64 (PRE MOD.5204)	1	—	
EA3.81.6145	· CABLE, ASSEMBLY, F64 (MOD.5204)	1	—	
EA3.81.808/2	· CABLE, ASSEMBLY, F66	1	—	
EA3.81.809/2	· CABLE, ASSEMBLY, F72 (PRE MOD.5204)	1	—	
EA3.81.8171	· CABLE, ASSEMBLY, F72 (MOD.5204)	1	—	
508-1-03442-003	· CAP, blanking (Pre Mod.4937) (Pre Mod.5204)	2	—	EB1/12
Z115331	· CAPACITOR, 0.25μF	2	—	EB1/13
Z115333	· CAPACITOR	3	—	EB1/14
EA2.81.795	· CARRIER, fuse spare Attaching parts for EA2.81.795:	1	—	EB1/15
A27AP	· Nut, 6BA	2	—	EB1/16
A31A12	· Screw, cheese head, 6BA	2	—	EB1/17

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Mati. Spec.	Plate No.
AS491/37	. . . CLIP, capacitor retaining	1	—	EB1/18
AS491/33	. . . CLIP, capacitor retaining (Mod.5204)	1	—	EB1/19
AGS2001B1	. . . Attaching parts for AS491/33 and AS491/37:			
A31B12	. . . Nut, stiff, 4BA	2	—	EB1/20
	. . . Screw, 4BA	2	—	EB1/21
AS2664	. . . COVER	1	—	EB1/21A
EA3.81.215	. . . COVER, assembly	1	—	EB1/22
	. . . Attaching parts for EA3.81.215:			
EEAS117/1	. . . Screw, 4BA	6	—	EB1/23
EEAS28/2CU	. . . Washer, special	12	DTD124	EB1/24
EEAS42	. . . Washer, leather	6	—	EB1/25
EA1.81.488	. . . DISC, blanking	1	—	EB1/26
	. . . Attaching parts for EA1.81.488:			
R 508-2-07657-003	. . . Nut, union	1	—	EB1/27
AS2475	. . . FERRULE, adaptor (Pre Mod.4937) (Pre Mod.5204)	2	—	
EB2.81.14817	. . . FERRULE, adaptor (Mod.4937 — S.O.O.) (Mod.5204)	2	—	EB1/28
TDA-62-2.5A	. . . FUSE, 2.5 amp, type S (Pre Mod.4937)	4	—	
R TDA62-5A	. . . FUSE, 5 amp, type S (Mod.4937 — S.O.O.) (Pre Mod.5204)	5	—	
TDA62	. . . FUSE, 5 amp, type S (Mod.5204)	5	—	EB1/29
TDA-62-2.5A	. . . FUSE, 2.5 amp, type S (Mod.4937 — S.O.O.) (Pre Mod.5204)	2	—	
TDA-62-2.5A	. . . FUSE, 2.5 amp, type S (Mod.5204)	2	—	EB1/30
508-4-11290-001	. . . GASKET	1	—	EB1/31
508-4-11290-004	. . . GASKET, plug	8	—	EB1/32
	. . . Attaching parts for 508-4-11290-004:			
A31A12	. . . Screw, 6BA	4	—	EB1/33
SP47A	. . . Washer, spring, 6BA	4	—	EB1/34
SP93A14	. . . GROMMET (Mod.4937 — S.O.O.) (Mod.5204)	1	—	EB1/35
Z22634	. . . GROMMET, nylon flexiform	QR	—	EB1/36
EEAS71/1	. . . LINK, commoning, 2 way	2	—	EB1/37
703-2-00251	. . . LINK, terminal, 2 way	10	—	EB1/38
703-2-00252	. . . LINK, commoning, 3 way	1	—	EB1/39
703-2-00253	. . . LINK, commoning, 4 way	1	—	EB1/40
703-2-00254	. . . LINK, commoning, 5 way (Mod.4937 — S.O.O.) (Mod.5204)	1	—	EB1/41
EA3.81.221	. . . MOUNTING, relay	2	—	EB1/42
	. . . Attaching parts for EA3.81.221:			
A31B40	. . . Screw, 4BA	2	—	EB1/43
EA3.81.223	. . . MOUNTING, relay	2	—	EB1/44
	. . . Attaching parts for EA3.81.223:			
A31B12	. . . Screw, 4BA	2	—	EB1/45
EA6.81.225	. . . MOUNTING, transformer	1	—	EB1/46
	. . . Attaching parts for EA6.81.225:			
A31A8	. . . Screw, 6BA	4	—	EB1/47
EA3.81.247	. . . PLATE, blanking	1	—	EB1/48
	. . . Attaching parts for EA3.81.247:			
A27AP	. . . Nut, 6BA	4	—	EB1/49
A31A12	. . . Screw, cheese head, 6BA	4	—	EB1/50
SP47A	. . . Washer, spring	4	—	EB1/51

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Mati. Spec.	Plate No.
508-1-06394	. . PLUG, size 'A' (Pre Mod.4937) (Pre Mod.5204)	2	—	
CPL0201/1/11120	. . PLUG, size 'A' (Mod.4937 — S.O.O.) (Mod.5204)	2	—	EB1/52
2CZ111405	. . PLUG, size 'B' (Pre Mod.4937) (Pre Mod.5204)	1	—	
CPL0201/1/11340	. . PLUG, size 'B' (Mod.4937 — S.O.O.) (Mod.5204)	1	—	EB1/53
508-1-06406	. . PLUG, size 'C' (Pre Mod.4937 — S.O.O.) (Pre Mod.5204)	5	—	
CPL0201/1/11430	. . PLUG, size 'C' (Mod.4937 — S.O.O.) (Mod.5204)	5	—	EB1/54
508-1-06413	. . PLUG, size 'D' (Pre Mod.4937) (Pre Mod.5204)	5	—	
CPL0201/1/11550	. . PLUG, size 'D' (Mod.4937 — S.O.O.) (Mod.5204)	5	—	EB1/55
PULLEN				
EL34331	. . RELAY	3	—	EB1/56
EL34333	. . RELAY	3	—	EB1/57
508-2-11232-002	. . SLEEVE	QR	—	
EEAS146/8	. . SLEEVE	QR	—	
EEAS146/12	. . SLEEVE	QR	—	
EEAS146/16	. . SLEEVE	QR	—	
EEAS146/20	. . SLEEVE	QR	—	
AS2641	. . SOCKET, assembly	1	—	EB1/57A
CZ49219	. . SOCKET, fixed Mk.4, 3 way	2	—	EB1/58
HELLERMANN				
HC294	. . TAG, quick release	QR	—	
HC304	. . TAG, quick release (Mod.5204)	QR	—	
HC490	. . TAG, quick release	QR	—	
HC500	. . TAG, quick release	QR	—	
HC510	. . TAG, quick release	QR	—	
SMITHS				
213MV	. . TRANSFORMER	2	—	EB1/59
	Attaching parts for 213MV:			
AGS2001B1	. . Nut, stiff, 4BA	2	—	EB1/60
A31B12	. . Screw, 4BA	2	—	EB1/61
AS2810/4/075	. . TUBE, distance .25 o/d .75" long	4	—	EB1/62
	Attaching parts for EA3.81.8147:			
A25/1C	. . Bolt, 2BA	4	—	EB1/63
EA3.81.6663	. . BOX, DISTRIBUTION, No.2, ASSEMBLY (PRE MOD.4937) (PRE MOD.5204)	1	—	
EA3.81.7259	. . BOX, DISTRIBUTION, No.2, ASSEMBLY (MOD.4937 — S.O.O.) (PRE MOD.5204)	1	—	
EA3.81.8159	. . BOX, DISTRIBUTION, No.2, ASSEMBLY (MOD.5204) Spares for:	1	—	EB2/1
703-1-00249	. . BLOCK, terminal, 20 way	2	—	EB2/2
	Attaching parts for 703-1-00249:			
A31B24	. . Screw, 4BA	2	—	EB2/3
CZ24265	. . BLOCK, terminal, 10 way	2	—	EB2/4
	Attaching parts for CZ24265:			
AGS2001B1	. . Nut, stiff	2	—	EB2/5
A31B24	. . Screw, cheese head, 4BA	2	—	EB2/6

R
R

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
EB6.81.1135	. . . BLOCK, fuse, 4 way (Pre Mod.4937) (Pre Mod.5204)	1	—	
EA3.81.6173	. . . BLOCK, fuse, 4 way (Pre Mod.4937) (Pre Mod.5204)	1	—	
EA3.81.7195	. . . BLOCK, fuse (Mod.4937 — S.O.O.) (Mod.5204)	1	—	EB2/7
EA3.81.1399	. . . BLOCK, fuse, 4 way (Pre Mod.4937) (Pre Mod.5204)	1	—	
EA3.81.7261	. . . BLOCK, fuse (Mod.4937 — S.O.O.) (Mod.5204)	1	—	EB2/8
A31B8	. . . Attaching parts for EA3.81.7195 and EA3.81.7261: . . . Screw, 4BA	2	—	EB2/9
SP47B	. . . Washer, spring	2	—	EB2/10
EA3.81.2573	. . . BOX, shell	1	—	EB2/11
13630	. . . BRACKET, terminal block mounting (SRIM.3577)	1	—	EB2/12
EA3.81.810/2	. . . CABLE, ASSEMBLY, F19	1	—	
EA3.81.811/1	. . . CABLE, ASSEMBLY, F92 (PRE MOD.4937) (PRE MOD.5204)	1	—	
EA3.81.813/1	. . . CABLE, ASSEMBLY, F97 (PRE MOD.4937) (PRE MOD.5204)	1	—	
EA3.81.814/1	. . . CABLE, ASSEMBLY, F98 (PRE MOD.4937) (PRE MOD.5204)	1	—	
EA3.81.815/1	. . . CABLE, ASSEMBLY, F99 (PRE MOD.4937) (PRE MOD.5204)	1	—	
EA2.81.795	. . . CARRIER, spare fuse Attaching parts for EA2.81.795:	1	—	EB2/13
AGS2001A1	. . . Nut, stiff, 6BA	2	—	EB2/14
A32A16	. . . Screw, 6BA	2	—	EB2/15
EB7.81.943	. . . COVER, ASSEMBLY Attaching parts for EB7.81.943:	1	—	EB2/16
EA3.81.1259	. . . Clip, spring	4	—	EB2/17
EEAS117/1	. . . Screw	4	—	EB2/18
EEAS28/2CU	. . . Washer	8	—	EB2/19
EEAS42	. . . Washer, leather	4	—	EB2/20
AGS1725/2	. . . DISC, blanking (Mod.4937 — S.O.O.) (Pre Mod.5204) Attaching parts for Ref.AGS1725/2:	2	—	
	. . . Nut, gland	1	—	
EA1.81.487	. . . DISC, blanking (Pre Mod.5204) Attaching parts for EA1.81.487:	2	—	
Z49046	. . . Nut, union	1	—	
EA1.81.488	. . . DISC, blanking (Pre Mod.4937) (Pre Mod.5204)	4	—	
EA1.81.488	. . . DISC, blanking (Mod.4937 — S.O.O.) (Pre Mod.5204) Attaching parts for EA1.81.488:	10	—	
Z49035	. . . Nut, union	1	—	
TDA-62-5A	. . . FUSE, 5 amp (Pre Mod.4937) (Pre Mod.5204)	9	—	
TDA-62-5A	. . . FUSE, 5 amp (Mod.4937 — S.O.O.) (Mod.5204)	3	—	EB2/21
AS5	. . . FUSE, 5 amp, type AS (Pre Mod.4937) (Pre Mod.5204)	2	—	
TDA-62-10A	. . . FUSE, 10 amp (Pre Mod.4937) (Pre Mod.5204)	2	—	

AP101B-0402-3A

Page EB.5

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Mati. Spec.	Plate No.
R 102096	. . FUSE, dummy (Mod.4937 - S.O.O.) (Mod.5204)	5	--	EB2/22
AGS1757/1	. . GLAND (Pre Mod.4937) (Pre Mod.5204)	1	--	
Z4017	. . GROMMET (Pre Mod.4937) (Pre Mod.5204)	10	--	
Z4017	. . GROMMET (Mod.3847 - S.O.O.) (Mod.5204)	1	--	EB2/23
R HV3033	. . GROMMET (Mod.4937 - S.O.O.) (Pre Mod.5204)	3	--	
R HV2855	. . GROMMET (Mod.4937 - S.O.O.) (Mod.5204)	1	--	EB2/24
R Z22433	. . GROMMET (Mod.4937 - S.O.O.) (Mod.5204)	1	--	EB2/25
703-2-00251	. . LINK, terminal, 2 way (Mod.4937 - S.O.O.) (Mod.5204)	1	--	EB2/26
EEAS71/1	. . LINK, commoning, 2 way (Pre Mod.4937) (Pre Mod.5204)	3	--	
EEAS71/1	. . LINK, commoning, 2 way (Mod.4937 - S.O.O.) (Mod.5204)	1	--	EB2/27
703-2-00252	. . LINK, commoning, 3 way (Pre Mod.4937) (Pre Mod.5204)	2	--	
703-2-00252	. . LINK, commoning, 3 way (Mod.4937 - S.O.O.) (Mod.5204)	1	--	EB2/28
EEAS71/3	. . LINK, commoning, 4 way (Pre Mod.4937) (Pre Mod.5204)	1	--	
703-2-00253	. . LINK, commoning, 4 way (Pre Mod.4937) (Pre Mod.5204)	1	--	
EA3.81.241	. . MOUNTING, relay Attaching parts for EA 3.81.241:	1	--	EB2/31
A31D4	. . Screw, 0BA	4	--	EB2/32
14153	. . PLATE, patch (SRIM.3676)	1	--	EB2/33
22226	. . PLATE, patch (SRIM.3676)	1	--	EB2/34
508-1-40060-320	. . PLUG, fixed, Mk.IV (Pre Mod.4937) (Pre Mod.5204)	3	--	
R EL34331	. . RELAY, type S7 (Pre Mod.4937) (Pre Mod.5204)	5	--	
R EL34331	. . RELAY, type S7 (Mod.4937 - S.O.O.) (Mod.5204) Attaching parts for Ref.EL34331:	2	--	EB2/35
AGS2001A1	. . Nut, stiff, 6BA	4	--	EB2/36
EA3.81.245	. . SCREEN	1	--	EB2/37
EA3.81.243	. . MOUNTING, fuse block Attaching parts for EA3-81.243:	1	--	EB2/29
A31B8	. . Screw, cheese head, 4BA	4	--	EB2/30
MAM RUBBER	. . SLEEVE, 3 mm i/d grade CXH 3/8" long	QR	--	
EEAS146/18	. . SLEEVE, 1/4" and 3/8" long	QR	--	
EEAS146/20	. . SLEEVE, 1/4" and 3/8" long	QR	--	
508-1-40049-320	. . SOCKET, fixed (Pre Mod.4937) (Pre Mod.5204)	1	--	
HC490	. . TAG, quick release	QR	--	
HC500	. . TAG, quick release (Mod.5204)	QR	--	
A25/1C	. . Bolt, 2BA Attaching parts for EA3.81.8159:	4	--	EB2/38
EA3.81.6591	. . BOX, FUSE ASSEMBLY 400 OHMS Spares for:	1	--	EB3/1
703-1-00238	. . BLOCK, terminal, 5 way Attaching parts for 703-1-00238:	2	--	EB3/2
AGS2001B1	. . Nut, stiff, 4BA	2	--	EB3/3
A33B28	. . Screw, csk. head 4BA	2	--	EB3/4

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Mati. Spec.	Plate No.
EA3.81.6169	.	BLOCK, fuse	1	—	EB3/5
EA3.81.6171	.	BLOCK, fuse	1	—	EB3/6
EA3.81.1391	.	BLOCK, fuse	1	—	EB3/7
EA3.81.1393	.	BLOCK, fuse	1	—	EB3/8
EA3.81.1395	.	BLOCK, fuse	1	—	EB3/9
		Attaching parts for EA3.81.6169, EA3.81.6171, EA3.81.1391, EA3.81.1393 and EA3.81.1395:			
A32B16	.	Bolt	2	—	EB3/10
SP47B	.	Washer, spring	2	—	EB3/11
EA3.81.323	.	BOX, shell	1	—	EB3/12
EA3.81.325	.	COVER, ASSEMBLY	1	—	EB3/13
		Spares for:			
EA1.81.542	.	CARRIER, fuse spare	1	—	EB3/14
EA3.81.1259	.	CLIP, spring	4	—	EB3/15
EEAS117/1	.	SCREW, 4BA	4	—	EB3/16
EEAS28/2CU	.	WASHER	8	—	EB3/17
EEAS42	.	WASHER, leather	4	—	EB3/18
EA1.81.488	.	DISC, blanking	3	—	EB3/19
		Attaching parts for EA1.81.488:			
Z49035	.	Nut, union	1	—	EB3/20
508-2-077-08-200	.	Ring, sealing	1	—	EB3/21
EA3.81.327	.	DISC, blanking	2	—	EB3/22
		Attaching parts for EA3.81.327:			
Z49140	.	Nut, union	1	—	EB3/23
508-2-07709-200	.	Ring, sealing	1	—	EB3/24
TDA-62-2.5A	.	FUSE, type S, 2.5 amp	15	—	EB3/25
5CZ880	.	FUSE, type S, 5 amp	4	—	EB3/26
AS5	.	FUSE, 5 amp	1	—	EB3/27
102096	.	FUSE, dummy	6	—	EB3/28
EEAS62/2	.	GLAND	7	—	EB3/29
EEAS62/3	.	GLAND	2	—	EB3/30
EEAS71/1	.	LINK, commoning, 2 way	2	—	EB3/31
EEAS71/3	.	LINK, commoning, 4 way	4	—	EB3/32
703-2-00253	.	LINK, commoning, 4 way	1	—	EB3/33
703-2-00254	.	LINK, commoning, 5 way	1	—	EB3/34
MAM RUBBER	.	SLEEVE, 3 mm i/d grade CXH 3/8" long	QR	—	
		Attaching parts for EA3.81.6591:			
A31C12	.	Screw, cheese head, 2BA	4	—	EB3/35
EA3.81.3181	.	BOX, JUNCTION No.13, ASSEMBLY	1	—	EB3/36
		Spares for:			
703-1-00249	.	BLOCK, terminal, 20 way	1	—	EB3/37
		Attaching parts for 703-1-00249:			
A43B24	.	Screw, cheese head, 4BA	2	—	EB3/38
EA1.81.589	.	BOX, 20 way	1	—	EB3/39
508-4-11290-004	.	GASKET	1	—	EB3/40
		Attaching parts for 508-4-11290-004:			
AGS2001A1	.	Nut, 6BA	4	—	EB3/41
A32A12	.	Screw, round head, 6BA	4	—	EB3/42
EA1.81.598F	.	LID, ASSEMBLY	1	—	EB3/43
		Spares for:			
EEAS117/1	.	SCREW	4	S92	EB3/44
EEAS28/2CU	.	WASHER	8	DTD124	EB3/45
EEAS42	.	WASHER	4	Leather	EB3/46

R

AP101B-0402-3A		ELECTRICAL		ELECTRICAL EQUIPMENT IN FRONT FUSELAGE	
Part Number	Description	No. Off	Matl. Spec.	Plate No.	
	1 2 3 4 5 6				
703-2-00253 EEAS146C	. . LINK, commoning 4-way . . SLEEVE, $\frac{3}{8}$ " long, yellow Attaching parts for EA3.81.3181:-	1 QR	- -	EB3/47	
A25/1C	. Bolt, 2BA	4	-	EB3/48	
EA3.81.3183	. BOX, JUNCTION, No. 14, ASSEMBLY (PRE-MOD 4937) (PRE-MOD 5204)	1	-		
EA3.81.7165	. BOX, JUNCTION, No. 14, ASSEMBLY (MOD 4937-S.O.O.) Spares for:-	1	-	EB4/1	
703-1-00249	. . BLOCK, terminal 20-way Attaching parts for 703-1-00249:-	2	-	EB4/2	
A43B24	. . Screw, cheese head, 4BA	2	-	EB4/3	
EA3.81.583	. . BOX, 40-way	1	-	EB4/4	
EA1.81.597F	. . COVER, ASSEMBLY Spares for:-	1	-	EB4/5	
EEAS117/1	. . . SCREW, cover	4	S92	EB4/6	
EEAS28/2CU	. . . WASHER	8	DTD124	EB4/7	
EEAS42	. . . WASHER	4	Leather	EB4/8	
508-4-11290-004	. . GASKET	2	-	EB4/9	
508-4-11290-005	. . GASKET	2	-	EB4/10	
703-2-00251	. . LINK, terminal, 2-way	1	-		
703-2-00255	. . LINK, commoning, 6-way	1	-		
EA1.81.464	. . PLATE, adaptor	2	-	EB4/11	
EA1.81.461	. . PLATE, adaptor Attaching parts for EA1.81.464 and EA1.81.461:-	2	-	EB4/12	
AGS2001A1	. . Nut, stiff, 6BA	4	-	EB4/13	
A32A12	. . Screw, round head 6BA	4	-	EB4/14	
EEAS146C	. . SLEEVE, yellow, $\frac{3}{8}$ " long Attaching parts for EA3.81.3183 or EA3.81.7165:-	QR	-		
A25/1C	. Bolt, hex. head 2BA	4	-	EB4/15	
EA3.81.2403	. BOX, RELAY, ASSEMBLY Spares for:-	1	-	EB5/1	
EA3.81.2411	. . BOX, RELAY Spares for:-	1	-	EB5/2	
EA3.81.2421	. . . BOX, shell	1	-	EB5/3	
EA3.81.2423	. . . BRACKET, relay	1	DTD610	EB5/4	
EA3.81.2449	. . . BRACKET, relay	1	DTD610	EB5/5	
EA3.81.2425	. . . FOOT, fixing	4	DTD610	EB5/6	
EA3.81.2413	. . LID, box Attaching parts for EA3.81.2413:-	2	-	EB5/7	
EEAS117/1	. . Screw	4	-	EB5/8	
EEAS28/2CU	. . Washer	8	-	EB5/9	
EEAS42	. . Washer, leather	4	-	EB5/10	
508-1-06406	. . PLUG, size 'C' (Mod 3377)	1	-	EB5/11	
EL34331 or B0F545-1B	. . RELAY, type S1 . . RELAY, type S Attaching parts for EA3.81.2403 (for A/C embodying Mod 272-EA3.82.527):-	1 1	- -	EB5/12	
A25/5B	. Bolt, 4BA	4	-	EB5/13	
EA3.82.527A	. Piece, spacing	2	-	EB5/14	
SP15B	. Washer	4	-	EB5/15	

R

R

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Mati. Spec.	Plate No.
EA2.81.1241	. BOX, SLAVE RELAY INSTALLATION Spares for:—	—	—	
EA3.81.2843	. . BOX, SLAVE RELAY, ASSEMBLY Spares for:—	1	—	EB6/1
1240	. . . BLOCK, terminal Attaching parts for 1240	1	—	EB6/2
A33A18	. . . Screw, csk. head 6BA	2	—	EB6/3
EA3.81.2847	. . . LID, ASSEMBLY Spares for:—	1	—	EB6/4
L1850-1 BLOCK, terminal, 2-way Attaching parts for L1850-1:—	4	—	EB6/5
A27BP Nut, plain	1	—	EB6/6
A33B16 Screw, csk. head 4BA	1	—	EB6/7
SP47B Washer, spring	1	—	EB6/8
EA3.81.3101 LID, box Attaching parts for EA3.81.3101:—	1	—	EB6/9
EA3.81.3107 Screw, captive	2	—	EB6/10
EA3.81.3113 LINK, commoning	2	—	EB6/11
EA3.81.3103 PANEL, relay mounting Attaching parts for EA3.81.3103:—	1	—	EB6/12
AGS2001B1 Nut, stiff	8	—	EB6/13
EA3.81.3105 Stud	4	—	EB6/14
SP13B Washer	4	—	EB6/15
STC-SM-5A-H19 RELAY Attaching parts for STC-SM-5A-H19:—	2	—	EB6/16
AGS2002A1 Nut, stiff	2	—	EB6/17
SP13A Washer	2	—	EB6/18
EA3.81.7179	. BURCOSTAT INSTALLATION (MOD 4937—S.O.O.)	—	—	
EA3.81.8151	. BURCOSTAT INSTALLATION (MOD 5204) Spares for:—	—	—	
EA3.81.8165	. . BLOCK, packing (Mod 5204)	1	—	EB5/21 A
†	. . CLIP (Com Mod 0539 Fig. 3) Attaching parts for clip:—	2	—	EB5/22
AGS2001B1	. . Nut, stiff, 4BA	2	—	EB5/23
A31B24	. . Screw, 4BA	2	—	EB5/24
SP14D	. . Washer	2	—	EB5/25
SP40A4	. . GROMMET	1	—	EB5/26
TYPE R No. 3	. . PLUG, type R	1	—	EB5/27
5CZ 4337466	. . RESISTOR, burcostat Attaching parts for Ref. 5CZ/4337466:—	1	—	EB5/28
AGS2001C1/66	. . Nut, stiff, 2BA	3	—	EB5/29
A31C20	. . Screw, 2BA	3	—	EB5/30
SP14C	. . Washer	3	—	EB5/31
AS10512C1	. . SWITCH	1	—	EB5/32
EA3.81.2637	. BRACKET, PLUG MOUNTING, ASSEMBLY Spares for:—	1	—	EB5/16
EA3.81.2639	. . BRACKET, plug mounting Attaching parts for EA3.81.2639:—	1	DTD610	EB5/17
A25/1B	. . Bolt, 4BA	3	—	EB5/18
AGS2001B1	. . Nut, stiff, 4BA	3	—	EB5/19
SP16B	. . Washer, thick	3	—	EB5/20

AP101B-0402-3A

ELECTRICAL

Page EB.9

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
AS3180/11C	. CLIP, cable fixing (SRIM.3577) Attaching parts for AS3180/11C:	2	—	
AGS2001C1/66	. Nut, stiff, 2BA	1	—	
A31C20	. Screw, 2BA	1	—	
SP15C	. Washer	1	—	
AS3180/3B	. CLIP, cable fixing (SRIM.3577) Attaching parts for AS3180/3B:	3	—	
AGS2001B1	. Nut, stiff, 4BA	1	—	
A31B16	. Screw, 4BA	1	—	
SP15B	. Washer	1	—	
AS3180/4B	. CLIP, cable fixing (SRIM.3577)	20	—	
AS3180/6B	. CLIP, cable fixing (SRIM.3577)	6	—	
AS3180/7B	. CLIP, cable fixing (SRIM.3577)	3	—	
AS3180/8B	. CLIP, cable fixing (SRIM.3577)	4	—	
AS3180/12B	. CLIP, cable fixing (SRIM.3577)	2	—	
AS3180/13B	. CLIP, cable fixing (SRIM.3577) Attaching parts for AS3180/4B, AS3180/6B, AS3180/7B, AS3180/8B, AS3180/12B and AS3180/13B:	2	—	
AGS2001B1	. Nut, stiff, 4BA	QR	—	
A31B20	. Screw, 4BA	QR	—	
SP15B	. Washer	QR	—	
506-1-07360	. CONTROLLER, Mk.1 Attaching parts for 506-1-07360:	1	—	EB6/19
AS1246/1B	. Bolt, round head	1	—	EB6/20
SP15B	. Washer	4	—	EB6/21
EA3.81.2245	. COVER, torque switch	1	—	
EA3.81.1759	. ELECTRICAL EQUIPMENT UNDER REAR FLOOR, STARBOARD (PRE MOD.4937) (PRE MOD.5204)	—	—	
EA3.81.7187	. ELECTRICAL EQUIPMENT UNDER REAR FLOOR, STARBOARD (MOD.4937 – S.O.O.) (PRE MOD.5204)	—	—	
EA3.81.8167	. ELECTRICAL EQUIPMENT UNDER REAR FLOOR, STARBOARD (MOD.5204) Spares for:	—	—	EB7/1
EA3.81.699/1	. . CABLE ASSEMBLY, F30 (PRE MOD.5204)	1	—	
EA3.81.699/2	. . CABLE ASSEMBLY, F30 (MOD.5204)	1	—	
EA3.81.261	. . CLEAT Attaching parts for EA3.81.261 (per pair):	4	—	EB7/2
A27BP	. . Nut, 4BA	2	—	EB7/3
AS1246/8B	. . Screw, 4BA	2	—	EB7/4
SP15B	. . Washer	QR	—	EB7/5
SP47B	. . Washer, spring	2	—	EB7/6
AS1900E	. . CLIP, cable fixing	1	—	EB7/7
AS1900J	. . CLIP, cable fixing Attaching parts for AS1900J:	1	—	EB7/8
A25/4C	. . Bolt, 2BA	1	—	EB7/9
A27CP	. . Nut, 2BA	1	—	EB7/10
AS2809/5/030	. . Tube, distance	1	—	EB7/11
SP47C	. . Washer, spring	1	—	EB7/12

R

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
AS4002	. . . LUG, terminal, 83 amp	2	—	EB7/13
5X/2327	. . . LUG, terminal, 83 amp	2	—	EB7/14
EA3.81.5885	. . . PANEL, BUSBAR, ASSEMBLY (PRE MOD.4937) (PRE MOD.5204)	1	—	
EA3.81.7209	. . . PANEL, BUSBAR, ASSEMBLY (MOD.4937 — S.O.O.) (MOD.5204) Spares for:	1	—	EB8/1
AS2696	. . . ADAPTOR, cable lug, 2 way, 19 amp	2	—	EB8/2
AS2697	. . . ADAPTOR, cable lug, 4 way, 19 amp	1	—	EB8/3
AS2698	. . . ADAPTOR, cable lug, 2 way, 37 amp	1	—	EB8/4
5X/49	. . . BOLT, connecting, assembly	5	—	EB8/5
EA3.81.1765	. . . BASEPLATE, busbar	1	—	EB8/6
AS2654	. . . BLOCK, connector, heavy duty Attaching parts for Ref. AS2654:	1	—	EB8/7
A27BT	. . . Nut, thin 4BA	2	—	EB8/8
A31B16	. . . Screw, 4BA	2	—	EB8/9
EA3.81.5887	. . . BLOCK, FUSE, ASSEMBLY (1-4) (PRE MOD.4937) (PRE MOD.5204)	1	—	
EA3.81.7205	. . . BLOCK, FUSE, ASSEMBLY (1-4) (MOD.4937 — S.O.O.) (MOD.5204) Spares for:	1	—	EB8/10
703-1-00416	. . . BLOCK, fuse, 4 way	1	—	EB8/11
EA3.81.5889	. . . LABEL (PRE MOD.4937) (PRE MOD.5204)	1	—	
EA3.81.7207	. . . LABEL (MOD.4937 — S.O.O.) (MOD.5204) Attaching parts for EA3.81.5887 and EA3.81.7205:	1	—	EB8/12
A31B8	. . . Screw, 4BA	2	—	EB8/13
SP47B	. . . Washer, spring	2	—	EB8/14
EA3.81.1341	. . . BLOCK, FUSE, ASSEMBLY (5-8) Spares for:	1	—	EB8/15
703-1-00416	. . . BLOCK, fuse, 4 way	1	—	EB8/16
EA3.81.1273	. . . LABEL Attaching parts for EA3.81.1341:	1	—	EB8/17
A31B8	. . . Screw, 4BA	2	—	EB8/18
SP47B	. . . Washer, spring	2	—	EB8/19
EA3.81.1343	. . . BLOCK, FUSE, ASSEMBLY (9-12) (PRE MOD.4937) (PRE MOD.5204)	1	—	
EA3.81.7287	. . . BLOCK, FUSE, ASSEMBLY (9-12) (MOD.4937 — S.O.O.) (MOD.5204) Spares for:	1	—	EB8/20
703-1-00416	. . . BLOCK, fuse, 4 way	1	—	EB8/21
EA3.81.1275	. . . LABEL (PRE MOD.4937) (PRE MOD.5204)	1	—	
EA3.81.7289	. . . LABEL (MOD.4937 — S.O.O.) (MOD.5204) Attaching parts for EA3.81.1343 and EA3.81.7287:	1	—	EB8/22
A31B8	. . . Screw, 4BA	2	—	EB8/23
SP47B	. . . Washer, spring	2	—	EB8/24
EA3.81.1345	. . . BLOCK, FUSE, ASSEMBLY (13-16) (PRE MOD.4937) (PRE MOD.5204)	1	—	
EA3.81.7291	. . . BLOCK, FUSE, ASSEMBLY (13-16) (MOD.4937 — S.O.O.) (MOD.5204) Spares for:	1	—	EB8/25
703-1-00416	. . . BLOCK, fuse	1	—	EB8/26
EA3.81.1277	. . . LABEL (PRE MOD.4937) (PRE MOD.5204)	1	—	
EA3.81.7293	. . . LABEL (MOD.4937 — S.O.O.) (MOD.5204) Attaching parts for EA3.81.1345 and EA3.81.7291:	1	—	EB8/27
A31B8	. . . Screw, 4BA	2	—	EB8/28
SP47B	. . . Washer, spring	2	—	EB8/29

AP101B-0402-3A

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.	
					1
703-1-00249	BLOCK, terminal, 20 way Attaching parts for 703-1-00249:	1	—	EB8/30	
A27BP	Nut, 4BA	2	—	EB8/31	
703-2-00267	Pillar, fixing	2	—	EB8/32	
SP47B	Washer, spring	2	—	EB8/33	
E & I 3672-2	BOX, fuse, type B Attaching parts for E & I 3672-2	2	—	EB8/34	
A25/3B	Bolt, 4BA	2	—	EB8/35	
A27BP	Nut, 4BA	2	—	EB8/36	
SP47B	Washer, spring	2	—	EB8/37	
AS2727	BUSBAR, 500 amp Attaching parts for AS2727:	1	—	EB8/38	
A27BP	Nut, 4BA	4	—	EB8/39	
A31B16	Screw, 4BA	4	—	EB8/40	
SP47B	Washer	4	—	EB8/41	
AGS1600B	CABLE, eye end type Attaching parts for AGS1600B:	1	—	EB8/42	
AGS2001C1	Nut, stiff	1	—	EB8/43A	
A27CT	Nut, thin, 2BA	1	—	EB8/43	
EEAS28/4EP	Washer	1	—	EB8/44	
EA1.81.542	CARRIER, spare fuse, assembly Attaching parts for EA1.81.542:	1	—	EB8/45	
AGS2001A1	Nut, stiff, 6BA	2	—	EB8/46	
A32A12	Screw, 6BA	2	—	EB8/47	
AS2655	COVER, connector block	1	—	EB8/48	
703-1-00266	COVER, terminal block	1	—	EB8/49	
AS2674	FERRULE (PRE MOD.4937) (PRE MOD.5204)	6	—		
AS2674	FERRULE (MOD.4937 - S.O.O.) (MOD.5204)	5	—		
AS2675	FERRULE	2	—		
TDA-62-5A	FUSE, type S, 5 amp	16	—		
TDA-62-20A	FUSE, type S, 20 amp	2	—		
EL120-1TYPERNo3	FUSE, type R, No.3, 50 amp	2	—		
AS5	FUSE (MOD.4937 - S.O.O.) (MOD.5204)	2	—		
AS2.5	FUSE, type AS, 2.5 amp (Mod.4937 - S.O.O.) (Mod.5204)	2	—		
AS10	FUSE, type AS, 10 amp (Mod.4937 - S.O.O.) (Mod.5204)	3	—		
102096	FUSE, dummy	1	—		
AS2722	INSULATOR, busbar	2	—	EB8/50	
EEAS71/1	LINK, commoning, 2 way (Pre Mod.4937) (Pre Mod.5204)	2	—		
EEAS71/1	LINK, commoning, 2 way (Mod.4937 - S.O.O.) (Mod.5204)	1	—		
EEAS71/3	LINK, commoning, 4 way (Mod.4937 - S.O.O.) (Mod.5204)	1	—		
703-2-00251	LINK, commoning, 2 way (Mod.4937 - S.O.O.) (Mod.5204)	1	—		
EEAS146/8	SLEEVE	QR	—		
EEAS146/12	SLEEVE	QR	—		
EEAS146/16	SLEEVE	QR	—		
EEAS146/20	SLEEVE	QR	—		
CHX	SLEEVE, 3 mm i/d x 3/8" long	QR	—		
EA3.81.273	STRIP, connecting	1	—	EB8/51	
EA3.81.275	STRIP, connecting	1	—	EB8/52	
EA3.81.271	STUD, terminal	2	—	EB8/53	
80-10-2016	SWITCH, magnetic relay, type R3 Attaching parts for 80-10-2016:	1	—	EB8/54	
A25/18C	Bolt, 2BA	4	—	EB8/55	

R

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
703-2-00315-020	. . . TAG, QR, 4 amp (Pre Mod.4937) (Pre Mod.5204)	1	—	
HC490	. . . TAG, QR (MOD.4937 — S.O.O.) (MOD.5204)	1	—	
703-2-00316-020	. . . TAG, QR, 7 amp (Pre Mod.4937) (Pre Mod.5204)	2	—	
HC500	. . . TAG, QR (MOD.4937 — S.O.O.) (MOD.5204)	2	—	
703-2-00317-020	. . . TAG, QR, 19 amp (Pre Mod.4937) (Pre Mod.5204)	6	—	
HC510	. . . TAG, QR (MOD.4937 — S.O.O.) (MOD.5204)	6	—	
703-2-00339-020	. . . THIMBLE, 4 amp (Pre Mod.4937) (Pre Mod.5204)	1	—	
703-2-00340-020	. . . THIMBLE, 7 amp (Pre Mod.4937) (Pre Mod.5204)	2	—	
703-2-00341-020	. . . THIMBLE, 19 amp (Pre Mod.4937) (Pre Mod.5204)	6	—	
EA3.81.1117	. . . TRANSFER, 'canopy jettison'	1	—	EB8/56
EA3.81.1118	. . . TRANSFER, 'hatch jettison'	1	—	EB8/57
	Attaching parts for EA3.81.5885 and EA3.81.7209:			
A25/3C	. . . Bolt, 2BA	8	—	EB8/58
EA3.81.281	. . . SUPPORT Attaching parts for EA3.81.281:	1	—	EB7/15
A25/1B	. . . Bolt, 4BA	2	—	EB7/16
A32B20	. . . Screw, 4BA	1	—	EB7/17
SP47B	. . . Washer, spring	3	—	EB7/18
EA3.81.8173	. . . U.H.F. FUSE INSTALLATION (MOD.5204) Spares for:	1	—	EB7/19
EA3.81.5943	. . . BLOCK, FUSE, ASSEMBLY Spares for:	1	—	EB7/20
EB6.81.1049 BASE, fuse block	1	—	EB7/21
EB6.81.1043 BOLT, special	2	—	EB7/22
EA3.81.5945 COVER, fuse Attaching parts for EA3.81.5945:	1	—	EB7/23
AS4565/7C Bolt, 2BA	2	—	EB7/24
EB6.81.1047 END, fuse block Attaching parts for EB6.81.1047:	2	—	EB7/25
A41B14 Screw, 4BA	2	—	EB7/26
A41B16 Screw, 4BA	1	—	EB7/27
A14GB NUT, 5/16" BSF	2	—	EB7/28
AGS2002G4 NUT, stiff, 5/16" BSF	2	—	EB7/29
A33B16 SCREW, 4BA	2	—	EB7/30
AS2721 WASHER, contact Attaching parts for EA3.81.5943:	8	—	EB7/31
A31C20 Screw, 2BA	2	—	EB7/32
SP13C Washer	2	—	EB7/33
EA3.81.5949 CABLE, ASSEMBLY P10A, from fuse block (No.19) to busbar	1	—	
AP19264 FUSE, 40 amp	1	—	
EA3.81.6135 PLATE, mounting Attaching parts for EA3.81.6135:	1	—	EB7/34
A31C16 Screw, 2BA	7	—	EB7/35
SP13C Washer	7	—	EB7/36
SIC664/4133	. . . GROMMET	1	—	

AP101B-0402-3A

Page EB.13

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
EA1.81.46	. EARTH, ACCUMULATOR, ASSEMBLY Spares for:-	-	-	
R A25/2E	. . BOLT, 1/4" BSF	2	-	
A27EP	. . NUT, 1/4" BSF	2	-	
EEAS28/22EP	. . WASHER	2	-	
SP47E	. . WASHER, spring	2	-	
EA3.81.7099	. ELECTRICAL EQUIPMENT, U.H.F. STANDBY (MOD.4937 - S.O.O.) (MOD.5204) Spares for:-	-	-	
13617	. . BASE (SRIM.3577) (MOD.4937)	1	-	
703-1-00238	. . BLOCK, terminal, type G, 5 way (SRIM.3577) (Mod.4937) Attaching parts 703-1-00238:	1	-	
703-2-00267	. . Pillar, fixing	2	-	
	. . CLIP (SRIM.3577) (MOD.4937) Attaching parts Ref.26DK/1931964:-	2	-	
26DK/1931964	. . Nut, stiff, 2BA	2	-	
AGS2002C1	. . Screw, 2BA	2	-	
A33C16				
21961	. . COVER (SRIM.3577) (MOD.4937) Attaching parts for 21961:-	1	-	
AS1246/3C	. . Bolt, 2BA	2	-	
SP15C	. . Washer	2	-	
703-1-00264	. . COVER, terminal block (SRIM.3577) (Mod.4937)	1	-	
R 13616	. . INSULATOR (SRIM.3577) (MOD.4937)	1	-	
10W/1070353	. . RESISTOR, type 2003PF (SRIM.3577) (Mod.4937)	1	-	
D2363	. . SWITCH, magnetic, type 9B2A (SRIM.3577) (Mod.4937) Attaching parts for D2363:-	1	-	
AS1246/3B	. . Bolt, 4BA	2	-	
TYPE 200A	. . INVERTER, type 200 (Pre Mod.4937) (Pre Mod.5204)	1	-	
R EH8.81.349	. INVERTER, INSTALLATION, BETWEEN FRAMES 9-11, PORT Spares for:-	-	-	
ROTAX				
S3106/1L	. . INVERTER, type 103A, No.4	1	-	EB6/18
R S3304	. . INVERTER, type 108A, No.5 Attaching parts for S3106/1L and S3304:-	1	-	EB6/19A
A25/5G	. . Bolt, 5/16" BSF	4	-	EB6/20
AGS2001G1	. . Nut, stiff 5/16" BSF	4	-	EB6/21
SP13G	. . Washer, 5/16" BSF	4	-	
EK2.81.549	. INSTALLATION EARTH POINT (E22) Attaching parts for EK2.81.549:-	1	-	EB6/22
A54CP	. Nut, plain, 2BA	2	Brass	EB6/22B
AGS2001C4	. Nut, stiff, 2BA	1	-	EB6/22C
A43C40	. Screw, cheese head 2BA	1	Brass	EB6/22A
SP25C	. Washer, 2BA	2	Brass	EB6/22D
SP124D	. Washer, 10 UNF	2	-	EB6/22E

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Mati. Spec.	Plate No.
EA3.81.7173	. INSTALLATION OF MASTER ALTIMETER PLUG BREAK (MOD.4937 - S.O.O.) (MOD.5204) Spares for:	-	-	
EG4.80.1187	. . BRACKET Attaching parts for EG4.80.1187:	1	-	
A25/1C	. . Bolt, 2BA	4	-	
AGS2001C1/66	. . Nut, stiff, 2BA	4	-	
SP15C	. . Washer	4	-	
HELLERMANN DEUTSCH 418618/20	. . RECEPTACLE Attaching parts for 418618/20:	1	-	
A25/1A	. . Bolt, 6BA	4	-	
AGS2001A1	. . Nut, stiff, 6BA	4	-	
SP124A	. . Washer	4	-	
EA3.81.7171	. INSTALLATION OF PILOT'S ALTIMETER PLUG BREAK (MOD.4937 - S.O.O.) (MOD.5204) Spares for:	-	-	
A25/1A	. . BOLT, 6BA	4	-	
HELLERMANN DEUTSCH 416125/14	. . CAP, protective	1	-	
AGS2001A1	. . NUT, stiff, 4BA	4	-	
HELLERMANN DEUTSCH 418618/14	. . RECEPTACLE, dummy Attaching parts for 418618/14:	1	-	
A25/1A	. . Bolt, 6BA	4	-	
AGS2001A1	. . Nut, stiff, 6BA	4	-	
SP124A	. . Washer	4	-	
SP124A	. . WASHER	4	-	
EA3.81.7175	. INSTALLATION OF PLUG STOWAGE, P.E.C. (MOD.4937 - S.O.O.) (MOD.5204) Spares for:	-	-	
HELLERMANN DEUTSCH 418618/16	. . RECEPTACLE Attaching parts for 418618/16:	1	-	
A25/1A	. . Bolt, 6BA	4	-	
AGS2001A1	. . Nut, stiff, 6BA	4	-	
SP124A	. . Washer	4	-	
EH8.81.113	. INVERTER, INSTALLATION, BETWEEN FRAMES 9-10, STARBOARD Spares for:	-	-	
ROTAX S2903	. . INVERTER, type 100A, No.2 Attaching parts for S2903:	1	-	EB6/23
A25/2C	. . Bolt, 2BA	4	-	EB6/24
AGS2001C1/66	. . Nut, stiff, 2BA	4	-	EB6/24A
AGS2035C	. . Washer, shakeproof	4	-	EB6/25

AP101B-0402-3A

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.	
					1
ROTAX					
S3106/1L	INVERTER, type 103A, No.1	1	—	EB6/26	
S3304	INVERTER, type 108A, No.3	1	—	EB6/27	
	Attaching parts for S3106/1L and S3304:				
A25/6G	Bolt, 5/16" BSF for S3304	4	—	EB6/28	
A25/7G	Bolt, 5/16" BSF	4	—	EB6/29	
AGS2001G1	Nut, stiff, 5/16" BSF	4	—	EB6/30	
SP13G	Washer, 5/16" BSF	4	—	EB6/30A	
U1502-2	PANEL, control type 15	1	—	EB6/31	
	Attaching parts for U1502-2:				
A25/4E	Bolt, 1/4" BSF	4	—	EB6/32	
AGS2001E1/66	Nut, stiff, 1/4" BSF	2	—	EB6/33	
SP13E	Washer, 1/4" BSF	4	—	EB6/33A	
F2801	PANEL, control type 12	1	—	EB6/34	
	Attaching parts for F2801:				
A25/3E	Bolt, 1/4" BSF	3	—	EB6/35	
AS1248/3E	Bolt, mush. head 1/4" BSF	1	—	EB6/36	
U1511	PANEL, control type 26D	1	—	EB6/37	
EA3.81.1999	LIGHTING, ASSEMBLY, FRONT FUSELAGE (PRE MOD.4937) (PRE MOD.5204)	—	—		
EA3.81.7057	LIGHTING, ASSEMBLY, FRONT FUSELAGE (MOD.4937 - S.O.O.)	—	—		
EA3.81.8057	LIGHTING, ASSEMBLY, FRONT FUSELAGE (MOD.5204)	—	—	EB9/1	
	Spares for:				
D140/101808	ACCUMULATOR, 2.4V	1	—	EB10/1	
EA3.81.971	ANGLE	1	—	EB10/2	
EA3.81.2191	ANGLE	1	—	EB10/3	
EA3.81.2305	ANGLE	1	—	EB10/4	
EA3.81.1831	BAG, stowage inspection lamp	1	—	EB9/2	
	Attaching parts for EA3.81.1831:				
AGS2002B1	Nut, stiff, 4BA	4	—	EB9/3	
SP15B	Washer	4	—	EB9/4	
SIS1564	BLOCK, terminal, 2 way	1	—	EB10/5	
	Attaching parts for SIS1564:				
A45/A20	Screw, csk. head 6BA	2	—	EB10/6	
SIS1565	BLOCK, terminal, 3 way	1	—	EB10/7	
	Attaching parts for SIS1565:				
A45A20	Screw, csk. head, 6BA	2	—	EB10/8	
703-1-00249	BLOCK, terminal, 20 way	1	—	EB10/9	
R 703-2-00244	BLOCK, terminal, 10 way (Mod 4937 - S.O.O.) (Mod 5204)	1	—	EB10/10	
R EA2.81.841	BRACKET	2	—	EB10/11	
EA3.81.2189	BRACKET, assembly	1	—	EB7/13A	
EA3.81.2325	BRACKET (PRE MOD.5204)	1	—		
EA3.81.2327	BRACKET (PRE MOD.5204)	1	—		
R EA3.81.2323	BRACKET, assembly	1	—	EB10/12	
R EA3.81.2231	BRACKET, assembly	1	—	EB10/13	
EA3.81.3827	BRACKET, assembly (Pre Mod.4937) (Pre Mod.5204)	1	—		
EA3.81.2663	BRACKET, switch (Pre Mod.4158)	1	—		
	Attaching parts for EA3.81.2663:				
AGS2002B4	Nut, stiff, 4BA	2	—		
A43B12	Screw	2	—		

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
R EA3.81.1107	. . . BOX, BATTERY, ASSEMBLY Spare for:	1	—	EB10/14
R EA3.81.1109 BOX, battery	1	—	EB10/15
R EA1.81.373 STRIP, retaining Attaching parts for EA1.81.373:	1	—	EB10/16
A25/1B Bolt, 4BA	1	—	EB10/17
R A27BT Nut, thin, locking, 4BA	2	—	EB10/18
R EA1.81.378 Nut, knurled, 4BA	1	—	EB10/19
SP13B Washer	1	—	EB10/20
A25/1B	Attaching parts for EA3.81.1107: . . . Bolt, 4BA	4	—	EB10/21
SP15B	. . . Washer	4	—	EB10/22
EA3.81.5989 or 14081	. . . BRACKET (MOD.5204)	1	—	EB10/23
EA3.81.2230	. . . BRACKET (SRIM.3867/8)	1	—	
EA3.81.2201	. . . CABLE, ASSEMBLY, F36, from M.E.P. to equipment bay light aft of pressure bulkhead	1	—	
EA3.81.2202	. . . CABLE, ASSEMBLY, N65A, from starboard instrument panel to 20 way terminal block	1	—	
EA3.81.6431	. . . CABLE, ASSEMBLY, N65B, from 20 way terminal block to port red light dimmer switch (Pre Mod.4158)	1	—	
EA3.81.2203	. . . CABLE, ASSEMBLY, N65B1, from 20 way terminal block to aft side red light	1	—	
EA3.81.2204	. . . CABLE, ASSEMBLY, N65B2, from 20 way terminal block to forward side red light	1	—	
EA3.81.2205	. . . CABLE, ASSEMBLY, N65B3, from 20 way terminal block to outboard red light	1	—	
EA3.81.2206	. . . CABLE, ASSEMBLY, N65B4, from 20 way terminal block to inboard red light	1	—	
EA3.81.6113	. . . CABLE, ASSEMBLY, N65B5, from flying panel to 20 way terminal block (Mod.4937 — S.O.O.) (Mod.5204)	1	—	
EA3.81.2207	. . . CABLE, ASSEMBLY, N65C, from 20 way terminal block to starboard red light dimmer switch	1	—	
EA3.81.2208	. . . CABLE, ASSEMBLY, N65C1, from 20 way terminal block to F2A compass (Pre Mod.5204)	1	—	
EA3.81.2209	. . . CABLE, ASSEMBLY, N65C2, from 20 way terminal block to No.3 fuel gauge	1	—	
EA3.81.2210	. . . CABLE, ASSEMBLY, N65C3, from 20 way terminal block to outboard red light (Pre Mod.5204)	1	—	
EA3.81.5993	. . . CABLE, ASSEMBLY, N65C3 (Mod.5204)	1	—	
EA3.81.2211	. . . CABLE, ASSEMBLY, N65C4, from 20 way terminal block to inboard red light	1	—	
EA3.81.5999	. . . CABLE, ASSEMBLY, N65C5, from 20 way terminal block to outboard red light (Mod.5204)	1	—	
EA3.81.2212	. . . CABLE, ASSEMBLY, N65D, from 20 way terminal block to inboard ultra violet light and starboard ultra violet light dimmer switch	1	—	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.81.2213		CABLE, ASSEMBLY, N65D1, from inboard ultra violet light and ultra violet light dimmer switch to outboard ultra violet light (Pre Mod.5204)	1	-	
EA3.81.5995		CABLE, ASSEMBLY, N65D1, from starboard ultra violet light dimmer switch to ultra violet light panel and inboard ultra violet light (Mod.5204)	1	-	
EA3.81.5997		CABLE, ASSEMBLY, N65D2, from starboard ultra violet light dimmer switch to centre and outboard ultra violet lights (Mod.5204)	1	-	
EA3.81.2214		CABLE, ASSEMBLY, N65E, from 20 way terminal block to inboard ultra violet light and port ultra violet light dimmer switch	1	-	
EA3.81.2215		CABLE, ASSEMBLY, N65E1, from inboard ultra violet light and port ultra violet light dimmer switch to outboard ultra violet light	1	-	
EA3.81.2216		CABLE, ASSEMBLY, N65F, from starboard instrument panel to 2 way terminal block (Pre Mod.5204)	1	-	
EA3.81.5991		CABLE, ASSEMBLY, N65F (Mod.5204)	1	-	
EA3.81.2217		CABLE, ASSEMBLY, N65F1, from 2 way terminal block to bomb aimer's hand lamp dimmer switch (Pre Mod.1413)	1	-	
EA3.81.3151		CABLE, ASSEMBLY, N65F1 (Mod.1413)	1	-	
EA3.81.2218		CABLE, ASSEMBLY, N65F2, from dimmer switch to bomb aimer's hand lamp	1	-	
EA3.81.2219		CABLE, ASSEMBLY, N76B, from 3 way terminal block to dimmer switch (Pre Mod.1413) (Pre Mod.4937) (Pre Mod.5204)	1	-	
EA3.81.3153		CABLE, ASSEMBLY, N76B (Mod.1413)	1	-	
EA3.81.2220		CABLE, ASSEMBLY, N76B1, from 3 way terminal block to aft red light (Pre Mod.4937) (Pre Mod.5204)	1	-	
EA3.81.3155		CABLE, ASSEMBLY, N76B2, from 3 way terminal block to oxygen regulator red light (Mod.1413) (Pre Mod.4937) (Pre Mod.5204)	1	-	
EA3.81.3157		CABLE, ASSEMBLY, N76B3, from 3 way terminal block to radio panel red light (Mod.1413) (Pre Mod.4937) (Pre Mod.5204)	1	-	
EA3.81.2222		CABLE, ASSEMBLY, N79, from 20 way terminal block to emergency accumulator	1	-	
EA3.81.6429		CABLE, ASSEMBLY, N79A, from 20 way terminal block to emergency lights switch (Pre Mod.5097)	1	-	
EA3.81.6245		CABLE, ASSEMBLY, N79A (Alt. R60/58) (Mod.5097)	1	-	
EA3.81.2224		CABLE, ASSEMBLY, N79A1, from 20 way terminal block to starboard amber light	1	-	
EA3.81.2225		CABLE, ASSEMBLY, N79A2, from 20 way terminal block to port amber light	1	-	
EA3.81.2226		CABLE, ASSEMBLY, 13F and 13G, from JB13, 13F to navigator's cockpit lamp, 13G to navigator's wander lamp dimmer switch	1	-	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Mati. Spec.	Plate No.
EA3.81.2227		CABLE, ASSEMBLY, 13F1, from dimmer switch to navigator's wander lamp (Pre Mod.3423)	1	—	
EB7.81.3195		CABLE, ASSEMBLY, 13F1 (MOD.3423)	1	—	
EA3.81.2228		CABLE, ASSEMBLY, 14F1, from JB14 to bomb aimer's wander lamp dimmer switch	1	—	
EA3.81.2229		CABLE, ASSEMBLY, 14F1, from dimmer switch to bomb aimer's wander lamp (Pre Mod.3423)	1	—	
EB7.81.3197		CABLE, ASSEMBLY, 14F1 (MOD.3423)	1	—	
EA3.81.2307		CLIP, spring Attaching parts for EA3.81.2307:	7	—	EB10/24
4R3/8S971		Screw, P.K., 3/8" long	1	—	EB10/25
AS4525/3		CLIP (PRE MOD.4937) (PRE MOD.5204)	1	—	
AS1900F		CLIP (PRE MOD.4937) (PRE MOD.5204)	7	—	
AS1900G		CLIP (PRE MOD.4937) (PRE MOD.5204)	4	—	
AS1901A		CLIP (PRE MOD.4937) (PRE MOD.5204)	15	—	
AS1901B		CLIP (PRE MOD.4937) (PRE MOD.5204)	1	—	
AS1901C		CLIP (PRE MOD.4937) (PRE MOD.5204)	10	—	
AS1901D		CLIP (PRE MOD.4937) (PRE MOD.5204) Attaching parts for AS1900 and AS1901:	4	—	
A25/1B		Bolt, 4BA	QR	—	
AGS2001B1		Nut, stiff, 4BA	QR	—	
AGS2002B4		Nut, stiff, 4BA	QR	—	
A43B12		Screw, 4BA	QR	—	
SP15B		Washer	QR	—	
AS3180/3B		CLIP, cable (Pre Mod.4937) (Pre Mod.5204)	2	—	
AS3180/3B		CLIP, cable (Mod.4937 — S.O.O.) (Mod.5204)	18	—	EB9/5
AS3180/4B		CLIP, cable (Mod.4937 — S.O.O.) (Mod.5204)	11	—	EB9/6
AS3180/5B		CLIP, cable (Pre Mod.4937) (Pre Mod.5204)	1	—	
AS3180/8B		CLIP, cable (Pre Mod.4937) (Pre Mod.5204)	2	—	
AS3180/8B		CLIP, cable (Mod.4937 — S.O.O.) (Mod.5204)	5	—	EB9/7
AS3180/8B		CLIP, cable (Mod.4937 — S.O.O.) (Mod.5204)	4	—	EB9/8
AS3180/10B		CLIP, cable (Mod.4937 — S.O.O.) (Mod.5204) Attaching parts for AS3180:			
R A25/1B		Bolt	QR	—	EB9/9
AGS2002B1		Nut, stiff, 4BA	QR	—	EB9/10
AGS2002B4		Nut, stiff, 4BA	QR	—	EB9/11
R A43B12		Screw, cheese head, 4BA	QR	—	EB9/9A
R SP15B		Washer	QR	—	EB9/11A
R 703-1-00265		COVER, 10 way terminal block (Mod.4937 — S.O.O.) (Mod.5204) Attaching parts for 703-1-00265:	1	—	EB10/26
R 703-2-00267		Pillar, fixing	2	—	EB10/27
R 703-1-00266		COVER, 20 way terminal block Attaching parts for 703-1-00266:	1	Perspex	EB10/28
R 703-2-00267		Pillar, fixing	2	—	EB10/29
R 5L/9951130		FILAMENT, 2.5V, 0.75W, amber	2	—	EB10/30
R 5L/9951263		FILAMENT, 24V, 2.8W, red	10	—	EB10/31
R 5L/9952261		FILAMENT, 12V, 7W, ultra violet	4	—	EB10/32
R 5L/9951271		FILAMENT (MOD.4937 — S.O.O.) (MOD.5204)	1	—	EB9/12
R DEF STAN62-6		FILAMENT (MOD.4937 — S.O.O.) (MOD.5204)	1	—	EB10/33
GE304		FILAMENT, 28V, 7W	3	—	EB9/13
R 5L/9953273		FILAMENT, 28V, 18W	2	—	EB9/14
R THORN 1092		FILAMENT, 24V, 2.4W, clear	1	—	EB10/34
R A67053		FILTER, yellow	1	—	EB9/16
R SIC675A511A		GROMMET	3	—	EB10/35

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
EA3.81.1675	. . . LABEL, extension lead stowage	1	—	EB9/17
SIS6249	. . . LAMP, chartboard, type E	2	—	EB9/18
or 68712	. . . LAMP, chartboard, type H	2	—	
A25/2E	. . . Attaching parts for SIS6249 or 68712:—			
A25/3E	. . . Bolt, 1/4" BSF	QR	—	EB9/19
AGS2001E1/66	. . . Bolt, 1/4" BSF	QR	—	EB9/20
SP16E	. . . Nut, stiff, 1/4" BSF	QR	—	EB9/21
	. . . Washer	QR	—	EB9/22
SIS1616	. . . LAMP, cockpit Mk. 1A	2	—	EB9/23
A43B12	. . . Attaching parts for SIS1616:—			
	. . . Screw, cheese head, 4BA	5	—	EB9/24
SIS3008	. . . LAMP, cockpit, type C, No. 2	12	—	EB9/25
AGS2002A1	. . . Attaching parts for SIS3008:—			
A43A20	. . . Nut, stiff, 6BA	QR	—	EB9/26
4R3/8S971	. . . Screw, cheese head, 6BA	QR	—	EB9/28
AS2304/030	. . . Screw, P.K.	QR	—	EB9/29
	. . . Tube, distance	QR	—	EB9/31
EL42865	. . . LAMP, cockpit floodlight, red (Mod 4937—S.O.O.) (Mod 5204)	1	—	EB9/32
A25/1B	. . . Attaching parts for EL42865:—			
AGS2001B1	. . . Bolt, 4BA	2	—	EB9/33
SP15B	. . . Nut, stiff, 4BA	2	—	EB9/34
	. . . Washer	2	—	EB9/35
EA3.81.2281	. . . LAMP, HAND, BOMB AIMER'S ASSEMBLY	1	—	EB9/36
	. . . Spares for:—			
A25/1B	. . . BOLT	1	—	EB9/37
A25/2B	. . . BOLT	2	—	EB9/38
A25/15B	. . . BOLT	1	—	EB9/39
EA3.81.2295	. . . BRACKET	1	—	EB9/40
EA3.81.2283	. . . CLAMP, arm assembly	1	—	EB9/41
EA3.81.2285	. . . CLAMP	1	—	EB9/42
8757-2	. . . COVER	1	—	EB9/43
L1115	. . . FILAMENT	1	—	EB9/44
EL12957	. . . LAMPHOLDER	1	—	EB9/45
AGS2001B1	. . . NUT, stiff, 4BA	4	—	EB9/46
EL31772	. . . SCREEN	1	—	EB9/47
EA3.81.2297	. . . SPRING	1	—	EB9/48
EA3.81.2301	. . . STRIP, cork	2	—	EB9/49
EA3.81.2287	. . . TUBE, distance	1	—	EB9/50

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
SP13B	. . .	WASHER	3	—	EB9/51
SP16B	. . .	WASHER	1	—	EB9/52
SP55B	. . .	WASHER	3	—	EB9/53
EA3.81.2291	. . .	WASHER	1	—	EB9/54
SIS1584	. . .	LAMP, inspection, Mk. 2	1	—	EB9/55
R E & I 12717	. . .	LAMP, instrument	1	—	EB11/1
R SIS3065	. . .	LAMP, ultra violet, type B, No. 1, 50 ⁰ beam	2	—	EB11/2
R AGS2002B1	. . .	Attaching parts for SIS3065:—			
A43B8	. . .	Nut, stiff, 4BA	QR	—	EB11/3
	. . .	Screw, 4BA	QR	—	EB11/4
SIS3065	. . .	LAMP, ultra violet, type B, No. 1, 90 ⁰ beam	2	—	EB11/5
AGS2002B4	. . .	Attaching parts for SIS3065:—			
A43B12	. . .	Nut, stiff, 4BA	2	—	EB11/6
	. . .	Screw, 4BA	2	—	EB11/7
EL35566	. . .	LAMP (MOD 4937—S.O.O.) (MOD 5204)	1	—	EB11/8
SIS1585	. . .	LEAD, extension	1	—	EB9/59
A25/2B	. . .	Attaching parts for SIS1585:—			
AGS2002B1	. . .	Bolt, 4BA	2	—	EB9/60
SP15B	. . .	Nut, stiff, 4BA	2	—	EB9/61
	. . .	Washer	2	—	EB9/62
EA4.81.6237	. . .	LIGHT, EQUIPMENT BAY, ASSEMBLY, STARBOARD	1	—	EB11/9
EH5.81.245	. . .	Spares for:—			
A25/2B	. . .	BRACKET, mounting	1	—	EB11/10
AGS2001B1	. . .	Attaching parts for EH5.81.245:—			
	. . .	Bolt, 4BA	3	—	EB11/11
	. . .	Nut, stiff, 4BA	3	—	EB11/12
GE304	. . .	FILAMENT, 28V, 7W	1	—	EB11/13
E & I 2398	. . .	LAMP, cockpit, Mk. 1A	1	—	EB11/14
AGS2001B1	. . .	Attaching parts for E & I 2398:—			
R EH5.81.249	. . .	Nut, stiff, 4BA	3	—	EB11/15
A31B24	. . .	Packing	1	—	EB11/19
	. . .	Screw, 4BA	3	—	EB11/16
Z50211	. . .	LINK, commoning, 3 way	2	—	
703-2-00253	. . .	LINK, commoning, 4 way	1	—	
703-2-00254	. . .	LINK, commoning, 5 way	1	—	
703-2-00260	. . .	LINK, transverse	1	—	
SIS3008	. . .	SCREEN, lamp	11	—	EB11/17
EL31772	. . .	SCREEN (MOD 4937—S.O.O.) (MOD 5204)	1	—	EB11/18
SL3/3	. . .	SLEEVE (PRE—MOD 4937) (PRE—MOD 5204)	QR	—	
CXH	. . .	SLEEVE 3/8" long (Mod 4937—S.O.O.) (Mod 5204)	QR	—	

AP101B-0402-3A

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
EA3.81.1165	. . STUD, mounting	4	—	
5CW/4405514	. . SWITCH, dimmer, type R	2	—	EB11/20
5CW/4405520	. . SWITCH, dimmer, type R	1	—	EB11/21
	Attaching parts for 5CW/4405520 and 5CW/4405514:—			
AGS2002A4	. . Nut, stiff, 4BA	3	—	EB11/22
A43A28	. . Screw, 6BA	3	—	EB11/23
AS2304/030	. . Tube, distance	3	—	EB11/24
5CW/4405516	. . SWITCH, dimmer, type R	1	—	EB11/25
5CW/4405520	. . SWITCH, dimmer, type R	3	—	EB11/26
	Attaching parts for 5CW/4405516 and 5CW/4405520:—			
A43A16	. . Screw	3	—	EB11/27
8295B109	. . SWITCH, single pole (Pre Mod.4937) (Pre Mod.5204)	1	—	
EA3.81.33	. LOOMS, CABLE, ASSEMBLY (PRE MOD.4937)	—	—	
EA3.81.7033	. LOOMS, CABLE, ASSEMBLY (MOD.4937 — S.O.O.)	—	—	
EA3.81.8033	. LOOMS, CABLE, ASSEMBLY (MOD.5204)	—	—	
	Spares for:			
EA3.81.7295	. . CABLE, ASSEMBLY, BT1, pilot's port switch panel to bulkhead plug (Mod.4937 — S.O.O.) (Mod.5204)	1	—	
EA1.81.777/1	. . CABLE, ASSEMBLY, EB, from battery to earth	1	—	
EA3.81.851/1	. . CABLE, ASSEMBLY, EW, from 400 cycles distribution box to earth (Pre Mod.5097)	1	—	
EA3.81.6219	. . CABLE, ASSEMBLY, EW (Alt. R60/65 — Mod.5097)	1	—	
EA3.81.2631	. . CABLE, ASSEMBLY, E13, from JB13 to earth (Pre Mod.5097)	1	—	
EA3.81.6211	. . CABLE, ASSEMBLY, E13 (Alt. R60/65 — Mod.5097)	1	—	
EB6.81.589	. . CABLE, ASSEMBLY, E14, from JB14 and 400 cycles fuse box to earth (Pre Mod.5097)	2	—	
EA3.81.6213	. . CABLE, ASSEMBLY, E14 (Alt. R60/65 — Mod.5097)	2	—	
EA3.81.848/1	. . CABLE, ASSEMBLY, E25, from electrical control panel to earth	2	—	
EA3.81.2543	. . CABLE, ASSEMBLY, E27, from pilot's console to earth (Mod.262)	12	—	
EA3 81.852/1	. . CABLE, ASSEMBLY, E28, from D.C. distribution box to earth (Pre Mod.5097)	2	—	
EA3.81 6215	. . CABLE, ASSEMBLY, E28 (Alt. R60/65 — Mod.5097)	2	—	
EA3.81.853/1	. . CABLE, ASSEMBLY, E29, from 1600 cycles distribution box to earth (Pre Mod.5097)	2	—	
EA3.81.6217	. . CABLE, ASSEMBLY, E29 (Alt. R60/65 — Mod.5097)	2	—	
EA3.81.1989	. . CABLE, ASSEMBLY, E34, from inverter No.4 (200) to earth (Pre Mod.4937) (Pre Mod.5204)	1	—	
EA3.81.661/2	. . CABLE, ASSEMBLY, F20, from D.C. distribution box to main electrical panel	1	—	

R
RR
R

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA2.81.5287	. .	CABLE, ASSEMBLY, F22, from bulkhead plug to main electrical panel	1	-	
EA3.81.663/2	. .	CABLE, ASSEMBLY, F23, from D.C. distribution box to main electrical panel	1	-	
EA3.81.2821/2	. .	CABLE, ASSEMBLY, F24, from D.C. distribution box to main electrical panel	1	-	
EA3.81.665/1	. .	CABLE, ASSEMBLY, F35, from main electrical panel to V.H.F. relay panel (Pre Mod.4937) (Pre Mod.5204)	1	-	
EA1.81.651/1	. .	CABLE, ASSEMBLY, F37, from main electrical panel to suppressor (Pre Mod.4937) (Pre Mod.5204)	1	-	
EA1.81.673	. .	CABLE, ASSEMBLY, F37A, from suppressor to electrical regulator (Pre Mod.4937) (Pre Mod.5204)	1	-	
EA1.81.666	. .	CABLE, ASSEMBLY, F38, from electrical regulator to inverter No.5 (201) (Pre Mod.4937) (Pre Mod.5204)	1	-	
EA3.81.688	. .	CABLE, ASSEMBLY, F40, from 400 cycles distribution box to electrical regulator (Pre Mod.4937) (Pre Mod.5204)	1	-	
EA6.81.652	. .	CABLE, ASSEMBLY, F41, from 400 cycles distribution box to type B1 torque switch	1	-	
EA6.81.653	. .	CABLE, ASSEMBLY, F42, from 400 cycles distribution box to type B1 torque switch	1	-	
EA3.81.669/1	. .	CABLE, ASSEMBLY, F44, from D.C. distribution box to undercarriage switch terminal board	1	-	
EA3.81.670/1	. .	CABLE, ASSEMBLY, F45, from D.C. distribution box to pyrometer voltage compensator	1	-	
EB6.81.2361	. .	CABLE, ASSEMBLY, F46, from main electrical panel to port and starboard inertia switches	1	-	
EA2.81.672/2	. .	CABLE, ASSEMBLY, F48, from bulkhead plug to hatch jettison circuit	1	-	
EA3.81.673/2	. .	CABLE, ASSEMBLY, F49, from main electrical panel to bulkhead plug (Pre Mod.4937) (Pre Mod.5204)	1	-	
EA3.81.7273	. .	CABLE, ASSEMBLY, F49 (MOD.4937 - S.O.O.) (MOD.5204)	1	-	
EA3.81.674/2	. .	CABLE, ASSEMBLY, F52, from D.C. distribution box to suppressor and inverter No.2 (100)	1	-	
EA3.81.675/1	. .	CABLE, ASSEMBLY, F52B, from suppressor to inverter No.3 (R.C.8A)	1	-	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
8314	EA3.81.689/1	CABLE, ASSEMBLY, F54, from D.C. distribution box to inverter No. 4 (200) (Pre—Mod 4937) (Pre—Mod 5204)	1	—	—	
41543	EA3.81.677/2	CABLE, ASSEMBLY, F57, from D.C. distribution box to inverter No. 2 (100) (Pre—Mod 4937) (Pre—Mod 5204)	1	—	—	
41544	EA3.81.678/2	CABLE, ASSEMBLY, F58, from D.C. distribution box to inverter No. 3 (R.C.8A)	1	—	—	
16999	EA3.81.679/1	CABLE, ASSEMBLY, F59, from 1600 cycles distribution box to inverter No. 4 (200) (Pre—Mod 4937) (Pre—Mod 5204)	1	—	—	
8306	EA3.81.680	CABLE, ASSEMBLY, F60, from 1600 cycles distribution box to inverter No. 5 (201) (Pre—Mod 4937) (Pre—Mod 5204)	1	—	—	
44966	EB6.81.1523	CABLE, ASSEMBLY, F61, from 1600 cycles distribution box to suppressor B6 (Mod 1435—S.O.O.) (Pre—Mod 4937) (Pre—Mod 5204)	1	—	—	
40522	EB6.81.1525/2	CABLE, ASSEMBLY, F70 and F71, F70 from 1600 cycles distribution box to suppressor B6, F71 from D.C. distribution box to suppressor B6 (Mod 1435—S.O.O.) (Pre—Mod 4937) (Pre—Mod 5204)	1	—	—	
8307	EA3.81.681/1	CABLE, ASSEMBLY, F83, from D.C. distribution box to suppressor (Pre—Mod 4937) (Pre—Mod 5204)	1	—	—	
8308	EA3.81.682/1	CABLE, ASSEMBLY, F83A, from 1600 cycles distribution box to suppressor (Pre—Mod 4937) (Pre—Mod 5204)	1	—	—	
8309	EA3.81.683	CABLE, ASSEMBLY, F88, from 1600 cycles distribution box to Rebecca T.R. unit (Pre—Mod 4937) (Pre—Mod 5204)	1	—	—	
8310	EA3.81.685	CABLE, ASSEMBLY, F90, from 1600 cycles distribution box to Rebecca T.R. unit (Pre—Mod 4937) (Pre—Mod 5204)	1	—	—	
8542	EA3.81.2561	CABLE, ASSEMBLY, F93 from 1600 cycles distribution box to R/W W/F generator blower (Pre—Mod 4937) (Pre—Mod 5204)	1	—	—	
	EB7.81.523	CABLE, ASSEMBLY, F95, from 1600 cycles distribution box to 400 cycles distribution box (Pre—Mod 4937) (Pre Mod 5204)	1	—	—	
1438590	EA3.81.2401/2	CABLE, ASSEMBLY, F100, from D.C. distribution box to relay box (Mod 272)	1	—	—	
45407	EA3.81.5951	CABLE, ASSEMBLY, F135, from main electrical panel to centre fuselage connection (Mod 4937—S.O.O.) (Mod 5204)	1	—	—	
45209	EA3.81.6489	CABLE, ASSEMBLY, F170, from 400 cycles fuse box to windscreen heater control unit	1	—	—	
	EA3.81.6153	CABLE, ASSEMBLY, F504, from 1600 cycles distribution box, pressure error correction unit and D.C. distribution box to bulkhead plug	1	—	—	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mati. Spec.	Cl. of Equip M.R. L.M.	Plate No.
20495	EA3.81.2535	CABLE, ASSEMBLY, NS1, from electrical control panel to engine instrument panel (Mod 4937—S.O.O.) (Mod 5204)	1	—	—	
41678	EA3.81.2537/2	CABLE, ASSEMBLY, NS2, from engine instrument panel to 400 cycles fuse box (Mod 4937—S.O.O.) (Mod 5204)	1	—	—	
41583	EA3.81.601/2	CABLE, ASSEMBLY, N2, from bulkhead plug to bomb release M.A.U. (Pre—Mod 5081)	1	—	—	
41584	EA3.81.602/2	CABLE, ASSEMBLY, N2A, from JB14 to bulkhead plug	1	—	—	
	EA3.81.603/2	CABLE, ASSEMBLY, N5, from pilot's console to bulkhead plug (Pre—Mod 5081)	1	—	—	
44517	EA3.81.1193/2	CABLE, ASSEMBLY, N7X, from electrical control panel to bulkhead plug	1	—	—	
6101045	EA3.81.605/2	CABLE, ASSEMBLY, N8X, from electrical control panel to bulkhead plug	1	—	—	
45201	EA3.81.2963/2	CABLE, ASSEMBLY, N13, from electrical control panel to JB13	1	—	—	
45190	EA3.81.607/2	CABLE, ASSEMBLY, N14, from electrical control panel to JB14 (Pre—Mod 4937) (Pre—Mod 5204)	1	—	—	
	EA3.81.7279	CABLE, ASSEMBLY, N14 (Mod 4937—S.O.O.) (Mod 5204)	1	—	—	
8913	EA3.81.608/1	CABLE, ASSEMBLY, N18, from 400 cycles fuse box to bulkhead plug	1	—	—	
41594	EA3.81.1177/2	CABLE, ASSEMBLY, N19, from electrical control panel to bulkhead plug	1	—	—	
41595	EA3.81.610/2	CABLE, ASSEMBLY, N21, from bulkhead plug to camera control (Pre—Mod 5081)	1	—	—	
44459	EA3.81.5809	CABLE, ASSEMBLY, N22, from electrical control panel to bulkhead plug	1	—	—	
44906	EA3.81.1179/2	CABLE, ASSEMBLY, N25, from electrical control panel to bulkhead plug	1	—	—	
44907	EA3.81.1181/2	CABLE, ASSEMBLY, N26, from electrical control panel to bulkhead plug	1	—	—	
6051281	EA3.81.1183/2	CABLE, ASSEMBLY, N27, from electrical control panel to bulkhead plug	1	—	—	
44908	EA3.81.1185/2	CABLE, ASSEMBLY, N28, from electrical control panel to bulkhead plug	1	—	—	
44909	EA3.81.1187/2	CABLE, ASSEMBLY, N29, from electrical control panel to bulkhead plug	1	—	—	
45208	EA3.81.6435	CABLE, ASSEMBLY, N48, from bulkhead plug to hatch jettison circuit	1	—	—	
6051138	EA2.81.5901	CABLE, ASSEMBLY, N49, from bulkhead plug to emergency bomb jettison circuit (Pre—Mod 4937) (Pre—Mod 5204)	1	—	—	

AP101B-0402-3A

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
EA3.81.7275	. . . CABLE, ASSEMBLY, N49 (MOD.4937 - S.O.O.) (MOD.5204)	1	-	
EA3.81.2593/2	. . . CABLE, ASSEMBLY, N50, from starter panel to throttle box	1	-	
EA3.81.620/2	. . . CABLE, ASSEMBLY, N51, from electrical control panel to engine instrument panel	1	-	
EA3.81.621/2	. . . CABLE, ASSEMBLY, N52, from electrical control panel to engine instrument panel	1	-	
EA3.81.1459/2	. . . CABLE, ASSEMBLY, N53, from electrical control panel to engine instrument panel	1	-	
EA3.81.1460/2	. . . CABLE, ASSEMBLY, N54, from electrical control panel to engine instrument panel	1	-	
EA2.81.298/2	. . . CABLE, ASSEMBLY, N55, from starter panel to time switch	1	-	
EA2.81.300/2	. . . CABLE, ASSEMBLY, N56, from starter panel to time switch	1	-	
EA3.81.626/2	. . . CABLE, ASSEMBLY, N57, from electrical control panel to starter panel	1	-	
EA3.81.627/2	. . . CABLE, ASSEMBLY, N58, from electrical control panel to starter panel	1	-	
EA3.81.630	. . . CABLE, ASSEMBLY, N61, from 400 cycles fuse box to flight instrument terminal board	1	-	
EA2.81.324	. . . CABLE, ASSEMBLY, N62, from electrical control panel to flight instrument terminal board	1	-	
EA3.81.1189/2	. . . CABLE, ASSEMBLY, N64, from starboard fixed panel to bulkhead plug (Pre Mod.5204)	1	-	
R EA3.04.1887	. . . CABLE, ASSEMBLY, N64 (MOD.5204)	1	-	
EA3.81.633/2	. . . CABLE, ASSEMBLY, N65, from electrical control panel to starboard fixed panel (Pre Mod.5204)	1	-	
R EA3.81.6781	. . . CABLE, ASSEMBLY, N65 (MOD.5204 R1)	1	-	
EA3.81.1191/2	. . . CABLE, ASSEMBLY, N66, from port fixed panel to bulkhead plug	1	-	
EA3.81.1521/2	. . . CABLE, ASSEMBLY, N69, from electrical control panel to bomb firing station terminal board and control column plug	1	-	
EA2.81.352/2	. . . CABLE, ASSEMBLY, N70, from electrical control panel to aileron trim actuator and aileron trim position transmitter	1	-	
EA2.81.315/2	. . . CABLE, ASSEMBLY, N71, from electrical control panel to pilot's console	1	-	
EA3.81.639/2	. . . CABLE, ASSEMBLY, N72, from pilot's console to bulkhead plug	1	-	
EA3.81.1523	. . . CABLE, ASSEMBLY, N73, from terminal board to bomb firing station (Pre Mod.5081)	1	-	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA1.81.684/1		CABLE, ASSEMBLY, N74, from windscreen heater control unit to D.V. windscreen	1	—	
EA3.81.1525		CABLE, ASSEMBLY, N75, from bomb firing station to bomb release M.A.U. (Pre Mod.5081)	1	—	
EA3.81.2591/2		CABLE, ASSEMBLY, N76, from starter panel to pilot's console plug, to throttle box plug, to windscreen heater terminal board, to windscreen heater control unit, and to pitot heat terminal board	1	—	
EA2.81.326		CABLE, ASSEMBLY, N77, from flying instrument panel to flight instrument terminal board	1	—	
EA3.81.2737		CABLE, ASSEMBLY, N78, from flying instrument panel to flight instrument terminal board	1	—	
EA3.81.656/2		CABLE, ASSEMBLY, N80, from pilot's console to canopy demist motor suppressor	1	—	
EA3.81.657		CABLE, ASSEMBLY, N80A, from suppressor to canopy demist blower motor	1	—	
EA3.81.644		CABLE, ASSEMBLY, N81, from 400 cycles fuse box to bombsight J.B. (Pre Mod.5081)	1	—	
EA3.81.645/1		CABLE, ASSEMBLY, N82, from bombsight J.B. to sighting head (Pre Mod.5081)	1	—	
EA3.81.646/1		CABLE, ASSEMBLY, N83, from bombsight J.B. to bombsight control panel (Pre Mod.5081)	1	—	
EA3.81.647/1		CABLE, ASSEMBLY, N83A, from bombsight control panel to sighting head (Pre Mod.5081)	1	—	
EA3.81.648/1		CABLE, ASSEMBLY, N84, from bombsight J.B. to bombsight computer (Pre Mod.5081)	1	—	
EA3.81.654/1		CABLE, ASSEMBLY, N85, from bombsight J.B. to bombsight computer (Pre Mod.5081)	1	—	
EA3.81.649		CABLE, ASSEMBLY, N87, from 400 cycles fuse box to GIVB amplifier	1	—	
EA3.81.2255		CABLE, ASSEMBLY, N96, from electrical control panel to G.H. emergency power switch unit (Pre Mod.4937) (Pre Mod.5204)	1	—	
EA3.81.2253		CABLE, ASSEMBLY, N97, from bulkhead plug to terminal board 266 (Pre Mod.4937) (Pre Mod.5204)	1	—	
EA3.81.2251		CABLE, ASSEMBLY, N98, from bulkhead plug to terminal board 266 (Pre Mod.4937) (Pre Mod.5204)	1	—	

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.81.2601	. .	CABLE, ASSEMBLY, N101, from starter panel to jettison relay panel	1	—	
EA3.81.2603	. .	CABLE, ASSEMBLY, N101A, from starter panel to flying instrument panel (Pre-Mod 5097)	1	—	
EA3.81.2603	. .	CABLE, ASSEMBLY, N101A, from starter panel to flying instrument panel (Alt. R60/58-Mod 5097)	1	—	
EA2.81.1439	. .	CABLE, ASSEMBLY, N102K, frame slave relay box and pilot's console to centre fuselage connection (Mod 4937-S.O.O.) (Mod 5204)	1	—	
EA3.81.5785	. .	CABLE, ASSEMBLY, N401, from electrical control panel to engine instrument panel	1	—	
EA3.81.6675	. .	CABLE, ASSEMBLY, N504, from electrical control panel to bulkhead plug (Pre-Mod 4868)	1	—	
EA3.81.6789	. .	CABLE, ASSEMBLY, N504 (SRIM.3479) (Mod 4868)	1	—	
EB7.81.1783	. .	CABLE, ASSEMBLY, 4C1, from undercarriage terminal board to undercarriage switch (Pre-Mod 5091)	1	—	
EA1.81.1225	. .	CABLE, ASSEMBLY, 4C1 (Mod 5091)	1	—	
EB7.81.1785	. .	CABLE, ASSEMBLY, 4C2, from undercarriage terminal board to undercarriage switch (Pre-Mod 5091)	1	—	
EA1.81.1227	. .	CABLE, ASSEMBLY, 4C2 (Mod 5091)	1	—	
EB7.81.1787	. .	CABLE, ASSEMBLY, 4C3, from undercarriage terminal board to undercarriage switch (Pre-Mod 5091)	1	—	
EA1.81.1229	. .	CABLE, ASSEMBLY, 4C3 (Mod 5091)	1	—	
EA1.81.675/1	. .	CABLE, ASSEMBLY, 4C4, from undercarriage terminal board to undercarriage switch	1	—	
EA3.81.820	. .	CABLE, ASSEMBLY, 13A, from J.B.13 to G.H. control 522 (Mod 404) (Pre-Mod 5081)	1	—	
EA3.81.2673	. .	CABLE, ASSEMBLY, 13C, from J.B.13 to A.M.U. and A.P.I. suppressor	1	—	
EA3.81.824/1	. .	CABLE, ASSEMBLY, 13C1, from A.M.U. and A.P.I. suppressor to A.M.U. and A.P.I. junction box	1	—	
EA3.81.825/1	. .	CABLE, ASSEMBLY, 13D, from J.B.13 to air thermo	1	—	
EA3.81.3081	. .	CABLE, ASSEMBLY, 13H, from J.B.13 to oxygen regulator and oxygen warning indicator	1	—	
EB6.81.763	. .	CABLE, ASSEMBLY, 13J, from J.B.13 to oxygen regulator	1	—	
EA3.81.2961	. .	CABLE, ASSEMBLY, 13K, from J.B.13 to control panel terminal board (Pre-Mod 4937) (Pre-Mod 5204)	1	—	
EA3.81.829/1	. .	CABLE, ASSEMBLY, 14A, from J.B.14 to suppressor between J.B.14 and 400 cycles fuse box	1	—	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Mati. Spec.	Plate No.
EA3.81.2589	CABLE, ASSEMBLY, 14A1, from suppressor to 400 cycles fuse box	1	—	
EA3.81.831/1	CABLE, ASSEMBLY, 14B, from JB14 to relay type Q No. 1 (Pre-Mod 5081)	1	—	
EA3.81.832/1	CABLE, ASSEMBLY, 14B1, from relay type Q No. 1 to camera control (Pre-Mod 5081)	1	—	
EA3.81.833/1	CABLE, ASSEMBLY, 14B2, from relay type Q No. 1 to bomb aimer's control (Pre-Mod 5081)	1	—	
EA3.81.834/1	CABLE, ASSEMBLY, 14C, from J.B.14 to camera master switch (Pre-Mod 5081)	1	—	
EA3.81.835/1	CABLE, ASSEMBLY, 14C1, from camera master switch to camera control (Pre-Mod 5081)	1	—	
EA3.81.836/1	CABLE, ASSEMBLY, 14D, from J.B.14 to bomb release M.A.U. (Pre-Mod 5081)	1	—	
EA3.81.837/1	CABLE, ASSEMBLY, 14D1, from bomb release M.A.U. to bomb aimer's control (Pre-Mod 5081)	1	—	
EA3.81.838/1	CABLE, ASSEMBLY, 14D2, from bomb release A.M.U. to bomb aimer's control (Pre-Mod 5081)	1	—	
EB7.81.597	CABLE, ASSEMBLY, 14H, from J.B.14 to intercomm crate (Mod 310)	1	—	
EA3.81.841/1	CABLE, ASSEMBLY, 14J, from J.B.14 to Westland valve	1	—	
EA3.81.842/1	CABLE, ASSEMBLY, 14K, from J.B.14 to nose and tail fusing switch (Pre-Mod 5081)	1	—	
EA3.81.843/1	CABLE, ASSEMBLY, 14K1, from nose and tail fusing switch to bomb release M.A.U. (Pre-Mod 5081)	1	—	
EA3.81.2585	CABLE, ASSEMBLY, 14L, 14M, 14N, from J.B.14, 14L and 14M to relay type Q No. 3, 14N to electric horn type C (Mod 310)	1	—	
EA3.81.2721	CABLE, ASSEMBLY, 14P, from J.B.14 to bomb aimer's oxygen warning indicator	1	—	
EA3.81.2719	CABLE, ASSEMBLY 14R, from J.B.14 to bomb aimer's oxygen regulator	1	—	
EA3.81.3193	CABLE, ASSEMBLY, 14S, from J.B.14 to oxygen regulator			
5C/879	FUSE, type S, 2.5 amp (Pre-Mod 4420)	11	—	
TDA62-5A	FUSE, type S, 50 amp (Pre-Mod 4420)	2	—	
Z22431	GROMMET	1	—	
Z22634	GROMMET, dummy (Mod 5081)	5	—	
EEAS71/1	LINK, commoning, 2-way (Pre-Mod 4420)	2	—	
EEAS71/3	LINK, commoning, 4-way (Pre-Mod 4420)	4	—	
703/2/00253	LINK, commoning, 4-way (Pre-Mod 4420)	—	—	

AP101B-0402-3A

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Mati. Spec.	Plate No.
EA3.81.43	. LOOMS, CABLE, INSTRUMENT, ASSEMBLY (PRE MOD.4937) (PRE MOD.5204)	—	—	
EA3.81.7043	. LOOMS, CABLE, INSTRUMENT, ASSEMBLY (MOD.4937 — S.O.O.) (MOD.5204)	—	—	
EA3.81.2353	. Spares for: . . CABLE, ASSEMBLY, AC1 to AU1A, from A.M.U. control panel to bulkhead connection	1	—	
EA3.81.2355	. . CABLE, ASSEMBLY, AC2 to AU2A, from A.M.U. control panel to bulkhead connection	1	—	
EB7.81.1087	. . CABLE, ASSEMBLY, AC3 to AR2, from A.M.U. control panel to repeater unit (Pre Mod.4937)	1	—	
5391/7	. . CABLE, ASSEMBLY, from A.M.U. control panel to repeater unit (SRIM.3577) (Mod.4937 — S.O.O.)	1	—	
EB7.81.1081	. . CABLE, ASSEMBLY, AJ3 to M5, from G4B master indicator to repeater J.B. (Pre Mod.4937)	1	—	
5391/8	. . CABLE, ASSEMBLY, from G4B master indicator to A.P.I. (SRIM.3577) (Mod.4937)	1	—	
EB7.81.1079	. . CABLE, ASSEMBLY, from repeater J.B. to A.P.I. (Pre Mod.4937)	1	—	
R EA3.81.927	. . CABLE, ASSEMBLY, A2 to C2, from G4B control panel to G4B amplifier	1	—	
EA3.81.992	. . CABLE, ASSEMBLY, BS1 to AJ2, from repeater J.B. to bombsight computer (Pre Mod.5081)	1	—	
EA3.81.950	. . CABLE, ASSEMBLY, C1 to SW, from G4B control panel to engine starter panel (Pre Mod.5097)	1	—	
EA3.81.6243	. . CABLE, ASSEMBLY, C1 to SW (Alt. R60/58 — Mod.5097)	1	—	
EA3.81.929	. . CABLE, ASSEMBLY, G1 to C3, from G4B control panel to gyro unit	1	—	
EA3.81.923	. . CABLE, ASSEMBLY, M1 to A1, from G4B amplifier to G4B master indicator	1	—	
EA3.81.925	. . CABLE, ASSEMBLY, M2 to A4, from G4B amplifier to G4B master indicator	1	—	
R EA3.81.934	. . CABLE, ASSEMBLY, M3 to D1C, from G4B master indicator to bulkhead connection	1	—	
EA3.81.947/1	. . CABLE, ASSEMBLY, 13C2, from A.M.U. control panel to junction box (Pre Mod.4937)	1	—	
5391/3	. . CABLE, ASSEMBLY, from A.M.U. control panel to junction box (SRIM.3577) (Mod.4937)	1	—	
R EA3.81.2635	. . CABLE, ASSEMBLY, 13C3, from A.P.I. to junction box	1	—	
5391/1	. . CABLE, ASSEMBLY, from A.M.U. control panel to A.M.I. (SRIM.3577) (Mod.4937)	1	—	
R 508-1-03442-003	. . CAP, protective	3	—	
AGS1657/1	. . COLLET	2	—	
AGS1725/1	. . DISC, blanking	2	—	
AGS1725/2	. . DISC, blanking	1	—	
AGS1658/0	. . NUT, gland	2	—	
AGS1658/8	. . NUT, gland	1	—	
ST/MDPM/4	. MOUNTING, anti-vibration, type 967 (Pre Mod.4937) (Pre Mod.5204)	2	—	
ST/MDPM/6	. MOUNTING, anti-vibration, type 968 (Pre Mod.4937) (Pre Mod.5204)	2	—	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.					
				1	2	3	4	5	6
EA2.81.95	. MOUNTING, JUNCTION BOX FLIGHT INSTRUMENTS Spares for:	1	—						
EA3.81.1575	. . BOX, junction, flight instrument (Pre Mod.1413)	1	—						
EA3.81.2723	. . BOX, junction, flight instrument (Mod.1413) Attaching parts for EA3.81.2723:	1	—						EB12/1
A32B12	. . Screw, round head, 4BA	4	—						EB12/2
EEAS28/2CR	. . Washer	4	—						EB12/3
EA2.81.93	. . BRACKET, mounting Attaching parts for EA2.81.93:	1	—						EB12/4
A25/1B	. . Bolt, 4BA	4	—						EB12/5
AGS2001B1	. . Nut, stiff, 4BA	4	—						EB12/6
EEAS28/2CR	. . Washer	4	—						EB12/7
EA3.81.2349	. MOUNTING, JUNCTION BOXES AND SUPPRESSOR FOR A.P.I. AND A.M.U. (PRE MOD.4937) (PRE MOD.5204)	—	—						
EA3.81.7177	. MOUNTING OF JUNCTION BOX AND SUPPRESSOR FOR A.P.I. AND A.M.U. (MOD.4937 — S.O.O.) (PRE MOD.5204)	—	—						
EA3.81.8191	. MOUNTING, JUNCTION BOX AND SUPPRESSOR FOR A.P.I. AND A.M.U. (MOD.5204) Spares for:	—	—						
SIS2364	. . BOX, junction type A, 3 way (Pre Mod.4937) (Pre Mod.5204)	2	—						
SIS2364	. . BOX, junction type A, 3 way (Mod.4937 — S.O.O.) (Mod.5204) Attaching parts for SIS2364:	1	—						EB12/8
AS1246/1B	. . Bolt, round head, 4BA	2	—						EB12/9
AGS2001B1	. . Nut, stiff	2	—						EB12/10
EB7.81.1485	. . BRACKET	1	—						
EB7.81.1487	. . BRACKET	1	—						
EA3.81.2347	. . PANEL (Pre Mod.4937) (Pre Mod.5204) Attaching parts for EA3.81.2347:	1	—						
A32C16	. . Screw, round head 2BA	4	—						
SIS3666	. . SUPPRESSOR, type B4 Attaching parts for SIS3666:	1	—						EB12/11
AS1246/2B	. . Bolt, round head, 4BA	2	—						EB12/12
AGS2001B1	. . Nut, stiff, 4BA	2	—						EB12/13
EA3.81.2583	. MOUNTING, CABIN PRESSURE WARNING HORN AND RELAY Spares for:	—	—						
SIS2407	. . HORN, electrical, type C Attaching parts for SIS2407:	1	—						EB12/14
A25/2E	. . Bolt, 1/4" BSF	2	—						EB12/15
9B2A	. . RELAY, magnetic, type 9B, No.2 Attaching parts for 9B2A:	1	—						EB12/16
A25/3B	. . Bolt, 4BA	2	—						EB12/17
AGS2001B1	. . Nut, stiff, 4BA	2	—						EB12/18
SP15B	. . Washer, 4BA	4	—						EB12/19

AP101B 0402-3A

Page EB.31

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
EA3.81.283	. MOUNTING, INVERTERS, ASSEMBLY (PRE MOD.4937) (PRE MOD.5204)	—	—	
EA3.81.7095	. MOUNTING, INVERTERS, ASSEMBLY (MOD.4937 — S.O.O.) (MOD.5204)	—	—	EB13/1
EA1.81.161	Spares for: . BRACKETRY ASSEMBLY (For MG type 8)	1	—	EB13/2
EA1.81.161A	Spares for: . . . ANGLE	4	—	EB13/3
EA1.81.166	. . . ANGLE	4	—	EB13/4
EA1.81.163	. . . CHANNEL	1	—	EB13/5
EA1.81.247	. . . CHANNEL	1	—	EB13/6
EA1.81.248	. . . CHANNEL	1	—	EB13/7
EA3.81.1161	. . . MOUNTING, inverter	1	—	EB13/8
EA3.81.1241	. . . MOUNTING, inverter	1	—	EB13/9
A25/1C	Attaching parts for EA3.81.1161 and EA3.81.1241: . . . Bolt, 2BA	4	—	EB13/10
AGS2001C1/66	. . . Nut, stiff, 2BA	4	—	EB13/11
A25/1B	Attaching parts for EA1.81.161: . . . Bolt, 4BA	6	—	EB13/12
A27/BP	. . . Nut, 4BA	6	—	EB13/13
SP47B	. . . Washer, spring	6	—	EB13/14
EA1.81.162	. . BRACKETRY ASSEMBLY (For RC type 8) Spares for:	1	—	EB13/15
EA1.81.245	. . . ANGLE	2	—	EB13/16
EA1.81.246	. . . ANGLE	2	—	EB13/17
EA1.81.168	. . . CHANNEL	1	—	EB13/18
EA1.81.170	. . . CHANNEL	1	—	EB13/19
A25/1B	Attaching parts for EA1.81.162: . . . Bolt, 4BA	6	—	EB13/20
A27BP	. . . Nut, 4BA	6	—	EB13/21
SP47B	. . . Washer, spring	6	—	EB13/22
SU2701-1	. . CONVERTER, rotary, type 8A Attaching parts for Ref.SU2701-1	1	—	EB13/23
A25/3E	. . Bolt, 1/4" BSF	4	—	EB13/24
A27EP	. . Nut, 1/4" BSF	4	—	EB13/25
SP47E	. . Washer, spring	4	—	EB13/26
5U/4671 or TYPE100B	. . INVERTER, type 100, Rotax (Pre Mod.4937) (Pre Mod.5204) . . INVERTER, type 100B, Rotax (Pre Mod.4937) (Pre Mod.5204) Attaching parts for .5U/4671 or TYPE100B	1	—	
A25/2E	. . Bolt, 1/4" BSF	4	—	
AGS2001E1/66	. . Nut, stiff, 1/4" BSF	4	—	
SP15E	. . Washer	4	—	
TYPE 201B	. . INVERTER, type 201B Attaching parts for TYPE201B	1	—	EB13/27
A25/5E	. . Bolt, 1/4" BSF	4	—	EB13/28
A27EP	. . Nut, 1/4" BSF	4	—	EB13/29
SP47E	. . Washer, spring	4	—	EB13/30

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
EA3.81.6255	. PANEL, ELECTRICAL CONTROL INSTALLATION (Used on aircraft not embodying Mod.272 and Mod.4937)(Alt. R60/118)	—	—	
EA3.81.7167	. PANEL, ELECTRICAL CONTROL, INSTALLATION (PRE MOD.5204)	—	—	
EA3.81.8149	. PANEL, ELECTRICAL CONTROL, INSTALLATION (MOD.5204)	—	—	
EA3.81.6257	. . . PANEL, ELECTRICAL CONTROL ASSEMBLY (Used on aircraft not embodying Mod.272 (Alt. R60/118)	1	—	
EA3.81.7219	. . . PANEL, ELECTRICAL CONTROL, ASSEMBLY (PRE MOD.5204)	1	—	
EA3.81.8143	. . . PANEL, ELECTRICAL CONTROL, ASSEMBLY (MOD.5204)	1	—	EB14/1
EA1.81.410 BAR, TERMINAL, ASSEMBLY Spares for:	4	—	EB14/2
EA1.81.411 BAR, terminal c/w studs Attaching parts for EA1.81.411:	1	—	EB14/3
A45B12 Screw	2	—	EB14/4
EA1.81.410A BASE, 5/16" thick	1	LFS21	EB14/5
EA1.81.410B COVER, plate 1/8" thick	1	LFS21	EB14/6
BULGIN T5 HEAD, terminal moulded	2	—	EB14/7
AGS2002E4 NUT, stiff 1/4" BSF Attaching parts for EA1.81.410:	3	—	EB14/8
AGS2021B1 Nut, cap, 4BA	2	—	EB14/9
A33B16 Screw, csk. head, 4BA	2	—	EB14/10
WARD BROOKE WBUN1146D3B BLOCK, terminal (Mod.5204) Attaching parts for WBUN1146D3B:	1	—	EB14/11
WB1114/28 Pillar, fixing	2	—	EB14/12
5CZ431 BLOCK, terminal, 2 way Attaching parts for 5CZ431	1	—	EB14/13
AGS2002A1 Nut, stiff, 6BA	2	—	EB14/14
A33A16 Screw, 6BA	2	—	EB14/15
SP15A Washer	2	—	EB14/16
703-1-00238 BLOCK, terminal, 5 way Attaching parts for 703-1-00238:	1	—	EB14/17
AGS2001B1 Nut, stiff, 4BA	2	—	EB14/18
A31B32 Screw, 4BA	2	—	EB14/19
703-1-00249 BLOCK, terminal, 20 way Attaching parts for 703-1-00249:	5	—	EB14/20
AS1246/4B Bolt, 4BA	2	—	EB14/21
AGS2001B1 Nut, stiff, 4BA	2	—	EB14/22
† BRACKET (Com. Mod/Can/0539/STC Fig.3) Attaching parts for Bracket:	1	—	EB15/1
AGS2001B1 Nut, stiff, 4BA	2	—	EB15/2
A31B16 Screw, 4BA	2	—	EB15/3
SP14B Washer	2	—	EB15/4
TYPE A NO.1 BREAKER, circuit, type A, 5 amp	6	—	EB15/5
TYPE A NO.3 BREAKER, circuit, type A, 15 amp	6	—	EB15/6
416125-08 CAP, protective (Mod.5204)	2	—	EB15/27
EA2.81.5269 CARRIER, fuse spare assembly Attaching parts for EA2.81.5269:	1	—	EB14/23
AGS2001A1 Nut, stiff, 6BA	2	—	EB14/24
A32A16 Screw, round head, 6BA	2	—	EB14/25
SP15A Washer	2	—	EB14/26

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
40942	COVER (SRIM.3577)	1	—	EB14/27
CX133877	COVER, circuit breaker trip guard Attaching parts for CX133877:	12	—	EB15/7
EA3.81.1791	Piece, packing	1	—	EB15/8
A44A8	Screw, 6BA	2	—	EB15/9
WARD BROOKE WB/NY/1110/B/8	COVER, assembly (Mod.5204)	1	—	EB15/10
THORN. L1114	FILAMENT, 28V, 3.5W (Mod.5204)	2	—	EB14/28
TDA-62-2.5A	FUSE, 2.5 amp (Pre Mod.5204)	6	—	
AS2.5	FUSE, 2.5 amp (Mod.5204)	7	—	
WIS.10112-C-1	FUSE, 5 amp (Pre Mod.5204)	76	—	
AS5	FUSE, 5 amp (Mod.5204)	2	—	
AS7.5	FUSE, 7.5 amp (Mod.5204)	2	—	
AS10	FUSE, 10 amp (Pre Mod.5204)	18	—	
AS10	FUSE, 10 amp (Mod.5204)	15	—	
AS20	FUSE, 20 amp	3	—	
102096	FUSE, dummy (Pre Mod.5204)	13	—	
102096	FUSE, dummy (Mod.5204)	11	—	
5K/9144677	GROMMET	2	—	EB15/11
EA3.81.167	LABEL, fuel pumps and cocks circuit breakers	1	—	EB15/12
EA3.81.1445	LABEL, pump cock, No.3 tank	1	—	EB15/13
EA3.81.1447	LABEL, pump cock, No.2 tank	1	—	EB15/14
EA3.81.1449	LABEL, pump cock, No.1 tank	1	—	EB15/15
EA3.81.8179	LABEL, 'on' (Mod.5204)	1	—	EB14/29
EA3.81.8181	LABEL, 'on-off' (Mod.5204)	2	—	EB14/30
EH5.81.221	LABEL, 28 volt D.C. test, Mk.29B altimeter	1	—	EB14/31
21969	LABEL (SRIM.3577)	1	—	EB14/32
22965	LABEL (SRIM.3577)	1	—	EB14/33
22966	LABEL (SRIM.3577)	1	—	EB14/34
SMITHS CFP10	LAMP, red, warning, H2707 (Mod.5204) Attaching parts for CFP10:	2	—	EB14/35
AGS2001B1	Nut, stiff, 4BA	2	—	EB14/36
A32B14	Screw, round head, 4BA	2	—	EB14/37
EA3.81.1945	LANYARD, assembly Attaching parts for EA3.81.1945:	2	—	EB14/38
AGS2001B1	Nut, stiff, 4BA	2	—	EB14/39
SP13B	Washer, 4BA	2	—	EB14/40
EEAS71/1	LINK, commoning, 2 way (Mod.5204)	1	—	
EEAS71/3	LINK, commoning, 4 way	17	—	
703-2-00251	LINK, commoning, 2 way (Pre Mod.5204)	3	—	
703-2-00251	LINK, commoning, 2 way (Mod.5204)	2	—	
703-2-00252	LINK, commoning, 3 way	1	—	
703-2-00253	LINK, commoning, 4 way	3	—	
703-2-00255	LINK, commoning, 6 way	1	—	
703-2-00260	LINK, transverse	2	—	
EA1.81.403	LINK, terminal bar	1	—	EB14/41
EA3.81.349	LINK, earth Attaching parts for EA3.81.349:	1	—	EB14/42
AGS2001C1/66	Nut, stiff, 2BA	1	—	EB14/43
A27CP	Nut, 2BA	1	—	EB14/44
A32C28	Screw, 2BA	1	—	EB14/45
SP15C	Washer	3	—	EB16/46
SP16C	Washer	1	—	EB14/47
CPL98/01/8A	LUG	1	—	
CPL98/01/8S	LUG (PRE MOD.5204)	1	—	
CPL98/01/8J	LUG (MOD.5204)	1	—	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
EA3.81.155	. . . MOUNTING, relay Attaching parts for EA3.81.155:	1	—	EB14/48
A32B12	. . . Screw, 6BA	8	—	EB14/49
EH5.81.239	. . . PACKING	1	—	EB14/50
31712	. . . PANEL, switch (SRIM.3577)	1	—	
EA3.81.7213	. . . PANEL, FUSE EQUIPMENT, ASSEMBLY (PRE MOD.5204)	1	—	
EA3.81.8157	. . . PANEL, FUSE EQUIPMENT, ASSEMBLY (MOD.5204) Spares for:	1	—	EB16/1
EA3.81.1349	. . . BLOCK, FUSE, ASSEMBLY (13-16) Spares for:	1	—	EB17/1
703-1-00416	. . . BLOCK, fuse, 4 way (25-28)	1	—	EB17/2
EA3.81.1283	. . . LABEL Attaching parts for EA3.81.1349:	1	—	EB17/3
A32B10	. . . Screw, 4BA	2	—	EB17/4
SP47B	. . . Washer, spring	2	—	EB17/5
EA3.81.1351	. . . BLOCK, FUSE, ASSEMBLY (29-32) Spares for:	1	—	EB17/6
703-1-00416	. . . BLOCK, fuse, 4 way	1	—	EB17/7
EA3.81.1285	. . . LABEL Attaching parts for EA3.81.1351:	1	—	EB17/8
A32B10	. . . Screw, 4BA	2	—	EB17/9
SP47B	. . . Washer, spring	2	—	EB17/10
EA3.81.1353	. . . BLOCK, FUSE, ASSEMBLY (33-36) Spares for:	1	—	EB17/11
703-1-00416	. . . BLOCK, fuse, 4 way	1	—	EB17/12
EA3.81.1287	. . . LABEL Attaching parts for EA3.81.1353:	1	—	EB17/13
A32B10	. . . Screw, 4BA	2	—	EB17/14
SP47B	. . . Washer, spring	2	—	EB17/15
EA3.81.1355	. . . BLOCK, FUSE, ASSEMBLY (37-40) Spares for:	1	—	EB17/16
703-1-00416	. . . BLOCK, fuse, 4 way	1	—	EB17/17
EA3.81.1289	. . . LABEL Attaching parts for EA3.81.1355:	1	—	EB17/18
A32B10	. . . Screw, 4 BA	2	—	EB17/19
SP47B	. . . Washer, spring	2	—	EB17/20
EA3.81.1363	. . . BLOCK, FUSE, ASSEMBLY, (53-56) Spares for:	1	—	EB17/21
703-1-00416	. . . BLOCK, fuse, 4 way	1	—	EB17/22
EA3.81.1297	. . . LABEL Attaching parts for EA3.81.1363:	1	—	EB17/23
A32B10	. . . Screw, 4BA	2	—	EB17/24
SP47B	. . . Washer, spring	2	—	EB17/25
EA3.81.1365	. . . BLOCK, FUSE, ASSEMBLY (57-60) Spares for:	1	—	EB17/26
703-1-00416	. . . BLOCK, fuse, 4 way	1	—	EB17/27
EA3.81.1299	. . . LABEL Attaching parts for EA3.81.1365:	1	—	EB17/28
A32B10	. . . Screw, 4BA	2	—	EB17/29
SP47B	. . . Washer, spring	2	—	EB17/30

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
5X/4491411	EA3.81.1367	BLOCK, FUSE, ASSEMBLY (61-64) Spares for:—	1	—	C	EB17/31
	703-1-00416	BLOCK, fuse, 4-way	1	—	C	EB17/32
	EA3.81.1301	LABEL Attaching parts for EA3.81.1367:—	1	—	C	EB17/33
28S/1012450 28W/9416642	A32B10	Screw, 4BA	2	—	C	EB17/34
	SP47B	Washer, spring	2	—	C	EB17/35
5X/4491411	EA3.81.1371	BLOCK, FUSE, ASSEMBLY (69-72) Spares for:—	1	—	C	EB17/36
	703-1-00416	BLOCK, fuse, 4-way	1	—	C	EB17/37
	EA3.81.1305	LABEL Attaching parts for EA3.81.1371:—	1	—	C	EB17/38
28S/1012450 28W/9416642	A32B10	Screw, 4BA	2	—	C	EB17/39
	SP47B	Washer, spring	2	—	C	EB17/40
5X/4491411	EA3.81.1373	BLOCK, FUSE, ASSEMBLY (73-76) Spares for:—	1	—	C	EB17/41
	703-1-00416	BLOCK, fuse, 4-way	1	—	C	EB17/42
	EA3.81.1307	LABEL Attaching parts for EA3.81.1373:—	1	—	C	EB17/43
28S/1012450 28W/9416642	A32B10	Screw, 4BA	2	—	C	EB17/44
	SP47B	Washer, spring	2	—	C	EB17/45
5X/4491411	EA3.81.5813	BLOCK, FUSE, ASSEMBLY (149-152) Spares for:—	1	—	C	EB17/46
	703-1-00416	BLOCK, fuse, 4-way	1	—	C	EB17/47
	EA3.81.5821	LABEL Attaching parts for EA3.81.5813:—	1	—	C	EB17/48
28S/1012450 28W/9416642	A32B10	Screw, 4BA	2	—	C	EB17/49
	SP47B	Washer, spring	2	—	C	EB17/50
5X/4491411	EA3.81.6163	BLOCK, FUSE, ASSEMBLY (41-44) Spares for:—	1	—	C	EB17/51
	703-1-00416	BLOCK, fuse, 4-way	1	—	C	EB17/52
	EA3.81.6697	LABEL Attaching parts for EA3.81.6697:—	1	—	C	EB17/53
28S/1012450 28W/9416642	A32B10	Screw, 4BA	2	—	C	EB17/54
	SP47B	Washer, spring	2	—	C	EB17/55
5X/4491411	EA3.81.6167	BLOCK, FUSE, ASSEMBLY (153-156) Spares for:—	1	—	C	EB17/56
	703-1-00416	BLOCK, fuse, 4-way	1	—	C	EB17/57
	EA3.81.6651	LABEL Attaching parts for EA3.81.6167:—	1	—	C	EB17/58
28S/1012450 28W/9416642	A32B10	Screw, 4BA	2	—	C	EB17/59
	SP47B	Washer, spring	2	—	C	EB17/60
5X/4491411	EA3.81.7231	BLOCK, FUSE, ASSEMBLY (49-52) Spares for:—	1	—	C	EB17/61
	703-1-00416	BLOCK, fuse, 4-way	1	—	C	EB17/62
	EA3.81.7233	LABEL Attaching parts for EA3.81.7233:—	1	—	C	EB17/63
28S/1012450 28W/9416642	A32B10	Screw, 4BA	2	—	C	EB17/64
	SP47B	Washer, spring	2	—	C	EB17/65
5X/4491411	EA3.81.7235	BLOCK, FUSE, ASSEMBLY (65-68) Spares for:—	1	—	C	EB17/66
	703-1-00416	BLOCK, fuse, 4-way	1	—	C	EB17/67
	EA3.81.7237	LABEL Attaching parts for EA3.81.7235:—	1	—	C	EB17/68
28S/1012450 28W/9416642	A32B10	Screw, 4BA	2	—	C	EB17/69
	SP47B	Washer, spring	2	—	C	EB17/70

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
5X/4491411	EA3.81.7239	BLOCK, FUSE, ASSEMBLY (77-80) Spares for:—	1	—	C	EB17/71
	703-1-00416	BLOCK, fuse, 4-way	1	—	C	EB17/72
	EA3.81.7241	LABEL	1	—	C	EB17/73
28S/1012450 28W/9416642	A32B10	Attaching parts for EA3.81.7239:— Screw, 4BA	2	—	C	EB17/74
	SP47B	Washer, spring	2	—	C	EB17/75
5X/4491411	EA3.81.7243	BLOCK, FUSE, ASSEMBLY (157-160) Spares for:—	1	—	C	EB17/76
	703-1-00416	BLOCK, fuse, 4-way	1	—	C	EB17/77
	EA3.81.7245	LABEL	1	—	C	EB17/78
28S/1012450 28W/9416642	A32B10	Attaching parts for EA3.81.7243:— Screw, 4BA	2	—	C	EB17/79
	SP47B	Washer, spring	2	—	C	EB17/80
5X/4491411	EA3.81.7247	BLOCK, FUSE, ASSEMBLY (161-164) Spares for:—	1	—	C	EB17/81
	703-1-00416	BLOCK, fuse, 4-way	1	—	C	EB17/82
	EA3.81.7249	LABEL	1	—	C	EB17/83
28S/1012450 28W/9416642	A32B10	Attaching parts for EA3.81.7247:— Screw, 4BA	2	—	C	EB17/84
	SP47B	Washer, spring	2	—	C	EB17/85
5X/4491411	EA3.81.7251	BLOCK, FUSE, ASSEMBLY (170-173) Spares for:—	1	—	C	EB17/86
	703-1-00416	BLOCK, fuse, 4-way	1	—	C	EB17/87
	EA3.81.7253	LABEL	1	—	C	EB17/88
28S/1012450 28W/9416642	A32B10	Attaching parts for EA3.81.7251:— Screw, 4BA	2	—	C	EB17/89
	SP47B	Washer, spring	2	—	C	EB17/90
5X/4491411	EA3.81.7255	BLOCK, FUSE, ASSEMBLY (81-84) Spares for:—	1	—	C	EB17/91
	703-1-00416	BLOCK, fuse, 4-way	1	—	C	EB17/92
	EA3.81.7257	LABEL	1	—	C	EB17/93
28S/1012450 28W/9416642	A32B10	Attaching parts for EA3.81.7255:— Screw, 4BA	2	—	C	EB17/94
	SP47B	Washer, spring	2	—	C	EB17/95
5X/4491411	EA3.81.7323	BLOCK, FUSE, ASSEMBLY (45-48) Spares for:—	1	—	C	EB17/96
	703-1-00416	BLOCK, fuse, 4-way	1	—	C	EB17/97
	EA3.81.7325	LABEL	1	—	C	EB17/98
28S/1012450 28W/9416642	A32B10	Attaching parts for EA3.81.7323:— Screw, 4BA	2	—	C	EB17/99
	SP47B	Washer, spring	2	—	C	EB17/100
5X/4491411	EA3.81.7227	BLOCK, FUSE, ASSEMBLY (21-24) (PRE—MOD 5204)	1	—	C	
	EA3.81.8193	BLOCK, FUSE, ASSEMBLY (21-24) (MOD 5204) Spares for:—	1	—	C	EB17/101
	703-1-00416	BLOCK, fuse, 4-way	1	—	C	EB17/102
28S/1012450 28W/9416642	EA3.81.7229	LABEL (Pre—Mod 5204)	1	—	C	
	EA3.81.8195	LABEL (Mod 5204)	1	—	C	EB17/103
	A32B10	Attaching parts for EA3.81.7227 or EA3.81.8193:— Screw, 4BA	2	—	C	EB17/104
	SP47B	Washer, spring	2	—	C	EB17/105

AP101B-0402-3A

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
703-2-00244	3	—	EB16/2
AS1246/4B	QR	—	EB16/3
AS1246/6B	QR	—	EB16/4
AGS2001B1	2	—	EB16/5
EA3.81.195	QR	—	EB16/6
EA2.81.5265	1	—	EB16/7
AS491/39	2	—	EB16/8
AGS2001B1	1	—	EB16/9
A32B12	1	—	EB16/10
Z1838	6	—	EB16/11
Z1841	4	—	EB16/12
EA3.81.197	1	—	EB16/13
EA3.81.199	1	—	EB16/14
EA3.81.1451	1	—	EB16/15
EA3.81.1453	1	—	EB16/16
EA3.81.1455	1	—	EB16/17
EA3.81.1459	1	—	EB16/18
EA3.81.111	1	—	EB16/19
R A32/C12	4	—	EB16/31
R ODDIE 213	2	—	EB16/32
R ODDIE 214	2	—	EB16/33
S136/1	1	—	EB16/20
E & I			
4146A	1	—	EB16/21
AGS2001B1	2	—	EB16/22
A32B16	2	—	EB16/23
7070	4	—	EB16/24
AGS2001B1	3	—	EB16/25
A32B16	2	—	EB16/26
A33B16	1	—	EB16/27
5CW/1102662	6	—	EB16/28
AGS2001A1	4	—	EB16/29
A32A12	4	—	EB16/30
EA3.81.1549	1	—	EB15/16
EA3.81.6703	1	—	EB15/17
AGS2001A4	4	—	EB15/18
A32A10	4	—	EB15/19
TYPE R No.3	1	—	EB15/20
CPL0201/1/11310	6	—	
CPL0201/1/11310	4	—	EB15/21

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
HELLERMANN DEUTSCH 460-8-33S						RECEPTACLE, fixed socket (Mod.5204) Attaching parts for 460-8-33S	2	—	EB15/28
AGS2001A1						Nut, stiff, 6BA	4	—	EB15/29
A32A20						Screw, 6BA	4	—	EB15/30
HELLERMANN DEUTSCH 467-12-10S TYPE S1						RECEPTACLE, fixed socket RELAY, type S1 Attaching parts for TYPE S1	1 8	— —	EB15/31 EB14/51
AGS2001A1						Nut, stiff, 6BA	4	—	EB14/52
5CZ/4337466						RESISTANCE, variable Attaching parts for	1	—	EB15/32
AGS2001C1/66						Nut, stiff, 6BA	4	—	EB15/33
A31C20						Screw, 2BA	4	—	EB15/34
SP14C						Washer	4	—	EB15/35
CPL0201/1/11420						PLUG, standard (Mod.5204)	3	—	EB15/22
CPL0201/1/11430						PLUG, standard (Pre Mod.5204)	3	—	
CPL0201/1/11430						PLUG, standard (Mod.5204)	4	—	EB15/23
CPL0201/1/11520						PLUG, standard	1	—	EB15/24
CPL0201/1/11550						PLUG, standard	8	—	EB15/25
CPL0202/1/11120						PLUG, standard (Mod.5204)	1	—	EB15/26
CPL0201/1/11420						PLUG, standard (Pre Mod.5204)	2	—	
508-2-12373-003 PERMARK E11/2						RING, anti chafe	1	—	EB15/36
508-2-11232-002						SECTION, extruded	1	—	EB14/53
5X/9525146						SLEEVE, inner	QR	—	
EEAS146/8						SLEEVE	QR	—	
EEAS146/12						SLEEVE	QR	—	
EEAS146/16						SLEEVE	QR	—	
EEAS146/20						SLEEVE	QR	—	
MAM RUBBER						SLEEVE, 3 mm i/d x 3/8" CXH	QR	—	
508-1-07056-220						SOCKET, fixed, Mk.7	1	—	EB15/37
AS10512C1						SWITCH	1	—	EB15/38
HC290						TAG, ring tongue	QR	—	
HC294						TAG, ring tongue	QR	—	
HC294C						TAG, ring tongue	QR	—	
HC294D						TAG, ring tongue	QR	—	
HC295						TAG, ring tongue (Mod.5204)	QR	—	
HC296						TAG, ring tongue	QR	—	
HC300						TAG, ring tongue	QR	—	
HC304						TAG, ring tongue	QR	—	
HC305						TAG, ring tongue	QR	—	
HC306B						TAG, ring tongue	QR	—	
HC310						TAG, ring tongue	QR	—	
HC314A						TAG, ring tongue	QR	—	
HC314C						TAG, ring tongue	QR	—	
HC490						TAG, quick release	QR	—	
HC500						TAG, quick release	QR	—	
HC510						TAG, quick release	QR	—	
EEAS142						TERMINAL, earth	2	—	EB14/54

AP101B-0402-3A

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
6A/1062526		UNIT, resistance Attaching parts for 6A/1062526:	2	—	EB14/55
AS1246/2B		Bolt, 4BA	2	—	EB14/56
A278T		Nut, thin, 4BA	2	—	EB14/57
SP47B		Washer, spring	2	—	EB14/58
		Attaching parts for EA3.81.8143:			
R AS1248/1C		Bolt, 2BA	4	—	EB15/39
R A25/1C		Bolt, 2BA	12	—	EB15/40
R A25/2C		Bolt, 2BA	2	—	EB15/41
R AGS2001C1/66		Nut, stiff, 2BA	4	—	EB15/42
R SP13C		Washer	16	—	EB15/43
EA3.81.7321		PANEL, PILOT'S PORT SWITCH, ASSEMBLY INSTALLATION (MOD.5194) Spares for:	—	—	EB18/1
13664		ANGLE (MOD.5194)	1	—	
EA3.81.6803		PANEL, PILOT'S PORT SWITCH, ASSEMBLY (For A/C not embodying Com Mod.0492) (Mod.5194)	1	—	
EA3.81.6795		PANEL, PILOT'S PORT SWITCH, ASSEMBLY (For A/C embodying Com Mod.0492) (Mod.5194) Spares for:	1	—	EB18/2
EA3.81.7223		ANGLE (For A/C not embodying Com Mod.0492)	1	—	
WARD BROOKE		BLOCK, terminal (For A/C not embodying Com Mod.0492)	1	—	
WBUN1146S5W		BLOCK, terminal (For A/C not embodying Com Mod.0492)	1	—	
WARD BROOKE		BLOCK, terminal (For A/C not embodying Com Mod.0492)	1	—	
WBUN1193S2W		Attaching parts for WBUN1146S5W and WBUN1193S2W:			
AGS2001B1		Nut, stiff, 4BA	2	—	
A32B20		Screw, 4BA	2	—	
SP15B		Washer	2	—	
DN1320Z2		GROMMET (For A/C embodying Com Mod.0492)	1	—	EB18/3
DN1320Z1		GROMMET (For A/C embodying Com Mod.0492)	2	—	EB18/4
K114-5		KNOB (SRIM.3577) (MOD.4937)	1	—	EB18/5
C500C7		LAMP, warning (For A/C embodying Com Mod.0492)	1	—	EB18/6
MH33G70		LIGHT, beta	1	—	EB18/7
EA3.81.7309		PANEL, engraved blanking (For A/C not embodying Com Mod.0492) Attaching parts for EA3.81.7309:	1	—	
AGS2001B1		Nut, stiff, 4BA	4	—	
A32B16		Screw, 4BA	4	—	
SP15B		Washer	4	—	
EA3.81.6801		PANEL, engraved switch	1	—	EB18/8
AS10512M1		SHROUD (Alt. R60/58 — Mod.5097)	1	—	EB18/9
AS10512M2		SHROUD (For A/C embodying Com Mod.0492)	1	—	EB18/10
AS10512A2		SWITCH (SRIM.3577) (MOD.4937)	1	—	EB18/11
AS10512A6		SWITCH (For A/C embodying Com Mod.0492)	2	—	EB18/12
AS10512B2		SWITCH (Alt. R60/58 — Mod.5097) (Pre Mod.5283)	1	—	EB18/13
AS10512B3		SWITCH, SP, (MOD.5283)	1	—	
AS10512C1		SWITCH (For A/C embodying Com Mod.0492)	1	—	EB18/14
AS10512E4		SWITCH (SRIM.3577) (MOD.4937)	2	—	EB18/15
01-0010		SWITCH, dimmer (SRIM.3577) (Mod.4937) Attaching parts for 01-0010	1	—	EB18/16
A31A20		Screw	1	—	EB18/17
AS1248/1C		Attaching parts for EA3.81.6803 and EA3.81.6795: Bolt, 2BA	4	—	EB18/18

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Mati. Spec.	Plate No.						
					1	2	3	4	5	6
EA3.81.1565	. . . PANEL, STARTER, ASSEMBLY	—	—	EB19/1						
EA3.81.1789	. . . Spares for: . . . BAR, coupling (Pre Mod.5097)	2	—							
EA3.81.1087	. . . Attaching parts for EA3.81.1789: . . . Screw, grub, 6BA	2	—							
or A55A2	. . . Screw, grub, 6BA	2	—							
HV3711	. . . CAP, helvin dolly (Pre Mod.5097)	3	—							
R AMD1/9897/2	. . . BLOCK, terminal, 8 way . . . Attaching parts for AMDL9897-2	2	—	EB19/2						
AGS2001B1	. . . Nut, stiff, 4BA	2	—	EB19/3						
A31B32	. . . Screw, 4BA	2	—	EB19/4						
R AGS1765/2	. . . COVER, spring assembly	2	—	EB19/5						
EA2.81.399	. . . LABEL, 'G.M. compass'	1	—	EB19/6						
EA2.81.403	. . . LABEL, 'No.1 engine start/ignition'	1	—	EB19/7						
EA2.81.405	. . . LABEL, 'No.2 engine ignition/start'	1	—	EB19/8						
EA3.81.1569	. . . LABEL (PRE MOD.5097)	1	—							
EA3.81.6225	. . . LABEL (Alt. R60/58) (Mod.5097) (EA3.81.6221)	1	—	EB19/9						
AS10512L1	. . . PLATE, adaptor (Alt. R60/58) (Mod.5097) (EA3.81.6221)	3	—	EB19/10						
508-1-06394	. . . PLUG (MOD.3377)	1	—	EB19/11						
508-1-06399	. . . PLUG (MOD.3377)	2	—	EB19/12						
508-1-06406	. . . PLUG (MOD.3377)	2	—	EB19/13						
508-1-40060-320	. . . PLUG, fixed, Mk.IV	1	—	EB19/14						
5CW/4405754	. . . RELAY, type 9B, No.2 . . . Attaching parts for Ref.5CW/4405754:	1	—	EB19/15						
AGS2001B1	. . . Nut, stiff, 4BA	2	—	EB19/16						
A32B20	. . . Screw, 4BA	2	—	EB19/17						
AS10512M1	. . . SHROUD, terminal (Alt. R60/58 — Mod.5097) (EA3.81.6221)	3	—	EB19/18						
AS10512M2	. . . SHROUD, terminal (Alt. R60/58 — Mod.5097) (EA3.81.6221)	1	—	EB19/19						
R CZ231440	. . . SLEEVE, 4-7 amp	QR	—							
EEAS146A	. . . SLEEVE, ¾" long, yellow	QR	—							
EEAS146A1	. . . SLEEVE, ¾" long, yellow	QR	—							
EA3.81.1567	. . . STRUCTURE, STARTER PANEL, ASSEMBLY	—	—	EB19/20						
	. . . Spares for:									
EA2.81.465	. . . PLATE, back	1	—	EB19/21						
EA3.81.1571	. . . PLATE, front	1	—	EB19/22						
5C/548	. . . SWITCH, push, double pole . . . Attaching parts for Ref.5C/548:	2	—	EB19/23						
AGS2001A1	. . . Nut, stiff, 6BA	4	—	EB19/24						
A32A16	. . . SCrew, 6BA	4	—	EB19/25						
R XD778	. . . SWITCH, changeover (Pre Mod.5097)	1	—							
5C/4148	. . . SWITCH (PRE MOD.5097) . . . Attaching parts for XD778 and Ref.5C/4184:	6	—							
A32B12	. . . Screw, 4BA	2	—							
AGS2035B	. . . Washer, shakeproof	2	—							

AP101B-0402-3A

Page EB.41

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
AS10512A2	SWITCH, single pole (Alt. R60/58 - Mod.5097) (EA3.81.6221)	3	—	EB19/26
AS10512C1	SWITCH, double pole (Alt. R60/58) Mod.5097) (EA3.81.6221)	2	—	EB19/27
A31B16	Attaching parts for AS10512A2 and AS10512C1: Screw, 4BA	2	—	EB19/28
SP10B	Washer	2	—	EB19/29
HC294D	TAG (Alt. R60/58 - Mod.5097) (EA3.81.2661)	QR	—	
HC304D	TAG (Alt. R60/58 - Mod.5097) (EA3.81.2661)	QR	—	
508-2-07810-005	WASHER, panel mounting	1	—	EB19/30
EA3.81.2107	PLUGS AND SOCKETS THROUGH PRESSURE BULKHEAD (PRE MOD.5120)	—	—	
EA3.81.6791	PLUGS AND SOCKETS THROUGH PRESSURE BULKHEAD (MOD.5120)	—	—	EB20/1
	Spares for:			
508-1-41036	CAP, protective, Mk.4	4	—	EB20/2
508-1-41037	CAP, protective, Mk.4	2	—	EB20/3
508-1-03442-003	CAP, protective (Pre Mod.5120)	2	—	
508-1-03442-003	CAP, protective (Mod.5120)	4	—	EB20/3A
Z22165	CAP, plug sealing, size Z (Pre Mod.5120)	4	—	
EA1.81.450	GASKET (PRE MOD.5120)	1	—	
EA3.81.421	GASKET (PRE MOD.5120)	1	—	
EA3.81.419	PLATE, blanking (Pre Mod.5120)	1	—	
	Attaching parts for EA3.81.419:			
A25/2B	Bolt, 2BA	30	—	
10H/19425	PLUG, type Z44 (Pre Mod.5120)	1	—	
10H/1928	PLUG, 'W', type 387 (Pre Mod.5120)	1	—	
10H/0540103	PLUG, type 757 (Mod.5120)	3	—	EB20/4
508-1-11431	PLUG, size A (Mod.5120)	1	—	EB20/5
508-1-11432	PLUG, size A	1	—	EB20/6
508-1-11434	PLUG, size Z (Pre Mod.5120)	4	—	
508-1-11434	PLUG, size Z (Mod.5120)	1	—	EB20/7
508-1-11437	PLUG, size B (Pre Mod.5120)	2	—	
508-1-11437	PLUG, size B (Mod.5120)	1	—	EB20/8
508-1-11440	PLUG, size B	2	—	EB20/9
508-1-11443	PLUG, size C	2	—	EB20/10
508-1-11447	PLUG, size D	1	—	EB20/11
508-1-11450	PLUG, size D (Mod.5120)	7	—	EB20/12
CZ28058	PLUG, size D (Mod.5120)	1	—	EB20/13
508-1-40189-320	SOCKET, plug, Mk.4, 12 way, 5 amp (Pre Mod.5120)	2	—	
508/1/40189/320	SOCKET, plug, Mk.4, 12 way, 5 amp (Mod.5120)	4	—	EB20/14
Z560042	SOCKET, double ended (Pre Mod.5120)	6	—	
508-1-40163-320	SOCKET, plug, 4 way (Pre Mod.5120)	2	—	
508-1-40163-321	SOCKET, plug, 6 way (Pre Mod.5120)	1	—	
508-1-40169-320	SOCKET, plug, 12 way, 5 amp (Pre Mod.5120)	3	—	
508-1-40169-320	SOCKET, plug, 12 way, 5 amp (Mod.5120)	1	—	EB20/15
508-1-40196-320	SOCKET, plug, 25 way, 5 amp (Mod.5120)	1	—	EB20/16
508-1-40180-320	SOCKET, plug, 2 way, 19 amp (Mod.5120)	2	—	EB20/17
CZ61888	SOCKET, plug, 18 way, 5 amp	1	—	EB20/18
CZ61889	SOCKET, plug, 25 way, 5 amp	1	—	EB20/19
CZ62276	SOCKET, plug, 18 way, 5 amp	1	—	EB20/20
CZ61882	SOCKET, plug, 4 way, 5 amp	1	—	EB20/21
CZ61880	SOCKET, plug, 2 way, 19 amp (Pre Mod.5120)	2	—	

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
CZ61880	. . SOCKET, plug, 2 way, 19 amp (Mod 5120)	1	—	EB20/22
CZ62276/1	. . SOCKET, plug, 18 way, 5 amp	1	—	EB20/23
CZ61886	. . SOCKET, plug, 6 way, 5 amp	2	—	EB20/24
CZ62271/4	. . SOCKET, plug, 6 way, 5 amp	1	—	EB20/25
CZ62271	. . SOCKET, plug, 6 way, 5 amp (Mod 5120)	3	—	EB20/26
CZ62270	. . SOCKET, plug, 4 way, 5 amp (Mod 5120)	1	—	EB20/27
CZ62275/3	. . SOCKET, plug, 12 way, 5 amp	1	—	EB20/28
CZ62271/1	. . SOCKET, plug, 6 way, 5 amp	1	—	EB20/29
5U/5243	. REGULATOR, electronic, type 2A (Pre-Mod 4937) (Pre-Mod 5204)	1	—	
BS115B1B1C2	. RELAY	1	—	EB21/1
EEAS146/20	. SLEEVE	QR	—	
EA1.31.1165	. STUD, mounting assembly	2	—	EB21/2
8606	. SUPPRESSOR, type P	1	—	EB21/3
EL26326	. SUPPRESSOR, type B4 Attaching parts for EL26326:—	1	—	EB21/4
AGS2002B1	. Nut, stiff, 4BA	2	—	EB21/14
EA6.10.2181	. Packer, cork	2	—	EB21/15
53433-003	. SWITCH, inertia piston, type Mk. 1 Attaching parts for 53433-003:—	2	—	EB21/5
AGS2001C1/66	. Nut, 2BA	4	—	EB21/6
EB6.81.2417	. Piece, packing	1	—	EB21/7
A31C36	. Screw, cheese head, 2BA	4	—	EB21/8
EA3.81.1269	. SWITCH, TIME, ASSEMBLY Spares for:—	1	—	EB21/9
EA3.81.1403 TEDDINGTON FHM/A25	. . BRACKET, mounting	1	—	EB21/10
A31C20	. . SWITCH, time Attaching parts for FHM/A25:—	2	—	EB21/11
EAP2340	. . Screw, cheese head, 2BA	4	—	EB21/12
HC294	. SWITCH, torque	1	—	EB21/13
HC296	. TAG	QR	—	
T1562	. TAG	QR	—	
T1563	. TRANSFORMER, auto, type 1562 (Pre-Mod 4937) (Pre-Mod 5204)	1	—	
EA3.81.59 EA3.81.8059	. TRANSFORMER, auto, type 1563 (Pre-Mod 4937) (Pre-Mod 5204)	1	—	
6MNA-17	. WIRING, DETONATOR, ASSEMBLY (PRE-MOD 5204)	—	—	
EA3.81.2613	. WIRING, DETONATOR, ASSEMBLY (MOD 5204) Spares for:—	—	—	EB22/1
703-1-00416	. . ACCUMULATOR, 12V, 4 H.A.	2	—	EB23/1
EA3.81.2615	. . BLOCK, fuse Spares for:—	1	—	EB22/2
A25/1B	. . BLOCK, fuse, 4 way	1	—	EB22/3
SP16B	. . LABEL	1	—	EB22/4
SP47B	. . Attaching parts for EA3.81.2613:— Bolt, 4BA	2	—	EB22/5
SIS1564	. . Washer	2	—	EB22/6
A25/1C	. . Washer, spring	2	—	EB22/7
AGS2001C1/66	. . BLOCK, terminal, 2 way Attaching parts for SIS1564:—	1	—	EB22/8
A33A24	. . Bolt, 2BA	2	—	EB22/9
SP16C	. . Nut, stiff, 2BA	2	—	EB22/10
	. . Screw, 6BA	1	—	EB22/11
	. . Washer	2	—	EB22/12

AP101B-0402-3A

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
TYPE B NO.1	. . BLOCK, terminal, 3 way Attaching parts for TYPE B No.1	1	—	EB22/13
AGS2001A1	. . Nut, stiff, 6BA	2	—	EB22/14
A33A24	. . Screw, 6BA	2	—	EB22/15
703-1-00234	. . BLOCK, terminal, 3 way Attaching parts for 703-1-00234:	1	—	EB22/16
703-2-00267	. . Pillar, fixing	2	—	EB22/17
WARD BROOKE WBUN1146D3W	. . BLOCK, terminal, 6 way Attaching parts for WBUN1146D3W:	1	—	EB22/18
AGS2002B1	. . Nut, 4BA	2	—	EB22/19
WB1114/28	. . Pillar, fixing	2	—	EB22/20
EA1.81.462	. . BRACKET	1	—	EB22/21
EA3.81.525	. . BRACKET	4	—	EB22/22
EA3.81.1633	. . BRACKET	1	—	EB22/23
EA3.81.1717	. . BRACKET, mounting	1	—	EB22/24
EA3.81.6389	. . BRACKET, support	1	—	EB22/25
EA3.81.6505	. . CABLE, ASSEMBLY, N49A, jettison switch unit to relay unit	1	—	
EA3.81.6543	. . CABLE, ASSEMBLY, N49B, jettison switch to resistor assembly	1	—	
EA3.81.6545	. . CABLE, ASSEMBLY, N49C, resistor assembly to control tube detonator	1	—	
EA3.81.6503	. . CABLE, ASSEMBLY, N418, from jettison switch to earth	1	—	
EA3.81.6501	. . CABLE, ASSEMBLY, N419, jettison switch to detonators	1	—	
EA3.81.6507	. . CABLE, ASSEMBLY, N420, jettison switches to detonators	1	—	
EA3.81.6509	. . CABLE, ASSEMBLY, N421	1	—	
EA1.81.425	. . CAP	64	—	EB22/26
EB7.81.1305	. . CLAMP, assembly	1	—	EB22/27
EB7.81.1569	. . CLAMP, assembly	1	—	EB22/28
AS491/22	. . CLIP, cable fixing	3	—	EB23/2
AS1900A	. . CLIP, cable fixing	4	—	
AS1900E	. . CLIP, cable fixing	1	—	EB23/4
AS1901D	. . CLIP, cable fixing	34	—	EB23/5
AS1901E	. . CLIP, cable fixing	10	—	EB23/6
AS3180/3B	. . CLIP, cable fixing	1	—	EB23/7
AS3180/6B	. . CLIP, cable fixing	4	—	EB23/8
AS3180/7B	. . CLIP, cable fixing	3	—	EB23/9
AS3180/8B	. . CLIP, cable fixing	3	—	EB23/10
AS3180/10B	. . CLIP, cable fixing	3	—	EB23/11
AS3180/4C	. . CLIP, cable fixing Attaching parts for AS491/22, AS4525/3, AS1900E, AS1901D, AS1901E, AS3180/3B, AS3180/6B AS3180/7B, AS3180/8B, AS3180/10B and AS3180/4C:	3	—	EB23/12
AGS2001B1	. . Nut, stiff, 4BA	QR	—	EB23/13
AGS2001C1/66	. . Nut, stiff, 2BA	QR	—	EB23/14
A31B12	. . Screw, 4BA	QR	—	EB23/15
A31B16	. . Screw, 4BA	QR	—	EB23/16
A32B16	. . Screw, 4BA	QR	—	EB23/17
A31C12	. . Screw, 2BA	QR	—	EB23/18
SP15B	. . Washer	QR	—	EB23/19

R

ELECTRICAL

ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Mati. Spec.	Plate No.
AS2295/1		CLIP, spring Attaching parts for AS2295/1:	15	—	EB23/20
2R ¹ / ₄		Screw, P.K.	QR	—	EB23/21
AS2295/3		CLIP, spring Attaching parts for AS2295/3:	44	—	EB23/22
4R ¹ / ₄		Screw, P.K.	QR	—	EB23/23
CZ26802		COVER	1	—	EB22/29
WARD BROOKE WBNY1110B8		COVER, terminal block, 6 way	1	—	EB22/30
12G1279		DETONATOR	1	—	EB25/1
12G1278		DETONATOR	66	—	EB25/2
EB7.81.1319		EARTH, accumulator	1	—	EB23/24
AGS1600B		END, cable, eye type	2	—	
TDA62-2.5A		FUSE, 25 amp	1	—	
EB7.81.1321		LEAD, accumulator	1	—	EB23/25
EA3.81.2627		LEAD, accumulator	1	—	EB23/26
703-2-00251		LINK, 2 way	1	—	
12335		LUG, R.T.	8	—	
EA3.81.2617		PANEL, relay	1	—	EB22/31
EA3.81.59B		PLATE	1	—	EB22/32
EA1.81.942		PLATE, securing Attaching parts for EA1.81.942:	2	—	EB22/33
A33A6		Screw, csk. head, 6BA	2	—	EB22/34
EA1.81.940		PLUG, detonator	3	—	EB22/35
5C/3943		RELAY, type S2, 25 amp	2	—	EB22/36
or D4116		RELAY, type S8 Attaching parts for Ref.5C/3943 or D4116	2	—	
A31B24		Screw, 4BA	2	—	EB22/37
P2001		RESISTANCE, type A, 15 ohms, 25 watts	1	—	EB22/38
EEAS566		SLEEVE, special	QR	—	
EEAS146A		SLEEVE	QR	—	
EEAS146A1		SLEEVE	QR	—	
EEAS146C		SLEEVE	QR	—	
EEAS146/12		SLEEVE, ³ / ₄ "	QR	—	
EEAS146/18		SLEEVE	QR	—	
EEAS146/20		SLEEVE	QR	—	
SL2/3		SLEEVE	QR	—	
SL5/3		SLEEVE	QR	—	
MAM RUBBER		SLEEVE 3 mm i/d grade CXH 3/8"	QR	—	
H15		SLEEVE, (SEM/CAN/016) (MOD.5180)	QR	—	
WB/1110/25		SPACER, (SEM/CAN/016) (MOD.5180)	3	—	
EA1.81.938		SPRING	66	—	EB25/3
HV3254		STRAP	QR	—	
TY8-S		STRAPPING 'TYTON', natural 8 mm wide (Mod 5442)	QR	—	
TY8-C1		STUD, 'TYTON' (Mod 5442)	QR	—	
HV3255		STUD	QR	—	
EA1.81.943		STUD	20	—	
HC314D		TAG, Q.R.	QR	—	
HC490		TAG, Q.R.	QR	—	
703-2-00315-020		TAG, Q.R.	QR	—	
703-2-00317-020		TAG, Q.R.	QR	—	
HC296		TAG, R.T. (SEM/CAN/016) (MOD.5180)	QR	—	
5X/9462951		TAG, R.T. (SEM/CAN/016) (MOD.5180)	QR	—	

AP101B-0402-3A		ELECTRICAL			ELECTRICAL EQUIPMENT IN FRONT FUSELAGE					
Part Number	Description	No. Off						Matl. Spec.	Plate No.	
		1	2	3	4	5	6			
EA1.81.429	TERMINAL, earth Spares for:							2	—	EB23/27
EA1.81.517	NUT, knurled							1	—	EB23/28
MS35333/39	WASHER							1	—	EB23/29
BULGIN										
T102 BLACK	TERMINAL (black)							1	—	EB23/30
T102 RED	TERMINAL (red)							1	—	EB23/31
703-2-00339-020	THIMBLE							QR	—	
703-2-00340-020	THIMBLE							QR	—	
EB7.81.1177	TRAY ASSEMBLY Spares for:							1	—	EB23/32
EB7.81.1185	ANGLE							2	—	EB23/33
EB7.81.1186	ANGLE							2	—	EB23/34
EB7.81.1397	ANGLE Attaching parts for EB7.81.1185, EB7.81.1186 and EB7.81.1397:							4	—	EB23/35
A25/4B	Bolt, 4BA							2	—	EB23/36
A27BT	Nut, thin, 4BA							2	—	EB23/37
EB7.81.1181	BUNGEE ASSEMBLY Spares for:							2	—	EB23/38
EB7.81.1197	CATCH, assembly Attaching parts for EB7.81.1181:							1	—	EB23/39
A25/6B	Bolt, 4BA							1	—	EB23/40
A25/15B	Bolt, 4BA							1	—	EB23/41
AGS2001B1	Nut, stiff, 4BA							2	—	EB23/42
EB7.81.1385	Piece, distance							1	—	EB23/43
SP16B	Washer							2	—	EB23/44
EB7.81.1183	LUG							4	—	EB23/44A
EB7.81.1189	PACKING							4	—	EB23/45
EB7.81.1179	TRAY, SUB-ASSEMBLY Spares for:							1	—	EB23/46
EB7.81.1191	BASE Attaching parts for EB7.81.1191:							1	—	EB23/47
AGS250/3	Woodscrew, No.2							18	—	EB23/48
EB7.81.1193	PIECE, end							2	—	EB23/49
EB7.81.1195	PIECE, side Attaching parts for EB7.81.1193 and EB7.81.1195:							2	—	EB23/50
AGS250/37	Woodscrew, No.6							2	—	EB23/51
E & I 659	TUBING, P.V.C., 0.75" i/d (Com/Mod/0344) Attaching parts for EB7.81.1177:							2"	—	
A25/1C	Bolt, 2BA							4	—	EB23/53
SP15C	Washer							4	—	EB23/54
EA1.81.426	TUBE, distance							34	—	EB22/53
EA1.81.427	TUBE, distance							30	—	EB22/54
EA1.81.941	TUBE, distance							2	—	EB22/55
EA3.81.1667	UNIT, RESISTANCE, ASSEMBLY Spares for:							9	—	EB24/1
EA1.81.387 ISS.3 or EA1.81.387 ISS.4	BASE, insulating							1	—	EB24/2
A25/1E	BOLT							1	—	EB24/3
EA1.81.392	BOLT, terminal							8	—	EB24/4
EA1.81.393	BOLT, terminal							8	—	EB24/5
EA1.81.394	BOLT, terminal							3	—	EB24/6
EA1.81.395	BOLT, terminal							1	—	EB24/7

This file was downloaded from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms, and more aircraft documents.



Instrument panel from a MiG-21 Provoost (XP558)