

REBECCA, A.R.I. 5610

Part Number	Description	No. Off						Matl. Spec.	Plate No.
		1	2	3	4	5	6		
EA3.90.5	A.R.I.5610, REBECCA, INSTALLATION (PRE MODS.4937 AND 4868) Spares for:								QC1/1
EA3.90.81	. AERIAL, R.X., INSTALLATION, PORT								QC1/2
EA3.90.82	. AERIAL, R.X., INSTALLATION, STARBOARD								QC1/3
TYPE 144	. . ADAPTOR								QC1/4
EA3.90.77	. . BRACKET, assembly								QC1/5
EA3.90.78	. . BRACKET, assembly								QC1/6
AGS2001C1	. . NUT, 2BA								QC1/7
AS2230/404	. . RIVET								
EEAS1 3/4C	. . SCREW, 2BA								QC1/8
A31B8	. . SCREW, 4BA								QC1/9
EA3.90.137	. . STRIP, connecting								QC1/10
SP15C	. . WASHER								QC1/11
SP47B	. . WASHER								QC1/12
EA3.90.129	. AERIAL, PROBE, T.X., INSTALLATION Spares for:								QC1/13
Z1841	. . GROMMET								QC1/14
10H18411	. . HOLDER, probe Attaching parts for 10H/18411:								QC1/15
A31B12	. . Screw, 4BA								QC1/16
EA3.90.127	. . TUBE, probe, assembly Attaching parts for EA3.90.127:								QC1/17
A55A2	. . Screw, grub, 6BA								QC1/18
A25/1C	. BOLT, 2BA								QC1/19
EA3.90.615	. CONNECTOR, type B21/31B/2, switch unit to transmitter/receiver								QC1/20
EA3.90.617	. CONNECTOR, type 3349/2, pressure bulkhead to transmitter/receiver								QC1/21
EA3.90.619	. CONNECTOR, type 3344/3, transmitter aerial to pressure bulkhead								QC1/22
EA3.90.621	. CONNECTOR, type 3347/2, pressure bulkhead to switch unit								QC1/23
EA3.90.623	. CONNECTOR, type 3344/4, socket, type XC129 to pressure bulkhead, L.H.								QC1/24
EA3.90.625	. CONNECTOR, type 3333/22, switch unit to trans- mitter/receiver								QC1/25
EA3.90.627	. CONNECTOR, type 3347/3, pressure bulkhead to switch unit								QC1/26
EA3.90.629	. CONNECTOR, type 3344/5, socket, type XC129 to pressure bulkhead								QC1/27
EA3.90.631	. CONNECTOR, type 3333/23, switch unit to trans- mitter/receiver								QC1/28
EA3.90.633	. CONNECTOR, type 3351/5, switch unit to rear bomb bay bulkhead (Frame 29)								QC1/29
EA3.90.635	. CONNECTOR, type 3348/10, rear bomb bay bulkhead to access door break								QC1/30
EA3.90.637	. CONNECTOR, type 3348/11, access door break to Babs, aerial								QC1/31
EA3.90.639	. CONNECTOR, type 3337/4, transmitter/receiver to I.F.F.M.P.3G.R. receiver								QC1/32
EA3.90.641	. CONNECTOR, type 3344/6 aerial slot, port to socket type XC129								QC1/33
EA3.90.643	. CONNECTOR, type 3344/7 aerial slot, starboard, to socket type XC129								QC1/34

R

RADAR
REBECCA, A.R.I. 5610

Part Number	Description	No. Off	Matl. Spec.	Plate No.
				1 2 3 4 5 6
EA3.90.645	. CONNECTOR, type 3344/8, shorting socket to socket type XC129, port and starboard	1	—	QC1/35
EA3.90.605	. CONNECTOR, type B.13/20B/3, transmitter/receiver to pressure bulkhead	1	—	QC1/36
EA3.90.603	. CONNECTOR, type 9310, indicating unit to pressure bulkhead	1	—	QC1/37
EA3.90.601	. CONNECTOR, type 9321, pressure bulkhead to transmitter/receiver	1	—	QC1/38
EA3.90.609	. CONNECTOR, type B.15/20B/3, pressure bulkhead to transmitter/receiver	1	—	QC1/39
10HA12324	. CONNECTOR, type B.13/30C/16, control unit to pressure bulkhead	1	—	QC1/40
10HA12325	. CONNECTOR, type B.15/30C/24, control unit to pressure bulkhead	1	—	QC1/41
EA3.90.143	. COVER, aerial, switch	1	—	QC1/42
EA3.90.83	. MOUNTING, RADAR EQUIPMENT, ASSEMBLY Consisting of:	1	—	QC1/43
A25/8E	. . BOLT, 1/4" BSF	4	—	QC1/44
AS3360B3E	. . BONDING, flexible	2	—	QC1/45
10A1201999	. . MOUNTING, type 968	4	—	QC1/46
A27EP	. . NUT, 1/4" BSF	4	—	QC1/47
AGS2002B3	. . NUT, 4BA	2	—	QC1/48
A40B8	. . SCREW, 4BA	2	—	QC1/49
TYPE 212B	. . TRAY, mounting, type 212B	1	—	QC1/50
AS2811/6/020	. . TUBE, distance	4	Light Alloy	QC1/51
SIS5280	. MOUNTING, type 814	1	—	QC1/52
AGS2001C1-66	. NUT, 2BA	16	—	QC1/53
A31C14	. SCREW, 2BA	9	—	QC1/54
10H0560063	. SOCKET, type XC129	2	—	QC1/55
10H4695484	. SOCKET, shorting	2	—	QC1/56
SIS2931	. SWITCH, unit, type 78A	1	—	QC1/57
SIS5226	. TRANSMITTER/RECEIVER, TR3624	1	—	QC1/58
SIS5225	. UNIT, control, type 526A	1	—	QC1/59
SP15C	. WASHER	8	—	QC1/60

CHAPTER QC
FIGURES TO BE ISSUED LATER

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

