

## RADIO AND INTER-COMM.

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.82.1		RADIO AND INTER-COMM. ASSEMBLY (PRE MODS.4937 AND 4868)	-	-	
EA3.82.267		RADIO AND INTER-COMM., ASSEMBLY (MOD.3905- S.O.O) (PRE MOD.4937 AND 4868)	-	-	RD1/1
EA3.82.35		Spares for: . CONNECTOR, V.H.F. AERIAL ASSEMBLY, PORT	-	-	RD1/2
EA6.82.77		Spares for: . . BRACKET, connector, 12 SWG	1	BSS265	
EA6.82.69		. . STRIP, connecting c/w plug, Ref.10H/9113	1	-	
EA3.82.36		. CONNECTOR, V.H.F. AERIAL, ASSEMBLY, STARBOARD	-	-	RD1/3
EA4.82.99		Spares for: . . BRACKET, connector, 12 SWG (Mod.1272)	1	BSS265	
EA6.82.69		. . STRIP, connecting c/w plug, Ref. 10H/9113	1	-	
EA3.82.77		. INSTALLATION OF MIC/TEL TERMINAL BLOCKS	-	-	
EA3.82.113		Spares for: . . CABLE ASSEMBLY, mic/tel socket	1	-	RD1/4
EA3.82.141		. PANEL, PILOT'S RADIO, INSTALLATION (Pre Mod.5194)	-	-	RD1/5
EA3.82.165		Spares for: . . PANEL, GROUP (Pre Mod.5194)	1	-	
Uninyvin 20		Spares for: . . . CABLE, Uninyvin 20	QR	BSG177	
EA1.82.113		. . . CLEAT, cable	1	LFS21	
EEAS146/16		. . . SLEEVE, 3/4" long	8	-	

## RADIO AND INTER-COMM.

Part Number	Description	No. Off	Matl. Spec.	Plate No.	
					1
EB6.82.1381	. . . . . PANEL, RELAY, I/C AMPLIFIER, MOUNTING, GROUP	—	—	RD1/6	
	Spares for:				
10U/2071289	. . . . . AMPLIFIER, type A1961	1	—	RD1/7	
EA3.82.151	. . . . . BRACKET, assembly	1	—	RD1/8	
EA3.82.153	. . . . . BRACKET, assembly	1	—	RD1/9	
EB6.82.1379	. . . . . PANEL, I/C RELAY, ASSEMBLY	1	—	RD1/10	
	Spares for:				
SIS1564	. . . . . BLOCK, terminal, 2-way	1	—	RD1/11	
	Attaching parts for SIS1564:—				
AGS2001A1	. . . . . Nut, 6BA	2	—	RD1/12	
A33A20	. . . . . Screw, 6BA	2	—	RD1/13	
SP13A	. . . . . Washer	2	—	RD1/14	
E&I 7049	. . . . . BLOCK, terminal, 5-way	2	—	RD1/15	
	Attaching parts for E&I 7049:—				
AGS2001A1	. . . . . Nut, 6BA	2	—	RD1/16	
A33A20	. . . . . Screw, 6BA	2	—	RD1/17	
WTD108579	. . . . . BOX, junction, type 154	1	—	RD1/18	
	Attaching parts for WTD108579:—				
A31C48	. . . . . Screw, 2BA	4	—	RD1/19	
EB7.82.141	. . . . . BOX, RELAY, ASSEMBLY	1	—	RD1/20	
	Consisting of:				
EA4.82.163	. . . . . BOX, shell	1	—	RD1/21	
EA4.82.167	. . . . . BRACKET, assembly	2	—	RD1/22	
	Attaching parts for EA4.82.167:				
AGS2001A1	. . . . . Nut, 6BA	4	—	RD1/23	
A31A8	. . . . . Screw, 6BA	4	—	RD1/24	
Z11809	. . . . . GROMMET	1	—	RD1/25	
TYPE SI	. . . . . RELAY, type S.1 (Alternative to 5CW/6717)	1	—	RD1/26	
EL34331	. . . . . RELAY, type S.7 (Alternative to 5CW/9729122)	1	—	RD1/27	
	Attaching parts for EB7.82.141:				
A31B14	. . . . . Screw, 4BA	4	—	RD1/28	
EA3.82.161	. . . . . PANEL, I/C relay	1	—	RD1/29	
	Attaching parts for EB6.82.1379:				
A31C16	. . . . . Screw, 2BA	4	—	RD1/30	
SP15C	. . . . . Washer	4	—	RD1/31	
EA3.82.155	. . . . . PLATE, blanking	1	—	RD1/32	
10AJ/4309267	. . . . . TRAY, mounting, type 936	1	—	RD1/33	
	Attaching parts for Ref. 10AJ/4309267:				
A25/6B	. . . . . Bolt, 4BA	4	—	RD1/34	
AGS2001B1	. . . . . Nut, 4BA	4	—	RD1/35	
EA3.82.273	. . . . . PANEL, SWITCH, INSTALLATION	—	—	RD2/1	
	Spares for:				
EA3.82.275	. . . . . PANEL, switch, engraved	1	—	RD2/2	
C5162Y	. . . . . SWITCH, push, Mk.3	1	—	RD2/3	
	Attaching parts for C5162Y:				
A47Z	. . . . . Nut, 8BA	2	—	RD2/4	
A31Z12	. . . . . Screw, 8BA	2	—	RD2/5	
AGS2035AA	. . . . . Washer	2	—	RD2/6	

## RADIO AND INTER-COMM.

Part Number	Description	No. Off	Matl. Spec.	Plate No.
R 10F/0510588	. . SWITCH (Alternative to 10F/0510578)	1	—	RD2/7
R 10F/0510578	. . SWITCH (Alternative to 10F/0510588)	1	—	RD2/8
10F/2478970	. . SWITCH, type 170 (Alternative to 10F/0510588 and 10F/0510578)	2	—	RD2/9
8295B110	. . SWITCH, tumbler	1	—	RD2/10
EA3.82.143	. . PANEL, RELAY, V.H.F., INSTALLATION (MOD.310) Spares for:	—	—	RD2/11
EA3.82.145	. . PANEL, GROUP Spares for:	1	—	RD2/12
EA1.82.117	. . . BRACKET, push button	1	L72	
R Uninyvinmet+ sheath 20	. . . CABLE, Uninyvinmetsheath 20	QR	BSG177	
R Uninyvin.20	. . . CABLE, Uninyvin 20	QR	BSG177	
R Uninyvin.12	. . . CABLE, Uninyvin 12	QR	BSG177	
EA1.82.121	. . . LABEL, terminal, identification	1	L72	
EA3.82.147	. . . LABEL, terminal, mic/tel identification	1	L72	
EEAS146/16	. . . SLEEVE, ¾" long	28	—	
EEAS146/6	. . . SLEEVE ¾" long	4	—	
EEAS146/6	. . . SLEEVE, 1" long	2	—	
R EA1.81.429	. . . TERMINAL, earth	1	—	
R EA3.82.7	. . V.H.F. AND I/C WIRING ASSEMBLY (PRE MOD.310)			
EA3.82.43/1	. . CABLE, ASSEMBLY, TR.12, from pressure bulkhead to V.H.F.	1	—	RD2/13
EA3.82.129	. . CABLE, ASSEMBLY, R.T.21 from terminal board to mic/tel at pilot's seat, group (Mod.530)	1	—	RD2/15
EA3.82.131	. . CABLE, ASSEMBLY, R.T.22, from terminal board to mic/tel. at bomb aimer's group (Mod.530)	1	—	RD2/17
EA3.82.65/1	. . CABLE, ASSEMBLY, R.T.23, from 5-way terminal board on i/c relay panel to 2-way terminal board for push button on pilot's control column	1	—	RD2/18
EA1.82.67/1	. . CABLE, ASSEMBLY, R.T.24 i/c relay panel earth connection	1	—	RD2/19

## RADIO AND INTER-COMM.

Part Number	Description	No. Off	Matl. Spec.	Plate No.
EA3.82.45/1	. . CABLE, ASSEMBLY, R.T.13, from pressure bulkhead to i/c crate	1	—	RD2/20
EA1.82.51/1	. . CABLE, ASSEMBLY, R.T.16, from i/c crate to 2 volt accumulator	1	—	RD2/21
EA1.82.53/1	. . CABLE, ASSEMBLY, R.T.17, from i/c crate to H.T. power unit	1	—	RD2/22
EA1.82.55/1	. . CABLE, ASSEMBLY, from H.T. power unit to i/c relay panel	1	—	RD2/23
EA3.82.59/1	. . CABLE, ASSEMBLY, R.T.20 from terminal board to mic/tel at pilot's seat	1	—	RD2/24
EA3.82.71/1	. . CABLE, ASSEMBLY, R.T.26, from 5-way terminal board on relay panel to 4-way mic/tel connection for pilot's and bomb aimer's forward position	1	—	RD2/26
EA3.82.135	. . CABLE, ASSEMBLY, R.T.27, from 4-way terminal board for navigator's and bomb aimer's mic/tel connection to 5-way relay panel group (Mod.530)	1	—	RD2/28
EA3.82.75/1	. . CABLE, ASSEMBLY, R.T.28, from 4-way terminal board for mic/tel connections to terminal board for bomb aimer's forward position mic/tel, group	1	—	RD2/29
EA3.82.111	. . CABLE, ASSEMBLY, R.T.29, from i/c crate to pilot's V.H.F. control and pilot's radio panel			
GIRDLESTONE PUMPS A751A	. . STUB, matching, V.H.F. aerial, Type 13	1	—	RD2/31
GIRDLESTONE PUMPS A751B	. . STUB, matching, V.H.F. aerial, Type 14	1	—	RD2/32
EA3.82.269	. V.H.F. AND I/C WIRING ASSEMBLY	—	—	
EB6.83.567	. . CABLE, ASSEMBLY, R.T.3, from pilot's V.H.F. control panel to i/c relay	1	—	
EB6.82.1349	. . CABLE, ASSEMBLY, R.T.30, from i/c amplifier and relay panel to U.H.F./V.H.F. relay box	1	—	
EA3.82.15	. INSTALLATION OF EXTERNAL INTER-COMM. CONNECTOR Spares for:	—	—	
R SIS1564	. . BLOCK, terminal, type B Attaching parts for Ref.5CZ/1053794:	4	—	
AGS2001A1	. . Nut, 6BA	2	—	
A45A20	. . Screw, 6BA	2	—	
SP47A	. . Washer, 6BA	2	—	

AP1018-0402-3A

## RADIO AND INTER-COMM.

Part Number	Description	No. Off	Matl. Spec.	Plate No.
EA3.82.133	. . CABLE, ASSEMBLY, ground inter-comm., from terminal blocks on V.H.F. panel to terminal block on frame 19	1	—	
R R R WTA106590	. . CONNECTOR, type 3570 Attaching parts for WTA106590	1	—	
A25/4C	. . Bolt, 2BA	4	—	
AGS2001C1-66	. . Nut, 2BA	4	—	
EA3.82.17	. . Plate, doubling	1	L72	
EA3.82.137	. V.H.F. AND I/C WIRING ASSEMBLY (MOD 310) Spares for:—	—	—	RD2/33
EB7.82.29	. . CABLE, ASSEMBLY, earth, navigator's tel/mic terminal board	7	—	RD2/34
EA1.82.41/1	. . CABLE, ASSEMBLY, from V.H.F. relay panel to earth	2	—	RD2/35
EA3.82.59/1	. . CABLE, ASSEMBLY, R.T.20 from terminal board to mic/tel at pilot's seat, group	1	—	RD2/36
EA3.82.65/1	. . CABLE, ASSEMBLY, R.T.23, from 5-way terminal board on i/c relay panel to 2-way terminal board for push button on pilot's control column, group	1	—	RD2/37
EA3.82.129	. . CABLE, ASSEMBLY, R.T.21, from terminal board to mic/tel at navigator's seat, group	1	—	RD2/38
EA3.82.131	. . CABLE, ASSEMBLY, R.T.22, from terminal board to mic/tel at bomb aimer's seat, group	1	—	RD2/39
EA3.82.271	. . CABLE, ASSEMBLY, R.T.31, from navigator's press to transmit switch to i/c relay panel, group	1	—	RD2/40
EA3.82.5401	. . CABLE, ASSEMBLY, R.T.1 from pressure bulkhead to i/c relay panel, group	1	—	RD2/41
EA3.82.171	. . CABLE, ASSEMBLY, T.R.2 from pressure bulkhead to V.H.F. relay panel	1	—	RD2/42
EA3.82.175	. . CABLE, ASSEMBLY, T.R.4 from TB for navigator's mic/tel connection to VC relay panel	1	—	RD2/43
EA3.82.177	. . CABLE, ASSEMBLY, R.T.5, from terminal boards for pilot's seat and bomb aimer's forward position mic/tel connection to i/c relay panel	1	—	RD2/44
EA3.82.179	. . CABLE, ASSEMBLY, R.T.6, from bomb aimer's forward position mic/tel terminal board to i/c relay panel	1	—	RD2/45

## RADIO AND INTER-COMM.

Part Number	Description	No. Off	Matl. Spec.	Plate No.
EA3.82.181	. . CABLE, ASSEMBLY, R.T.7, interconnection between bomb aimer's forward position and pilot's seat mic/tel terminal boards	1	-	RD2/46
GIRDLESTONE PUMPS A751A	. . STUB, matching, V.H.F. aerial type 13	1	-	RD2/47
GIRDLESTONE PUMPS A751B	. . STUB, matching, V.H.F. aerial type 14	1	-	RD2/48
HC304	. . TAG, closed end	12	-	RD2/49

AP101B-0402-3A

Page RD.7

RADIO  
INTER-COMM, A.R.I. 18089

Part Number	Description	No. Off	Matl. Spec.	Plate No.
EA3.82.7003	INSTALLATION OF INTER-COMM., ARI. 18089 (MOD.4937-S.O.O) (PRE MOD.5204)	—	—	
EA3.82.8003	INSTALLATION OF INTER-COMM., ARI. 18089 (MOD.5204-S.O.O)	—	—	RD3/1
EA3.82.8051	. AMOLIFIER, A1961M, TERMINAL BLOCK AND RELAY, INSTALLATION (MOD.5204-S.O.O)	—	—	
WTD2110PD	Spares for:			
703/1/00249	. . AMPLIFIER, type A1961M	1	—	RD3/2
Y2240095-3	. . BLOCK, terminal, 20-way	1	—	RD3/3
703-1-00266	. . CLIP, retaining, relay	1	—	RD3/4
SCLEC32662	. . COVER, terminal block	1	—	RD3/5
	. . GUARD, kick (SRIM.3890) (Mod.4937-S.O.O)	1	—	RD3/6
A32C16	Attaching parts for SCLEC32662:			
SP13C	. . Screw, 2BA	4	—	RD3/7
	. . Washer	4	—	RD3/8
703-2-00267	. . PILLAR, fixing, terminal block	2	—	RD3/9
Y2240095-1	. . PLATE, clip retaining	1	—	RD3/10
SCLEC32661	. . PLATE, mounting, sub-assembly (SRIM.3890) (Mod.4937-S.O.O)	1	—	RD3/11
A25/2C	Attaching parts for SCLEC32661:			
AGS2001C1/66	. . Bolt, 2BA	8	—	RD3/11
SP13C	. . Nut, 2BA	8	—	RD3/12
	. . Washer	8	—	RD3/13
SM5A-N96	. . RELAY, isolating	1	—	RD3/14
KT94127/1	. . SOCKET, relay	1	—	RD3/15
10AJ4309267	. . TRAY, mounting, type 936 for amplifier	1	—	RD3/16
EA3.82.7081	. BLOCKS, TERMINAL, MIC/TEL, IN COCKPIT, INSTALLATION (MOD.4937-S.O.O)	—	—	RD3/17
R 1240	Spares for:			
	. . BLOCK, terminal, 2-way	67	—	RD3/18
AGS2001A1	Attaching parts for 1240			
A33A24	. . Nut, 6BA	2	—	RD3/19
	. . Screw, 6BA	2	—	RD3/20
R E & I 17049	. . BLOCK, terminal, 5-way	2	—	RD3/21
	Attaching parts for E & I 17049			
AGS2001B1	. . Nut, 4BA	2	—	RD3/22
A32B20	. . Screw, 4BA	2	—	RD3/23
SP15B	. . Washer	2	—	RD3/24
MARTIN BAKER A/MBEU125EE	. . BRACKET, TELE/MIC	2	—	RD3/25
A25/1C	Attaching parts for A/MBEU125EE:			
AGS2001C1-66	. . Bolt, 2BA	4	—	RD3/26
SP15C	. . Nut, 2BA	4	—	RD3/27
	. . Washer	4	—	RD3/28
EA3.82.113 31716	. . CABLE, ASSEMBLY, mic/tel socket	1	—	
	. BOX, JUNCTION, PILOT'S, ON PORT WALL INSTALLATION (SRIM.3577) (MOD.4937-S.O.O)	—	—	RD3/29
31905	. BOX, JUNCTION, PILOT'S, ON PORT WALL, INSTALLATION (SRIM.3577) (MOD.4937-S.O.O)	Alt.	—	

RADIO  
INTER-COMM, A.R.I. 18089

Part Number	Description	No. Off	Matl. Spec.	Plate No.
31718	. . . BOX, JUNCTION, NAVIGATOR'S, UNDER TABLE SHELF, INSTALLATION (SRIM.3577) (MOD.4937-S.O.O) Spares for:	-	-	RD3/30
TYPE 7682	. . . BOX, junction, type 7682	1	-	RD3/31
TYPE 7683	. . . BOX, junction, type Attaching parts for TYPE 7682 or TYPE 7683:-	1	-	RD3/32
A31B16	. . . Screw, 4BA	4	-	RD3/33
SP15B	. . . Washer	4	-	RD3/34
31717	. . . MOUNTING, assembly, junction boxes (NHA.31716) (SRIM.3577) (Mod.4937-S.O.O) Attaching parts for 31717:	1	-	RD3/35
A25/½C	. . . Bolt, 2BA	4	-	RD3/36
AGS2001C1-66	. . . Nut, 2BA	4	-	RD3/37
SP15C	. . . Washer	4	-	RD3/38
31884	. . . MOUNTING, assembly, junction boxes (NHA.31905) (SRIM.3577) (Mod.4937-S.O.O) Attaching parts for 31884:	1	-	RD3/39
A25/2C	. . . Bolt, 2BA	4	-	RD3/40
AGS2001C1-66	. . . Nut, 2BA	4	-	RD3/37
SP15C	. . . Washer	4	-	RD3/38
EA3.82.7071	. . . BOX, JUNCTION, TYPE 7684, AT FRAMES 6 AND 7 ON STARBOARD WALL, INSTALLATION (MOD.4937-S.O.O)	-	-	
40967	. . . BOX, JUNCTION, INSTALLATION (SRIM.3479) (MOD.4868-S.O.O)	-	-	
41689	. . . BOX, JUNCTION, TYPE 7684 AND RADIO JUNCTION BOX AT FRAMES 6 AND 7 ON STARBOARD WALL, INSTALLATION (SRIM.3867) (MOD.5204-S.O.O) Spares for:	-	-	RD4/1
TYPE 7684	. . . BOX, junction, type 7684 Attaching parts for TYPE 7684:-	1	-	RD4/2
AS1246/14B	. . . Bolt, 4BA	4	-	RD4/3
13627	. . . Spacer (SRIM.3577) (Mod.4937-S.O.O)	2	-	RD4/4
SP15B	. . . Washer	4	-	RD4/5
40968	. . . BOX, RADIO JUNCTION, ASSEMBLY (SRIM.3479) (MOD.4868-S.O.O)	-	-	
40911	. . . BOX, RADIO JUNCTION, ASSEMBLY (SRIM.3867) (MOD.5204-S.O.O) Spares for:	1	-	RD4/6
31727	. . . BOX, base (SRIM.3577) (Mod.4937-S.O.O)	1	L59	RD4/7
31768	. . . BOX, base (SRIM.3479) (Mod.4868-S.O.O)	1	L59	
21972	. . . BRACKET, relay mounting	1	-	RD4/8
31726	. . . LID, box (SRIM.3577) (Mod.4937-S.O.O)	1	L59	RD4/9
31767	. . . LID, box (SRIM.3479) (Mod.4868-S.O.O) Attaching parts for lid:	1	L59	
AGS2007B1	. . . Nut, anchor, 4BA	6	-	RD4/10
A32B16	. . . Screw, 4BA	6	-	RD4/11
SP15B	. . . Washer	6	-	RD4/12

AP101B-0402-3A

## RADIO

INTER-COMM, A.R.I. 18089

Part Number	Description	No. Off	Mati. Spec.	Plate No.
460-8-33P	. . PLUG, 3-way	1	—	
460-8-33PE	. . PLUG, 3-way	1	—	
460-8-33PF	. . PLUG, 3-way (SRIM.3479) (Mod 4868-S.O.O.)	1	—	
460-12-10PB	. . PLUG, 10-way	1	—	
460-8-33S	. . SOCKET, 3-way	1	—	
460-8-33SE	. . SOCKET, 3-way (SRIM.3479) (Mod 4868-S.O.O.)	1	—	
460-14-19S	. . SOCKET, 19-way	1	—	
460-12-10S	. . SOCKET, 10-way	1	—	
460-12-10SE	. . SOCKET, 10-way	1	—	
	Attaching parts for plugs or sockets:			
AGS2001A1	. . Nut, 6BA	4	—	
A32A16	. . Screw, 6BA	4	—	
SP15A	. . Washer	4	—	
N314867-1	. . SOCKET, base, switch magnetic	1	—	
N324362	. . SWITCH, magnetic relay	1	—	
AGS 1600A	. . TAG, eye end	2	—	
HC296	. . TAG, RT	6	—	
5E/9102373	. . WIRE, tinned copper, 16 SWG	QR	—	
Type 2 white	. . WIRE, equipment, type 2, white	QR	—	
Type 2S pink	. . WIRE, equipment, type 2S, pink	QR	—	
	Attaching parts for junction box:			
A25/1B	. Bolt, 4BA	4	—	
SP15B	. Washer	4	—	
31724	. BRACKET, assembly, box type 7684 mounting (SRIM.3577) (Mod 4937-S.O.O.) (Pre Mod.5204)	1	—	
32664	. BRACKET, assembly, box type 7684 mounting (SRIM.3867) (Mod 5204-S.O.O.)	1	—	RD4/13
	Attaching parts for 32664:			
A25/1B	. Bolt, 4BA	6	—	RD4/14
AGS2001B1	. Nut, 4BA	3	—	RD4/15
AGS2007B1	. Nut, anchor, 4BA	3	—	RD4/16
SP15B	. Washer	6	—	RD4/17
31725	. BRACKET, box mounting (SRIM.3577) (Mod 4937-S.O.O.) (Pre Mod.5204)	1	—	
32663	. BRACKET, box mounting (SRIM.3867) (Mod 5204-S.O.O.)	1	—	
	Attaching parts for 31725 or 32663:			
A25/1B	. Bolt, 4BA	6	—	
AGS2001B1	. Nut, 4BA	3	—	
AGS2007B1	. Nut, anchor, 4BA	3	—	
SP15B	. Washer	6	—	
R Uninyvin 20	. CABLE, Uninyvin 20	QR	BSG 177	
R Uninyvin 20	. CABLE, Uninyvin 22	QR	BSG 177	
R Uninyvinmesheath 22	. CABLE, Uninyvinmesheath 22	QR	BSG 177	
EA.3.82.59/1	. CABLE, ASSEMBLY, RT.20 from terminal board to mic/tel plug at pilot's seat	1	—	
EA.3.82.129	. CABLE, ASSEMBLY, RT.21, from terminal board mic/tel plug at first navigator's seat (Pre Mod.5204)	1	—	
R —	. CABLE, ASSEMBLY, RT.21, from terminal board to mic/tel plug at first navigator's seat (Mod 5204-S.O.O.)	1	—	

RADIO  
INTER-COMM, A.R.I. 18089

Part Number	Description	No. Off	Matl. Spec.	Plate No.
EA3.82.131	. CABLE, ASSEMBLY, RT.22, from terminal board to mic/tel plug at second navigator's seat	1	—	
5468/1	. CABLE, ASSEMBLY, from amplifier A1961 to JB 7684 (SRIM.3890) (Mod 4937-S.O.O.)	1	—	
5388/2	. CABLE, ASSEMBLY, from JB 7684 to inter-comm. control switch (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5388/3	. CABLE, ASSEMBLY, from JB 7684 to radio junction box (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5388/4	. CABLE, ASSEMBLY, from JB 7684 to pilot's JB 7683 (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
R 5388/5	. CABLE, ASSEMBLY, between pilot's and navigator's JB 7683 (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5388/6	. CABLE, ASSEMBLY, from JB 7684 to navigator's JB 7682 (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5388/7	. CABLE, ASSEMBLY, between pilot's and navigator's JB 7682 (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5388/8	. CABLE, ASSEMBLY, from pilot's JB 7683 to pilot's control unit 7681A (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5388/9	. CABLE, ASSEMBLY, from navigator's JB 7683 to first navigator's control unit 7681A (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5388/10	. CABLE, ASSEMBLY, from pilot's and first navigator's control unit 7681A to microphone junction box (SRIM.3577) (Mod 4937-S.O.O.) and (SEM/Canb/STC) (Mod 5180)	2	—	
5388/11	. CABLE, ASSEMBLY, from pilot's and navigator's JB 7682 to microphone junction box (SRIM.3577) (Mod 4937-S.O.O.) and (SEM/Canb/015/STC) (Mod 5180)	2	—	
5388/12	. CABLE, ASSEMBLY, from pilot's JB 7683 to microphone isolation panel (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5388/13	. CABLE, ASSEMBLY, from pilot's JB 7682 to microphone isolation panel (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5388/14	. CABLE, ASSEMBLY, from navigator's JB 7693 and microphone isolation panel to first navigator's press to transmit switch and mic/tel terminal board (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5388/15	. CABLE, ASSEMBLY, from navigator's JB 7692 to mic/tel terminal board (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5388/16	. CABLE, ASSEMBLY, from JB 7684 to radio junction box and standby UHF supply selector switch (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5388/20	. CABLE, ASSEMBLY, from first navigator's control unit 7681A to lighting (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5388/21	. CABLE, ASSEMBLY, from pilot's control unit 7681A to lighting (SRIM.7.6 (Mod 4937-S.O.O.)	1	—	
5388/22	. CABLE, ASSEMBLY, from JB 7684 to JB 14 (SRIM.3577) (Mod 4937-S.O.O.)	1	—	
5468/2	. CABLE, ASSEMBLY, from amplifier A1961 to JB 14 (SRIM.3890) (Mod 4937-S.O.O.)	1	—	
5X/9479995	. CAP protective	12	—	
5290042	. CONNECTOR, type 3720 from terminal board to mic/tel socket to map reader's seat (SRIM.1345) (Mod 4937-S.O.O.) (Pre Mod 5204)	1	—	

## RADIO

INTER-COMM, A.R.I. 18089

Part Number	Description	No. Off	Mati. Spec.	Plate No.
R 10HA/9514242	. CONNECTOR, from terminal board mic/tel socket (SRIM.3676) (Mod 5240-S.O.O.)	2	—	RD4/18
R 10CW/0374236	. DIODE (Mod 5204-S.O.O.)	1	—	RD4/19
323932	. FERRULE	12	—	
R AGS2097B6B	. LEAD, bonding	1	—	RD4/20
R 703-2-00521	. LINK, 2-way (Mod 5204-S.O.O.)	1	—	RD4/21
R 703-2-00529	. LINK, 10-way (Mod 5204-S.O.O.)	1	—	RD4/22
R SC LEC32607	. MOUNTING, AMPLIFIER, TYPE A1961, INSTALLATION (SRIM.3890) (Mod 4937-S.O.O.) Spares for:	—	—	RD4/23
SC LEC32662	. . GUARD, kick Attaching parts for SC LEC32662:	1	—	RD4/24
A32C16	. . Screw, 2BA	4	—	RD4/25
SP13C	. . Washer	4	—	RD4/26
SC LEC32661	. . PLATE, mounting, sub-assembly Attaching parts for SC LEC32661:	1	—	RD4/27
A25/2C	. . Bolt, 2BA	8	—	RD4/28
AGS2001C166	. . Nut, 2BA	8	—	RD4/29
SP13C	. . Washer	8	—	RD4/30
R —	. PLATE, MOUNTING, MICROPHONE ISOLATION RELAY AND AMPLIFIER (SRIM.3577) (Mod 4937-S.O.O.) Spares for:	—	—	RD4/31
R Type A1961	. . AMPLIFIER, type A1961	1	—	RD4/32
703-1-00249	. . BLOCK, terminal, 20-way	1	—	RD4/33
R Y2240095-3	. . CLIP, retaining, relay	1	—	RD4/34
R 703-1-00266	. . COVER, terminal block	1	—	RD4/35
10CV/0374236	. . DIODE	1	—	RD4/36
703-2-00251	. . LINK, 2-way	1	—	RD4/37
703-2-00259	. . LINK, 10-way	1	—	RD4/38
R 703-2-00267	. . PILLAR, fixing	2	—	RD4/39
R Y2240095-1	. . PLATE, clip retaining	1	—	RD4/40
SM5A-N96	. . RELAY, isolating	1	—	RD4/41
R KT94127/1	. . SOCKET, relay	1	—	RD4/42
10AJ/4309267	. . TRAY, mounting, type 936, for amplifier	1	—	RD4/43
R P20	. SLEEVE	QR	—	
R P30	. SLEEVE	8	—	
R H15	. SLEEVE	22	—	
R WT25432 Issue 7	. SOCKET, type 359	1	—	
R HC294D	. TAG, RT (Mod 5204-S.O.O.)	18	—	
HC296	. TAG, RT	14	—	
HC490	. TAG, QR	QR	—	
HC500	. TAG, QR	4	—	
31807	INSTALLATION OF INTER-COMM., ARI. 18099 (SRIM.3479) (Mod 4868-S.O.O.) For Aircraft WJ637 and WJ731 Spares for:	—	—	
40967	. AMPLIFIER, TYPE A1961 and JB 7684 at STARBOARD WALL, INSTALLATION Spares for:	—	—	RD5/1
R Type A1961	. . AMPLIFIER, type A1961	1	—	RD5/2
R Type 7684	. . BOX, junction, type 7684 Attaching parts for 10D/4709929:	1	—	
AS1246/14B	. . Bolt, 4BA	4	—	RD5/3
SP13B	. . Washer	4	—	RD5/4

## INTER-COMM, A.R.I. 18089

Part Number	Description	No. Off	Matl. Spec.	Plate No.
10AJ/4309267	. . TRAY, mounting, type 936 for amplifier Attaching parts for Ref. 10AJ/4309267:	1	—	RD5/5
A25/6B	. . Bolt, 4BA	4	—	RD5/6
AGS2001B1	. . Nut, 4BA	4	—	RD5/7
SP13B	. . Washer	4	—	RD5/8
WT33047/C7	. . Washer, check	4	—	RD5/9
41006	. BOXES, JUNCTION, TYPES 7682 AND 7683 AT NAVIGATOR'S CONSOLE, INSTALLATION Spares for:	—	—	RD5/10
10D/4709927	. . BOX, junction, type 7682	1	—	RD5/11
10D/4709928	. . BOX, junction, type 7683 Attaching parts for Ref. 10D/4709927 or Ref. 10D/4709928:	1	—	RD5/12
A25/½B	. . Bolt, 4Ba	4	—	RD5/13
SP13B	. . Washer	4	—	RD5/4
13489	. . FAIRLEAD, assembly Attaching parts for 13489:	1	—	RD5/14
A25/3B	. . Bolt, 4BA	4	—	RD5/15
AGS2001B1	. . Nut, 4BA	4	—	RD5/7
SP13B	. . Washer	4	—	RD5/9
41007	. BOXES, JUNCTION, TYPES 7682 AND 7683, PILOT'S AND NAVIGATOR'S PRESS TO MUTE SWITCH, INSTALLATION Spares for:	—	—	RD5/16
Type 7682	. . BOX, junction, type 7682	1	—	RD5/11
Type 7683	. . BOX, junction, type 7683 Attaching parts for Ref. 10D/4709927 or Ref. 10D/4709928:	1	—	RD5/12
A25/4B	. . Bolt, 4BA	4	—	RD5/17
AGS2001B1	. . Nut, 4BA	4	—	RD5/7
13824	. . Spacer	4	—	RD5/18
SP13B	. . Washer	4	—	RD5/4
31890	. . SWITCH, PRESS TO MUTE, NAVIGATOR'S INSTALLATION Spares for:	—	—	RD5/19
10F/1062242	. . SWITCHING, unit, type 184 Attaching parts for Ref. 10F.1062242:—	1	—	RD5/20
A25/2B	. . Bolt, 4BA	3	—	RD5/21
AGS2001B1	. . Nut, 4BA	3	—	RD5/7
SP15B	. . Washer	3	—	RD5/21
5396/1	. CABLE, ASSEMBLY, from pressure bulkhead to external i/c terminal block	1	—	
5396/2	. CABLE, ASSEMBLY, from JB7684 to amplifier	1	—	
5396/3	. CABLE, ASSEMBLY, from JB7684 to switch	1	—	
5396/4	. CABLE, ASSEMBLY, from JB7684 to pressure bulkhead	1	—	
5396/5	. CABLE, ASSEMBLY, from JB7684 to radio junction box	1	—	
5396/6	. CABLE, ASSEMBLY, from JB7684 to navigator's JB7683	1	—	
5396/7	. CABLE, ASSEMBLY, between navigator's and pilot's JB7683	1	—	

RADIO  
INTER-COMM, A.R.I. 18089

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
10HB/21655	5396/8	. CABLE, ASSEMBLY, from JB7684 to navigator's JB7682	1	—	C	
10HB/21756	5396/9	. CABLE, ASSEMBLY, between navigator's and pilot's JB7682	1	—	C	
10HB/21757	5396/10	. CABLE, ASSEMBLY, from pilot's JB7683 to pilot's control unit	1	—	C	
10HB/21758	5396/11	. CABLE, ASSEMBLY, from navigator's JB7683 to navigator's control unit	1	—	C	
10HB/21759	5396/12	. CABLE, ASSEMBLY, from pilot's JB7682 to pilot's control unit	1	—	C	
10HB/21760	5396/13	. CABLE, ASSEMBLY, from navigator's JB7682 to navigator's control unit	1	—	C	
10HB/21761	5396/14	. CABLE, ASSEMBLY, from pilot's JB7683 to isolation panel	1	—	C	
10HB/21762	5396/15	. CABLE, ASSEMBLY, from pilot's JB7682 to isolation panel	1	—	C	
10HB/21763	5396/16	. CABLE, ASSEMBLY, from navigator's JB7683 to navigator's switch and terminal blocks	1	—	C	
10HB/21764	5396/17	. CABLE, ASSEMBLY, from navigator's JB7683 to navigator's terminal blocks	1	—	C	
10HB/21765	5396/18	. CABLE, ASSEMBLY, from JB7684 to radio junction box	1	—	C	
10HB/21766	5396/19	. CABLE, ASSEMBLY, from navigator's control unit to lighting terminal block	1	—	C	
10HB/21767	5396/20	. CABLE, ASSEMBLY, from pilot's control unit to lighting terminal block	1	—	C	
10HB/21768	5396/21	. CABLE, ASSEMBLY, from JB7684 to power supply	1	—	C	
10HB/21769	5396/22	. CABLE, ASSEMBLY, from amplifier to power supply	1	—	C	
10HB/21770	5396/23	. CABLE, ASSEMBLY, from radio junction box to tacan audio terminal block	1	—	C	
10HA/14841	† 40960	. CONNECTOR, type 3720 (SRIM.1345) (Mod 4868) . CONSOLE, PILOT'S, INSTALLATION	1 Ref.	—	—	RD5/22
10L/16748	†	. CONTROL, unit, type 7681A Attaching parts for 10L/16748:—	1	—	A	RD5/23
28S/9992525	A32B12	. Screw, 4BA	4	—	C	RD5/24

**CHAPTER RD**  
**FIGURES TO BE ISSUED LATER**

This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.



TELEBRIEF  
CONNECTIONS

E