

RADIO

A.R.I.23099, ULTRA UA60, INSTALLATION

Part Number	Description	No. Off	Matl. Spec.	Plate No.	
					1
EG4.82.1013	A.R.I.23099, ULTRA UA60, INSTALLATION (SRIM 3533) (MOD 4799) Spares for:—	—	—	RF1/1	
5831-99-945-2676	. AMPLIFIER, Type UA6070, on navigator's starboard wall	1	—	RF1/2	
6110-99-945-2673	. BOX, distribution, Type UA6043 on navigator's starboard wall (Pre-Mod 5420)	1	—	RF1/3	
UA6443	. BOX, distribution, Type UA6443 (Mod 5420)	1	—		
5935-99-948-3324	. BOX, jack, Type UA6075W, in starboard wheel well	1	—	RF1/4	
5831-99-945-2674	. BOX, station, Type UA6014/F, pilot's first and second navigator's	3	—	RF1/5	
UA6052	. BOX, sub-junction (Mod 5243)	1	—	RF1/5A	
SCB79380	. BRACKET, assembly, jack box (SRIM 3533) (Mod 4799) Attaching parts for SCB79380:—	1	L72	RF1/6	
A25/2C	. Bolt, 2BA	4	—	RF1/7	
AGS2001C1/66	. Nut, 2BA	4	—	RF1/8	
SP13C	. Washer	4	—	RF1/9	
EB6.82.799	. CABLE, ASSEMBLY, I/C 29, from external terminal block at frame 19 to bulkhead break at frame 29	1	—	RF1/10	
EB6.82.797	. CABLE, ASSEMBLY, I/C 28, from bulkhead break at frame 29 to terminal block, rear fuselage at frame 32	1	—	RF1/11	
EG4.82.1123	. CABLE, ASSEMBLY, from distribution box to radio junction box and i/c ground crew amplifier switch on pilot's coaming panel (Alt. R60/61—Mod 5100)	1	—	RF1/12	
EG4.82.1125	. CABLE, ASSEMBLY, from i/c isolation switch on pilot's coaming panel to radio junction box (Alt. R60/61—Mod 5100)	1	—	RF1/13	
SADSU/NIV2509	. CONNECTOR, No. 1 (Mod 5243)	1	—		
SADSU/NIV2510	. CONNECTOR, No. 2 (Mod 5243)	1	—		
SADSU/NIV2511	. CONNECTOR, No. 3 (Mod 5243)	1	—		
SCA78015/58	. CONNECTOR, from amplifier to distribution box (SRIM 3533) (Mod 4799)	1	—	RF1/14	
SCA78015/59	. CONNECTOR, from distribution box to pilot's station box (SRIM 3533) (Mod 4799)	1	—	RF1/15	
SCA78015/60	. CONNECTOR, from pilot's station box to first navigator's station box (SRIM 3533) (Mod 4799)	1	—	RF1/16	
SCA78015/61	. CONNECTOR, between first and second navigator's station boxes (SRIM 3533) (Mod 4799)	1	—	RF1/17	
SCA78015/62	. CONNECTOR, from distribution box to second navigator's station box (SRIM 3533) (Mod 4799)	1	—	RF1/18	
SCA78015/63	. CONNECTOR, from pilot's station box to throttle box plug break (SRIM 3533) (Mod 4799)	1	—	RF1/19	
SCA78015/64	. CONNECTOR, from first navigator's station box to transmit switch (SRIM 3533) (Mod 4799)	1	—	RF1/20	
SCA78015/65	. CONNECTOR, from second navigator's station box to transmit switch (SRIM 3533) (Mod 4799)	1	—	RF1/21	
SCA78015/66	. CONNECTOR, from transient protection unit to i/c master switch on take-off panel (SRIM 3533) (Mod 4799)	1	—	RF1/22	

RADIO

A.R.I.23099, ULTRA UA60, INSTALLATION

Part Number	Description	No. Off	Mati. Spec.	Plate No.
SCA78015/67	. CONNECTOR, from distribution box to radio junction box and i/c ground crew amplifier switch on pilot's coaming panel (SRIM 3533) (Mod 4799) (Pre-Mod 5100)	1	-	RF1/23
SCA78015/68	. CONNECTOR, from i/c isolation switch on pilot's coaming panel to radio junction box (SRIM 3533) (Mod 4799) (Pre-Mod 5100)	1	-	RF1/24
SCA78015/69	. CONNECTOR, from distribution box to transient protection unit (SRIM 3533) (Mod 4799)	1	-	RF1/25
SCA78015/100	. CONNECTOR, from radio junction box to pressure bulkhead (SRIM 3533) (Mod 4799)	1	-	RF1/26
SCA78015/101	. CONNECTOR, from pressure bulkhead to terminal block at frame 19 (SRIM 3533) (Mod 4799)	1	-	RF1/27
SCA78015/102	. CONNECTOR, from terminal block at frame 19 to jack box (SRIM 3533) (Mod 4799)	1	-	RF1/28
SCA78015/56	. CONNECTOR, from radio junction box to distribution box (SRIM 3533) (Mod 4799)	1	-	RF1/29
SCA78015/57	. CONNECTOR, from radio junction box to distribution box (SRIM 3533) (Mod 4799)	1	-	RF1/30
SCA79381	. FAIRLEAD, sarboard wheel bay (Make from Ref. 5F/9400951) (SRIM 3533) (Mod 4799)	1	-	RF1/31
NSF8804B102 or AS10512A-7 AS10512D-7 NSF8810B104	. SWITCH, transmit, second navigator's	RF	-	RF1/32
	. SWITCH (Alt. R60/61-Mod 5100)	RF	-	RF1/33
	. SWITCH, tone and transmit, first navigator's	RF	-	RF1/34
	. SWITCH, i/c isolation and ground crew amplifier on pilot's coaming panel and i/c master on take-off panel	RF	-	RF1/35
	. SWITCH, i/c (Alt. R60/61-Mod 5100)	RF	-	RF1/36
	. SWITCH, amplifier (Alt. R60/61-Mod 5100)	RF	-	RF1/37
	. SWITCH, push, on pilot's throttle lever	RF	-	RF1/38
	. UNIT, transient protection, Type UA6003	1	-	RF1/39
	. UNIT, control, vulcan autocat (Mod 5243)	1	-	
	. UNIT, relay, vulcan autocat (Mod 5243)	1	-	

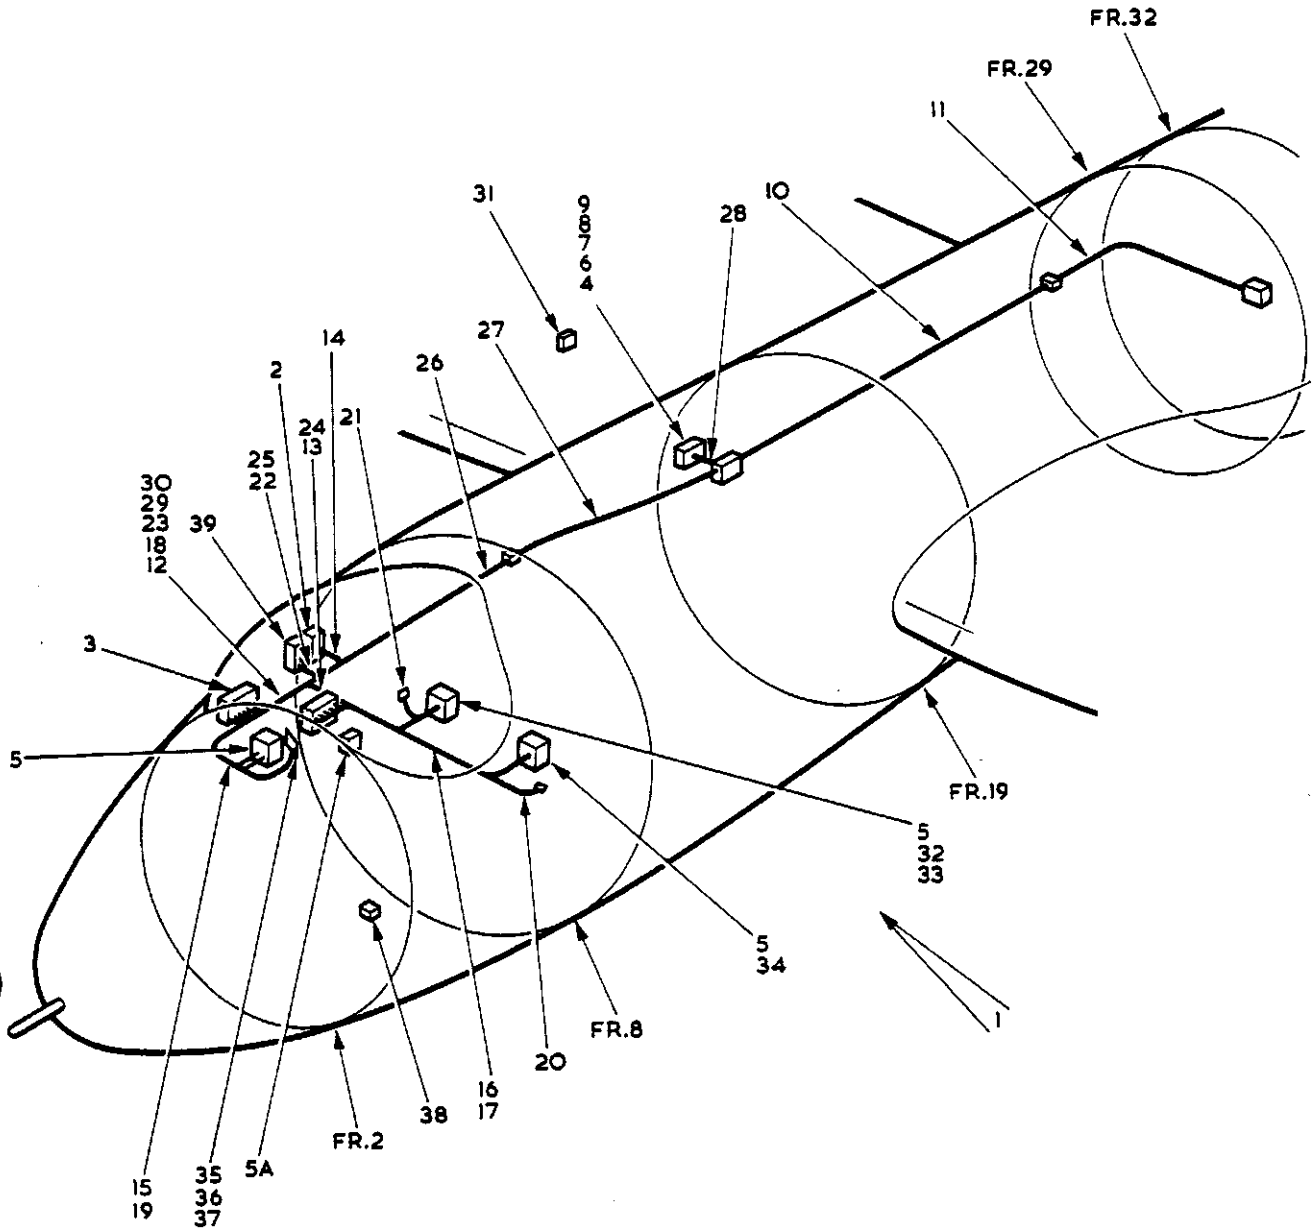


FIG. 1 RADIO, A.R.I.23099, ULTRA UA.60, INSTALLATION
CODE Z

This file was downloaded from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms, and more aircraft documents.



Instrument panel from a MiG-21 (XP558)